

**30015V7J (LOW VOLTAGE) and Single Phase
V1000 INVERTER Model AAT and Later**

CONSTANT	VALUE	CONSTANT	VALUE
A1-01	2 Note 3	D1-01	8.2
A1-02	0	D1-02	103.5
A1-03	Note 2	D1-03	7.2
B1-01	0	D1-04	127
B1-02	1	D1-05	12.5
B1-03	0	D1-06	131.2
C1-01	30	D1-07	51
C1-02	35	D1-08	12.5
C1-03	80	H1-03	7
C1-04	40	H1-04	4
C2-01	1.0	H1-05	3
C4-01	1.3	H1-06	5
C6-01	1	H1-07	A
C6-02	2	H2-01	E
E1-01	230.2	H2-02	16
E1-03	F	L1-01	0
E1-04	131.2	L2-01	2
E1-05	230.2	L3-01	0
E1-06	60	L3-04	0
E1-07	3	L3-05	0
E1-08	15	L4-03	100
E1-09	1.5	L4-04	10
E1-10	10	L8-05	0
E2-01	Note 1	L8-07	0
		H1-01	40
		H1-02	41

Note 1: Enter Ampere rating of inverter

Note 2: 2220 is initialize - otherwise 0

Note 3: Set to 0 after programming