

**30022H7J (LOW VOLTAGE) AND SINGLE PHASE  
V1000 INVERTER**

| CONSTANT | VALUE    | CONSTANT | VALUE |
|----------|----------|----------|-------|
| A1-01    | 2 Note 3 | D1-01    | 8.6   |
| A1-02    | 0        | D1-02    | 73    |
| A1-03    | Note 2   | D1-03    | 7.6   |
| B1-01    | 0        | D1-04    | 109   |
| B1-02    | 1        | D1-05    | 13    |
| B1-03    | 0        | D1-06    | 140   |
| B1-17    | 1        | D1-08    | 13    |
| C1-01    | 30       | H1-03    | 7     |
| C1-02    | 35       | H1-04    | 4     |
| C1-03    | 80       | H1-05    | 3     |
| C1-04    | 40       | H1-06    | 5     |
| C2-01    | 1.0      | H1-07    | A     |
| C4-01    | 1.3      | H2-01    | E     |
| C6-01    | 1        | H2-02    | 16    |
| C6-02    | 2        | L1-01    | 0     |
| E1-01    | 240      | L2-01    | 2     |
| E1-03    | F        | L3-01    | 0     |
| E1-04    | 140      | L3-04    | 0     |
| E1-05    | 240      | L3-05    | 0     |
| E1-06    | 60       | L4-03    | 100   |
| E1-07    | 3        | L4-04    | 10    |
| E1-08    | 13       | L8-05    | 0     |
| E1-09    | 1.5      | L8-07    | 0     |
| E1-10    | 10       | H1-01    | 40    |
| E2-01    | Note 1   | H1-02    | 41    |

Note 1: Enter Ampere rating of inverter  
 Note 2: 2220 is initialize - otherwise 0  
 Note 3: Set to 0 after programming