

**30022V6J (LOW VOLTAGE) AND SINGLE PHASE
V1000 INVERTER**

| CONSTANT | VALUE | CONSTANT | VALUE |
|----------|----------|----------|-------|
| A1-01 | 2 Note 3 | D1-02 | 81 |
| A1-02 | 0 | D1-03 | 7.5 |
| A1-03 | Note 2 | D1-04 | 95 |
| B1-01 | 0 | D1-05 | 12.3 |
| B1-02 | 1 | D1-06 | 110 |
| B1-03 | 0 | D1-07 | 51 |
| C1-01 | 30 | D1-08 | 12.3 |
| C1-02 | 35 | H1-03 | 7 |
| C1-03 | 80 | H1-04 | 4 |
| C1-04 | 40 | H1-05 | 3 |
| C2-01 | 1.0 | H1-06 | 5 |
| C4-01 | 1.3 | H1-07 | A |
| C6-01 | 1 | H2-01 | E |
| C6-02 | 2 | H2-02 | 16 |
| E1-01 | 230.1 | L1-01 | 0 |
| E1-03 | F | L2-01 | 2 |
| E1-04 | 110 | L3-01 | 0 |
| E1-05 | 230.1 | L3-04 | 0 |
| E1-06 | 60 | L3-05 | 0 |
| E1-07 | 3 | L4-03 | 100 |
| E1-08 | 13 | L4-04 | 10 |
| E1-09 | 1.5 | L8-05 | 0 |
| E1-10 | 10 | L8-07 | 0 |
| E2-01 | Note 1 | H1-01 | 40 |
| D1-01 | 8.5 | H1-02 | 41 |

Note 1: Enter Ampere rating of inverter

Note 2: 2220 is initialize - otherwise 0

Note 3: Set to 0 after programming

Release Date: May 18, 2011

Revision D