

30022X8J (HIGH VOLTAGE) V1000 INVERTER			
CONSTANT	VALUE	CONSTANT	VALUE
A1-01	2 Note 3	D1-01	8.6
A1-02	0	D1-02	73
A1-03	Note 2	D1-03	7.6
B1-01	0	D1-04	109
B1-02	1	D1-05	13
B1-03	0	D1-06	152
B1-17	1	D1-08	13
C1-01	35	H1-03	7
C1-02	20	H1-04	4
C1-03	80	H1-05	3
C1-04	40	H1-06	5
C2-01	1.0	H1-07	A
C4-01	.8	H2-01	E
C6-01	1	H2-02	16
C6-02	2	L1-01	0
E1-01	480	L2-01	2
E1-03	F	L3-01	0
E1-04	152	L3-04	0
E1-05	480	L3-05	0
E1-06	60	L4-03	100
E1-07	3	L4-04	10
E1-08	26	L8-05	0
E1-09	1.5	L8-07	0
E1-10	20	H1-01	40
E2-01	Note 1	H1-02	41

Note 1: Enter Ampere rating of inverter

Note 2: 2220 is initialize - otherwise 0

Note 3: Set to 0 after programming

Motor Wiring: Wire motor for 460V for 380V-480V