

**3621C4E (LOW VOLTAGE) 5 HP 6 POLE MOTOR ONLY  
V1000 INVERTER**

| CONSTANT | VALUE    | CONSTANT | VALUE |
|----------|----------|----------|-------|
| A1-01    | 2 Note 3 | D1-01    | 14.2  |
| A1-02    | 0        | D1-02    | 175   |
| A1-03    | Note 2   | D1-05    | 21.5  |
| B1-01    | 0        | D1-06    | 21.5  |
| B1-02    | 1        | H1-03    | 7     |
| B1-03    | 1        | H1-04    | 4     |
| B1-17    | 1        | H1-05    | 3     |
| C1-01    | 41       | H1-06    | 5     |
| C1-02    | 20       | H2-01    | E     |
| C1-03    | 140      | L1-01    | 0     |
| C1-04    | 80       | L2-01    | 2     |
| C2-01    | 1.0      | L3-01    | 0     |
| C4-01    | .7       | L3-04    | 0     |
| C6-01    | 1        | L3-05    | 0     |
| C6-02    | 2        | L8-05    | 0     |
| E1-01    | 230      | L8-07    | 0     |
| E1-03    | F        | H1-01    | 40    |
| E1-04    | 175      | H1-02    | 41    |
| E1-05    | 230      |          |       |
| E1-06    | 60       |          |       |
| E1-07    | 3        |          |       |
| E1-08    | 11.2     |          |       |
| E1-09    | 1.5      |          |       |
| E1-10    | 7.5      |          |       |
| E2-01    | Note 1   |          |       |

Note 1: Enter Ampere rating of inverter

Note 2: 2220 is initialize - otherwise 0

Note 3: Set to 0 after programming