

**3621V5Z MILTOUCH (LOW VOLTAGE) 5 HP 6 POLE MOTOR ONLY
V1000 INVERTER**

CONSTANT	VALUE	CONSTANT	VALUE
A1-01	2 Note 3	E1-08	11.2
A1-02	0	E1-09	1.5
A1-03	Note 2	E1-10	7.5
B1-01	1	E2-01	Note 1
B1-02	1	H1-03	7
B1-03	0	H1-04	4
C1-01	41	H1-05	3
C1-02	20	H1-06	5
C1-03	140	H1-07	A
C1-04	80	H2-01	E
C2-01	1.0	L1-01	0
C4-01	.7	L2-01	2
C6-01	1	L3-01	0
C6-02	2	L3-04	0
E1-01	230	L3-05	0
E1-03	F	L8-05	0
E1-04	178	L8-07	0
E1-05	230	H1-01	40
E1-06	60	H1-02	41
E1-07	3		

Note 1: Enter Ampere rating of inverter
 Note 2: 2220 is initialize - otherwise 0
 Note 3: Set to 0 after programming