

**36030F8J / 36026X8J (LOW VOLTAGE)
V1000 INVERTER**

CONSTANT	VALUE	CONSTANT	VALUE
A1-01	2 Note 3	D1-01	12.4
A1-02	0	D1-02	105
A1-03	Note 2	D1-03	10.9
B1-01	0	D1-04	151
B1-02	1	D1-05	17
B1-03	0	D1-06	205
B1-17	1	D1-08	17
C1-01	35	H1-03	7
C1-02	20	H1-04	4
C1-03	255	H1-05	3
C1-04	80	H1-06	5
C2-01	1.0	H1-07	A
C4-01	.5	H2-01	E
C6-01	1	H2-02	16
C6-02	2	L1-01	0
E1-01	240/208	L2-01	2
E1-03	F	L3-01	0
E1-04	205	L3-04	0
E1-05	240/208	L3-05	0
E1-06	60	L4-03	100
E1-07	3	L4-04	10
E1-08	12/10.4	L8-05	0
E1-09	1.5	L8-07	0
E1-10	7.5/6.5	H1-01	40
E2-01	Note 1	H1-02	41

Note 1: Enter Ampere rating of inverter

Note 2: 2220 is initialize - otherwise 0

Note 3: Set to 0 after programming

Motor Wiring Wire motor for 208V for 200-208V

Wire motor for 240V for 220-240V