

**3626V5J (LOW VOLTAGE) 5 HP 6 POLE MOTOR ONLY
V1000 INVERTER MOTOR 39G809AAT**

CONSTANT	VALUE	CONSTANT	VALUE
A1-01	2 Note 3	D1-01	14.2
A1-02	0	D1-02	127.2
A1-03	Note 2	D1-03	13
B1-01	0	D1-04	155
B1-02	1	D1-05	21.5
B1-03	0	D1-06	178
B1-17	1	D1-07	75
C1-01	41	D1-08	20
C1-02	20	H1-03	7
C1-03	140	H1-04	4
C1-04	80	H1-05	3
C2-01	1.0	H1-06	5
C4-01	.7	H1-07	A
C6-01	1	H2-01	E
C6-02	2	L1-01	0
E1-01	230	L2-01	2
E1-03	F	L3-01	0
E1-04	178	L3-04	0
E1-05	230	L3-05	0
E1-06	60	L8-05	0
E1-07	3	L8-07	0
E1-08	11.2	H1-01	40
E1-09	1.5	H1-02	41
E1-10	7.5		
E2-01	Note 1		

Note 1: Enter Ampere rating of inverter

Note 2: 2220 is initialize - otherwise 0

Note 3: Set to 0 after programming