

**42026V6J (LOW VOLTAGE) 300G with Accelerometer  
V1000 INVERTER**

CONSTANT	VALUE	CONSTANT	VALUE
A1-01	2 Note 3	D1-01	10.3
A1-02	0	D1-02	110
A1-03	Note 2	D1-03	8.5
B1-01	0	D1-04	133
B1-02	1	D1-05	16
B1-03	0	D1-06	183
B1-17	1	D1-07	58
C1-01	35	D1-08	20
C1-02	20	H1-03	7
C1-03	120	H1-04	4
C1-04	80	H1-05	3
C2-01	1.0	H1-06	5
C4-01	1	H1-07	A
C6-01	1	H2-01	E
C6-02	2	L1-01	0
E1-01	230	L2-01	2
E1-03	F	L3-01	0
E1-04	183	L3-04	0
E1-05	230	L3-05	0
E1-06	60	L8-05	0
E1-07	3	L8-07	0
E1-08	11.5	H1-01	40
E1-09	1.5	H1-02	41
E1-10	8	H2-02	16
E2-01	Note 1	L4-03	125
		L4-04	10

Note 1: Enter Ampere rating of inverter

Note 2: 2220 is initialize - otherwise 0

Note 3: Set to 0 after programming