

**42026V6Z MILTOUCH (LOW VOLTAGE)  
V1000 INVERTER**

CONSTANT	VALUE	CONSTANT	VALUE
A1-01	2 Note 3	E1-07	3
A1-02	0	E1-08	11.5
A1-03	Note 2	E1-09	1.5
B1-01	1	E1-10	8
B1-02	1	E2-01	Note 1
B1-03	0	H1-03	7
B1-17	1	H1-04	4
C1-01	35	H1-05	3
C1-02	20	H1-06	5
C1-03	120	H1-07	A
C1-04	80	H2-01	E
C2-01	1.0	L1-01	0
C4-01	1	L2-01	2
C6-01	1	L3-01	0
C6-02	2	L3-04	0
E1-01	230	L3-05	0
E1-03	F	L8-05	0
E1-04	155	L8-07	0
E1-05	230	H1-01	40
E1-06	60	H1-02	41

Note 1: Enter Ampere rating of inverter  
 Note 2: 2220 is initialize - otherwise 0  
 Note 3: Set to 0 after programming