

**42026/42032 X7J (LOW VOLTAGE) – 300G  
V1000 INVERTER**

CONSTANT	VALUE	CONSTANT	VALUE
A1-01	2 Note 3	E1-05	230/208
A1-02	0	E1-06	60
A1-03	Note 2	E1-07	3
B1-01	0	E1-08	15/13
B1-02	1	E1-09	1.5
B1-03	0	E1-10	8/7
B1-17	1	E2-01	Note 1
C1-01	35	H1-01	40
C1-02	20	H1-02	41
C1-03	120	H1-03	7
C1-04	80	H1-04	4
C2-01	1.0	H1-05	3
C6-01	0	H1-06	5
C6-02	2	H1-07	A
D1-01	11.5	H2-01	E
D1-02	112	H2-02	16
D1-03	10	L1-01	0
D1-04	164	L2-01	2
D1-05	17	L3-01	0
D1-06	188	L3-04	0
D1-08	17	L3-05	0
E1-01	230/208	L8-05	0
E1-03	F	L8-07	0
E1-04	188		

Note 1: Enter Ampere rating of inverter  
 Note 2: 2220 is initialized - otherwise 0  
 Note 3: Set to 0 after programming

Motor wiring: Wire motor for 208V for 200-208V  
 Wire motor for 240V for 220-240V