

**42044WP2 (LOW VOLTAGE) SINGLE MOTOR
A1000 INVERTER**

CONSTANT	VALUE	CONSTANT	VALUE
A1-00	0	H1-01	40
A1-01	2	H1-02	41
A1-02	0	H1-03	18
A1-03	Note 2	H1-04	2A
B1-01	1	H1-05	6
B1-02	1	H1-06	7
B1-03	0	H1-07	60
B1-17	1	H2-01	B
B2-02	50%	H2-02	5
B2-04	4	H2-03	12
B4-01	300	H3-03	100 Note 3
C1-01	112.0	H3-04	0 Note 3
C1-02	20	H3-12	.5
C1-03	190	L1-01	0
C1-04	120	L2-01	2
C2-01	1.0	L3-01	0
C6-01	0	L3-02	120
C6-02	3	L3-03	100
E1-01	230/208 Note 5	L3-04	0
E1-03	F	L3-05	0
E1-04	145	L3-06	120
E1-05	230/208 Note 5	L4-01	60
E1-06	60	L6-01	2
E1-07	3	L6-02	80%
E1-08	14/12	L6-03	1
E1-09	.6	L8-05	0
D1-17	.6	L8-07	0
E1-10	10/8	L8-15	0
E2-01	Note 1	L8-18	0

Note 1: Enter Ampere rating of inverter

Note 2: 2220 is initialize - otherwise 0

Note 3: Adjust to get final extract speed

Note 4: Wire 208V for 200V - 208V. Wire 230V for 220V – 230V.

Note 5: Motor wired 230V / Motor wired 208V

Release Date: June 11, 2012

Revision B