

**48040F7J / B (HIGH VOLTAGE)
F7 INVERTER**

CONSTANT	VALUE	CONSTANT	VALUE
A1-00	0	E1-05	460 / 400 Note 4
A1-01	2	E1-06	60
A1-02	0	E1-07	3
A1-03	Note 2	E1-08	30 / 28 Note 4
B1-01	0	E1-09	1.5
B1-02	1	E1-10	15 / 14 Note 4
B1-03	0	E2-01	Note 1
C1-01	100	H1-01	7
C1-02	20	H1-02	4
C1-03	160	H1-03	3
C1-04	160	H1-04	5
C2-01	2.5	H1-05	B
C2-03	2.5	H2-01	O
C6-01	0	H3-05	1F
C6-02	3	L1-01	0
D1-01	10	L2-01	2
D1-02	82	L3-01	0
D1-03	8	L3-02	200%
D1-04	99	L3-03	100%
D1-05	17	L3-04	0
D1-06	170	L3-05	0
D1-08	17	L3-06	200
E1-01	460 / 400 Note 4	L8-05	0
E1-03	F	L8-07	0
E1-04	170	L8-09	0

Note 1: Enter Ampere rating of inverter

Note 2: 2220 is initialize - otherwise 0

Note 3: How to wire motor:

For 380 – 400V, wire motor 380V

For 415 – 480V, wire motor 480V

Note 4: Motor wired for 480V / motor wired for 380V