

**48040F7J / B (LOW VOLTAGE)  
A1000 INVERTER**

CONSTANT	VALUE	CONSTANT	VALUE
A1-00	0	E1-07	3
A1-01	2	E1-08	15 / 13 Note 4
A1-02	0	E1-09	1.5
A1-03	Note 2	E1-10	10 / 9 Note 4
B1-01	0	E2-01	Note 1
B1-02	1	H1-01	40
B1-03	0	H1-02	41
B1-17	1	H1-03	7
C1-01	100	H1-04	4
C1-02	20	H1-05	3
C1-03	160	H1-06	5
C1-04	160	H1-07	A
C2-01	2.5	H2-01	0
C2-03	2.5	H3-02	4
C6-01	0	H3-06	0
C6-02	3	H3-10	5
D1-01	10	L1-01	0
D1-02	82	L2-01	2
D1-03	8	L3-01	0
D1-04	99	L3-02	120%
D1-05	17	L3-03	100%
D1-06	170	L3-04	0
D1-07	17	L3-05	0
E1-01	230 / 208 Note 4	L3-06	150
E1-03	F	L8-05	0
E1-04	170	L8-07	0
E1-05	230 / 208 Note 4	L8-09	0
E1-06	60		

Note 1: Enter Ampere rating of inverter

Note 2: 2220 is initialize - otherwise 0

Note 3: How to wire motor:

For 200 – 208V, wire motor 208V

For 220 – 230V, wire motor 230V

Note 4: Motor wired for 230V / motor wired for 208V

Release Date: June 9, 2014

Revision C