

48040F7W/N (HIGH VOLTAGE) F7 INVERTER			
CONSTANT	VALUE	CONSTANT	VALUE
A1-00	0	E1-08	30 / 28 Note 4
A1-01	2	E1-09	1.5
A1-02	0	E1-10	20 / 17 Note 4
A1-03	Note 2	E2-01	Note 1
B1-01	1	H1-04	7
B1-02	1	H1-05	B
B1-03	0	H2-01	E
C1-01	100	H3-05	1F
C1-02	20	H3-12	.5
C1-03	160	L1-01	0
C1-04	160	L2-01	2
C2-01	2.5	L3-01	0
C6-01	0	L3-02	200%
C6-02	3	L3-03	100%
E1-01	460	L3-04	0
E1-03	F	L3-05	0
E1-04	170	L3-06	200
E1-05	460 / 400 Note 4	L8-05	0
E1-06	60	L8-07	0
E1-07	3	L8-09	0

Note 1: Enter Ampere rating of inverter

Note 2: 2220 is initialize - otherwise 0

Note 3: How to wire motor:

For 380 – 400V, wire motor 380V

For 415 – 480V, wire motor 480V

Note 4: Motor wired for 480V / motor wired for 380V

