

M9V4232 EXTRACTOR (LOW VOLTAGE)

F7 INVERTER

CONSTANT	VALUE	CONSTANT	VALUE
A1-00	1	E1-07	3
A1-01	2	E1-08	15
A1-02	0	E1-09	1.5
A1-03	2220	E1-10	10
B1-01	0	E2-01	NOTE 1
B1-02	1	H1-01	3
B1-03	1 See Note 2	H1-02	4
C1-01	60	H1-03	5
C1-02	15	H1-04	7
C1-04	15	H1-05	8
C6-01	0	H1-06	F
C6-02	1	H2-01	E
D1-01	4.0	H3-05	1F
D1-02	6.2	L1-01	0
D1-03	19	L2-01	2
D1-04	38	L3-01	0
D1-05	57	L3-02	200
D1-06	93	L3-03	100
E1-01	230	L3-04	0
E1-03	F	L3-05	0
E1-04	93	L3-06	200
E1-05	230	L8-05	0
E1-06	60	L8-07	0

NOTE 1: Enter Ampere rating of inverter

NOTE 2: Set to 0 if dynamic braking is installed

Release Date: June 11, 2003

Revision: E