

Published Manual Number/ECN: MPP60SG0AE/2007156A

- Publishing System: TPAS
- Access date: 4/17/2007
- Document ECN's: Latest Available



## Service—

# 60044 SP2/SP3 Washer-Extractors



**Read the  
separate  
safety  
manual  
before  
installing,  
operating,  
or servicing**

# Please Read

**About the Manual Identifying Information on the Cover**—The front cover displays pertinent identifying information for this manual. Most important, are the published manual number (part number) /ECN (date code). Generally, when a replacement manual is furnished, it will have the same published manual number, but the latest available ECN. This provides the user with the latest information applicable to his machine. Similarly all documents comprising the manual will be the latest available as of the date the manual was printed, even though older ECN dates for those documents may be listed in the table of contents.

When communicating with the Milnor factory regarding this manual, please also provide the other identifying information shown on the cover, including the publishing system, access date, and whether the document ECN's are the latest available or exact.

**Best Available Information**—This manual contains the most accurate and complete information available when Milnor shipped your machine/software. Products are occasionally released with the best available documentation, even though the device identification (model numbers, etc.) on the documentation does not explicitly include the delivered model. In such cases, use the documentation provided.

Although unlikely, incorrect manuals may have been shipped with your machine. If you believe you received the wrong manuals, or if you need specific information about any aspect of your machine not addressed in the provided documentation, contact the Milnor Customer Service group.

**References to Yellow Troubleshooting Pages**—This manual may contain references to “yellow pages.” Although the pages containing trouble-shooting procedures are no longer printed on yellow paper, troubleshooting instructions, if any, will be contained in the easily located “Troubleshooting” section. See the table of contents.

**Trademarks of Pellerin Milnor Corporation**—The following terms, some of which may be used in this publication, are trademarks of Pellerin Milnor Corporation:

CBW <sup>®</sup>	E-P OneTouch <sup>®</sup>	Gear Guardian <sup>®</sup>	Mildata <sup>®</sup>	Milnor <sup>®</sup>	Staph-Guard <sup>®</sup>
E-P Express <sup>®</sup>	E-P Plus <sup>®</sup>	Mentor <sup>®</sup>	Milnet <sup>®</sup>	MultiTrac <sup>™</sup>	Visionex <sup>™</sup>

**Trademarks of Other Companies**—The following terms, some of which may be used in this publication, are trademarks of their respective companies:

Acronis <sup>®</sup>	Microsoft Windows 2000 <sup>®</sup>	Yaskawa <sup>®</sup>	Siemens <sup>®</sup>
Atlas 2000 <sup>®</sup>	Microsoft Office XP <sup>®</sup>	Microsoft Access <sup>®</sup>	Seagate Crystal Reports <sup>®</sup>
IBM <sup>®</sup>	Microsoft Windows NT <sup>®</sup>	Microsoft Windows XP <sup>®</sup>	

## Comments and Suggestions

Help us to improve this manual by sending your comments to:

Pellerin Milnor Corporation  
Attn: Technical Publications  
P. O. Box 400  
Kenner, LA 70063-0400  
Fax: (504) 469-1849

# Table of Contents

## for MPP60SG0AE/2007156A

### 60044 SP2/SP3 Washer-Extractors

Page	Description	Document/ECN
1	About This Manual	MHPHYDROAE/2007044A
2	Warranty	BMP720097/92732A
3	How to Order Parts	BMP720097R/72332A
4	Safety—Divided Cylinder and Staph-Guard™ Washer-Extractors	BIUUUS27/20051111
9	About the Forces Transmitted by Milnor Washer-Extractors	BIWUUI02/20001108
11	Glossary of Tag Illustrations - Suspended Washer- Extractors	MSIUPUTGAE/2003026V
17	Avoiding Damage from Allied Remote Chemical Delivery Systems	BIWUUI03/20030306
<b>23</b>	<b>Section 1: Service and Maintenance</b>	
24	Lubrication and Preventive Maintenance for Hydrocushion Machines	MSSM0201CE/2004046V
34	Lubricants for Milnor Machines	MSSM0132AE/9903AV
35	Baldor Motor Maintenance	MSSM0274AE/9731AV
39	General Assembly	BMP040088/2004493V
43	Fastener Torque Requirements	MSSM0101CE/9906AV
<b>63</b>	<b>Section 2: Shell and Door Assemblies</b>	
64	Door Seal Replacement on Rapid Load Models	MSSMA413AE/8530BV
68	Shell Door 6036SP2, 6044SP2	BMP800182/2006305B
70	Shell Door 6036/6044WP3,SP3	BMP800183/2006305B
72	Interlock Plunger Assembly	BMP700630/94087V
73	Cylinder Door Installation 6036,6044WP3/SP3	BMP970080/2006304B
74	Cylinder Door Assembly 6036,6044WP3/SP3	BMP970081/2006304B
76	Cylinder & Door Assemblies 6044WP2/SP2	BMP701304/2006295B
<b>79</b>	<b>Section 3: Drive Assemblies</b>	
80	Drive Base Components on Hydro-Cushion Machines	MSSMA407BE/85047V
90	Drive Assembly - 6036SG2, 3 & 6044SG2, 3	BMP850032/86021D
91	Parts List - Drive Base Assembly, 60" SG	BMP850032R/97101V
92	Jackshaft Bearing Assembly - 5238, 6036, 6044, 6442 & 7244	BMP820109/89253C
93	Parts List - Jackshaft Bearing Assembly (52, 60, 64, 72)	BMP820109R/89253A
95	Reducer Air Seal	BMP700392/2002496V
96	Autospot Drive Assembly	BMP701411/2000133V
98	Air Operated Autospot Assembly - 60SG2 and 60SG3	BMP710047/96216V
100	Sensing Unit - Airop Autospot	BMP710042/76143D
101	Parts List - Sensing Unit, Airop Autospot	BMP710042R/85353A
102	Centrifugal Switch Assembly	BMP701195/2000242V
104	Centrifugal Switch Operation	BMP701196/81271A
105	V-Belt Tension Adjustments for 48", 52", 60" and 72" Washer-Extractors	MSSMA405AE/8737BV

## Table of Contents, cont.

Page	Description	Document/ECN
109	Servicing Disc Brakes	MSSMA426AE/9718AV
113	Lower Disc Brake Installation	BMP970005/2007155B
117	Lower Disc Brake Split Bearing	BMP980024/2006285B
120	Upper Brake Assembly - 60SGU and 72SGU	BMP970006/97072V
<b>123</b>	<b>Section 4: Bearing Assemblies</b>	
124	Main Bearing and Seal Replacement for Divided Cylinder Machines	MSSM0303AE/8451BV
134	Main Shaft Bearing Assembly	BMP840039/2006285B
137	4" Idler Shaft Bearing installation	BMP970016/2006285B
139	Service - Idler Shaft Bearings	BMP720012/72136A
140	Service - Idler Shaft Bearings	BMP720012R/81106A
<b>141</b>	<b>Section 5: Frame, Pivots, and Suspensions</b>	
142	Hold Down Adjustments	BMP701672/2006295B
143	Suspension Adjustments for Divided Cylinder Machines	MSSM0302AE/8414BV
149	Suspension Cylinder Assemblies	BMP701408/2006275B
151	Suspension Cylinder Locations	BMP701235/2006304A
152	Push Down	BMP060035/2006305B
<b>155</b>	<b>Section 6: Control and Sensing Assemblies</b>	
156	Vibration Safety Switch Adjustments	MSSMA408BE/9273BV
158	Vibration Safety Switch	BMP910038/2007086B
<b>159</b>	<b>Section 7: Chemical Supply Devices</b>	
160	Rules for the Field Installation of Pumped-Type Liquid Supply Systems	MSSM0213AE/89457V
162	Supply Injector - 6036, 6044 & 5238	BMP700940/97287V
<b>165</b>	<b>Section 8: Water and Steam Piping and Assemblies</b>	
166	Water Inlets with Siphon Breaker	BMP040077/2006305B
169	Siphon Breaker & Scupper	BMP040078/2006182B
170	Water Inlets	BMP040079/2006305B
173	Universal Actuators & Mounting Hardware for Watts Ball Valves - New Pivot	BMP920005/96067V
176	Watts Ball Valves and Repair Kits	BMP920007/96066V
178	Pressure Regulators	BMP900031/96081V
180	8" & 10" Stainless Dump Valve	BMP780095/2006363B
181	Steam Inlet & Sparger	BMP040089/2006363B
183	Burket Steam Valve	BMP800020/96066V
<b>185</b>	<b>Section 9: Pneumatic Piping and Assemblies</b>	
186	Air Cylinders for 2"Watts Ball Valves	BMP920006/2000133V
188	Brake Air Cylinder	BMP070011/2007155B
190	3 Way Pilot Valves	BMP900032/91182V
191	Asco 3-way Solenoid Valves	BMP701359/97086V
193	Staphairtrol Assembly	BMP701307/2004492V
194	Quick Exhaust Valves	BMP701406/2002382V

## ABOUT THIS MANUAL

**Scope**—This instruction manual is intended to provide preventive maintenance, service procedures, and mechanical parts identification for your machine. See the safety manual for safety instructions before installing, servicing, or operating this machine. See the installation guide for facility requirements, installation instructions, and assembly instructions. See the operator guide for operator instructions. See the reference manual for programming, operating, and troubleshooting instructions. See the schematic manual for electrical parts identification and electrical troubleshooting.

**Manual Number/Date Code (When To Discard or Save)**—The manual number/date code is located on the inside front cover, upper right corner just above the manual name. Whenever the manual is reprinted with new information, part of this number changes. **If the *date code* after the “/” changes, the new version applies to all machines covered by the old version, but is improved— thus the old version can be discarded. If the *manual number* before the “/” changes, the new manual covers only new machines.** Example: Discard MATMODELAE/8739**CV** when MATMODELAE/8739**DV** is received (minor improvements). Also, discard MATMODELAE/8739**DV** when MATMODELAE/8746**AV** is received (major improvements). But keep MATMODELAE/8746**FV** when MATMODEL**BE**/8815AV is received, since the new manual no longer applies to machines originally shipped with the old manual.

**Documents and Change Bars**—The individual documents comprising this manual use the same revision criteria as the manual. Text documents also display change bars. Example: When sectionMSOP0599AE/9135**BV** becomes MSOP0599AE/9135**CV**, change bars with the letter “C” appear next to all changes for this revision. For a major rewrite (e.g., MSOP0599AE/9226**AV**), all change bars are deleted.

**For Assistance**—Please call:

Pellerin Milnor Corporation  
Attn: Service Department  
P. O. Box 400  
Kenner, LA 70063-0400

Phone:(504) 467-9591  
Fax:(504) 467-9777

# **PELLERIN MILNOR CORPORATION**

## **LIMITED STANDARD WARRANTY**

We warrant to the original purchaser that MILNOR machines including electronic hardware/software (hereafter referred to as "equipment"), will be free from defects in material and workmanship for a period of one year from the date of shipment from our factory with no operating hour limitation. This warranty is contingent upon the equipment being installed, operated and serviced as specified in the operating manual supplied with the equipment, and operated under normal conditions by competent operators.

Providing we receive written notification of a warranted defect within 30 days of its discovery, we will – at our option – repair or replace the defective part or parts, FOB our factory. We retain the right to require inspection of the parts claimed defective in our factory prior to repairing or replacing same. We will not be responsible, or in any way liable, for unauthorized repairs or service to our equipment, and this warranty shall be void if the equipment is repaired or altered in any way without MILNOR's written consent.

Parts which require routine replacement due to normal wear – such as gaskets, contact points, brake and clutch linings and similar parts – are not covered by this warranty, nor are parts damaged by exposure to weather or to chemicals.

We reserve the right to make changes in the design and/or construction of our equipment (including purchased components) without obligation to change any equipment previously supplied.

ANY SALE OR FURNISHING OF ANY EQUIPMENT BY MILNOR IS MADE ONLY UPON THE EXPRESS UNDERSTANDING THAT MILNOR MAKES NO EXPRESSED OR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR USE OR PURPOSE. MILNOR WILL NOT BE RESPONSIBLE FOR ANY COSTS OR DAMAGES ACTUALLY INCURRED OR REQUIRED AS A RESULT OF: THE FAILURE OF ANY OTHER PERSON OR ENTITY TO PERFORM ITS RESPONSIBILITIES, FIRE OR OTHER HAZARD, ACCIDENT, IMPROPER STORAGE, MISUSE, NEGLIGENCE, POWER OR ENVIRONMENTAL CONTROL MALFUNCTIONS, DAMAGE FROM LIQUIDS, OR ANY OTHER CAUSE BEYOND THE NORMAL RANGE OF USE. REGARDLESS OF HOW CAUSED, IN NO EVENT SHALL MILNOR BE LIABLE FOR SPECIAL, INDIRECT, PUNITIVE, LIQUIDATED, OR CONSEQUENTIAL COSTS OR DAMAGES, OR ANY COSTS OR DAMAGES WHATSOEVER WHICH EXCEED THE PRICE PAID TO MILNOR FOR THE EQUIPMENT IT SELLS OR FURNISHES.

WE NEITHER ASSUME, NOR AUTHORIZE ANY EMPLOYEE OR OTHER PERSON TO ASSUME FOR US, ANY OTHER RESPONSIBILITY AND/OR LIABILITY IN CONNECTION WITH THE SALE OR FURNISHING OF OUR EQUIPMENT TO ANY BUYER.

## How to order repair parts

Repair parts may be ordered either from the authorized dealer who sold you this machine, or directly from the MILNOR factory. In most cases, your dealer will have these parts in stock.

When ordering parts, please be sure to give us the following information:

1. Model and serial number of the machine for which the parts are required
2. Part number
3. Name of the part
4. Quantity needed
5. Method of shipment desired
6. In correspondence regarding motors or electrical controls, please include all nameplate data, including wiring diagram number and the make or manufacturer of the motor or controls.

All parts will be shipped C.O.D. transportation charges collect only.

## Please read this manual

It is strongly recommended that you read the installation and operating manual before attempting to install or operate your machine. We suggest that this manual be kept in your business office so that it will not become lost.

### **PELLERIN MILNOR CORPORATION**

P.O. BOX 400, KENNER, LA., 70063-0400, U.S.A.

FAX: Administration 504/468-9307, Engineering 504/469-1849, Service 504/469-9777

**BMP720097R**  
**72332A**

## Safety—Divided Cylinder and Staph-Guard™ Washer-Extractors

### 1. General Safety Requirements—Vital Information for Management Personnel [Document BIUUUS04]

Incorrect installation, neglected preventive maintenance, abuse, and/or improper repairs, or changes to the machine can cause unsafe operation and personal injuries, such as multiple fractures, amputations, or death. The owner or his selected representative (owner/user) is responsible for understanding and ensuring the proper operation and maintenance of the machine. The owner/user must familiarize himself with the contents of all machine instruction manuals. The owner/user should direct any questions about these instructions to a Milnor® dealer or the Milnor® Service department.

Most regulatory authorities (including OSHA in the USA and CE in Europe) hold the owner/user ultimately responsible for maintaining a safe working environment. Therefore, the owner/user must do or ensure the following:

- recognize all foreseeable safety hazards within his facility and take actions to protect his personnel, equipment, and facility;
- work equipment is suitable, properly adapted, can be used without risks to health or safety, and is adequately maintained;
- where specific hazards are likely to be involved, access to the equipment is restricted to those employees given the task of using it;
- only specifically designated workers carry out repairs, modifications, maintenance, or servicing;
- information, instruction, and training is provided;
- workers and/or their representatives are consulted.

Work equipment must comply with the requirements listed below. The owner/user must verify that installation and maintenance of equipment is performed in such a way as to support these requirements:

- control devices must be visible, identifiable, and marked; be located outside dangerous zones; and not give rise to a hazard due to unintentional operation;
- control systems must be safe and breakdown/damage must not result in danger;
- work equipment is to be stabilized;
- protection against rupture or disintegration of work equipment;
- guarding, to prevent access to danger zones or to stop movements of dangerous parts before the danger zones are reached. Guards to be robust; not give rise to any additional hazards; not be easily removed or rendered inoperative; situated at a sufficient distance from the danger zone; not restrict view of operating cycle; allow fitting, replacing, or maintenance by restricting access to relevant area and without removal of guard/protection device;
- suitable lighting for working and maintenance areas;
- maintenance to be possible when work equipment is shut down. If not possible, then protection measures to be carried out outside danger zones;
- work equipment must be appropriate for preventing the risk of fire or overheating; discharges of gas, dust, liquid, vapor, other substances; explosion of the equipment or substances in it.



- 1.1. **Laundry Facility**—Provide a supporting floor that is strong and rigid enough to support—with a reasonable safety factor and without undue or objectionable deflection—the weight of the fully loaded machine and the forces transmitted by it during operation. Provide sufficient clearance for machine movement. Provide any safety guards, fences, restraints, devices, and verbal and/or posted restrictions necessary to prevent personnel, machines, or other moving machinery from accessing the machine or its path. Provide adequate ventilation to carry away heat and vapors. Ensure service connections to installed machines meet local and national safety standards, especially regarding the electrical disconnect (see the National Electric Code). Prominently post safety information, including signs showing the source of electrical disconnect.
- 1.2. **Personnel**—Inform personnel about hazard avoidance and the importance of care and common sense. Provide personnel with the safety and operating instructions that apply to them. Verify that personnel use proper safety and operating procedures. Verify that personnel understand and abide by the warnings on the machine and precautions in the instruction manuals.
- 1.3. **Safety Devices**—Ensure that no one eliminates or disables any safety device on the machine or in the facility. Do not allow machine to be used with any missing guard, cover, panel or door. Service any failing or malfunctioning device before operating the machine.
- 1.4. **Hazard Information**—Important information on hazards is provided on the machine safety placards, in the Safety Guide, and throughout the other machine manuals. **Placards must be kept clean so that the information is not obscured. They must be replaced immediately if lost or damaged. The Safety Guide and other machine manuals must be available at all times to the appropriate personnel.** See the machine service manual for safety placard part numbers. Contact the Milnor Parts department for replacement placards or manuals.
- 1.5. **Maintenance**—Ensure the machine is inspected and serviced in accordance with the norms of good practice and with the preventive maintenance schedule. Replace belts, pulleys, brake shoes/disks, clutch plates/tires, rollers, seals, alignment guides, etc. before they are severely worn. Immediately investigate any evidence of impending failure and make needed repairs (e.g., cylinder, shell, or frame cracks; drive components such as motors, gear boxes, bearings, etc., whining, grinding, smoking, or becoming abnormally hot; bending or cracking of cylinder, shell, frame, etc.; leaking seals, hoses, valves, etc.) Do not permit service or maintenance by unqualified personnel.

## 2. **Safety Alert Messages—Internal Electrical and Mechanical Hazards** [Document BIUUUS11]

The following are instructions about hazards inside the machine and in electrical enclosures.



**WARNING 1: Electrocution and Electrical Burn Hazards**—Contact with electric power can kill or seriously injure you. Electric power is present inside the cabinetry unless the main machine power disconnect is off.

- Do not unlock or open electric box doors.
- Do not remove guards, covers, or panels.
- Do not reach into the machine housing or frame.
- Keep yourself and others off of machine.
- Know the location of the main machine disconnect and use it in an emergency to remove all electric power from the machine.



**WARNING 2: Entangle and Crush Hazards**—Contact with moving components normally isolated by guards, covers, and panels, can entangle and crush your limbs. These components move automatically.

- Do not remove guards, covers, or panels.
- Do not reach into the machine housing or frame.
- Keep yourself and others off of machine.
- Know the location of all emergency stop switches, pull cords, and/or kick plates and use them in an emergency to stop machine motion.

### 3. Safety Alert Messages—External Mechanical Hazards [Document BIUUUS12]

The following are instructions about hazards around the front, sides, rear or top of the machine.



**WARNING 3: Crush Hazards**—Suspended machines only—Spaces between the shell and housing can close and crush or pinch your limbs. The shell moves within the housing during operation.

- Do not reach into the machine housing or frame.
- Keep yourself and others clear of movement areas and paths.

### 4. Safety Alert Messages—Cylinder and Processing Hazards

[Document BIUUUS13]

The following are instructions about hazards related to the cylinder and laundering process.



**WARNING 4: Crush Hazards**—Contact with the turning cylinder can crush your limbs. The cylinder will repel any object you try to stop it with, possibly causing the object to strike or stab you. The turning cylinder is normally isolated by the locked cylinder door.

- Do not attempt to open the door or reach into the cylinder until the cylinder is stopped.
- Do not place any object in the turning cylinder.
- Do not operate the machine with a malfunctioning door interlock.
- Divided cylinder machines only—Keep yourself and others clear of cylinder and goods during inching or Autospot operation.
- Do not operate the machine with malfunctioning two-hand manual controls.



**WARNING 5: Confined Space Hazards**—Confinement in the cylinder can kill or injure you. Hazards include but are not limited to panic, burns, poisoning, suffocation, heat prostration, biological contamination, electrocution, and crushing.

- Do not attempt unauthorized servicing, repairs, or modification.



**WARNING 6: Explosion and Fire Hazards**—Flammable substances can explode or ignite in the cylinder, drain trough, or sewer. The machine is designed for washing with water, not any other solvent. Processing can cause solvent-containing goods to give off flammable vapors.

- Do not use flammable solvents in processing.
- Do not process goods containing flammable substances. Consult with your local fire department/public safety office and all insurance providers.

## 5. Safety Alert Messages—Unsafe Conditions [Document BIUUUS14]

### 5.1. Damage and Malfunction Hazards

#### 5.1.1. Hazards Resulting from Inoperative Safety Devices



**DANGER 7: Entangle and Sever Hazards**—Cylinder door interlock—Operating the machine with a malfunctioning door interlock can permit opening the door when the cylinder is turning and/or starting the cycle with the door open, exposing the turning cylinder.

- Do not operate the machine with any evidence of damage or malfunction.



**WARNING 8: Multiple Hazards**—Operating the machine with an inoperative safety device can kill or injure personnel, damage or destroy the machine, damage property, and/or void the warranty.

- Do not tamper with or disable any safety device or operate the machine with a malfunctioning safety device. Request authorized service.



**WARNING 9: Electrocution and Electrical Burn Hazards**—Electric box doors—Operating the machine with any electric box door unlocked can expose high voltage conductors inside the box.

- Do not unlock or open electric box doors.



**WARNING 10: Entangle and Crush Hazards**—Guards, covers, and panels—Operating the machine with any guard, cover, or panel removed exposes moving components.

- Do not remove guards, covers, or panels.

#### 5.1.2. Hazards Resulting from Damaged Mechanical Devices



**WARNING 11: Multiple Hazards**—Operating a damaged machine can kill or injure personnel, further damage or destroy the machine, damage property, and/or void the warranty.

- Do not operate a damaged or malfunctioning machine. Request authorized service.



**WARNING 12: Explosion Hazards**—Cylinder—A damaged cylinder can rip apart during extraction, puncturing the shell and discharging metal fragments at high speed.

- Do not operate the machine with any evidence of damage or malfunction.



**WARNING 13: Explosion Hazards**—Inner door latches (divided cylinder machines)—A damaged or improperly seated latch can cause the inner door to open during operation, damaging the cylinder and shell. A damaged cylinder can rip apart during extraction, puncturing the shell and discharging metal fragments at high speed.

- Ensure that the inner door is securely latched when loading and unloading.
- Do not operate the machine with any evidence of damage or malfunction.



**WARNING 14: Explosion Hazards**—Clutch and speed switch (multiple motor machines)—A damaged clutch or speed switch can permit the low speed motor to engage during extract. This will over-speed the motor and pulleys and can cause them to rip apart, discharging metal fragments at high speed.

- Stop the machine immediately if any of these conditions occur: • abnormal whining sound during extract • skidding sound as extract ends • clutches remain engaged or re-engage during extract

## 5.2. Careless Use Hazards

### 5.2.1. Careless Operation Hazards—Vital Information for Operator Personnel (see also operator hazards throughout manual)



**WARNING 15: Multiple Hazards**—Careless operator actions can kill or injure personnel, damage or destroy the machine, damage property, and/or void the warranty.

- Do not tamper with or disable any safety device or operate the machine with a malfunctioning safety device. Request authorized service.
- Do not operate a damaged or malfunctioning machine. Request authorized service.
- Do not attempt unauthorized servicing, repairs, or modification.
- Do not use the machine in any manner contrary to the factory instructions.
- Use the machine only for its customary and intended purpose.
- Understand the consequences of operating manually.

### 5.2.2. Careless Servicing Hazards—Vital Information for Service Personnel (see also service hazards throughout manuals)



**WARNING 16: Electrocutation and Electrical Burn Hazards**—Contact with electric power can kill or seriously injure you. Electric power is present inside the cabinetry unless the main machine power disconnect is off.

- Do not service the machine unless qualified and authorized. You must clearly understand the hazards and how to avoid them.
- Abide by the current OSHA lockout/tagout standard when lockout/tagout is called for in the service instructions. Outside the USA, abide by the OSHA standard in the absence of any other overriding standard.



**WARNING 17: Entangle and Crush Hazards**—Contact with moving components normally isolated by guards, covers, and panels, can entangle and crush your limbs. These components move automatically.

- Do not service the machine unless qualified and authorized. You must clearly understand the hazards and how to avoid them.
- Abide by the current OSHA lockout/tagout standard when lockout/tagout is called for in the service instructions. Outside the USA, abide by the OSHA standard in the absence of any other overriding standard.



**WARNING 18: Confined Space Hazards**—Confinement in the cylinder can kill or injure you. Hazards include but are not limited to panic, burns, poisoning, suffocation, heat prostration, biological contamination, electrocution, and crushing.

- Do not enter the cylinder until it has been thoroughly purged, flushed, drained, cooled, and immobilized.

— End of BIUUUS27 —

---

## About the Forces Transmitted by Milnor® Washer-extractors

Document ..... BIWUUI02  
Specified Date ..... 20001108  
As-of Date ..... 20001108  
Access Date ..... 20001108  
Applicability.....WUU

During washing and extracting, all washer-extractors transmit both static and dynamic (cyclic) forces to the floor, foundation, or any other supporting structure. During washing, the impact of the goods as they drop imparts forces which are quite difficult to quantify. Size for size, both rigid and flexibly-mounted machines transmit approximately the same forces during washing. During extracting, rigid machines transmit forces up to 30 times greater than equivalent flexibly-mounted models. The actual magnitude of these forces vary according to several factors:

- machine size,
- final extraction speed,
- amount, condition, and type of goods being processed,
- the liquor level and chemical conditions in the bath preceding extraction, and
- other miscellaneous factors.

Estimates of the maximum force normally encountered are available for each Milnor® model and size upon request. Floor or foundation sizes shown on any Milnor® document are only for on-grade situations based only on previous experience without implying any warranty, obligation, or responsibility on our part.

### 1. Rigid Machines

Size for size, rigid washer-extractors naturally require a stronger, more rigid floor, foundation, or other supporting structure than flexibly-mounted models. If the supporting soil under the slab is itself strong and rigid enough and has not subsided to leave the floor slab suspended without support, on grade installations can often be made directly to an existing floor slab if it has enough strength and rigidity to safely withstand our published forces without transmitting undue vibration. If the subsoil has subsided, or if the floor slab itself has insufficient strength and rigidity, a deeper foundation, poured as to become monolithic with the floor slab, may be required. Support pilings may even be required if the subsoil itself is “springy” (i.e., if its resonant frequency is near the operating speed of the machine). Above-grade installations of rigid machines also require a sufficiently strong and rigid floor or other supporting structure as described below.

### 2. Flexibly-mounted Machines

Size for size, flexibly-mounted machines generally do not require as strong a floor, foundation, or other supporting structure as do rigid machines. However, a floor or other supporting structure having sufficient strength and rigidity, as described in section 3, is nonetheless vitally important for these models as well.

### 3. How Strong and Rigid?

Many building codes in the U.S.A. specify that laundry floors must have a minimum live load capacity of 150 pounds per square foot (732 kilograms per square meter). However, even compliance with this or any other standard does not necessarily guarantee sufficient rigidity. In any event, it is the sole responsibility of the owner/user to assure that the floor and/or any other supporting structure exceeds not only all applicable building codes, but also that the floor and/or any other supporting structure for each washer-extractor or group of washer-extractors actually

has sufficient strength and rigidity, plus a reasonable factor of safety for both, to support the weight of all the fully loaded machine(s) including the weight of the water and goods, and including the published 360° rotating sinusoidal RMS forces that are transmitted by the machine(s). Moreover, the floor, foundation, or other supporting structure must have sufficient rigidity (i.e., a natural or resonant frequency many times greater than the machine speed with a reasonable factor of safety); otherwise, the mentioned 360° rotating sinusoidal RMS forces can be multiplied and magnified many times. It is especially important to consider all potential vibration problems that might occur due to all possible combinations of forcing frequencies (rotating speeds) of the machine(s) compared to the natural frequencies of the floor and/or any other supporting structure(s). A qualified soil and/or structural engineer must be engaged for this purpose.

**Figure 1: How Rotating Forces Act on the Foundation**

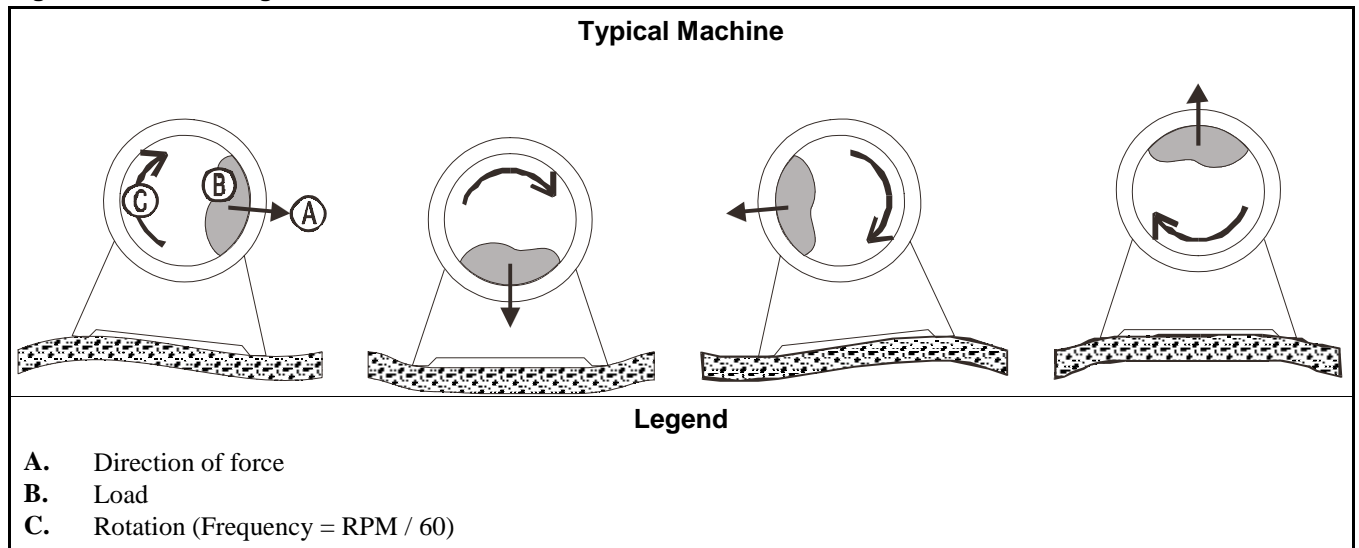
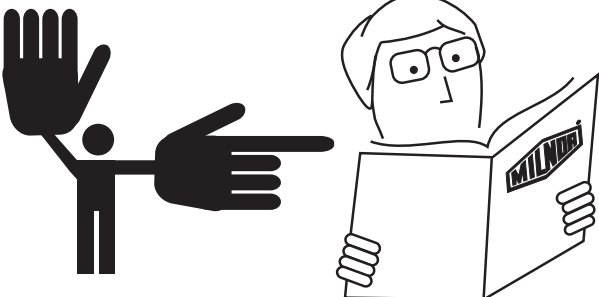
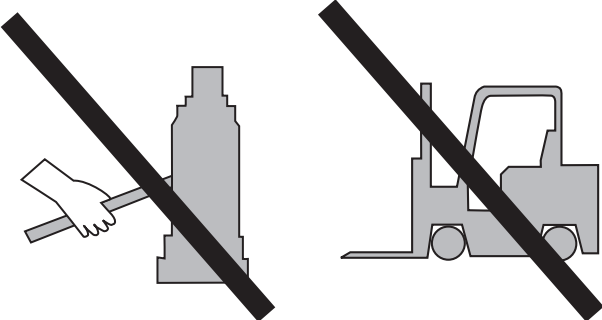
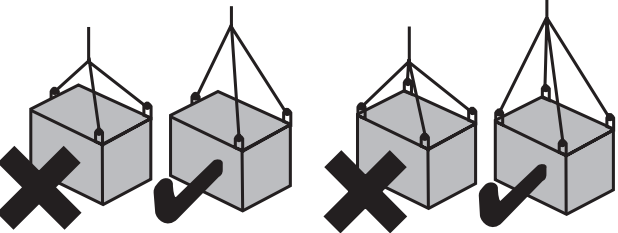
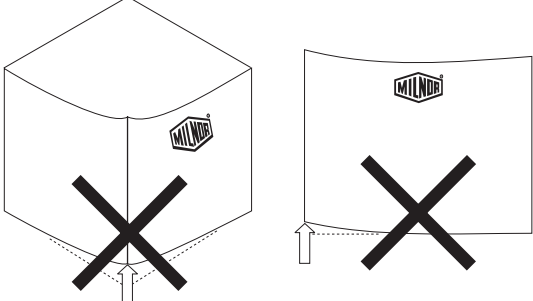


Figure 1 above is intended to depict both on-grade and above-grade installations and is equally applicable to flexibly-mounted washer-extractors, as well as to rigid models installed either directly on a floor slab or on a foundation poured integrally with the slab. Current machine data is available from Milnor® upon request. All data is subject to change without notice and may have changed since last printed. It is the sole responsibility of every potential owner to obtain written confirmation that any data furnished by Milnor® applies for the model(s) and serial number(s) of the specific machines.


# Glossary of Tag Illustrations— Suspended Washer-Extractors

MSIUPUTGAE/2003026V

Illustration	Explanation
	Stop! Read the manual first for complete instructions before continuing.
	Do not jack the machine here. Do not lift the machine here.
	Use three point or four point lifting as determined by the lifting eyes furnished. Rig the load using lifting cables of sufficient size and length to ensure cables are not over-stressed.
	Do not lift the machine from one corner or one side edge.

**Illustration**


**Explanation**

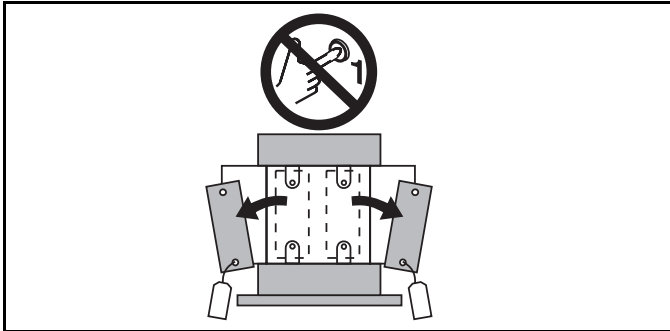

Do not start this machine until the packing materials, lifting brackets, etc. with this tag attached or behind this panel are removed. These materials are painted red. Safety stands or brackets (also painted red) may be provided with this machine. Do not discard safety stands or brackets



Do not step or stand on this machine part.

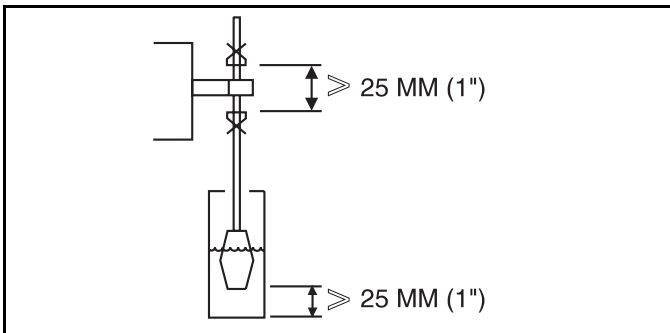


Maintain a 25 mm. (1") minimum clearance between float clips. Set "low level" so that the bottom of the float is always at least 25mm (1") above the bottom of the float tube.




This motor or pump should rotate in the direction of the arrow.




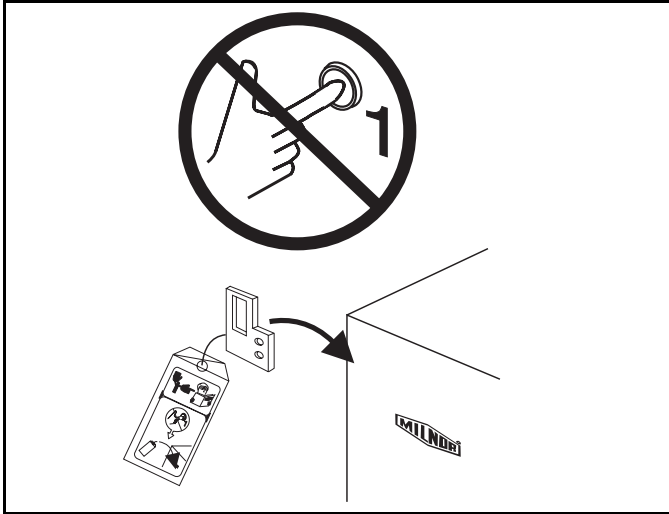


Do not start this machine until the part with this tag is installed on the machine.

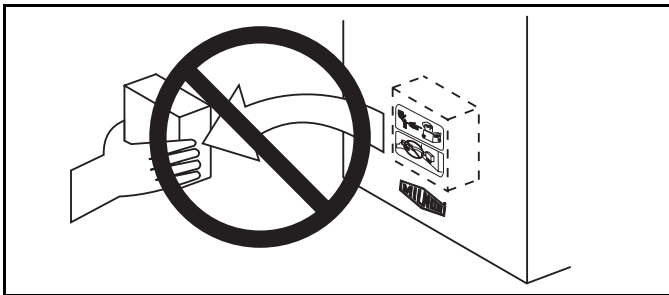


Do not remove this component from the machine.

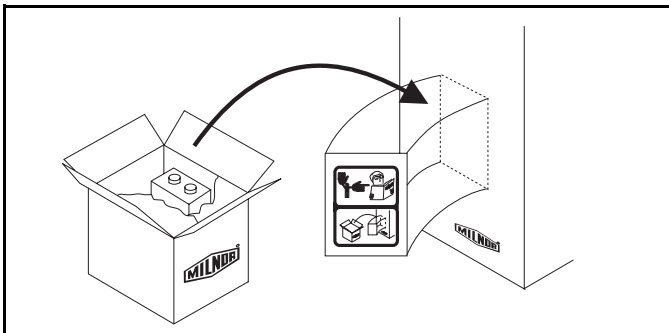


Install the appropriate part here before operating the machine.

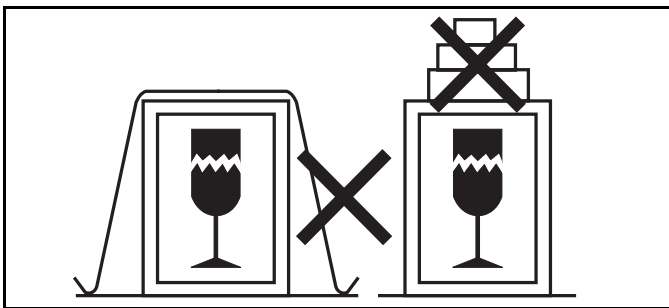


Do not strap or chain over box

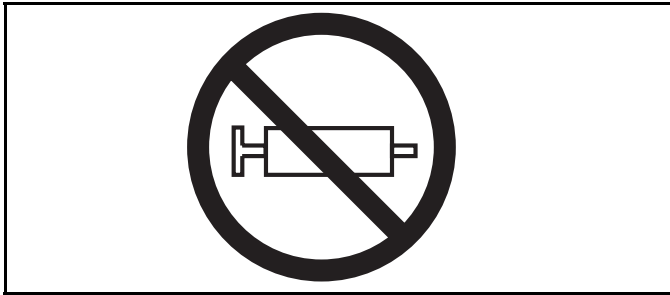


Do not pump grease here.

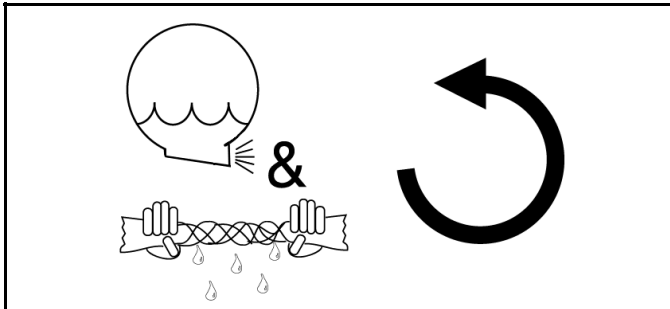


During drain and extract, the cylinder must rotate counterclockwise when viewed from here (rear of machine).

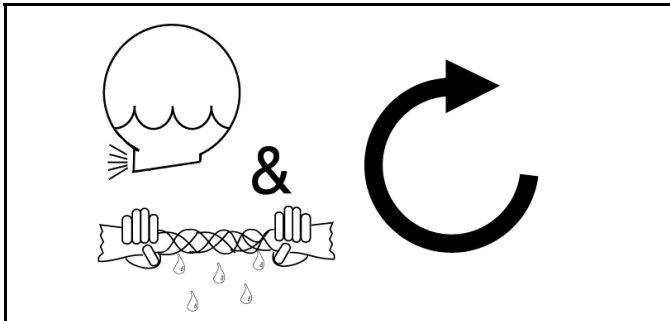

During drain and extract, the cylinder must rotate clockwise when viewed from here (front of machine).

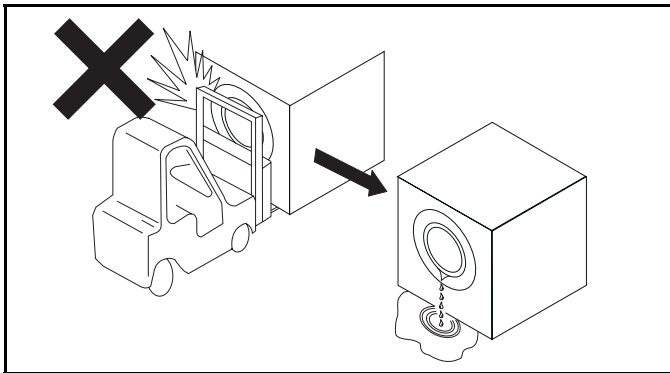


Do not strike shell front of washer-extractors during fork lifting. Striking shell front will cause door to leak.

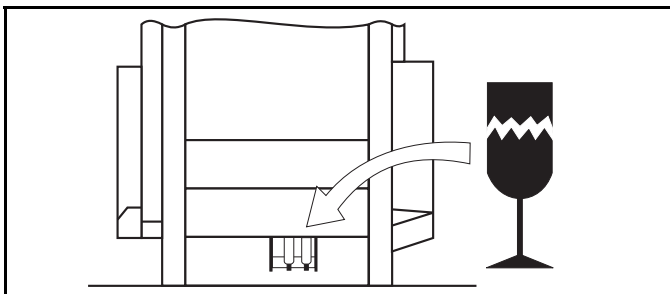

Brake assembly under machine is fragile. Forklift blades should only be placed under main structural beams

**10 psi**  
**.70 kg/cm<sup>2</sup>**

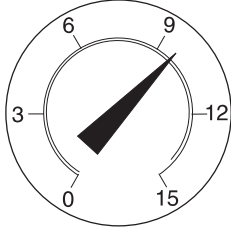


Set main bearing air pad gauge at 10 psi (.70 kg/cm<sup>2</sup>), 64" and 72" ExN and JxN models only.


Set disc brake air gauge at 10 psi (.70 kg/cm<sup>2</sup>), 64" and 72" ExN and JxN models only.




Make cold water connection here.

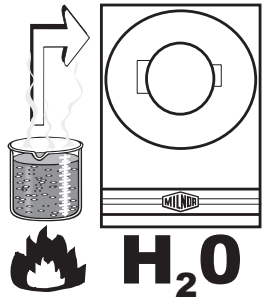

Make hot water connection here.

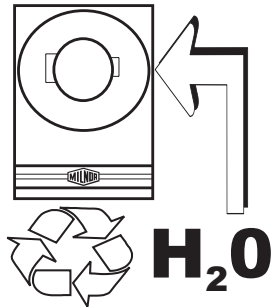

Make third (reuse) water connection here.

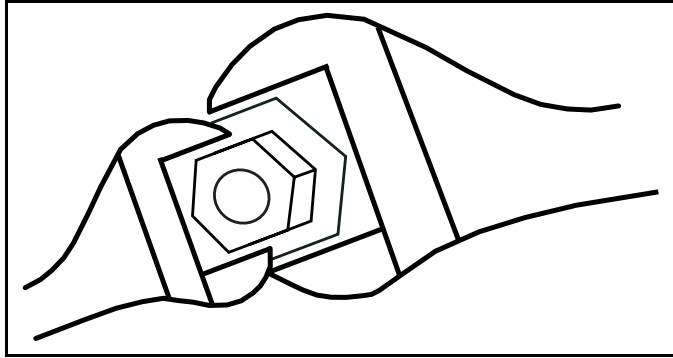

Hold the connection side of the valve with a wrench when connecting plumbing.

## Avoiding Damage From Allied Remote Chemical Delivery Systems

Milnor® does not manufacture or supply remote chemical delivery systems and this document is meant only to illustrate some of the possible problems that can be minimized during installation of such systems by the chemical supply company. Milnor washer-extractors and CBW® batch washers (tunnels) are available with convenient inlets for such systems (see Figure 1). Most common of the types of systems currently used in commercial laundering operations are pumped chemical systems. Other types, such as constant pressure, re-circulating ring main systems have also been, and may continue to be used with Milnor equipment.

This document warns about some of the possible hazards posed by chemical systems and lists certain requirements needed to minimize those hazards. The procedures for interfacing with allied chemical systems and information pertinent to chemical use in general are provided elsewhere in the product manuals (see Note 1).

**Figure 1: Pumped Chemical Inlets on CBW Batch Washer**



**Note 1:** Misuse of laundering chemicals (such as injecting excessive concentrations of chlorine bleach or permitting acid sours to react with hypo chlorite) due to incorrect formulation can also be hazardous. Information pertinent to chemical use is provided elsewhere in the product manuals.

### 1. How a Chemical System Can Damage the Machine It Serves

Milnor has manufactured washer-extractors and tunnel washers with the same stainless steel specification since its founding. Every batch of steel used is certified and documented by the steel mill. Testing of samples damaged by corrosion have, in every case, proven the steel to be well within the AISI 304 specification.

Chemical products commonly found in the laundry industry, when used in **established** dosages and proper operating parameters, under the auspices of an experienced chemical specialist, should produce satisfactory results, with no consequential detrimental effects. The industry has published standards in Riggs and Sherrill, “Textile Laundering Technology”. However, the stainless steel can be damaged and even destroyed by **abnormal** contact with chlorine bleach, hydrofluosilicic acid and other commonly used chemicals, as will occur if chemicals are unintentionally leaked into the machine, particularly when it is no longer in use and especially when machine surfaces are dry.

Some chemical systems have been found to permit chemicals to dribble from the supply lines, or worse, to siphon from the supply tank into the machine, during operation and long after the system is shut down—as after working hours and during weekends. If this occurs, **deterioration (rusting) of the stainless steel and damage to any textiles therein will inevitably result. If this condition goes undetected, machine damage is likely to be catastrophic.** No machine is immune to such damage.



**CAUTION [1]: Equipment and Textile Damage Hazards**—Chemicals leaked into the machine, particularly when it is idle can destroy machine components and textiles left in the machine. **Pellerin Milnor Corporation accepts absolutely no responsibility for damage to its equipment or to textiles therein from abnormal contact with chemicals.**


- Ensure that the chemical system prevents unintentional release of chemicals.
- Inspect regularly for proper operation and evidence of damage.

## 2. Requirements for Chemical Systems Used With Milnor Machines

It is the responsibility of the chemical system manufacturer and supplier to ensure that their system is safe for personnel and equipment. Some important points are described below.


- 2.1. **Ensure the System Cannot Siphon.**—The supply system must be designed to counteract any siphoning that could occur as a result of having a sealed supply line between the bottom of the chemical tank and the internal machine connection at the drain trough. As shown in the Figure 2 examples, if the pump (P) and/or the valving does not provide positive closure and there is no vacuum breaker protection, siphoning is likely to occur. In each of the Figure 2 illustrations, the volume of chemical in the tank above the siphon level (S), and indicated by shading, will flow into the machine.

**Figure 2: Siphoning From the Chemical Tank into the Machine**

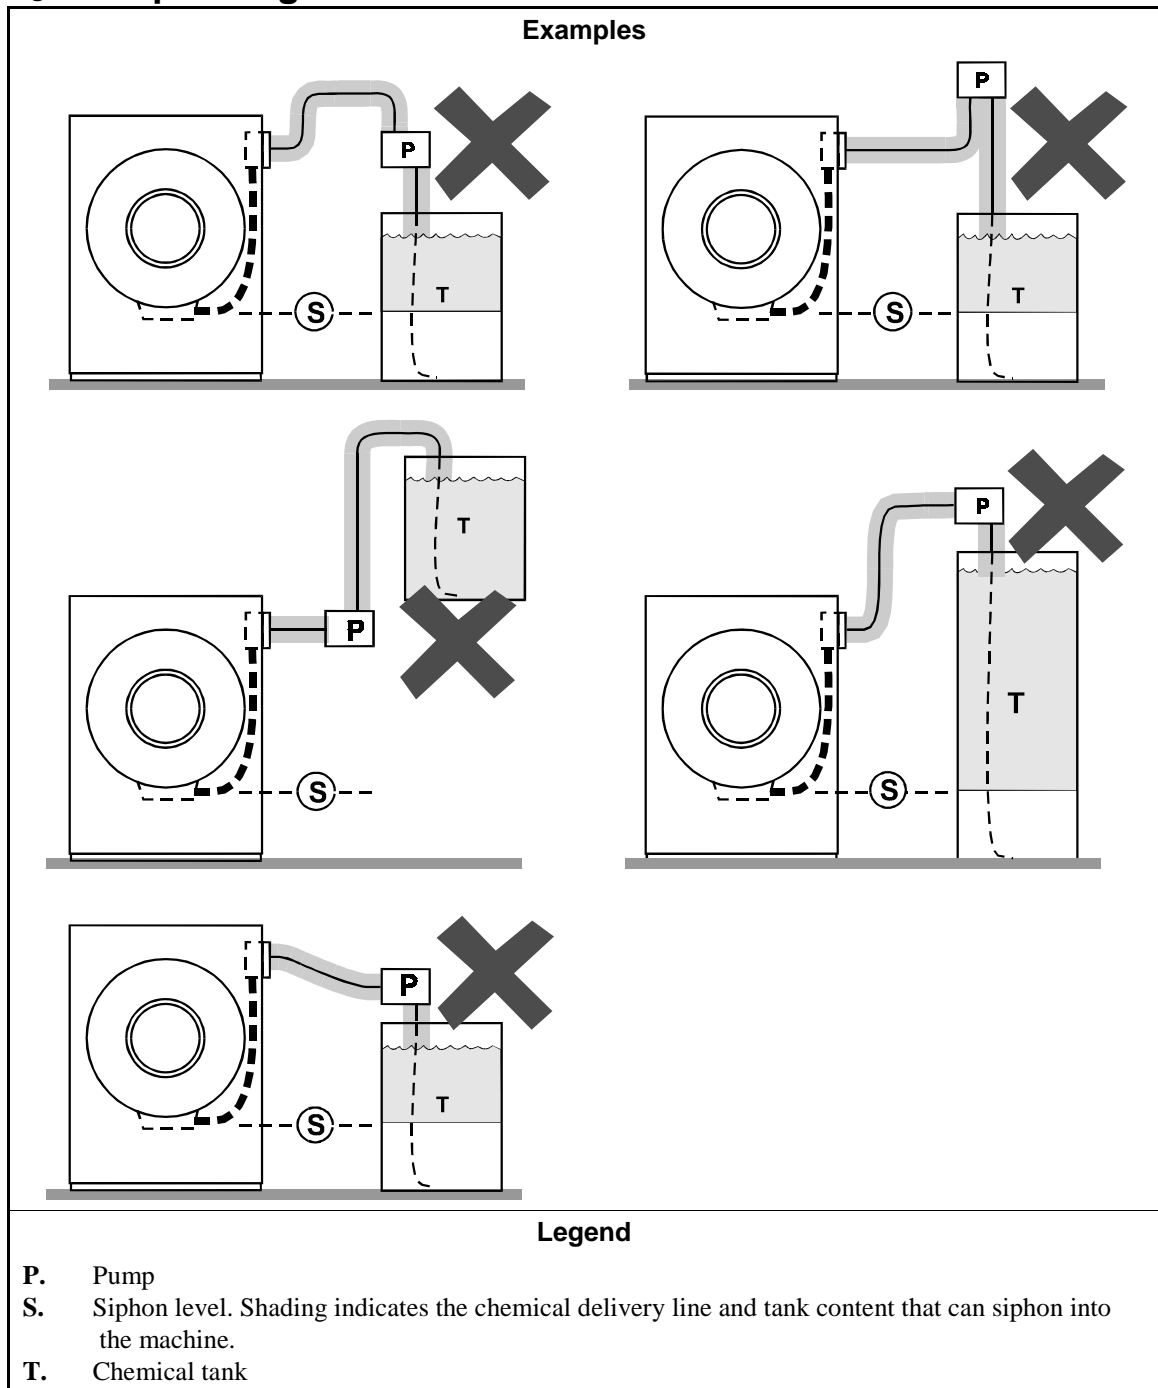

2.2. **Ensure the Chemical Lines Cannot Dribble**—The pumped chemical system may provide a means of positively closing the chemical line at the pump location, but not at the injection site. Hence, any concentrated chemical that remains in the injection line between the pump and the machine is free to flow into the machine. Some examples of this are shown in Figure 3.

**Figure 3: Dribbling From Chemical Supply Line Into Machine  
(assumes positive closure at the pump)**

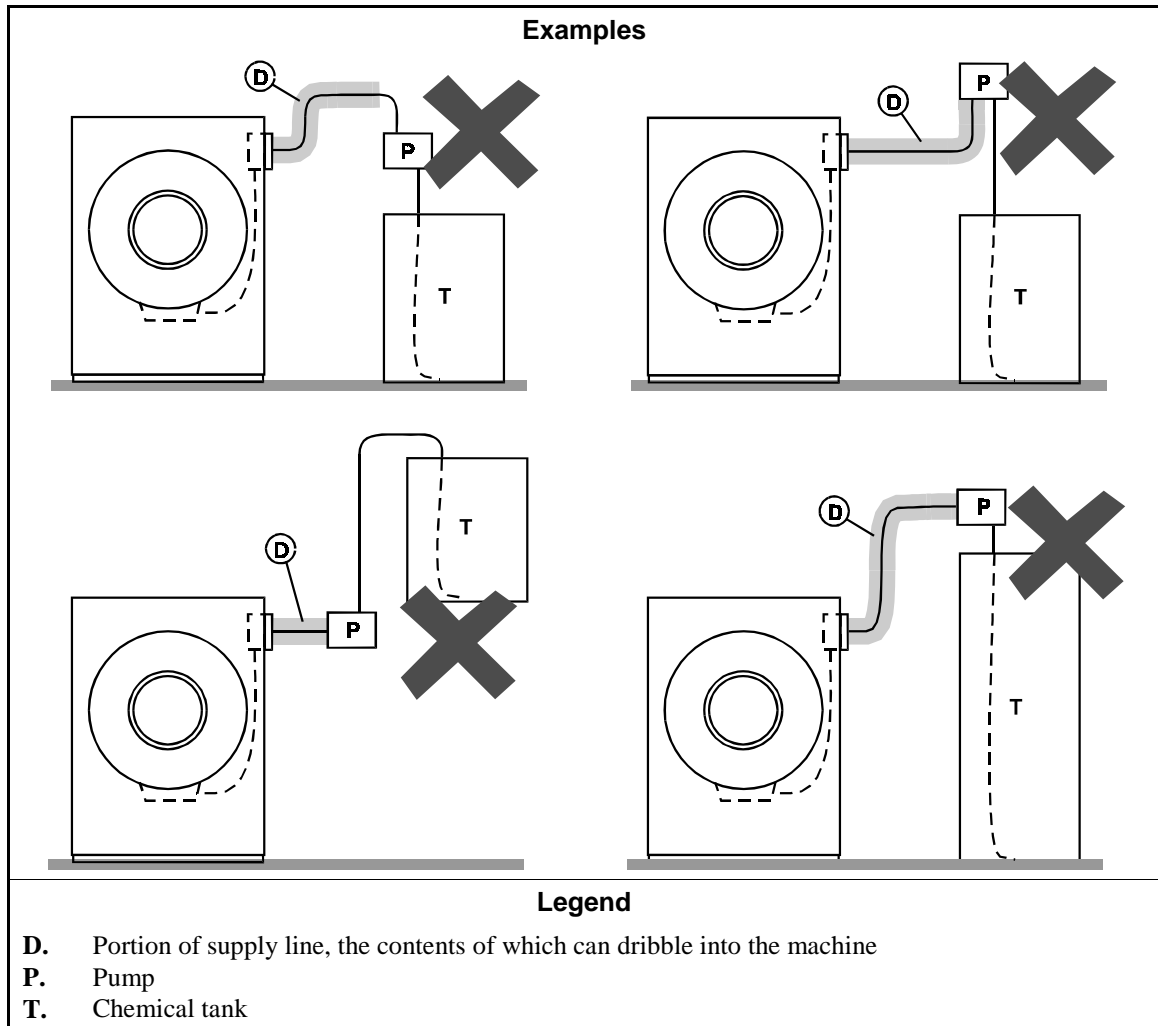

### 3. Design and Installation Recommendations


**It is the responsibility of the chemical system manufacturer and supplier to use whatever measures are necessary to ensure that their system is safe for personnel and equipment.** The following are some of the possible methods the manufacturer or supplier may wish to use, as appropriate.

- 3.1. **Siphoning: Positively close the line.**—If the pump does not provide positive closure when the system is off, employ a shutoff valve in the line to serve this purpose.
- 3.2. **Siphoning: Break the siphon.**—Provide an air gap or vacuum breaker in the chemical delivery line. This must be located above the “full” line of the tank.
- 3.3. **Dribbling: Flush the entire chemical delivery line.**—If any concentrated chemical that remains in the injection line between the pump and the machine is free to flow into the machine, employ a system that flushes the entire line between the pump and the injection point with fresh water after each injection.



- 3.4. **Dribbling: Locate the entire chemical line below the machine inlet.**— Assuming the chemical system does not retain any line pressure and that the pump provides positive closure when the system is off, locate the entire chemical delivery line below the level of the chemical inlet. An example of this is shown in Figure 4.

**Figure 4: Locating a Pumped Chemical System With Positive Closure To Protect Against Machine Damage**

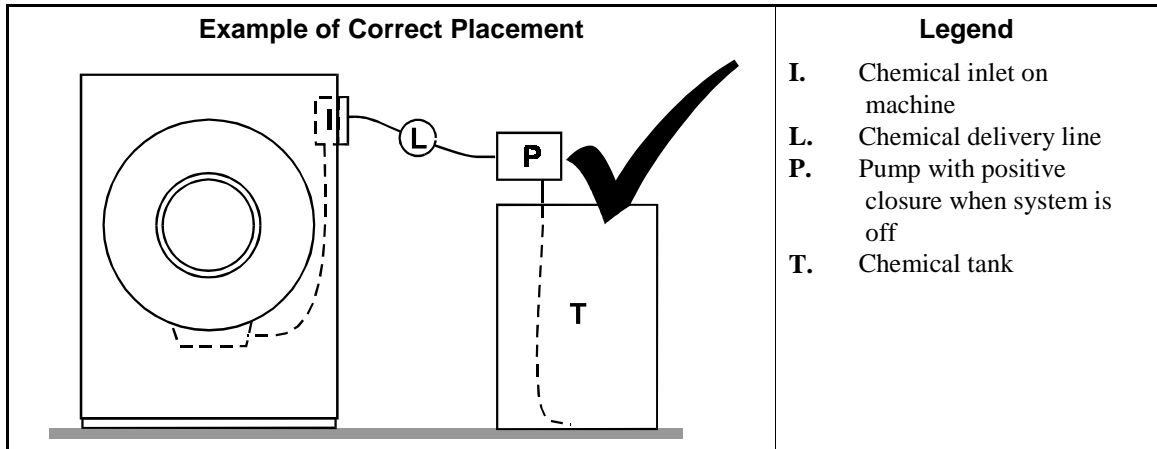

#### 4. Guarding Against Leaks

All personnel who may work with the chemical system (e.g., chemical system manufacturer, chemical system supplier, chemical supplier, operator, maintenance personnel) should be vigilant in observing for leaks in the system. When connecting, or reconnecting chemical lines, whether at installation, after taking samples, or when replacing components, at a minimum ensure that:

1. the proper components are used,
2. all connections are the proper fit, and
3. all components are securely connected.



**CAUTION [2]: Injury and Damage Hazards**—Chemicals leaking from a chemical system may be corrosive or toxic. Such chemicals can injure personnel and damage equipment.

- Use care when connecting chemical lines.
- Inspect regularly for leaks.

— End of BIWUI03 —



**Section**  
**Service and Maintenance**

**1**

# LUBRICATION AND PREVENTIVE MAINTENANCE FOR HYDRO-CUSHION<sup>®</sup> MACHINES

## General Requirements

Maintenance procedures require:

- A hand operated grease gun.
- The correct lubricants (see “LUBRICANTS FOR MILNOR MACHINES,” in the Table of Contents).

## Lubricant Requirements

To achieve the optimum performance and service life from the Milnor<sup>®</sup> machine and as a warranty requirement, the machine must be lubricated in strict accordance with the instructions in this section.

### ⚠ DANGER ⚠



**ENTANGLE AND CRUSH HAZARD**—Belts and pulleys can entangle and crush body parts.

- ☞ Lock OFF and tag out power at the wall disconnect before servicing, except where specifically instructed otherwise in this section.
- ☞ Insure belt and pulley guards are in place during service procedures.
- ☞ Permit only qualified maintenance personnel to perform these procedures.

### ⚠ DANGER ⚠



**CRUSH/SEVER HAZARD**—Tilting mechanism can crush or sever parts of your body caught in them.

- ☞ Install the safety stands before performing maintenance under a tilted machine.
- ☞ NEVER test or operate (manually or automatically) any machine function with any portion of a person's body under the tilted machine—even if the safety stands are installed.

## ▲ DANGER ▲




**CRUSH/SEVER HAZARD**—Tilting machines with tilt wheels/cradles may lunge forward or rearward and even fall over if the tilt wheels at the non-tilted end are raised out of their cradles—killing/injuring personnel and/or damaging property.


- ☞ **NEVER** manually tilt (lift) both ends of the machine at the same time. One end must always be seated in its cradle.
- ☞ **ALWAYS** visually inspect the tilt wheels to be sure they are all fully seated in their cradles before each manual tilt up.
- ☞ Hydraulic valve manual operation must be done by trained competent maintenance personnel who thoroughly understand the system and all the consequences of manual operations.
- ☞ **ALWAYS** understand beforehand all the consequences of manually operating hydraulic valves.
- ☞ Never permit operation with malfunctioning tilt limit switches.

## Correct Grease Gun Procedures


1. **Do not use a pneumatic grease gun.** Pump grease slowly, taking 10-15 seconds to complete each stroke. A grease gun can build up extremely high pressure which will force seals out of position and cause them to leak, even though both the seal and the bearing housing are equipped with spring loaded relief plugs.
2. **Apply quantity of grease called for in the checklist.** Over-lubrication can be as damaging as under-lubrication. Where quantities are stated in strokes, one stroke of the grease gun is assumed to provide .0624 fluid ounces (1.77 grams) (by volume) of grease. Therefore, one fluid ounce (28.3 grams) of grease would be provided by 16 strokes of the grease gun. Determine the flow rate of your grease gun by pumping one ounce into a calibrated container. If fewer than 16 strokes are required, all quantities in strokes in the chart should be reduced accordingly, and if more than 16 strokes are required, the number of strokes should be increased. Before starting lubrication, **make sure your grease gun is working and that you get a full charge of grease with every stroke.**
3. **Do not pump grease in until it oozes out of the spring loaded relief plugs.** Plugs bleed out excess grease and help prevent abnormal pressures from building up in the housing during operation (especially when the machine is first commissioned and after each lubrication). **Plugs will not protect against over-lubrication.**
4. **Do not over-lubricate motors.** Over-lubrication of a motor can seriously damage it by forcing grease into motor windings. Over-lubrication of the extract motor can force grease into the centrifugal switch causing it to malfunction.
5. **Do not allow grease to drip on the brake disk or clutch tire/drum during lubrication.** This will reduce the braking action considerably, and may permit the cylinder to creep while loading and unloading.

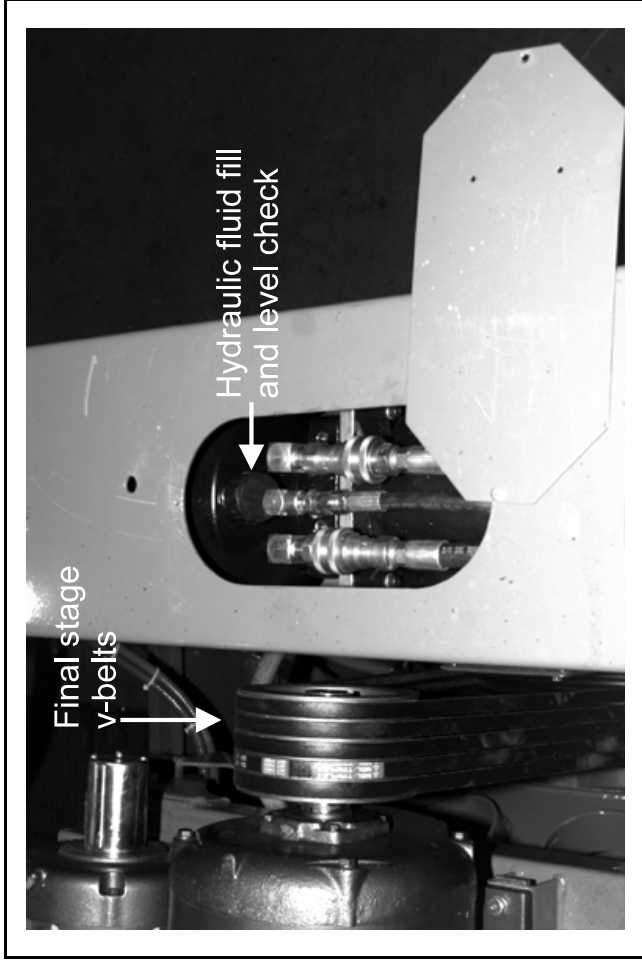

**FIGURE 1** (MSSM0201CE)  
**Hydraulic Fluid Reservoir Fill and Level Check Point**  
 (located at rear of 48", 52", and 72" tilt machines only)

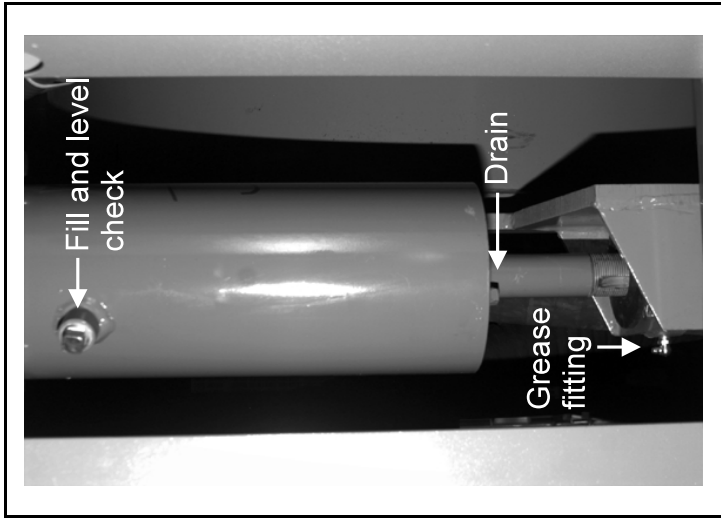

**FIGURE 2** (MSSM0201CE)  
**Typical Hydro-Cushion<sup>®</sup> Maintenance Points**

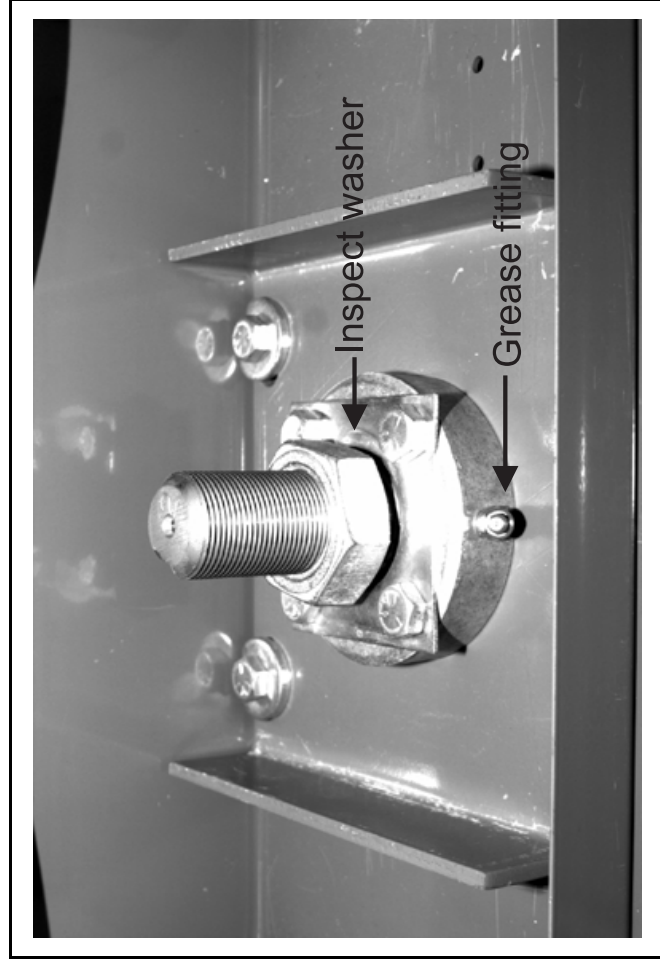

**FIGURE 3** (MSSM0201CE)  
**Typical Upper Hydro-Cushion<sup>®</sup> Grease Fitting**

## Daily and Weekly Maintenance Items

Frequency	Component	Action
Daily	<b>Hydraulic Tilt System</b> (48", 52", and 72" Tilt machines) • Reservoir FIGURE 1 and NOTE 1	Check fluid with machine not tilted
	<b>Hydro-Cushions<sup>®</sup></b> (all machines) FIGURES 2 and 3	Check for leaks
Weekly	<b>Final stage and other v-belts</b> (throughout all machines) FIGURES 1 and 12 NOTES 2 and 3	Check for wear and tension

**NOTE 1:** Tank should be approximately three-quarters full when the machine is not tilted. Do not over-fill.

**NOTE 2:** V-belt instructions for the first week of operation

- After 24 hours operation (three eight hour days), tighten final stage v-belts.
- After 80 hours operation (ten eight hour days), tighten final stage v-belts again.
- After 160 hours of operation (twenty eight hour days), tighten final stage v-belts, and check all other v-belts and tighten if necessary.

**NOTE 3:** All v-belts are not alike. "Super" or "High Capacity" v-belts frequently have considerably higher capacities than "Standard" belts. Sometimes, one brand of v-belt is more suitable than another brand of v-belt, although both v-belts are "interchangeable". It is always best to purchase replacement belts from the original manufacturer of the equipment. Purchasing exact replacements of the original belts is the best way to assure belt life equal to the original set. Occasionally, Milnor<sup>®</sup> will change a belt specification to improve belt life. Belts purchased from Milnor<sup>®</sup> are as currently specified.


## Monthly Maintenance Items

Frequency	Component	Action
Monthly (see NOTE 4)	<b>All Divided cylinder and Staph-Guard® main bearing and seals</b> FIGURES 4 through 10, NOTES 5 and 6	
	• Each bearing grease fitting	0.37 ounces (10.6 grams), six strokes at two locations
	• Each seal grease fitting	0.12 ounces (3.54 grams), two strokes at two locations


**NOTE 4:** Once a month or once every 200 operating hours, whichever occurs first.

**NOTE 5:** Main bearings and jackshaft bearings (if so equipped) are prepacked with lubricant at the factory. Do not add grease for thirty days. During the first month's operation, some grease will ooze out of the automatic grease fittings at the bottom of the housing(s). This is normal. These grease fittings allow excess grease to escape, thus avoiding over-heating. This escaping lubricant need not be replaced. Every time these bearings are lubricated, the surplus grease will come out of the spring loaded relief fittings after a few hours running time.


**NOTE 6:** Bearings can run hot enough to make it extremely uncomfortable for a person to hold his hand on the bearing housing for more than a few seconds. This is normal.

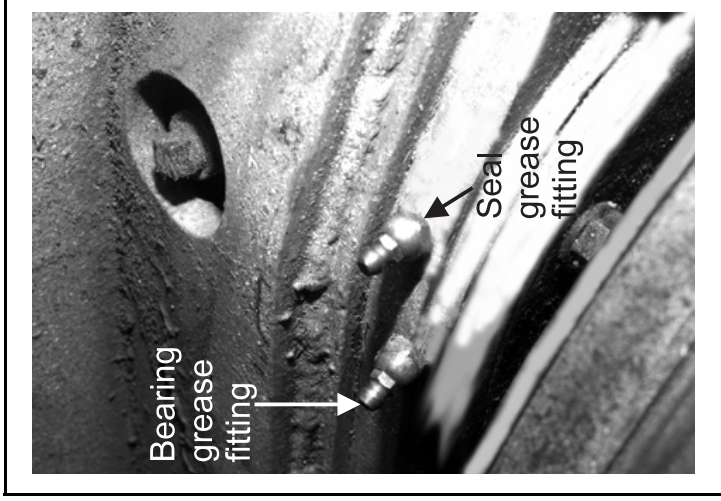

**FIGURE 5** (MSSM0201CE)  
**42" Staph-Guard® Front and Rear Bearing and Seal Grease**

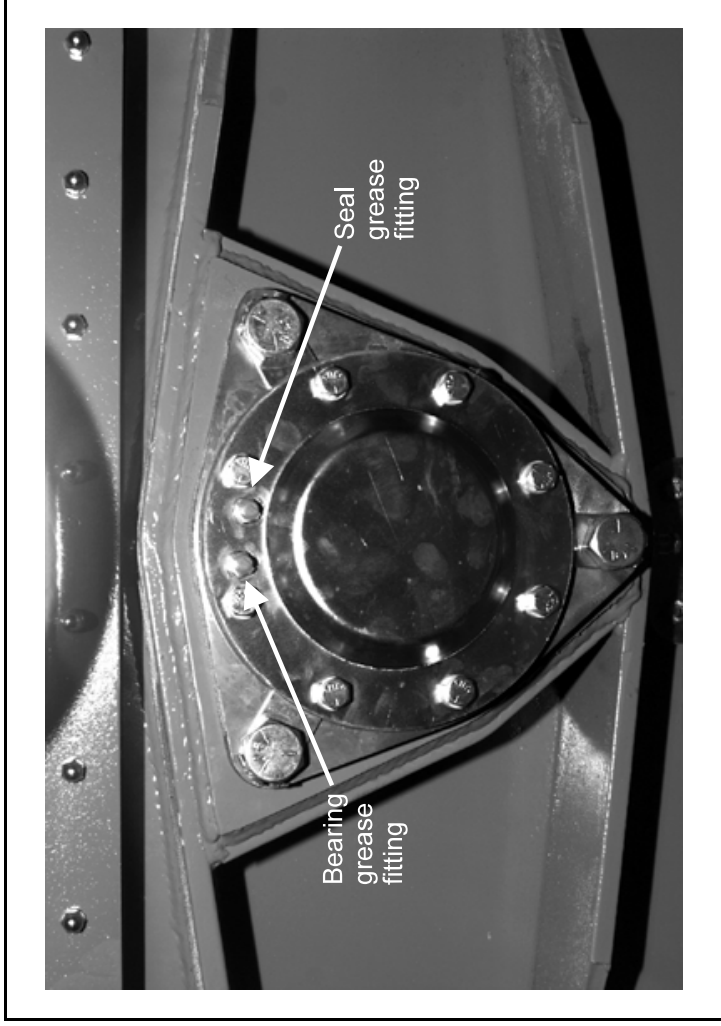


**FIGURE 4** (MSSM0201CE)  
**42" Divided Cylinder Front Bearing and Seal Grease Fittings**

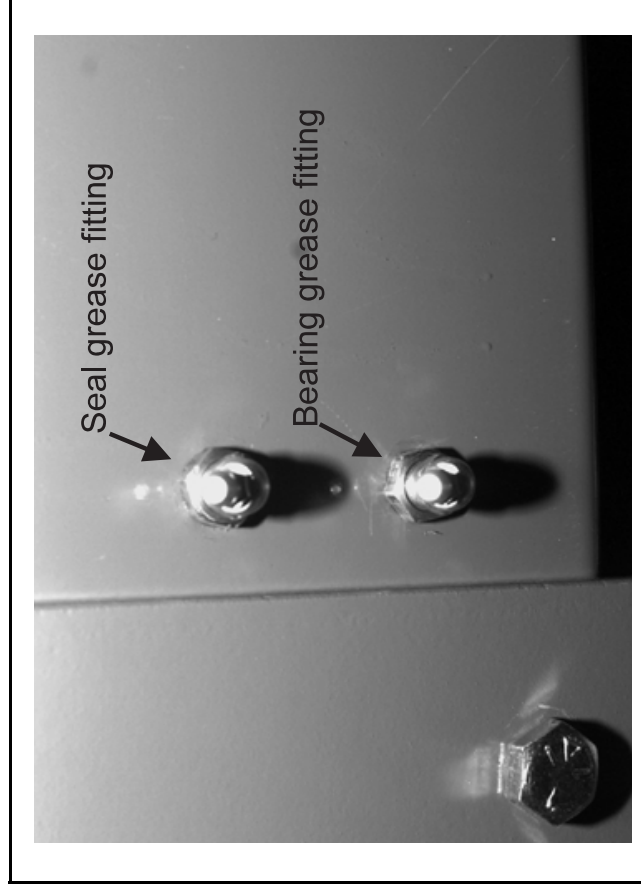


**FIGURE 6** (MSSM0201CE)  
**42" Divided Cylinder Rear Bearing and Seal Grease Fittings**




**FIGURE 7** (MSSM0201CE)  
**60" and 72" Divided Cylinder Front Seal and Bearing Grease Fittings**

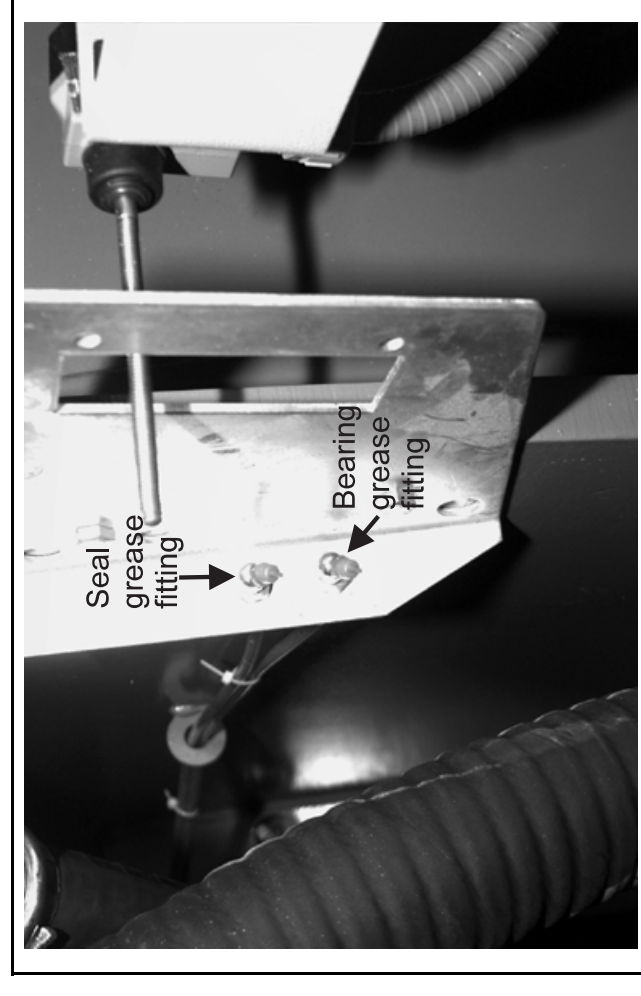


**FIGURE 8** (MSSM0201CE)  
**60" and 72" Divided Cylinder Rear Seal and Bearing**

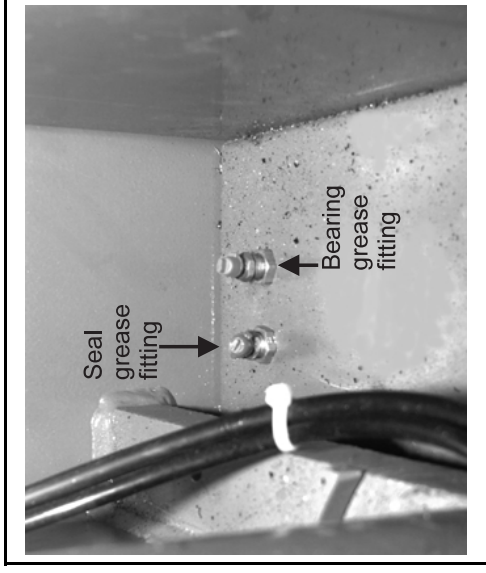

**FIGURE 9** (MSSM0201CE)  
**60044 and 72044 Staph-Guard®**  
**Front Bearing and Seal Grease Fit-**

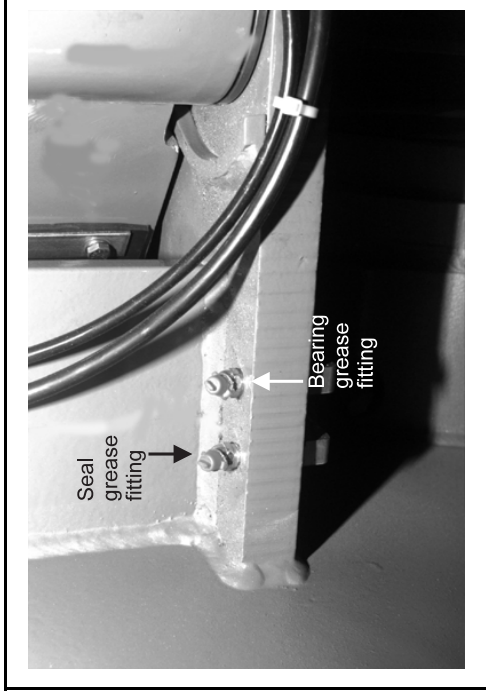


**FIGURE 10** (MSSM0201CE)  
**60044 and 72044 Staph-Guard®**  
**Rear Bearing and Seal Grease Fittings (lo-**

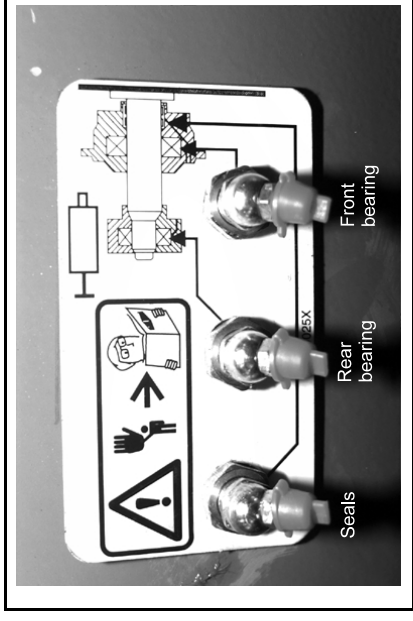


**FIGURE 11** (MSSM0201CE)  
**All Open-Pocket Machine Seal and Bearing Grease Fitting Plate**

Frequency	Component	Action
Monthly (see NOTE 4)	<b>42" Open pocket main bearings and seals</b> FIGURE 11, NOTES 5 and 6	
	• Front and rear bearing grease fitting	0.12 ounces (3.54 grams), two strokes at two locations
	• Seal grease fitting	0.06 ounces (1.77 grams), one stroke at one location
	<b>48" Open pocket main bearings, seals and Hydro-Cushions®</b> FIGURES 11 and 13, NOTES 4, 5, 6 and 7	
	• Front and rear bearing grease fitting	0.31 ounces (8.85 grams), five strokes at two locations
	• Seal grease fitting	See "Semi-Annual Maintenance Items" in this section
	• Hydro-Cushion® bypass (48" open-pocket only)	Drain small quantity of oil. If milky, see note 7 below
	<b>52" and 72" Open pocket main bearings and seals</b> FIGURE 11, NOTES 4, 5, and 6	
	• Front bearing grease fitting	0.62 ounces (17.7 grams), ten strokes at one location
	• Rear bearing grease fitting	0.31 ounces (8.8 grams), five strokes at one location
	<b>Drive train components</b> FIGURE 12	
	• Pulleys and clutches	Check for wear
	• All components	Remove soil build-up

**NOTE 7:** "Milky" oil is contaminated by water. Drain cylinder and unscrew cap on bottom of bypass (See BMP890047). Remove piston rod and inspect the upper piston cups and lower piston for wear or damage. Worn piston cups allow water from the air supply to enter hydrocushion. Repair worn parts and change oil.

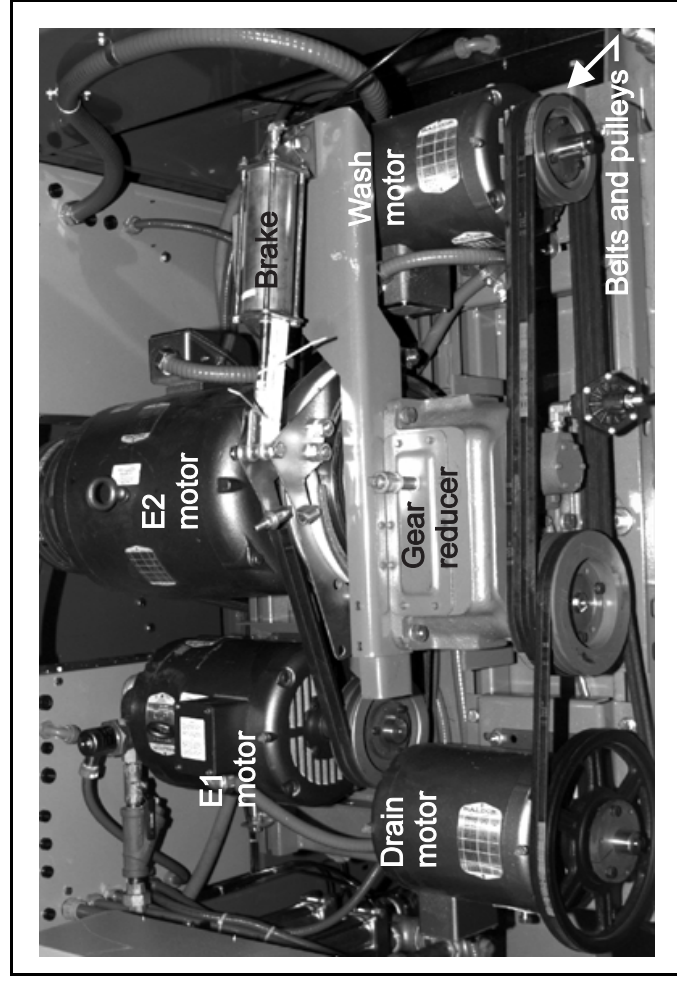

**FIGURE 12** (MSSM0201CE)  
**Typical Drive Train Components (48" machine shown)**

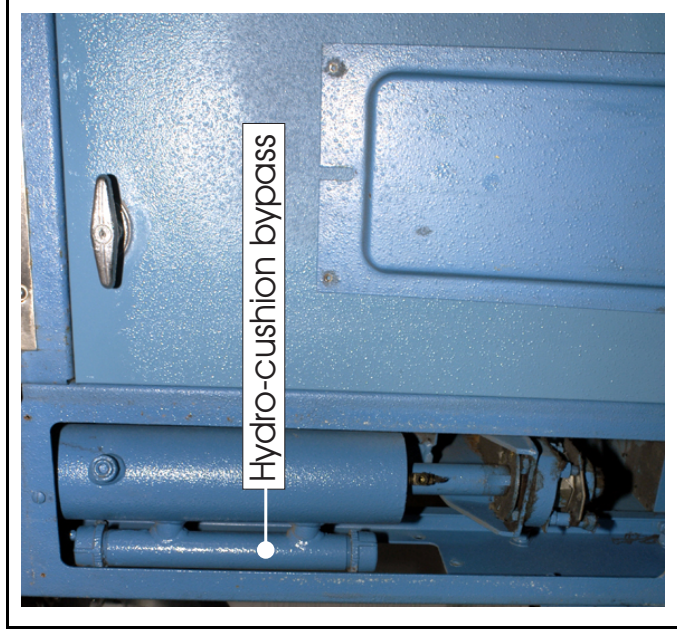


**FIGURE 13** (MSSM0201CE)  
**Hydrocushion Bypass Valve (48" machines only")**







**FIGURE 14** (MSSM0201CE)  
**Handwheel Screw**  
 (42" Divided Cylinder and Staph-Guard® only)

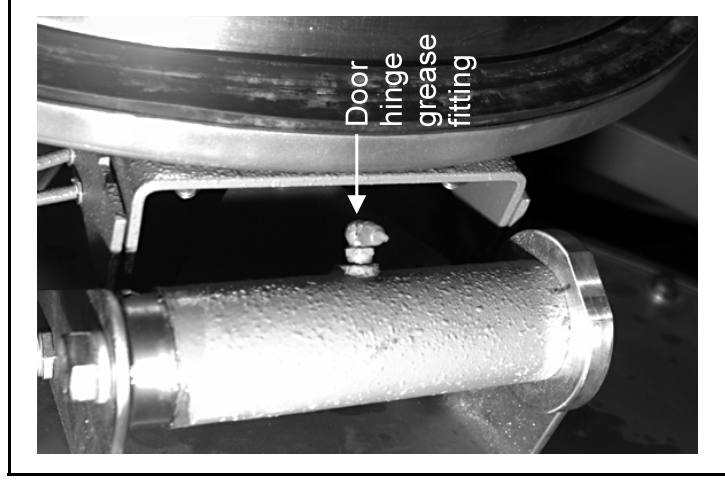


**FIGURE 15** (MSSM0201CE)  
**Typical Door Hinge**

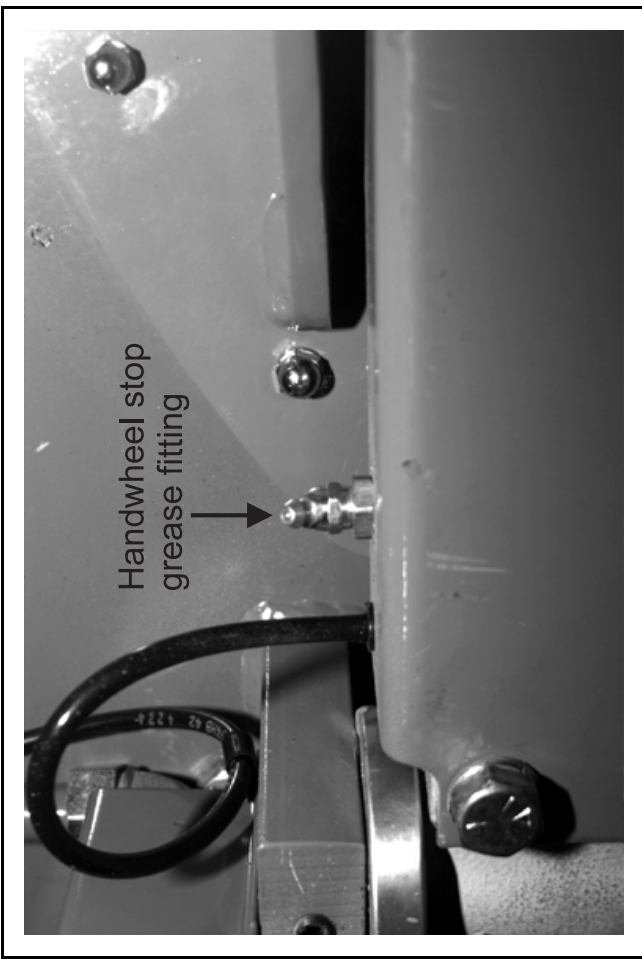


**FIGURE 16** (MSSM0201CE)  
**Handwheel Stop**  
 (42" Divided Cylinder and Staph-Guard® only)

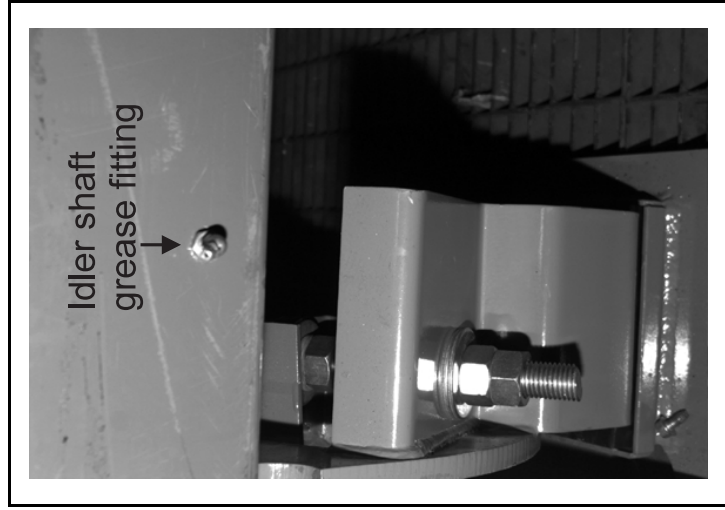

**FIGURE 17** (MSSM0201CE)  
**42" Staph-Guard®**  
**Idler Shaft**  
**Grease Fitting**

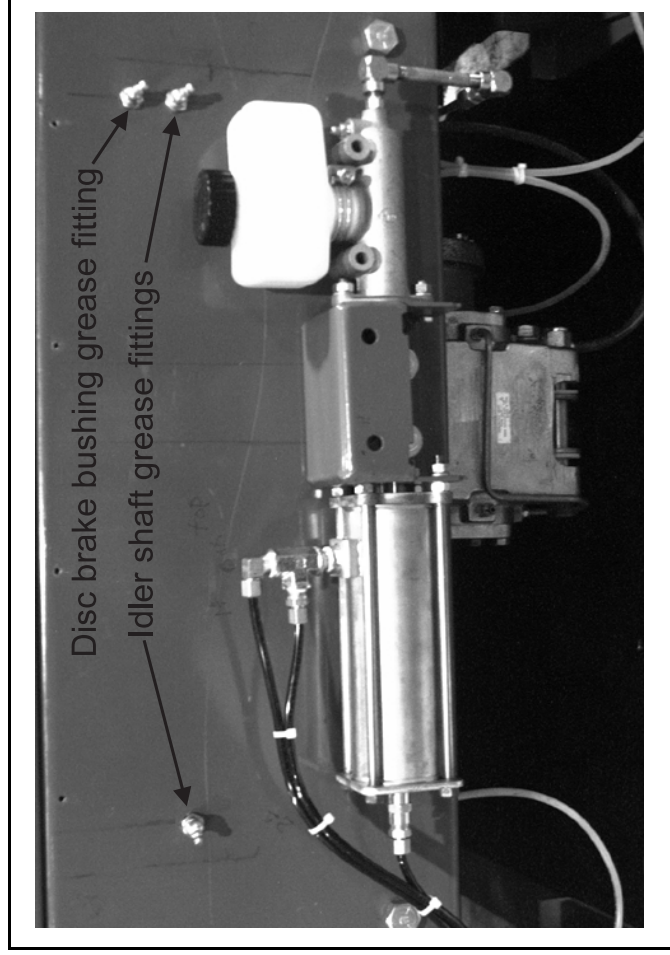


**FIGURE 18** (MSSM0201CE)  
**60" and 72" Staph-Guard® Idler Shaft**  
**and Disc Brake Grease Fittings**  
 (60" shown)

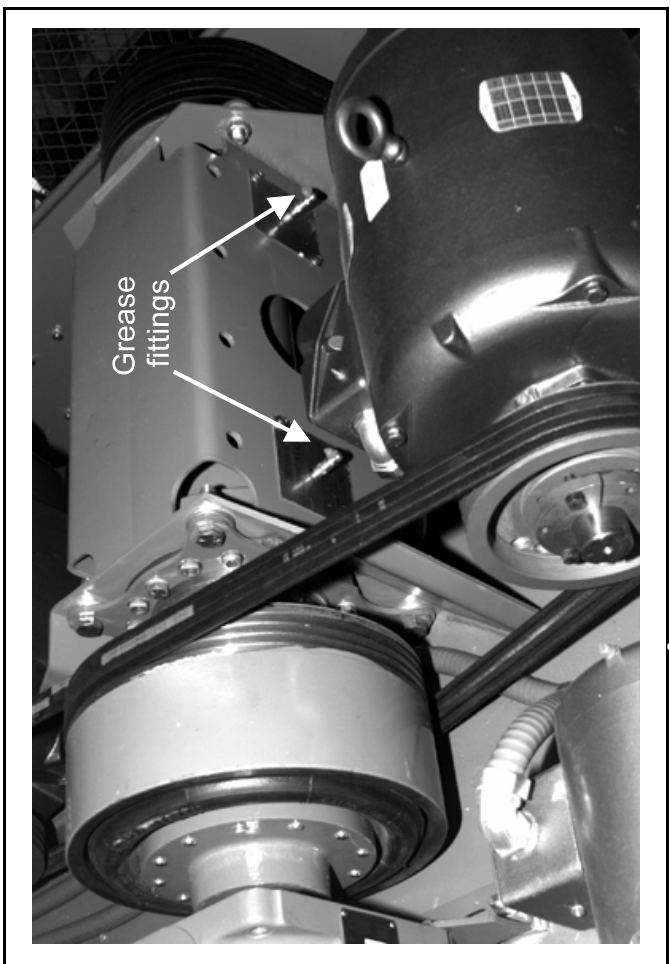


**FIGURE 19** (MSSM0201CE)  
**Typical Jackshaft**  
**Grease Fittings**  
 (52" machine shown)

## Monthly Maintenance Items

Frequency	Component	Action
<b>Monthly</b> (see NOTE 4)	<b>Handwheel screw</b> (42" Divided Cylinder and Staph-Guard®) • Screw thread FIGURE 14	Three drops of light machine oil
	<b>Door hinges</b> • Grease fittings FIGURE 15	0.12 ounces (3.54 grams), two strokes at each location
	<b>Handwheel stop</b> (42" Divided Cylinder and Staph-Guard®) • Grease fitting FIGURE 16	0.06 ounces (1.77 grams), one stroke at one location
	<b>Idler shaft</b> (Staph-Guard® only) • Grease fittings FIGURES 17 and 18	0.31 ounces (8.85 grams), five strokes at two locations
	<b>Disc brake</b> (60" and 72" Staph-Guard® only) • Grease fittings FIGURE 18	0.12 ounces (3.54 grams), two strokes at one location
	<b>Jackshaft</b> (if equipped) • Grease fittings FIGURE 19 NOTES 5 and 6	0.12 ounces (3.54 grams) two strokes at two locations
	<b>Tilt wheels</b> (42", 48", and 72" Tilt Models ) • Grease fittings FIGURE 20	0.12 ounces (3.54 grams), two strokes at each location

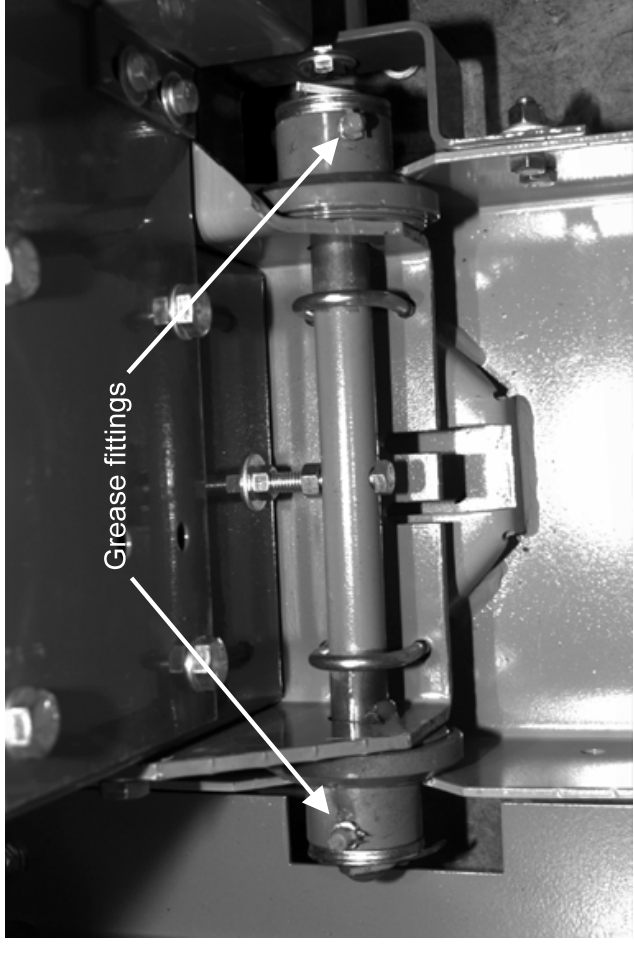


**FIGURE 20** (MSSM0201CE)  
**Tilt Wheels**  
 (42" and 48" tilt machines only)

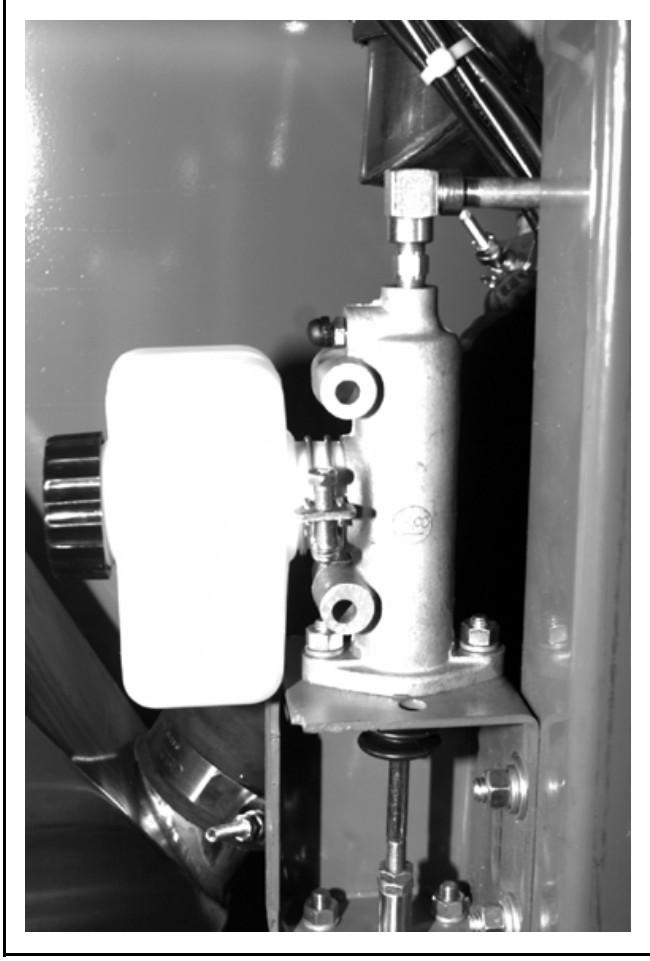

**FIGURE 21** (MSSM0201CE)  
**Disk Brake Reservoir**  
(Staph-Guard® only)



**FIGURE 22** (MSSM0201CE)  
**Brake Band Grease Fittings**  
(60044 and 72044WP2/WP3)

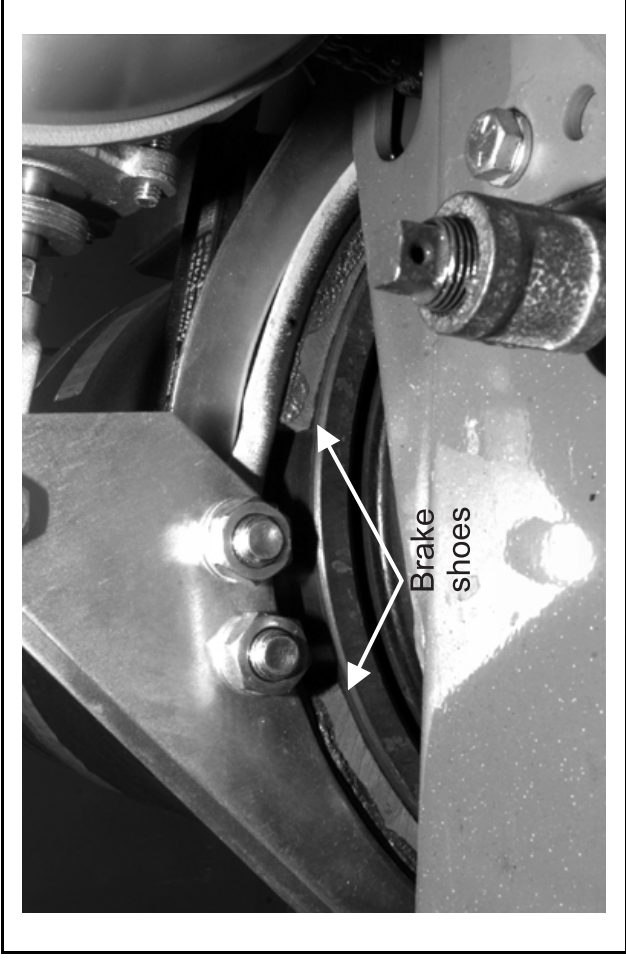

**FIGURE 23** (MSSM0201CE)  
**Brake Shoes (all machines)**



**FIGURE 24** (MSSM0201CE)  
**Disk Brake**  
(Staph-Guard® only)



**FIGURE 25** (MSSM0201CE)  
**Hydraulic Tilt Pressure Gauge**  
(On rear of 42", 48", and 72" tilt models)




**FIGURE 26** (MSSM0201CE)  
**Door Seal Pressure Regulator**

## Quarterly Maintenance Items


Frequency	Component	Action
<b>Quarterly</b>	<b>Brake Components</b>	
	• Disk brake reservoir (60" and 72" Staph-Guard <sup>®</sup> only) FIGURE 21	Check level, refill as required (Always use fresh fluid from a sealed container)
	• Brake band grease fittings (60044 and 72044 WP2/WP3 only) FIGURE 22	0.06 ounces (1.77 grams), one stroke at two locations. Do not allow grease to drip on brake surfaces.
	• Brake shoes FIGURE 23	Check for wear, adjust or replace as required.
	• Disc brake pads (60" and 72" Staph-Guard <sup>®</sup> only) FIGURE 24	Check for wear, replace as required
	<b>Hydro-Cushions<sup>®</sup></b> FIGURES 2 and 3	Check oil level, add as necessary Inspect washer, replace as necessary
	<b>Motors</b> FIGURE 12 NOTES 8 and 9	See "BALDOR MOTOR MAINTENANCE..." MSSM0274AE in this manual.
	<b>Hydraulic tilt pressure gauge</b> FIGURE 25	Check pressure while machine is returning from a tilted position
	• 42" Open pocket	800 PSI (55 Bar)
	• 48" Open pocket	900 PSI (62 Bar)
	• 72" Open pocket	1000 PSI (69 Bar)
	<b>Door seal pressure regulator</b> FIGURE 26	Check settings with machine in bare manual and clockwise wash rotation. See instructions for operating individual outputs in the reference manual.
	• 42" and 48" Open pocket	48 - 50 PSI (3.37 - 3.51 Kg/cm <sup>2</sup> )
	• 60" and 72" Rapid load	25 - 28 PSI (1.76 - 1.97 Kg/cm <sup>2</sup> )
	• 60" and 72" Staph-Guard <sup>®</sup>	18 - 20 PSI (1.27 - 1.41 Kg/cm <sup>2</sup> )

**NOTE 8:** If motor manufacturer's instructions conflict with manual section, follow nameplate instructions. motors are warranted by their manufacturers, not by Milnor<sup>®</sup>.


**NOTE 9:** Pump grease slowly with relief ports open. Do not over-lubricate.

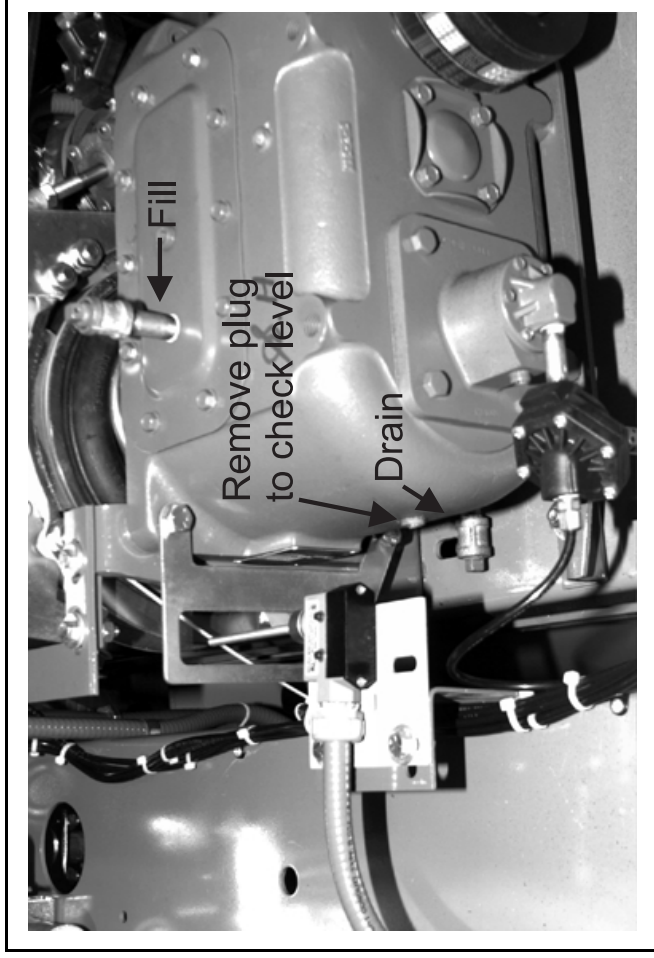


**FIGURE 27** (MSSM0201CE)  
**Typical Gear Reducer Fill and Drain**

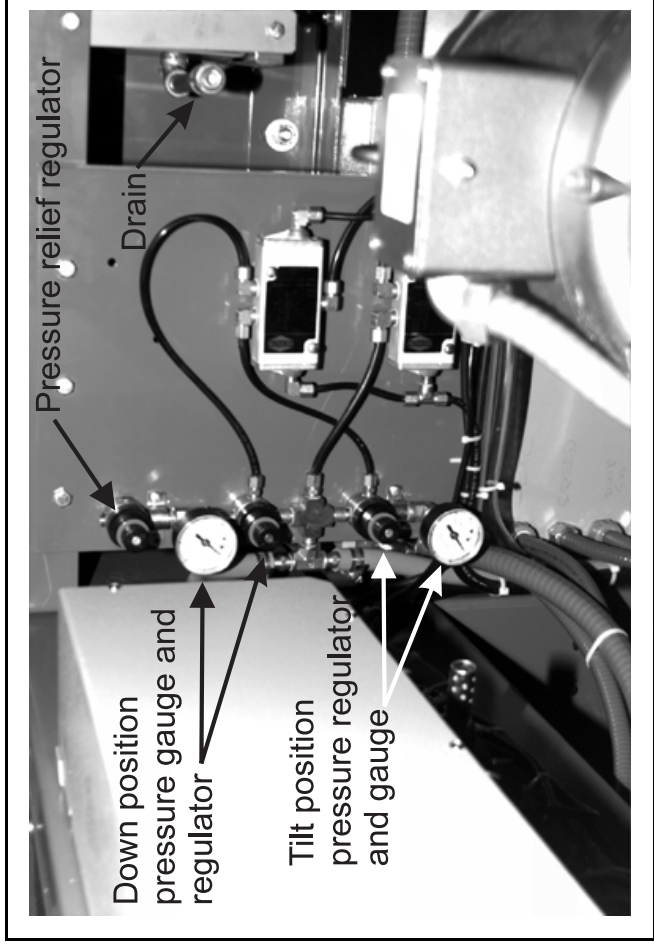

**FIGURE 28** (MSSM0201CE)  
**Push Back and Forward Hydraulic System  
 Gauges and Regulators  
 (42", 48", and 72" Tilt Models)**

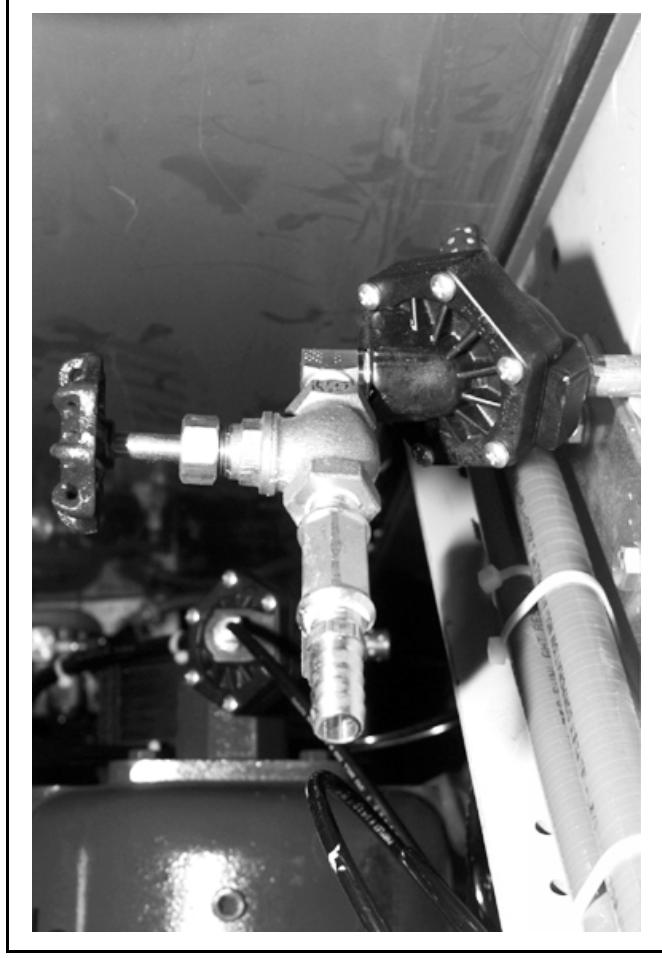

**FIGURE 29** (MSSM0201CE)  
**Push-Down Control Valve  
 (72" Rapid load and Staph-Guard® only)**

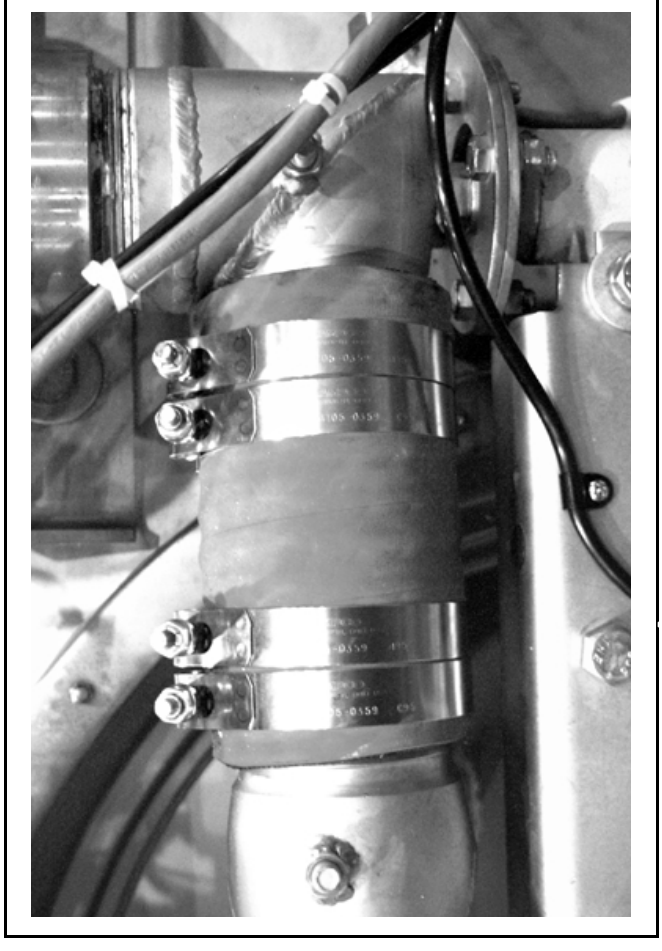

**FIGURE 30** (MSSM0201CE)  
**Shell Door Recirculation Hose  
 (48" dye machine only - cover removed for clarity)**

### Semi-Annual Maintenance Items

Frequency	Component	Action
Semi-Annual	<b>Main bearings and seals</b> • 48" Seal grease fittings FIGURE 11	0.12 ounces (3.54 grams), two strokes at one location
	<b>Gear reducer</b> FIGURE 27	Check oil level, refill as required
	<b>Push Back and Forward System</b> FIGURE 28 and NOTE 10	
	• Down position pressure gauge and regulator	Check pressure in a "wash step" 3 - 5 PSI (.21- 0.35 Kg/cm <sup>2</sup> )
	• Tilt position pressure regulator and gauge	Check pressure in a "wash step" 30 PSI (2.11Kg/cm <sup>2</sup> )
	<b>Push-down control valves</b> (72" Rapid load and Staph-Guard®) FIGURE 29 and NOTE 11	Observe operation and adjust if required
	<b>Recirculation</b> (48" dye models only) FIGURE 30	Replace hose

### Annual or Less Frequent Maintenance Items

Frequency	Component	Action
Annual	<b>Gear reducer</b> FIGURE 27	Change oil and clean magnetic plug (if so equipped)
	<b>Hydro-Cushions®</b> FIGURE 2	Change oil
<b>Every 2 years</b>	<b>Hydraulic system</b> FIGURE 28	Change oil

**NOTE 10:** 52" and 72" machines are not equipped with a tilt pressure regulator or gauge.

**NOTE 11:** Adjust push-down control valves so that machine moves down evenly, and all push-down sockets meet simultaneously. If the back of the machine comes down first, close the valve slowly. If the front comes down first, open the valve.

## LUBRICANTS FOR MILNOR® MACHINES

The following are lubricants used in Milnor® machines. Always refer to the preventive maintenance instructions for specific lubricating instructions. Consult lubricant manufacturer to verify equivalence before using a substitute. Mixing different base greases can cause bearing and seal damage.

Washer-Extractors											
Open Pocket Machines	Bearing housings	Gear reducers	Isolators	Hydro-Cushions®	Motors	Commutator cam	Balancing mechanism	Disc brake (if so equipped)	Hydraulic tilt mechanism	Door latches	Other grease points
30015, 20, 22, C, S, and M	30										
3022F8J	220		220								
36021Q4x, 36026Q4x											
36021BWP											
36021Q6x, 36026Q6x, 42024Q4x, 42026Q6x	EPLF 2	220			EPLF 2			DOT 3	1030	Door	EPLF 2
36030Fxx			1030								
42032Fxx											
42026QHP 48032BHP/BTL/BTN 48036QHP/QTL/QTN		220		220							
52038WP1/WTL/WTN											
64046ExN 72046ExN 72058JxN			1030	1030				DOT 3	68		
Divided Cylinder Machines											
42031 - 44 WP2/3 42031 - 44 SP2/3 60044 SP2/3 72044 SP2/3	EPLF 2	220		1030	EPLF 2			DOT 3		Door	EPLF 2

CBW®, Extractor, Press, Shuttles, Conveyors, and Dryvacs															
	Bearing housings	Gear reducer	Drive motors	Hydro-Cushions®	Hydraulic mechanisms	Disc brake	Mist oiler	Guide rollers	Drive/Support rollers	Blower shaft bearings	Press pressure pump	Blower motors	Inflatable rib couplings	Shuttle chain	All other grease points
CBW®		220					T32	EPLF 2	EPLF 2						EPLF 2
42032M7E	EPLF 2			220	68	DOT 3					630		SRI		
42032M9E			EPLF 2	32											
Single Stage Press		1030													
Press							23								
Dryer									EPLF 2	EP2		R			
Shuttle & Conveyor		634												FL	
Dryvac															

### Oils

DOT 3	= NAPA Super Heavy Duty Brake Fluid DOT 3
23	= Shell Tellus® 23
30	= High quality SAE 30, 40, or 50 weight motor oil (non-detergent, if available)
32	= Shell Tellus® 32
T32	= Shell Turbo® T32
68	= Shell Tellus® 68
220	= Shell Morlina® 220
630	= Valvoline Special Moly® EP 630
634	= Mobile SHC® 634 Oil
1030	= Shell Rotella T® 10W30
1540	= Shell Rotella T® HD 15W40

### Greases

Door	= Doorease® Stick lubricant
EPLF 2	= Shell Alvania® EP-LF Type 2
EP2	= Shell Darina® EP-2
FL	= Recol Food Lubricant
R	= Shell Dolium® R
Wells	= Wells CL200 Cam Lubricant
SRI	= Chevron SRI oil

# BALDOR MOTOR MAINTENANCE

MSSM0274AE/9731AV

Most of the information in this document is taken from the *Baldor Electric Company Instruction, Operation, and Maintenance Manual*, and provides a means of more accurately determining motor lubrication requirements based on local conditions.

## General Maintenance

Inspect, clean, and test motors at regular intervals— approximately every 500 operating hours or every three months, whichever comes first. Lubricate motors at the intervals determined herein. Keep accurate maintenance records.

### **DANGER: Electrocuting and Electrical Burn Hazards**



Contact with high voltage will electrocute or burn you. Power switches on the machine and the control box do not eliminate these hazards. High voltage is present at the machine unless the main power is off. Electrical power can cause death or severe injury.

- ☞ Do not service machine unless qualified and authorized.
- ☞ Lock OFF and tag out power at the wall disconnect before servicing, or in accordance with factory service procedures.

### **DANGER: Entangle and Crush Hazard**




Contact with moving components normally isolated by guards, covers, and panels, can entangle and crush your limbs. These components move automatically.

- ☞ Do not service machine unless qualified and authorized.
- ☞ Lock OFF and tag out power at the wall disconnect before servicing, or in accordance with factory service procedures.

**Clean**—Keep the exterior of the motor free of dirt, oil, grease, water, etc. Keep ventilation openings clear. Oily vapor, paper pulp, textile lint, etc., can accumulate and block ventilation, causing overheating and early motor failure.

**Test**—Periodically, check the motor and winding insulation integrity using a “megger.” Record the megger readings and immediately investigate any significant drop in insulation resistance. Check all electrical connectors to be sure they are tight.

**Lubricate**—Determine the proper lubrication interval for your motor as explained in “How to Determine Lubrication Interval” in this section, and lubricate accordingly.

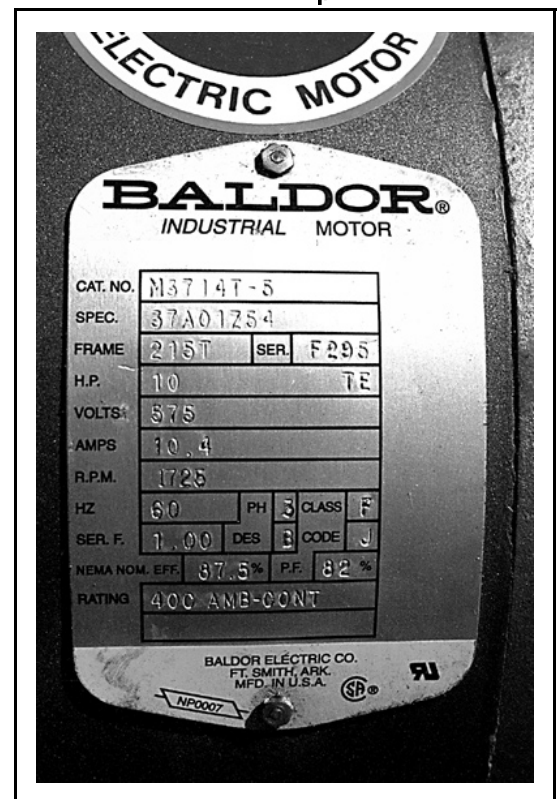

**FIGURE 1** (MSSM0274AE)  
Typical Motor Data Plate

**How to Determine Lubrication Interval**—The useful life of antifriction bearing grease can be estimated, based on service conditions, frame type, and motor rpm. An example of determining the correct lubrication interval is provided below.

Ex: A fan motor, operating at an ambient temperature of 109°F (43°C) in a moderately corrosive atmosphere. The motor has a NEMA 286T/(IEC 180) frame and is rated at 1750 rpm.

1. Table 1 classifies the service condition as “severe.”
2. Table 2 specifies a 0.5 service condition multiplier value for “severe” service condition.
3. Table 3 specifies 9500 hours as the recommended lubrication interval for frame sizes 254 to 286 (see nameplate), given standard service conditions.
4. Multiply .5 (*service condition multiplier value*) by 9500 hours (*recommended lubrication interval*) = 4750 hours (*calculated lubrication interval*).
5. Table 4 shows that the amount of grease to be added is 0.32 ounces (9.1 grams).

**Table 1 — Determining the Service Condition**

Severity of Service	Maximum Ambient Temperature	Atmospheric Contamination	Type of Bearing
Standard	104°F (40°C)	Clean, little corrosion	Deep groove ball bearing
Severe	122°F (50°C)	Moderate dirt, corrosion	Ball thrust, Roller
Extreme	>122°F (>50°C) or Class H Insulation (Note 1)	Severe dirt, abrasive dust, corrosion	All bearings
Low Temperature	-22°F (-30°C) (Note 2)		

**Note 1:** Special high temperature grease is recommended.

**Note 2:** Special low temperature grease is recommended.

**Table 2 — Service Condition Multiplier Value**

Operating Condition	Multiplier
Standard	1.0
Severe	0.5
Extreme	0.1



**Table 3 — Recommended Lubrication Intervals at Standard Service Conditions**

NEMA (IEC) Frame Size	Rated Speed - RPM			
	3600	1800	1200	900
Up to 215 (132)	5500 Hrs.	12000 Hrs.	18000 Hrs.	22000 Hrs.
254 to 286 (160 - 180)	3600 Hrs.	9500 Hrs.	15000 Hrs.	18000 Hrs.
324 to 365 (200 - 225)	2200 Hrs.(Note 3)	7400 Hrs.	12000 Hrs.	15000 Hrs.
404 to 5000 (280 - 315)	2200 Hrs.(Note 3)	3500 Hrs.	7400 Hrs.	10500 Hrs.

**Note 3:** Bearings in 404 through 5000 frame, 2 pole motors are either 6313 or 6314 bearings and the lubrication interval is shown in the table. **If roller bearings are used, the bearings must be lubricated more frequently. Divide the listed lubrication interval by two.**

**Table 4 — Lubrication Amounts per Frame**

NEMA (IEC) Frame Size	Bearing Description					
	These are the “Large” bearings (Shaft End) in each frame size (Note 4)					
	Largest bearing in size category	OD D mm	Width B mm	Grease gun strokes (Note 5)	Volume of grease to be added	
ounces					grams	
Up to 215 (132)	6307	80	21	2.5	0.16	4.7
254 to 286 (160 - 180)	6311	120	29	5.0	0.32	9.1
324 to 365 (200 - 225)	6313	140	33	7.0	0.43	12.2
404 to 5000 (280 - 315)	NU322	240	50	18.0	1.11	31.5

**Note 4:** Smaller bearings in size category may require reduced amounts of grease.

**Note 5:** See “Correct Grease Gun Procedures” for information on estimating the output of hand-operated grease guns.

## Lubrication Recommendations

**Type of Grease**—Use Shell Dolium R (factory installed) or Chevron SRI greases for standard service conditions. The extreme and low temperature conditions are not normally encountered in the laundry. However, for extreme conditions, use Darmex 707 and for low temperature conditions, use Arrowsell 7. Contact Baldor for equivalents, if necessary.

## Correct Grease Gun Procedures

1. Use hand-operated grease gun, not a pneumatic grease gun. Pump grease slowly, taking 10 to 12 seconds to complete each stroke.
2. Apply quantity of grease called for. Over-lubrication can be as damaging as under-lubrication. Where quantities are stated in strokes, one stroke of the grease gun is assumed to provide .0624 fluid oz. (1.77 grams) (by volume) of grease. Therefore, one fluid ounce (28.3 grams) of grease would be provided by 16 strokes of the grease gun. Determine the flow rate of your grease gun by pumping one ounce into a calibrated container. If fewer than 16 strokes are required, all quantities in strokes in the chart should be reduced accordingly. If more than 16 strokes are required, the number of strokes should be increased. **Before starting lubrication, make sure your grease gun is working and that you get a full charge of grease with every stroke.**
3. Do not over-lubricate motors. Over-lubrication of a motor can seriously damage it by forcing grease into motor windings. Over-lubrication of the extract motor can force grease into the centrifugal switch causing it to malfunction.
4. Do not allow grease to drip on the brake disk or clutch tire/drum during lubrication. This will reduce the braking action considerably, and may permit the cylinder to creep while loading and unloading.

## Lubrication Procedure

	<b>NOTICE: Motor Damage</b>
---	-----------------------------

To avoid damage to motor bearings, grease must be kept free of dirt. For an extremely dirty environment, contact your Baldor distributor or an authorized Baldor Service Center for additional information.

1. Clean grease fittings.
2. Remove grease outlet plug.
3. Add recommended amount of grease. Be sure grease to be added is compatible with the grease already in motor. Consult your Baldor distributor or an authorized Baldor Service Center if grease other than recommended is to be used. Stop when new grease appears at shaft hole in the endplate or grease outlet plug.
4. Replace grease outlet plug.



# General Assembly 6044SP2, SP3

BMP040088/2004493V  
(Sheet 1 of 3)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

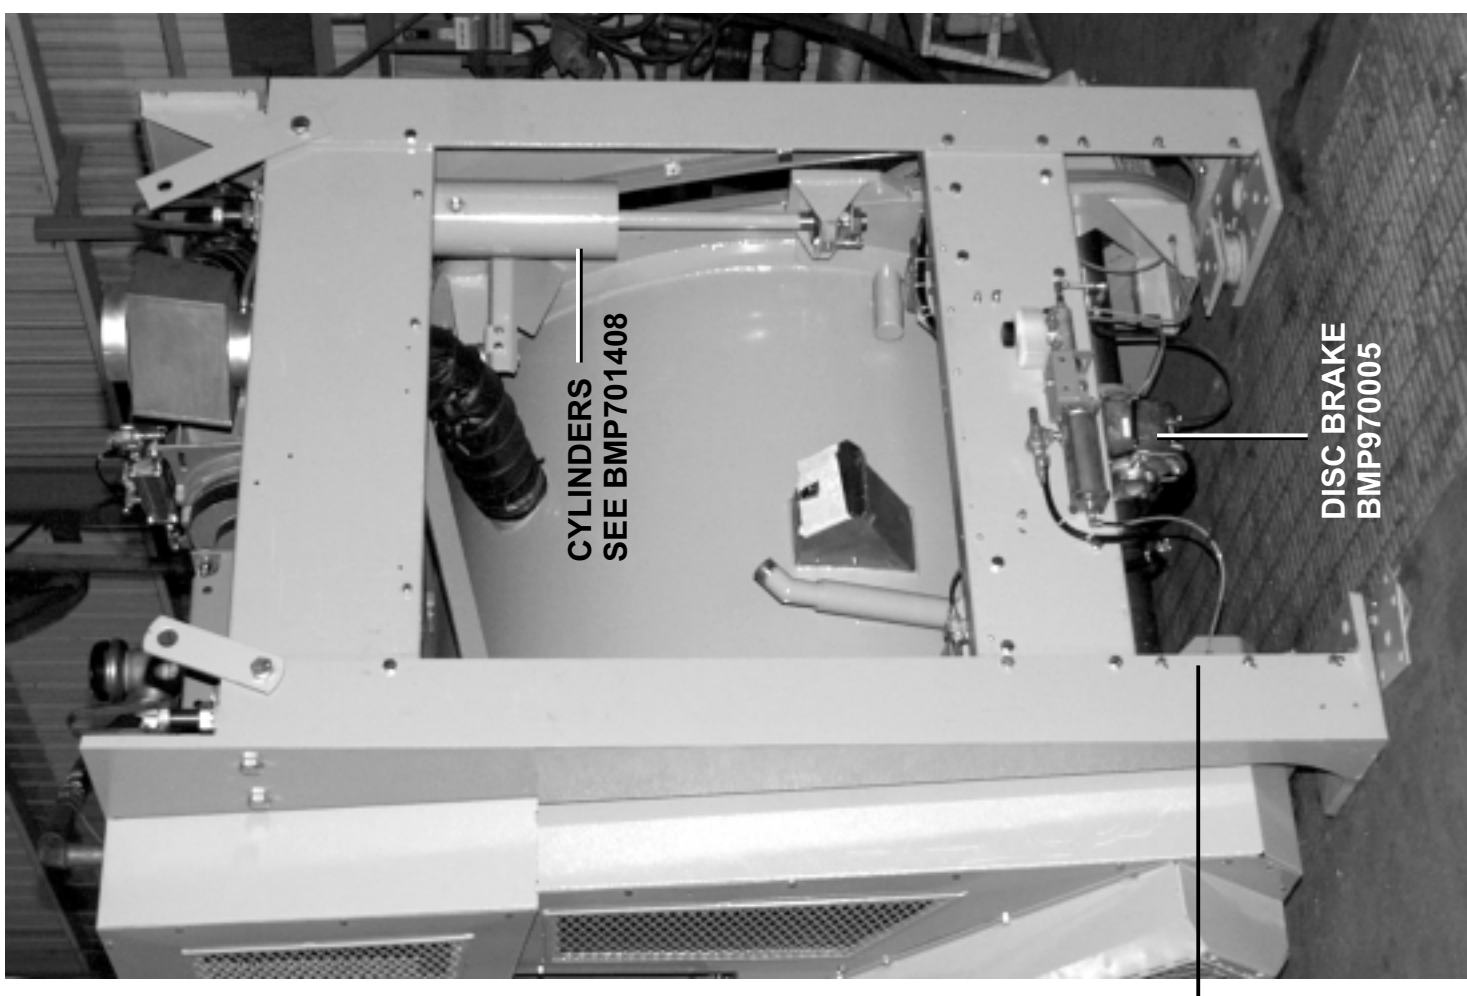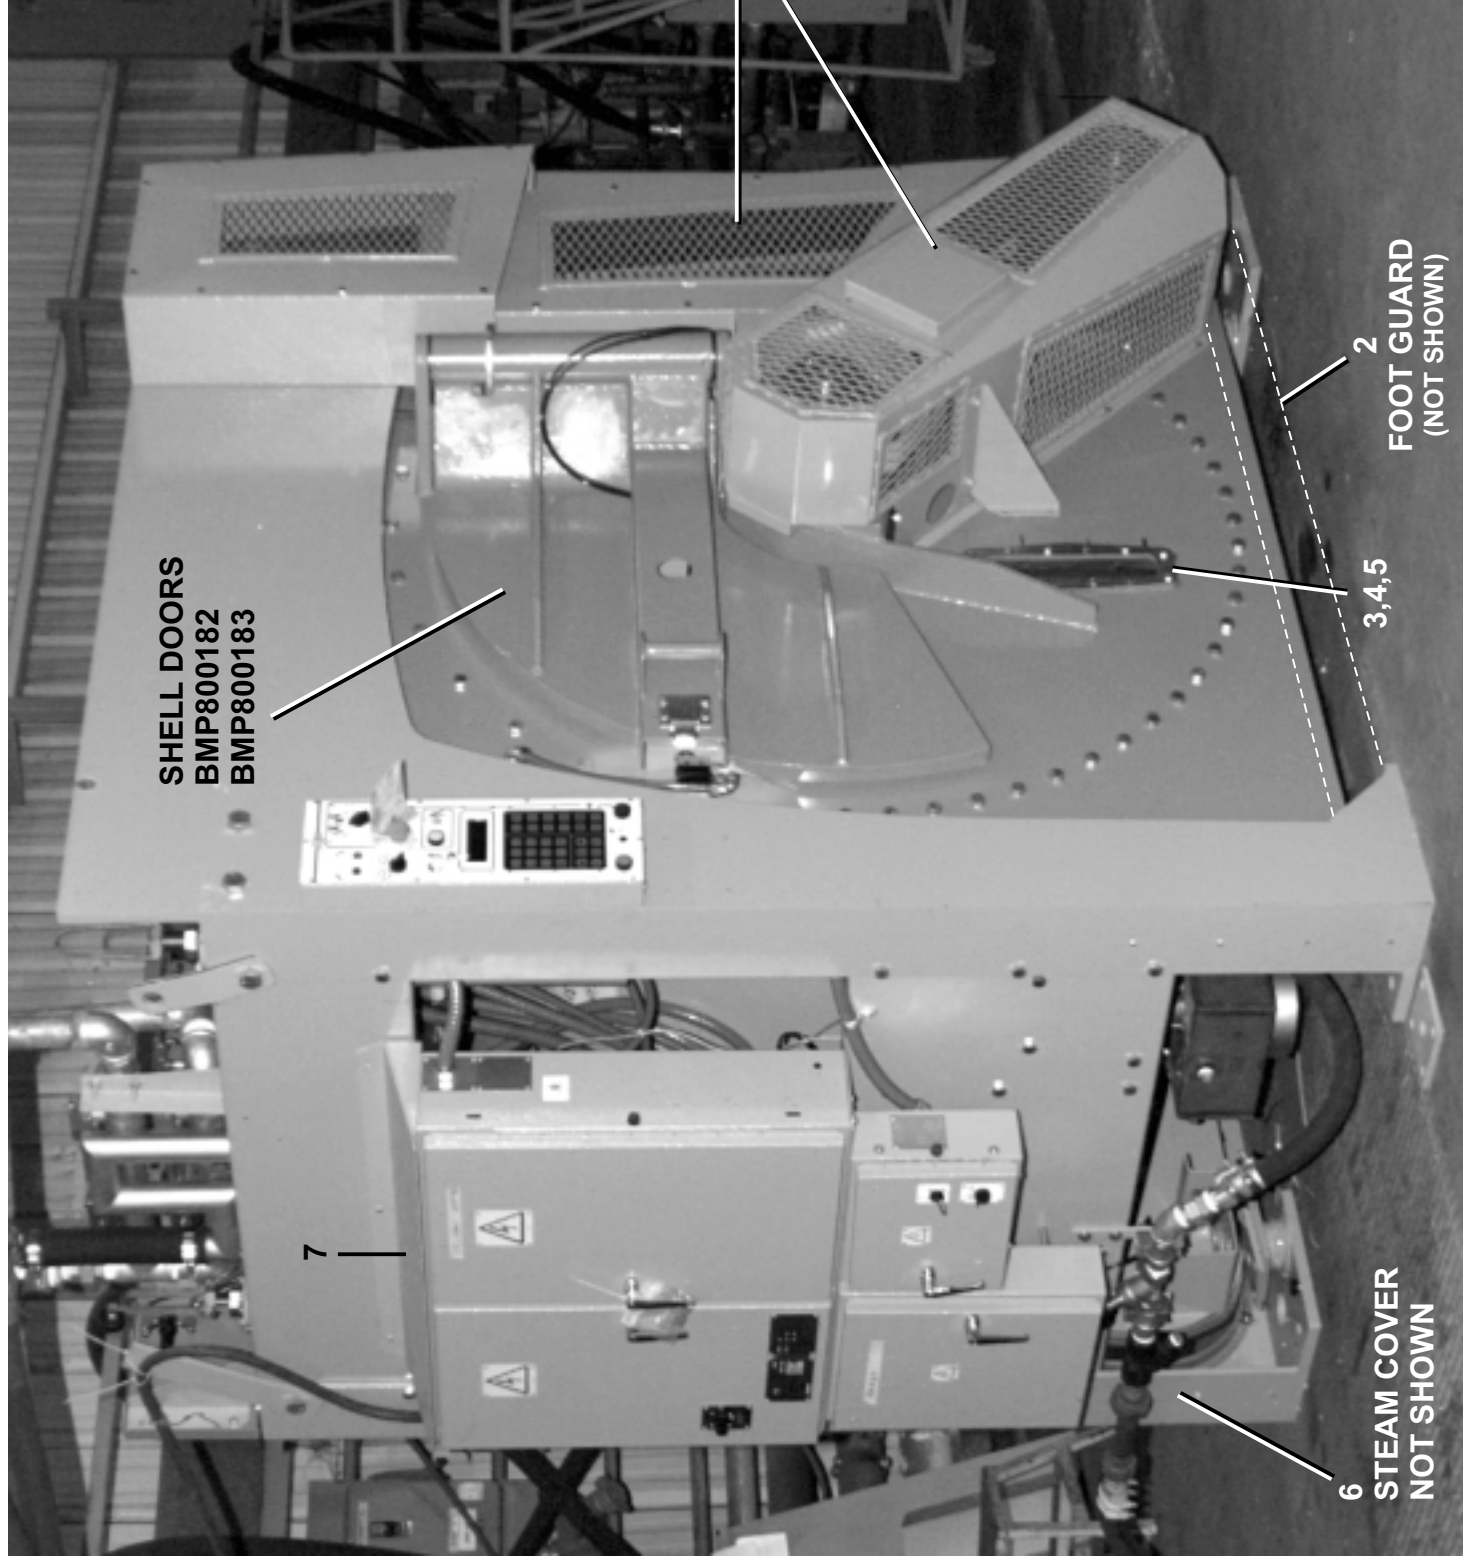






**General Assembly**  
**6044SP2, SP3**

BMP040088/2004493V  
 (Sheet 2 of 3)



Pellerin Milnor Corporation  
 P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

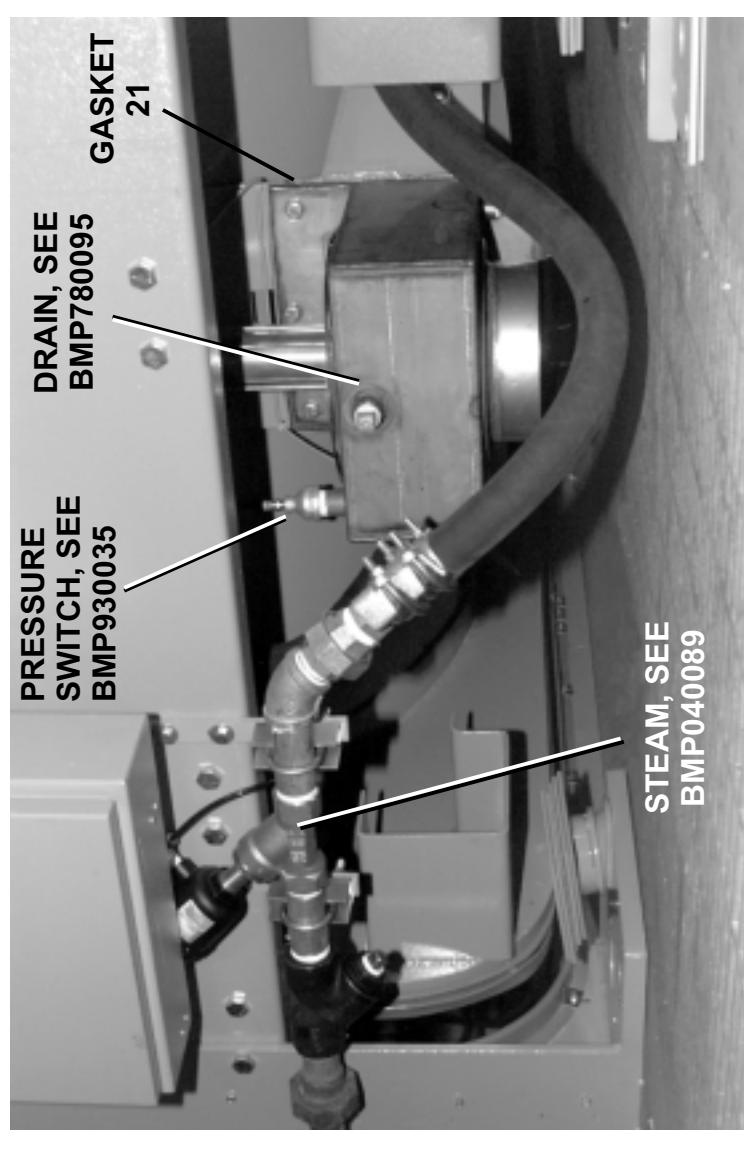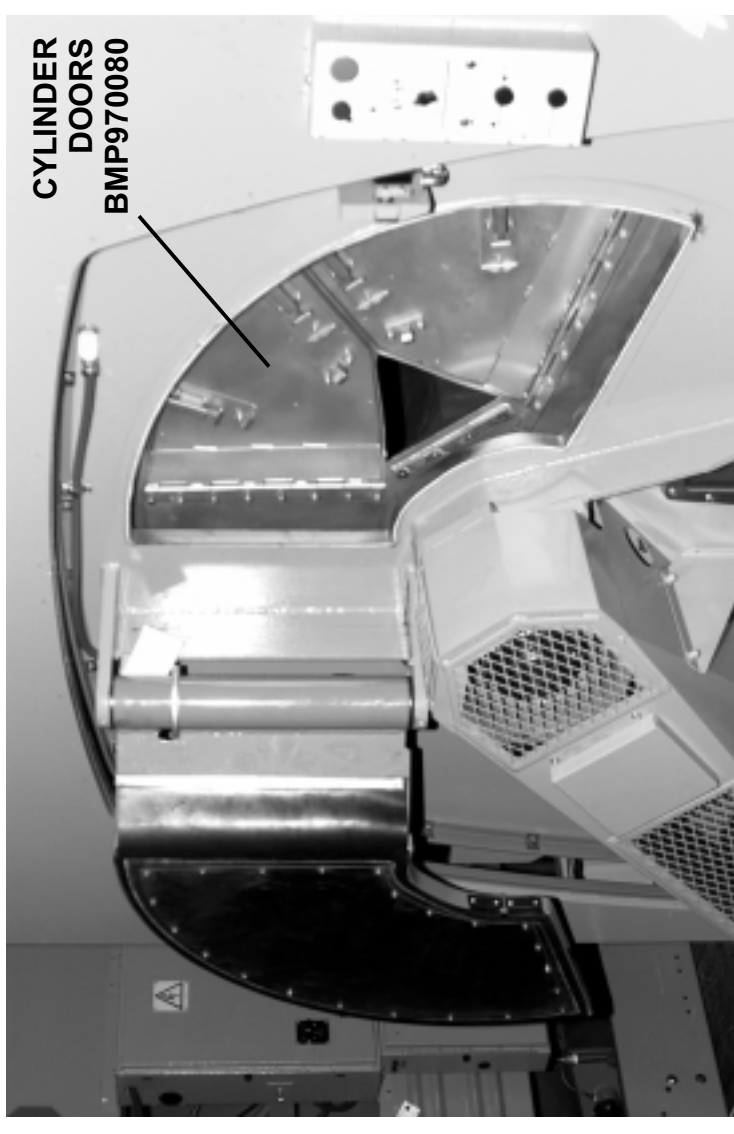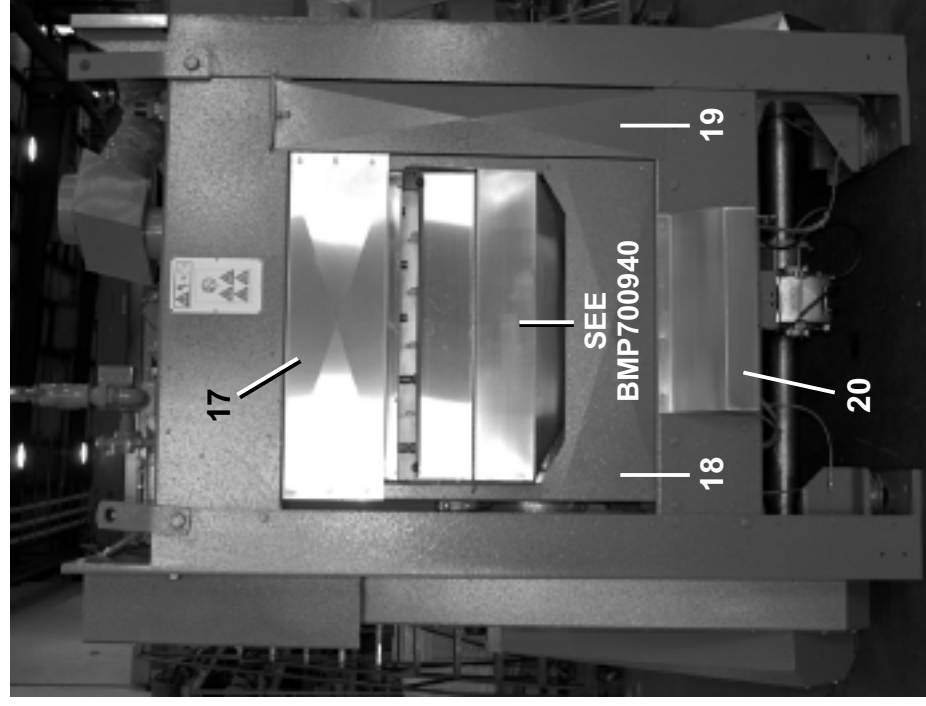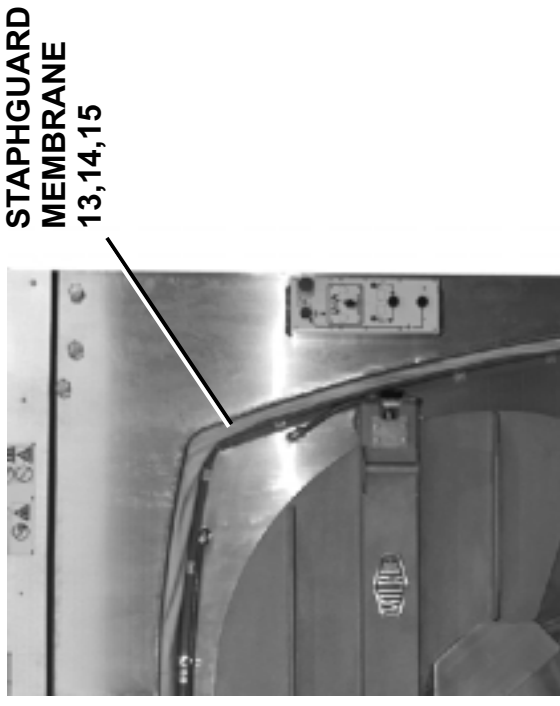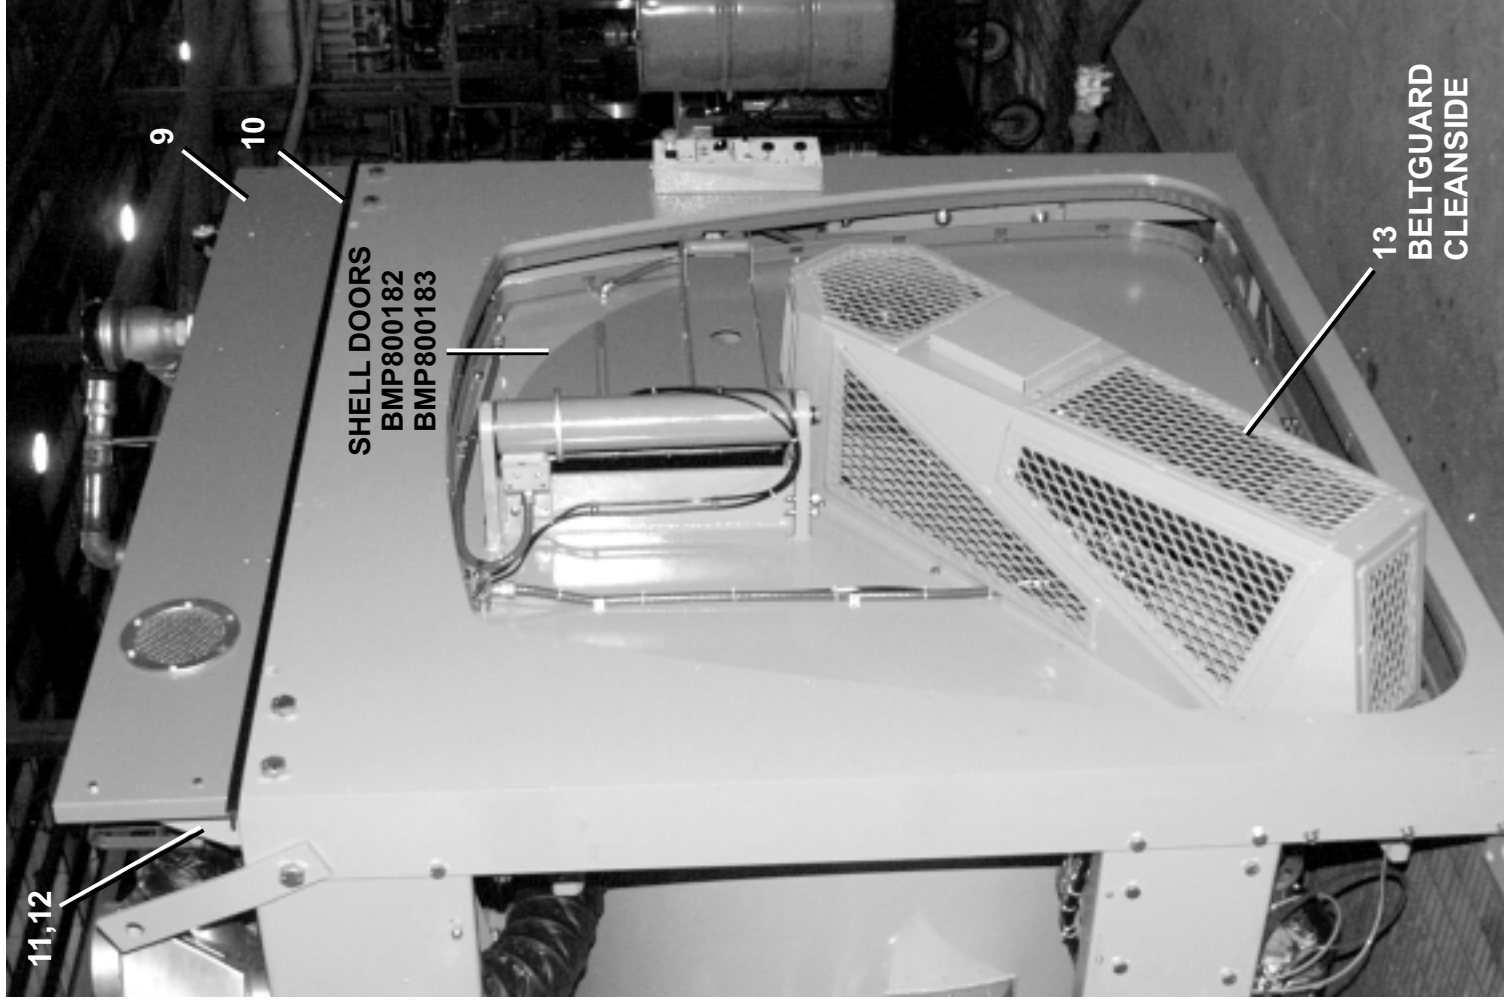

**General Assembly**  
**6044SP2, SP3**

BMP040088/2004493V  
(Sheet 2 of 3)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.



STAPHAIRTROL  
SEE, BMP701307

AUTOSPOT,  
BMP701411

DRIVE ASSEMBLY  
SEE, BMP850032

UPPER BRAKE  
SEE, BMP970006

JACKSHAFT  
BEARING, SEE  
BMP820109



**Pellerin Milnor Corporation**  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**Parts List—General Assembly**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.


Used In	Item	Part Number	Description	Comments
			ASSEMBLIES	
			COMPONENTS	
all	1	AD 28 079	81102D BLTGUARD ASSY-SOILSIDE=60"SG	
all	2	03 06533A	96507D FOOTGUARD=60SGU LOWER	
all	3	AD 28 111	79273C SIGHT GLASS ASSY=WED + WEH	
all	4	02 18980	77351C MARKER LEVEL INDICATOR INCH	
all	5	02 175071	77351C MARKER LEVEL INDICATOR CM	
all	6	02 18835	98141D COVER=STEAM ASSY 6044 SP2	
All	7	03 01448A	87441D COV=CONT BOX NAVY	
All	8	02 18824B	2001494D COVER=BRAKE ASSY LF SIDE6049	
All	9	02 18742	93341C EXTENSION=FRAME 6036/6044SGH	
All	10	02 03344	85463B TRIM=REAR CONSOLE TOP 7FT/PC	
All	11	02 18743	89531C BRACKET=FRAME EXT 6036/44SGH	
all	12	02 18744	89531# RT BRACKET FRM EXT 6036/44SG	
all	13	AD 28 078	78126C BLTGUARD ASSY-CLNSIDE=60" SG	
all	14	02 18767	94073B BOOT ASSEMBLY 60SGH	
all	15	02 175032	70148A CLAMP BOOT 60142 +60SG	
all	16	15P175	TRDCUT-F HXHD 1/4-20UNC2AX1/2	
all	17	02 18824C	91343D COVER=UPPER SUP INJ 6044SG	
All	18	02 18824D	91343D COVER=SUP INJ LO SUP 6044SG	
All	19	05 20296E	92617# COVER=RIGHT REAR 6044 SG	
All	20	03 06532	95101C SPLASH COVER=MASTERCYL 72SG	
All	21	02 18107	93362B GASKET=8"FLANGED DUMP VALVE	

## FASTENER TORQUE REQUIREMENTS

The specifications in this section apply to 1/4 inch and larger Unified National fine and coarse fasteners used on Milnor<sup>®</sup> machines. This information is to be used only when torque specifications are not stated in the installation or service instructions.

When tightening applicable fastener, abide by the following precautions:

1. Always use new fasteners. Replace bolts, nuts, flat washers, and lock washers in the order shown on the parts drawing.
2. Unless otherwise specified, use:
  - Loctite<sup>®</sup> 271 threadlocker or equivalent for bearing housing mounting bolts from one half to one inch in diameter.
  - Loctite<sup>®</sup> 277 threadlocker or equivalent for bearing housing mounting bolts of one inch diameter or larger.
  - Loctite<sup>®</sup> 242 threadlocker for all other fasteners requiring thread locking compound.
3. Use a torque wrench to assure proper tightness.
4. Never lubricate fasteners. The values specified herein are maximum recommended torques and are calculated from published ASTM and SAE data. Actual allowable torques are application dependent and can vary for many reasons, (joint types, gaskets, etc.). Use these values as a guide.
5. Although FIGURE 1 depicts hex head bolts, the table applies to all head types.

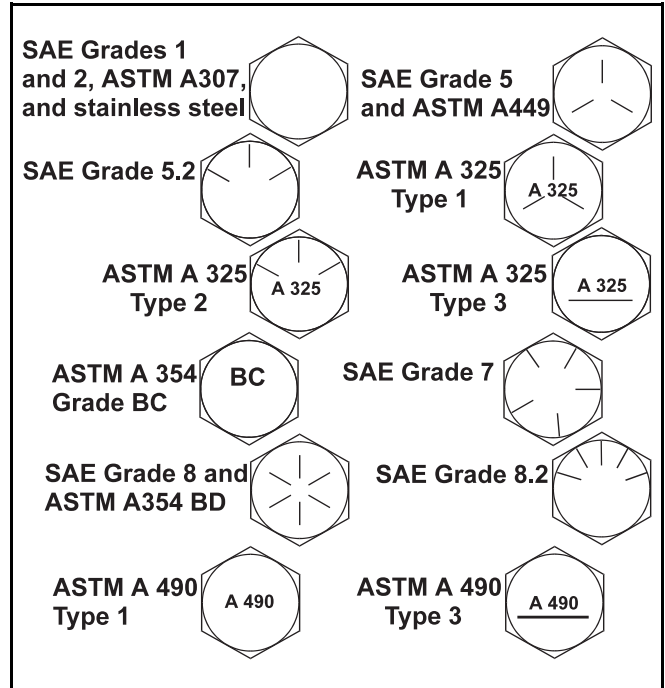

**FIGURE 1** (MSSM0101CE)  
**Fastener Grade Markings**

## Fasteners and Threadlocker

**How Fasteners Loosen**—Standard threaded fasteners are manufactured with a clearance fit for easy assembly. With the fastener at the proper torque, 85% of the tightening torque is absorbed in the threads and under the fastener head. The remaining 15% provides the friction that prevents the thread from slipping. When this friction is overcome (by bending, thermal expansion, internal pressures, functional loads, or impact) the thread slips and loosens. Although higher torques reduce the likelihood of thread slippage, if slippage occurs, the threads unwind and the fastener loosens. Once thread slippage begins, vibration increases the rate of loosening.

**Preventing Loosening**—The most effective way to prevent loosening of threaded parts is by proper application of a threadlocking compound. Threadlocker provides lubrication during assembly, then hardens to seal the threads against corrosion and provide resistance to thread slippage.

## Applying Threadlocker

**NOTE:** The following threadlocker information and illustrations are excerpts from the Loctite® User's Guide and are used with permission.


For maximum strength, threadlocker must fill the thread voids completely, as shown in FIGURE 2. Organic or petroleum solvent will remove excess uncured adhesive from joints. Consult information below for the specific fastener application.

### Bolts and Nuts—See FIGURE 3.


1. Clean all threads (bolt and nut) with cleaning solvent.
2. Spray all threads with Loctite® Primer N. Allow to dry.
3. Insert bolt into through hole assembly.
4. Apply several drops of threadlocker onto bolt engagement area.
5. Assemble and tighten nut to correct torque for the threadlocker.

### Blind Holes—See FIGURE 4.


1. Clean all threads (bolt and nut) with cleaning solvent.
2. Spray all threads with Loctite® Primer N. Allow to dry.
3. Squirt several drops down female threads into bottom of hole.
4. Apply several drops to bolt.
5. Tighten to correct torque for the threadlocker.

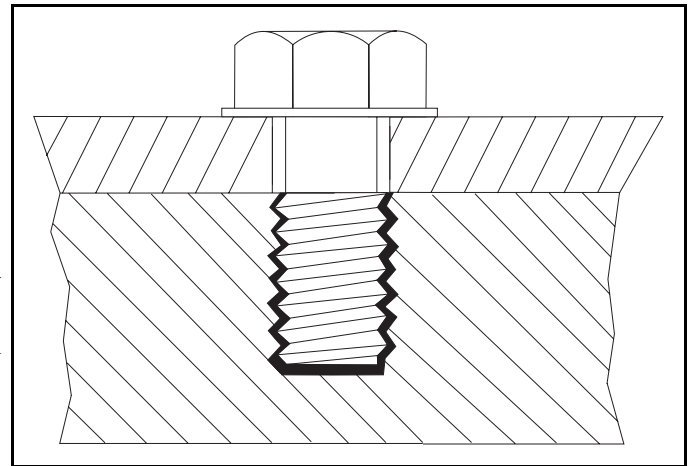

**FIGURE 2** (MSSM0101CE)  
**Correct Threadlocker Use**

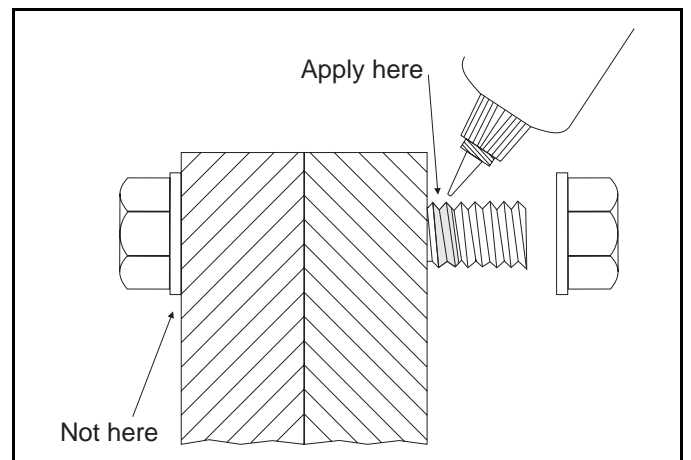

**FIGURE 3** (MSSM0101CE)  
**Applying Threadlocker to Through Hole**

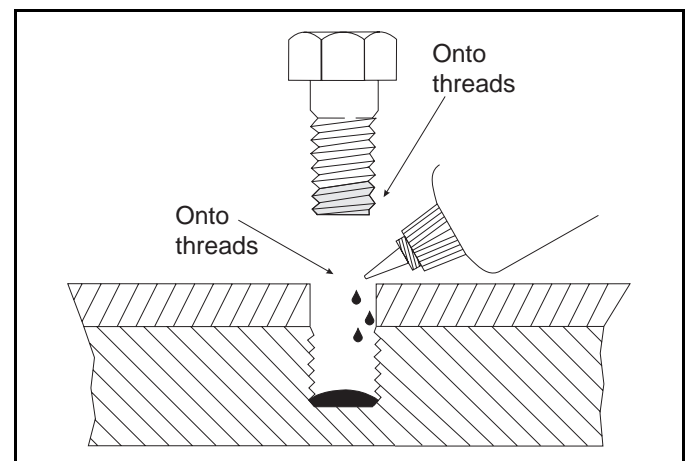


**FIGURE 4** (MSSM0101CE)  
**Applying Threadlocker to Blind Holes**



## Removing Fasteners

High strength threadlockers like Loctite<sup>®</sup> 271 (or equivalent) may be weakened by heating to at least 500° F (260° C) as follows.

1. Apply localized heat to fastener as shown in FIGURE 5.
2. Disassemble while hot. Once disassembled, the cured adhesive can be removed with Loctite<sup>®</sup> Gasket Remover #790 (or equivalent).

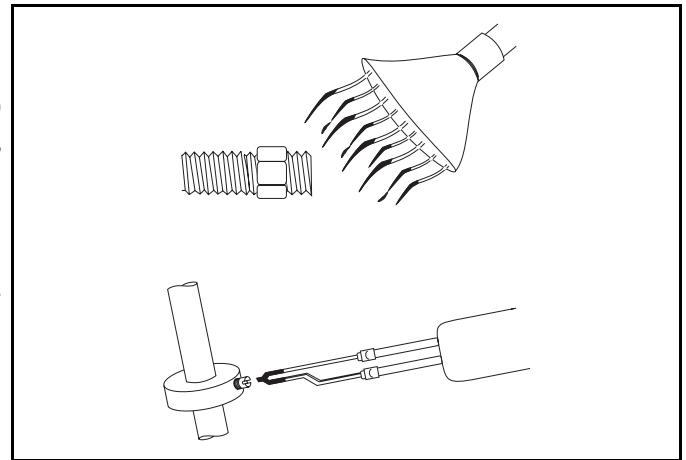

**FIGURE 5** (MSSM0101CE)  
Removing High Strength Threadlocker

## Carbon Steel Fasteners

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
1/4 - 20	SAE Grade 1 ASTM A307	2.5 (3.39)	3.0 (4.06)	3.3 (4.47)	3.6 (4.88)	4.6 (6.23)	4.3 (5.83)	3.3 (4.47)
	SAE Grade 2	4.1 (5.56)	4.9 (6.64)	5.5 (7.45)	6.0 (8.13)	7.7 (10.44)	7.1 (9.63)	5.5 (7.46)
	SAE Grade 4	4.8 (6.50)	5.8 (7.86)	6.4 (8.67)	7.0 (9.49)	9.0 (12.20)	8.3 (11.25)	6.4 (8.67)
	SAE Grade 5 ASTM A449	6.3 (8.54)	7.6 (10.3)	8.4 (11.38)	9.3 (12.60)	11.8 (15.99)	11.0 (14.91)	8.4 (11.39)
	SAE Grade 7	7.9 (10.7)	9.4 (12.7)	10.5 (14.23)	11.5 (15.59)	14.7 (19.93)	13.6 (18.44)	10.5 (14.23)
	SAE Grade 8 ASTM A354 Grade BD	8.9 (12.0)	10.7 (14.5)	11.9 (16.13)	13.1 (17.76)	16.6 (22.50)	15.4 (20.88)	11.9 (16.13)
	ASTM A354 Grade BC	7.9 (10.7)	9.4 (12.7)	10.5 (14.23)	11.5 (15.59)	14.7 (19.93)	13.6 (18.44)	10.5 (14.23)

## All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
1/4 - 28	SAE Grade 1 ASTM A307	2.8 (3.80)	3.4 (4.61)	3.8 (5.15)	4.1 (5.56)	5.3 (7.18)	4.9 (6.64)	3.8 (5.15)
	SAE Grade 2	4.7 (6.37)	5.6 (7.60)	6.3 (8.54)	6.9 (9.36)	8.8 (11.93)	8.1 (10.98)	6.3 (8.54)
	SAE Grade 4	5.5 (7.46)	6.6 (8.95)	7.3 (9.90)	8.1 (10.98)	10.3 (13.96)	9.5 (12.88)	7.3 (9.90)
	SAE Grade 5 ASTM A449	7.3 (9.90)	8.7 (11.80)	9.7 (13.15)	10.7 (14.50)	13.6 (18.44)	12.6 (17.08)	9.7 (13.15)
	SAE Grade 7	8.9 (12.07)	10.7 (14.50)	11.9 (16.13)	13.1 (17.76)	16.6 (22.51)	15.4 (20.88)	11.9 (16.13)
	SAE Grade 8 ASTM A354 Grade BD	10.2 (13.83)	12.2 (16.54)	13.6 (18.44)	15.0 (20.34)	19.0 (25.76)	17.7 (23.99)	13.6 (18.44)
	ASTM A354 Grade BC	—	—	—	—	—	—	—

## All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
5/16 - 18	SAE Grade 1 ASTM A307	5.1 (6.91)	6.2 (8.40)	6.8 (9.22)	7.5 (10.17)	9.6 (13.02)	8.9 (12.07)	6.8 (9.22)
	SAE Grade 2	8.5 (11.52)	10.2 (13.83)	11.3 (15.32)	12.5 (16.95)	15.9 (21.56)	14.7 (19.93)	11.3 (15.32)
	SAE Grade 4	10.0 (13.56)	12.0 (16.27)	13.3 (18.03)	14.6 (19.79)	18.6 (25.22)	17.3 (23.46)	13.3 (18.03)
	SAE Grade 5 ASTM A449	13.0 (17.63)	15.6 (21.15)	17.4 (23.60)	19.1 (25.90)	24.3 (32.95)	22.6 (30.64)	17.4 (23.60)
	SAE Grade 7	16.1 (21.83)	19.3 (26.17)	21.5 (29.15)	23.6 (31.99)	30.1 (40.81)	27.9 (37.83)	21.5 (29.15)
	SAE Grade 8 ASTM A354 Grade BD	18.5 (25.08)	22.1 (29.96)	24.6 (33.35)	27.1 (36.74)	34.5 (46.78)	32.0 (43.39)	24.6 (33.35)
	ASTM A354 Grade BC	16.1 (21.83)	19.3 (26.17)	21.5 (29.15)	23.6 (31.99)	30.1 (40.81)	27.9 (37.83)	21.5 (29.15)

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
5/16 - 24	SAE Grade 1 ASTM A307	5.6 (7.59)	6.7 (9.08)	7.4 (10.03)	8.2 (11.12)	10.4 (14.10)	9.6 (13.01)	7.4 (10.03)
	SAE Grade 2	9.4 (12.74)	11.3 (15.32)	12.5 (16.94)	13.8 (18.71)	17.5 (23.73)	16.3 (22.09)	12.5 (16.94)
	SAE Grade 4	11.0 (14.91)	13.2 (17.90)	14.6 (19.79)	16.1 (21.83)	20.5 (27.79)	19.0 (25.76)	14.6 (19.79)
	SAE Grade 5 ASTM A449	14.4 (19.52)	17.2 (23.32)	19.1 (25.90)	21.1 (28.60)	26.8 (36.35)	24.9 (33.76)	19.1 (25.90)
	SAE Grade 7	17.9 (24.27)	21.4 (29.01)	23.8 (32.27)	26.2 (35.52)	33.4 (45.28)	31.0 (42.03)	23.8 (32.27)
	SAE Grade 8 ASTM A354 Grade BD	20.4 (27.66)	24.4 (33.08)	27.1 (36.74)	29.9 (40.54)	38.0 (51.52)	35.3 (47.86)	27.1 (36.74)
	ASTM A354 Grade BC	—	—	—	—	—	—	—

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
3/8 - 16	SAE Grade 1 ASTM A307	9.0 (12.20)	10.8 (14.64)	12.0 (16.27)	13.1 (17.76)	16.7 (22.64)	15.5 (21.01)	12.0 (16.27)
	SAE Grade 2	14.9 (20.20)	17.9 (24.27)	19.9 (26.98)	21.9 (29.69)	27.9 (37.83)	25.9 (35.11)	19.9 (26.98)
	SAE Grade 4	17.8 (24.13)	21.3 (28.88)	23.7 (32.13)	26.0 (35.25)	33.1 (44.87)	30.8 (41.76)	23.7 (32.13)
	SAE Grade 5 ASTM A449	23.2 (31.45)	27.8 (37.69)	30.9 (41.89)	34.0 (46.09)	43.3 (58.70)	40.2 (54.50)	30.9 (41.89)
	SAE Grade 7	28.7 (38.91)	34.4 (46.64)	38.2 (51.79)	42.0 (56.94)	53.5 (72.54)	49.7 (67.39)	38.2 (51.79)
	SAE Grade 8 ASTM A354 Grade BD	32.7 (44.33)	39.2 (53.15)	43.6 (59.11)	48.0 (65.08)	61.0 (82.70)	56.7 (76.87)	43.6 (59.11)
	ASTM A354 Grade BC	28.7 (38.91)	34.4 (46.64)	38.2 (51.79)	42.0 (56.94)	53.5 (72.54)	49.7 (67.39)	38.2 (51.79)

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
3/8 - 24	SAE Grade 1 ASTM A307	10.2 (13.83)	12.2 (16.54)	13.6 (18.44)	15.0 (20.33)	19.0 (25.76)	17.7 (24.00)	13.6 (18.44)
	SAE Grade 2	16.9 (22.91)	20.3 (27.52)	22.5 (30.52)	24.8 (33.62)	31.5 (42.70)	29.3 (39.73)	22.5 (30.50)
	SAE Grade 4	20.0 (27.11)	24.0 (32.54)	26.7 (36.20)	29.4 (39.86)	37.4 (50.70)	34.7 (47.04)	26.7 (36.20)
	SAE Grade 5 ASTM A449	26.2 (35.52)	31.4 (42.57)	34.9 (47.32)	38.4 (52.06)	48.9 (66.30)	45.4 (61.55)	34.9 (47.32)
	SAE Grade 7	32.3 (43.79)	38.8 (52.60)	43.1 (58.44)	47.4 (64.26)	60.4 (81.89)	56.1 (76.06)	43.1 (58.43)
	SAE Grade 8 ASTM A354 Grade BD	36.9 (50.02)	44.3 (60.06)	49.2 (66.70)	54.1 (73.35)	68.9 (93.41)	64.0 (86.77)	49.2 (66.70)
	ASTM A354 Grade BC	—	—	—	—	—	—	—

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
7/16 - 14	SAE Grade 1 ASTM A307	14.0 (18.98)	17.0 (23.04)	19.14 (25.95)	21.0 (28.47)	27.0 (36.60)	25.0 (33.89)	19.0 (25.76)
	SAE Grade 2	24.0 (32.54)	28.8 (39.05)	32.0 (43.39)	35.2 (47.72)	44.8 (60.74)	41.6 (56.40)	32.0 (43.39)
	SAE Grade 4	28.3 (38.37)	34.0 (46.10)	37.7 (51.11)	41.5 (56.27)	52.8 (71.59)	49.1 (66.57)	37.7 (51.11)
	SAE Grade 5 ASTM A449	37.1 (50.30)	44.5 (60.33)	49.5 (67.11)	54.4 (73.76)	69.3 (93.96)	64.3 (87.18)	49.5 (67.11)
	SAE Grade 7	45.9 (62.23)	55.1 (74.70)	61.3 (83.11)	67.4 (91.38)	85.8 (116.33)	79.6 (107.92)	61.3 (83.11)
	SAE Grade 8 ASTM A354 Grade BD	52.5 (71.18)	63.0 (85.41)	70.0 (94.90)	77.0 (104.40)	98.0 (132.87)	91.0 (123.38)	70.0 (94.90)
	ASTM A354 Grade BC	45.7 (61.96)	54.9 (74.43)	61.0 (82.70)	67.1 (90.97)	85.4 (115.79)	79.3 (107.52)	61.0 (82.70)

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
7/16 - 20	SAE Grade 1 ASTM A307	16.0 (21.70)	19.2 (26.03)	21.3 (28.88)	23.5 (31.86)	29.9 (40.54)	27.7 (37.56)	21.3 (28.88)
	SAE Grade 2	26.9 (36.48)	32.2 (43.66)	35.8 (48.54)	39.4 (53.42)	50.1 (67.93)	46.6 (63.18)	35.8 (48.54)
	SAE Grade 4	31.6 (42.84)	37.9 (51.39)	42.1 (57.08)	46.3 (62.77)	59.0 (79.99)	54.7 (74.16)	42.1 (57.08)
	SAE Grade 5 ASTM A449	41.4 (56.13)	49.7 (67.38)	55.2 (74.84)	60.8 (82.43)	77.3 (104.80)	71.8 (97.35)	55.2 (74.84)
	SAE Grade 7	51.3 (69.55)	61.5 (83.38)	68.4 (92.74)	75.2 (101.96)	95.7 (129.75)	88.9 (120.53)	68.4 (92.74)
	SAE Grade 8 ASTM A354 Grade BD	58.2 (78.90)	69.9 (94.77)	77.7 (105.35)	85.4 (115.78)	108.7 (147.37)	101.0 (136.94)	77.7 (105.35)
	ASTM A354 Grade BC	—	—	—	—	—	—	—

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
1/2 - 13	SAE Grade 1 ASTM A307	22.0 (29.83)	26.0 (35.25)	29.38 (39.83)	32.0 (43.39)	41.0 (55.59)	38.0 (51.52)	29.0 (39.32)
	SAE Grade 2	36.6 (49.62)	43.9 (59.52)	48.8 (66.16)	53.6 (72.67)	68.3 (92.60)	63.4 (85.96)	48.8 (66.16)
	SAE Grade 4	43.1 (58.44)	51.8 (70.23)	57.5 (77.96)	63.3 (85.82)	80.5 (109.14)	74.8 (101.42)	57.5 (77.96)
	SAE Grade 5 ASTM A449	56.7 (76.87)	68.1 (92.33)	75.6 (102.5)	83.2 (112.80)	105.9 (143.58)	98.3 (133.27)	75.6 (102.50)
	SAE Grade 7	69.8 (94.64)	83.8 (113.62)	93.1 (126.23)	102.4 (138.84)	130.4 (176.80)	121.1 (164.19)	93.1 (126.23)
	SAE Grade 8 ASTM A354 Grade BD	79.7 (108.05)	95.6 (129.62)	106.3 (144.12)	116.9 (158.50)	148.8 (201.75)	138.1 (187.24)	106.3 (144.12)
	ASTM A354 Grade BC	69.8 (94.64)	83.8 (113.62)	93.1 (126.23)	102.4 (138.84)	130.4 (176.80)	121.1 (164.19)	93.1 (126.23)

All values in foot pounds and (Newton meters)

Nominal bolt size	Standard and Grade Designation	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
1/2 - 20	SAE Grade 1 ASTM A307	24.8 (33.62)	29.8 (40.40)	33.1 (44.88)	36.4 (49.35)	46.4 (62.91)	43.1 (58.44)	33.1 (44.88)
	SAE Grade 2	41.3 (56.00)	49.5 (67.11)	55.0 (74.57)	60.5 (82.02)	77.0 (104.40)	71.5 (96.94)	55.0 (74.57)
	SAE Grade 4	48.8 (66.16)	58.5 (79.32)	65.0 (88.13)	71.5 (96.94)	91.0 (123.38)	84.5 (114.57)	65.0 (88.13)
	SAE Grade 5 ASTM A449	63.8 (86.50)	76.5 (103.72)	85.0 (115.24)	93.5 (126.77)	119.0 (161.34)	110.5 (149.82)	85.0 (115.24)
	SAE Grade 7	78.8 (106.84)	94.5 (128.12)	105.0 (142.36)	115.5 (156.60)	147.0 (199.30)	136.5 (185.07)	105.0 (142.36)
	SAE Grade 8 ASTM A354 Grade BD	90.0 (122.02)	108.0 (146.43)	120.0 (162.70)	132.0 (179.00)	168.0 (277.78)	156.0 (211.51)	120.0 (162.70)
	ASTM A354 Grade BC	—	—	—	—	—	—	—

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
9/16 - 12	SAE Grade 1 ASTM A307	32.0 (43.39)	38.0 (51.52)	42.19 (57.20)	46.0 (62.37)	59.0 (80.00)	55.0 (74.57)	42 (56.94)
	SAE Grade 2	52.7 (71.45)	63.3 (85.82)	70.3 (95.31)	77.3 (104.80)	98.4 (133.41)	91.4 (123.92)	70.3 (95.31)
	SAE Grade 4	62.2 (84.33)	74.7 (101.28)	83.0 (112.53)	91.3 (123.79)	116.2 (157.55)	107.9 (146.30)	83.0 (112.53)
	SAE Grade 5 ASTM A449	81.7 (110.77)	98.1 (133.00)	109.0 (147.78)	119.9 (162.56)	152.6 (206.90)	141.7 (192.17)	109.0 (147.78)
	SAE Grade 7	100.7 (136.53)	120.9 (163.92)	134.3 (182.09)	147.7 (200.25)	188.0 (254.89)	174.6 (236.73)	134.3 (182.09)
	SAE Grade 8 ASTM A354 Grade BD	115.0 (155.92)	138.0 (187.10)	153.3 (207.85)	168.6 (228.59)	214.6 (290.96)	199.3 (270.21)	153.3 (207.85)
	ASTM A354 Grade BC	100.7 (136.53)	120.9 (163.92)	134.3 (182.09)	147.7 (200.25)	188.0 (254.89)	174.6 (236.73)	134.3 (182.09)

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for:					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
9/16 - 18	SAE Grade 1 ASTM A307	35.3 (47.86)	42.4 (57.49)	47.1 (63.86)	51.8 (70.23)	66.0 (89.48)	61.2 (82.98)	47.1 (63.86)
	SAE Grade 2	59.1 (80.13)	70.9 (96.13)	78.8 (106.84)	86.6 (117.41)	110.3 (149.55)	102.4 (138.84)	78.8 (106.84)
	SAE Grade 4	69.6 (94.36)	83.5 (113.21)	92.8 (125.82)	102.1 (138.43)	129.9 (176.12)	120.7 (163.65)	92.8 (125.85)
	SAE Grade 5 ASTM A449	91.2 (123.65)	109.5 (148.46)	121.6 (164.87)	133.8 (181.40)	170.3 (230.90)	158.1 (214.36)	121.6 (164.87)
	SAE Grade 7	112.3 (152.26)	134.8 (182.76)	149.8 (203.10)	164.7 (223.30)	209.7 (284.32)	194.7 (263.98)	149.8 (203.10)
	SAE Grade 8 ASTM A354 Grade BD	128.7 (174.61)	154.4 (209.34)	171.6 (232.66)	188.7 (255.84)	240.2 (325.67)	223.0 (302.35)	171.6 (232.66)
	ASTM A354 Grade BC	—	—	—	—	—	—	—

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for:					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
5/8 - 11	SAE Grade 1 ASTM A307	44 (59.66)	52 (70.50)	58.2 (78.90)	64 (86.77)	81 (109.82)	76 (103.04)	58 (78.64)
	SAE Grade 2	72.7 (98.57)	87.2 (118.23)	96.9 (131.38)	106.6 (144.53)	135.6 (183.85)	125.9 (170.70)	96.9 (131.38)
	SAE Grade 4	86.1 (116.74)	103.4 (140.19)	114.8 (155.65)	126.3 (171.24)	160.8 (218.02)	149.3 (202.42)	114.8 (155.65)
	SAE Grade 5 ASTM A449	112.5 (152.53)	135.0 (183.04)	150.0 (203.37)	165.0 (223.71)	210.0 (284.72)	195.0 (264.38)	150.0 (203.37)
	SAE Grade 7	138.9 (188.32)	166.6 (225.88)	185.2 (251.10)	203.7 (276.18)	259.2 (351.43)	240.7 (326.35)	185.2 (251.10)
	SAE Grade 8 ASTM A354 Grade BD	158.8 (215.30)	190.5 (258.28)	211.7 (287.03)	232.9 (315.77)	296.4 (401.86)	275.2 (373.12)	211.7 (287.03)
	ASTM A354 Grade BC	139.2 (188.73)	167.0 (226.42)	185.5 (251.50)	204.1 (276.72)	259.8 (352.24)	241.2 (327.02)	185.5 (251.50)

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for:					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
5/8 - 18	SAE Grade 1 ASTM A307	49.5 (67.11)	59.4 (80.54)	66.0 (89.48)	72.6 (98.43)	92.4 (125.27)	85.8 (116.33)	66.0 (89.48)
	SAE Grade 2	82.6 (112.00)	99.1 (134.36)	110.2 (149.41)	121.2 (164.33)	154.2 (209.07)	143.2 (194.15)	110.2 (149.41)
	SAE Grade 4	97.3 (131.92)	116.7 (158.22)	129.7 (175.85)	142.7 (193.48)	181.6 (246.22)	168.6 (228.59)	129.7 (175.85)
	SAE Grade 5 ASTM A449	127.7 (173.14)	153.3 (207.85)	170.3 (230.90)	187.3 (253.95)	238.4 (323.23)	221.4 (300.18)	170.3 (230.90)
	SAE Grade 7	157.6 (213.68)	189.1 (256.39)	210.2 (285.00)	231.2 (313.47)	294.2 (398.88)	273.2 (370.41)	210.2 (285.00)
	SAE Grade 8 ASTM A354 Grade BD	179.9 (243.91)	215.9 (292.72)	239.8 (325.13)	263.8 (357.66)	335.8 (455.28)	311.8 (422.74)	239.8 (325.13)
	ASTM A354 Grade BC	—	—	—	—	—	—	—

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for:					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
3/4 - 10	SAE Grade 1 ASTM A307	77 (104.40)	93 (126.09)	103.1 (139.78)	113 (153.20)	144 (195.24)	134 (181.68)	103 (139.65)
	SAE Grade 2	129.4 (175.44)	155.3 (210.55)	172.5 (233.88)	189.8 (257.33)	241.5 (327.43)	224.3 (304.11)	172.5 (233.88)
	SAE Grade 4	152.6 (206.90)	183.1 (248.25)	203.4 (275.77)	223.8 (303.43)	284.8 (386.14)	264.5 (358.61)	203.4 (275.77)
	SAE Grade 5 ASTM A449	199.7 (270.76)	239.6 (324.85)	266.3 (361.05)	292.9 (397.12)	372.8 (505.45)	346.1 (469.25)	266.3 (361.05)
	SAE Grade 7	246.8 (334.62)	296.2 (401.60)	329.1 (446.20)	362.0 (490.13)	460.7 (624.63)	427.8 (580.02)	329.1 (446.20)
	SAE Grade 8 ASTM A354 Grade BD	282.0 (382.34)	338.3 (458.67)	375.9 (509.65)	413.5 (560.63)	526.3 (713.57)	488.7 (662.59)	375.9 (509.65)
	ASTM A354 Grade BC	246.4 (334.07)	295.7 (400.92)	328.6 (445.53)	361.5 (490.13)	460.0 (623.67)	427.2 (579.20)	328.6 (445.53)



All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for:					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
3/4 - 16	SAE Grade 1 ASTM A307	86.5 (117.28)	103.8 (140.73)	115.3 (156.33)	126.8 (171.92)	161.4 (218.83)	149.9 (203.24)	115.3 (156.33)
	SAE Grade 2	144.1 (195.37)	173.0 (234.56)	192.2 (260.59)	211.4 (286.62)	269.1 (364.85)	249.8 (338.68)	192.2 (260.59)
	SAE Grade 4	170.2 (230.76)	204.2 (276.86)	226.9 (307.64)	249.6 (338.41)	317.6 (430.61)	294.9 (399.15)	226.9 (307.64)
	SAE Grade 5 ASTM A449	222.9 (302.21)	267.5 (362.68)	297.2 (402.95)	326.9 (443.22)	416.1 (564.16)	386.3 (523.75)	297.2 (402.95)
	SAE Grade 7	275.6 (373.66)	330.8 (448.50)	367.5 (498.26)	404.3 (548.16)	514.5 (697.57)	477.8 (647.81)	367.5 (498.26)
	SAE Grade 8 ASTM A354 Grade BD	315.0 (427.08)	378.0 (512.50)	420.0 (569.44)	462.0 (626.39)	588.0 (797.22)	546.0 (740.28)	420.0 (569.44)
	ASTM A354 Grade BC	—	—	—	—	—	—	—

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for:					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
7/8 - 9	SAE Grade 1 ASTM A307	124.7 (169.07)	149.6 (202.83)	166.3 (225.47)	182.9 (247.98)	232.8 (315.63)	216.1 (293.0)	166.3 (225.47)
	SAE Grade 2	124.7 (169.07)	149.6 (202.83)	166.3 (225.47)	182.9 (247.98)	232.8 (315.63)	216.1 (293.00)	166.3 (225.47)
	SAE Grade 4	246.1 (333.67)	295.3 (400.37)	328.1 (444.84)	360.9 (489.32)	459.4 (622.86)	426.6 (578.40)	328.1 (444.84)
	SAE Grade 5 ASTM A449	322.4 (437.11)	386.9 (524.57)	429.8 (582.73)	472.8 (641.03)	601.8 (815.93)	558.8 (757.63)	429.8 (582.73)
	SAE Grade 7	397.9 (539.48)	477.4 (647.27)	530.5 (719.26)	583.5 (791.12)	742.7 (1007.00)	689.6 (935.00)	530.5 (719.26)
	SAE Grade 8 ASTM A354 Grade BD	454.5 (616.22)	545.3 (739.33)	605.9 (821.49)	666.5 (903.65)	848.3 (1150.14)	787.7 (1067.98)	605.9 (821.49)
	ASTM A354 Grade BC	397.9 (539.48)	477.4 (647.27)	530.5 (719.26)	583.5 (791.12)	742.7 (1007.00)	689.6 (935.00)	530.5 (719.26)

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for:					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
7/8 - 14	SAE Grade 1 ASTM A307	137.8 (186.83)	165.4 (224.25)	183.8 (249.20)	202.1 (274.01)	257.3 (348.85)	238.9 (323.90)	183.8 (249.20)
	SAE Grade 2	137.8 (186.83)	165.4 (224.25)	183.8 (249.20)	202.1 (274.01)	257.3 (348.85)	238.9 (323.90)	183.8 (249.20)
	SAE Grade 4	271.5 (368.11)	325.8 (441.73)	362.0 (490.80)	398.2 (539.89)	506.8 (687.13)	470.6 (638.05)	362.0 (490.80)
	SAE Grade 5 ASTM A449	355.2 (481.59)	426.2 (577.85)	473.6 (642.12)	521.0 (706.38)	663.0 (898.91)	615.7 (834.78)	473.6 (642.12)
	SAE Grade 7	438.0 (593.85)	525.7 (712.75)	584.1 (791.93)	642.5 (871.11)	817.7 (1108.65)	759.3 (1029.47)	584.1 (791.93)
	SAE Grade 8 ASTM A354 Grade BD	501.2 (679.54)	601.5 (815.53)	668.3 (906.09)	735.1 (996.66)	935.6 (1268.50)	868.8 (1177.94)	668.3 (906.09)
	ASTM A354 Grade BC	—	—	—	—	—	—	—

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for:					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
1 - 8	SAE Grade 1 ASTM A307	187.5 (254.22)	225.0 (305.06)	250.0 (338.95)	275.0 (372.85)	350.0 (474.54)	325.0 (440.64)	250.0 (338.95)
	SAE Grade 2	187.5 (254.22)	225.0 (305.06)	250.0 (338.95)	275.0 (372.85)	350.0 (474.54)	325.0 (440.64)	250.0 (338.95)
	SAE Grade 4	369.4 (500.84)	443.3 (601.03)	492.5 (667.74)	541.8 (734.58)	689.5 (934.84)	640.3 (868.13)	492.5 (667.74)
	SAE Grade 5 ASTM A449	482.8 (654.59)	579.4 (785.56)	643.8 (872.88)	708.1 (960.05)	901.3 (1222.00)	836.9 (1134.69)	643.8 (872.88)
	SAE Grade 7	596.3 (808.47)	715.5 (970.09)	795.0 (1077.88)	874.5 (1185.66)	1113.0 (1509.03)	1033.5 (1401.24)	795.0 (1077.88)
	SAE Grade 8 ASTM A354 Grade BD	681.6 (924.13)	817.9 (1108.92)	908.8 (1232.17)	999.6 (1355.28)	1272.3 (1725.00)	1181.4 (1601.77)	908.8 (1232.17)
	ASTM A354 Grade BC	596.7 (809.01)	716.1 (970.90)	795.6 (1078.69)	875.2 (1186.61)	1113.9 (1510.25)	1034.3 (1402.32)	795.6 (1078.69)

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
1 - 12	SAE Grade 1 ASTM A307	205.3 278.35	246.4 (334.07)	273.8 (371.22)	301.1 (408.24)	383.3 (519.69)	355.9 (482.54)	273.8 (371.22)
	SAE Grade 2	205.3 (278.35)	246.4 (334.07)	273.8 (371.22)	301.1 (408.24)	383.3 (519.69)	355.9 (482.54)	273.8 (371.22)
	SAE Grade 4	404.1 (547.88)	484.9 (657.44)	538.8 (730.52)	592.6 (803.46)	754.3 (1022.70)	700.4 (949.62)	538.8 (730.52)
	SAE Grade 5 ASTM A449	528.8 (716.96)	634.5 (860.27)	705.0 (955.85)	775.5 (1051.44)	987.0 (1338.19)	916.5 (1242.61)	705.0 (955.85)
	SAE Grade 7	652.5 (884.67)	783.0 (1061.60)	870.0 (1179.56)	957.0 (1297.52)	1218.0 (1651.39)	1131.0 (1533.42)	870.0 (1179.56)
	SAE Grade 8 ASTM A354 Grade BD	746.3 (1011.85)	895.5 (1214.14)	995.0 (1349.04)	1094.5 (1483.49)	1393.0 (1888.66)	1293.5 (1753.73)	995.0 (1349.04)
	ASTM A354 Grade BC	—	—	—	—	—	—	—

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
1 - 14	SAE Grade 1 ASTM A307	210.0 (284.72)	252.0 (341.66)	280.0 (379.63)	308.0 (417.60)	392.0 (531.48)	364.0 (493.52)	280.0 (379.63)
	SAE Grade 2	210.0 (284.72)	252.0 (341.66)	280.0 (379.63)	308.0 (417.60)	392.0 (531.48)	364.0 (493.52)	280.0 (379.63)
	SAE Grade 4	413.4 (560.50)	496.1 (672.62)	551.3 (747.46)	606.4 (822.17)	771.8 (1046.42)	716.6 (971.58)	551.3 (747.46)
	SAE Grade 5 ASTM A449	540.9 (733.36)	649.1 (880.06)	721.3 (977.95)	793.4 (1075.70)	1009.8 (1369.10)	937.6 (1271.22)	721.3 (977.95)
	SAE Grade 7	668.4 (906.23)	802.1 (1087.50)	891.3 (1208.44)	980.4 (1329.25)	1247.8 (1691.79)	1158.6 (1570.85)	891.3 (1208.44)
	SAE Grade 8 ASTM A354 Grade BD	764.1 (1035.98)	916.9 (1243.15)	1018.8 (1381.31)	1120.6 (1519.33)	1426.3 (1933.80)	1324.4 (1795.65)	1018.8 (1381.30)
	ASTM A354 Grade BC	—	—	—	—	—	—	—

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
1-1/8 • 7	SAE Grade 1 ASTM A307	265.8 (360.37)	318.9 (432.37)	354.4 (480.50)	389.8 (528.50)	496.1 (672.62)	460.7 (624.63)	354.4 (480.50)
	SAE Grade 2	265.8 (360.37)	318.9 (432.37)	354.4 (480.50)	389.8 (528.50)	496.1 (672.62)	460.7 (624.63)	354.4 (480.50)
	SAE Grade 4	523.1 (709.23)	627.8 (851.18)	697.5 (945.68)	767.3 (1040.32)	976.5 (1323.96)	906.8 (1229.46)	697.5 (945.68)
	SAE Grade 5 ASTM A449	595.9 (807.93)	715.1 (969.55)	794.5 (1077.20)	874.0 (1184.99)	1112.3 (1508.07)	1032.9 (1400.43)	794.5 (1077.20)
	SAE Grade 7	844.8 (1145.40)	1013.8 (1374.53)	1126.4 (1527.20)	1239.0 (1679.86)	1577.0 (2138.13)	1464.3 (1985.33)	1126.4 (1527.20)
	SAE Grade 8 ASTM A354 Grade BD	966.1 (1309.86)	1159.3 (1571.80)	1288.1 (1746.43)	1416.9 (1921.06)	1803.4 (2445.08)	1674.6 (2270.46)	1288.1 (1746.43)
	ASTM A354 Grade BC	844.8 (1145.40)	1013.8 (1374.53)	1126.4 (1527.20)	1239.0 (1679.86)	1577.0 (2138.13)	1464.3 (1985.33)	1126.4 (1527.20)

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
1-1/8 • 12	SAE Grade 1 ASTM A307	297.4 (403.22)	356.9 (483.89)	396.6 (537.72)	436.2 (591.40)	555.2 (752.75)	515.5 (698.93)	396.6 (537.72)
	SAE Grade 2	297.4 (403.22)	356.9 (483.89)	396.6 (537.72)	436.2 (591.40)	555.2 (752.75)	515.5 (698.93)	396.6 (537.72)
	SAE Grade 4	586.4 (795.05)	703.7 (954.09)	781.9 (1060.12)	860.1 (1166.14)	1094.6 (1484.08)	1016.4 (1378.06)	781.9 (1060.12)
	SAE Grade 5 ASTM A449	667.6 (905.14)	801.1 (1086.15)	890.2 (1206.95)	979.2 (1327.62)	1246.2 (1689.62)	1157.2 (1568.95)	890.2 (1206.95)
	SAE Grade 7	948.2 (1285.58)	1137.8 (1542.65)	1264.2 (1714.02)	1390.6 (1855.40)	1769.9 (2399.66)	1643.5 (2228.30)	1264.2 (1714.02)
	SAE Grade 8 ASTM A354 Grade BD	1083.2 (1468.62)	1299.8 (1762.30)	1444.2 (1958.07)	1588.6 (2153.85)	2021.9 (2741.33)	1877.5 (2545.55)	1444.2 (1958.07)
	ASTM A354 Grade BC	—	—	—	—	—	—	—

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
1-1/4 • 7	SAE Grade 1 ASTM A307	375.0 (508.43)	450.0 (610.11)	500.0 (677.91)	550.0 (745.70)	700.0 (949.07)	650.0 (881.28)	500.0 (677.91)
	SAE Grade 2	375.0 (508.43)	450.0 (610.11)	500.0 (677.91)	550.0 (745.70)	700.0 (949.07)	650.0 (881.28)	500.0 (677.91)
	SAE Grade 4	738.3 (1001.00)	885.9 (1201.12)	984.4 (1334.67)	1082.8 (1468.08)	1378.1 (1868.45)	1279.7 (1735.04)	984.4 (1334.67)
	SAE Grade 5 ASTM A449	840.2 (1139.16)	1008.3 (1367.07)	1120.3 (1518.93)	1232.3 (1670.78)	1568.4 (2126.47)	1456.4 (1974.62)	1120.3 (1518.93)
	SAE Grade 7	1191.8 (1615.87)	1430.2 (1939.09)	1589.1 (2154.53)	1748.0 (2369.97)	2224.7 (3016.30)	2065.8 (2800.85)	1589.1 (2154.53)
	SAE Grade 8 ASTM A354 Grade BD	1362.9 (1847.85)	1635.5 (2217.44)	1817.2 (2463.80)	1998.9 (2710.15)	2544.1 (3449.34)	2362.3 (3202.85)	1817.2 (2463.80)
	ASTM A354 Grade BC	1192.4 (1616.68)	1430.9 (1940.04)	1589.8 (2155.48)	1748.8 (2371.05)	2225.8 (3017.78)	2066.8 (2802.20)	1589.8 (2155.48)

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
1-1/4 • 12	SAE Grade 1 ASTM A307	414.8 (562.40)	497.8 (674.93)	553.1 (749.90)	608.4 (824.88)	774.4 (1049.95)	719.1 (974.97)	553.1 (749.90)
	SAE Grade 2	414.8 (562.40)	497.8 (674.93)	553.1 (749.90)	608.4 (824.88)	774.4 (1049.95)	719.1 (974.97)	553.1 (749.90)
	SAE Grade 4	816.8 (1107.43)	980.2 (1328.97)	1089.1 (1476.62)	1198.0 (1624.27)	1524.7 (2067.22)	1415.8 (1919.57)	1089.1 (1476.62)
	SAE Grade 5 ASTM A449	930.5 (1261.60)	1116.6 (1513.90)	1240.6 (1682.03)	1364.7 (1850.29)	1736.9 (2354.92)	1612.8 (2186.66)	1240.6 (1682.03)
	SAE Grade 7	1320.7 (1790.63)	1584.8 (2148.70)	1760.9 (2387.46)	1937.0 (2626.22)	2465.3 (3342.50)	2289.2 (3103.74)	1760.9 (2387.46)
	SAE Grade 8 ASTM A354 Grade BD	1509.4 (2046.47)	1811.3 (2455.80)	2012.5 (2728.59)	2213.8 (3001.51)	2817.5 (3820.02)	2616.3 (3547.23)	2012.5 (2728.58)
	ASTM A354 Grade BC	—	—	—	—	—	—	—

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
1-3/8 • 6	SAE Grade 1 ASTM A307	491.1 (665.84)	589.4 (799.12)	654.8 (887.79)	720.3 (976.60)	916.8 (1243.00)	851.3 (1154.21)	654.8 (887.80)
	SAE Grade 2	491.1 (665.84)	589.4 (799.12)	654.8 (887.79)	720.3 (976.60)	916.8 (1243.00)	851.3 (1154.21)	654.8 (887.80)
	SAE Grade 4	968.1 (1312.57)	1161.7 (1575.06)	1290.8 (1750.10)	1419.9 (1925.13)	1807.1 (2450.10)	1678.0 (2275.07)	1290.8 (1750.09)
	SAE Grade 5 ASTM A449	1102.1 (1494.25)	1322.6 (1793.20)	1469.5 (1992.38)	1616.5 (2191.68)	2057.3 (2789.33)	1910.4 (2590.16)	1469.5 (1992.38)
	SAE Grade 7	1563.6 (2119.96)	1876.4 (2544.06)	2084.8 (2826.61)	2293.3 (3109.30)	2918.8 (3957.37)	2710.3 (3674.68)	2084.8 (2826.61)
	SAE Grade 8 ASTM A354 Grade BD	1786.6 (2422.30)	2144.0 (2906.88)	2382.2 (3229.83)	2620.4 (3552.79)	3335.1 (4521.80)	3096.8 (4198.70)	2382.2 (3229.83)
	ASTM A354 Grade BC	1563.6 (2119.96)	1876.4 (2544.06)	2084.8 (2826.61)	2293.3 (3109.30)	2918.8 (3957.37)	2710.3 (3674.68)	2084.8 (2826.61)

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
1-3/8 • 12	SAE Grade 1 ASTM A307	559.5 (758.58)	671.3 (910.16)	745.9 (1011.30)	820.5 (1112.45)	1044.3 (1415.88)	969.7 (1314.74)	745.9 (1011.30)
	SAE Grade 2	559.5 (758.58)	671.3 (910.16)	745.9 (1011.30)	820.5 (1112.45)	1044.3 (1415.88)	969.7 (1314.74)	745.9 (1011.30)
	SAE Grade 4	1102.1 (1494.25)	1322.6 (1793.21)	1469.5 (1992.38)	1616.5 (2191.68)	2057.3 (2789.33)	1910.4 (2590.16)	1469.5 (1992.38)
	SAE Grade 5 ASTM A449	1254.3 (1700.60)	1505.1 (2040.64)	1672.3 (2267.34)	1839.6 (2494.16)	2341.3 (3174.38)	2174.0 (2947.55)	1672.3 (2267.34)
	SAE Grade 7	1780.2 (2413.63)	2136.2 (2896.30)	2373.6 (3218.17)	2611.0 (3540.04)	3323.0 (4505.39)	3085.7 (4183.65)	2373.6 (3218.17)
	SAE Grade 8 ASTM A354 Grade BD	2034.1 (2757.87)	2441.0 (3309.56)	2712.2 (3677.25)	2983.4 (4044.95)	3797.1 (5148.18)	3525.8 (4780.35)	2712.2 (3677.25)
	ASTM A354 Grade BC	—	—	—	—	—	—	—

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
1-1/2 • 6	SAE Grade 1 ASTM A307	652.5 (884.67)	783.0 (1061.60)	870.0 (1179.56)	957.0 (1297.52)	1218.0 (1651.39)	1131.0 (1533.43)	870.0 (1179.56)
	SAE Grade 2	652.5 (884.67)	783.0 (1061.60)	870.0 (1179.56)	957.0 (1297.52)	1218.0 (1651.39)	1131.0 (1533.43)	870.0 (1179.56)
	SAE Grade 4	1283.9 (1740.74)	1540.7 (2088.91)	1711.9 (2321.03)	1883.1 (2553.14)	2396.6 (3249.36)	2225.4 (3017.24)	1711.9 (2321.03)
	SAE Grade 5 ASTM A449	1462.5 (1982.88)	1755.0 (2379.46)	1950.0 (2643.85)	2145.0 (2908.23)	2730.0 (3701.39)	2535.0 (3437.00)	1950.0 (2643.85)
	SAE Grade 7	2074.2 (2812.24)	2489.1 (3374.77)	2765.6 (3749.66)	3042.2 (4124.67)	3871.9 (5249.60)	3595.3 (4874.58)	2765.6 (3749.66)
	SAE Grade 8 ASTM A354 Grade BD	2370.9 (3214.51)	2845.1 (3857.44)	3161.3 (4286.15)	3477.4 (4714.73)	4425.8 (6000.58)	4109.6 (5571.88)	3161.3 (4286.15)
	ASTM A354 Grade BC	2074.9 (2813.20)	2489.9 (3375.85)	2766.6 (3751.01)	3043.2 (4126.03)	3873.2 (5251.36)	3596.5 (4876.20)	2766.6 (3751.01)

All values in foot pounds and (Newton meters)

Nominal bolt size	Grade Designation and Standard	Zinc or Cadmium Plated	If instructions call for :					
			Loctite 222 or 262	Loctite 242	Loctite 271	Loctite 272	Loctite 277	Bare
1-1/2 • 12	SAE Grade 1 ASTM A307	734.1 (995.30)	880.9 (1194.34)	978.8 (1327.07)	1076.6 (1459.67)	1370.3 (1857.88)	1272.4 (1725.14)	978.8 (1327.07)
	SAE Grade 2	734.1 (995.30)	880.9 (1194.34)	978.8 (1327.07)	1076.6 (1459.67)	1370.3 (1857.88)	1272.4 (1725.14)	978.8 (1327.07)
	SAE Grade 4	1445.6 (1959.97)	1734.8 (2352.07)	1927.5 (2613.34)	2120.3 (2874.33)	2698.5 (3658.68)	2505.8 (3397.41)	1927.5 (2613.34)
	SAE Grade 5 ASTM A449	1645.3 (2230.73)	1974.4 (2676.93)	2193.8 (2974.40)	2413.1 (3271.73)	3071.3 (4164.13)	2851.9 (3866.66)	2193.8 (2974.40)
	SAE Grade 7	2334.4 (3165.02)	2801.3 (3798.06)	3112.5 (4219.99)	3423.8 (4642.05)	4357.5 (5907.98)	4046.3 (5486.05)	3112.5 (4219.99)
	SAE Grade 8 ASTM A354 Grade BD	2667.7 (3616.92)	3201.2 (4340.25)	3556.9 (4822.51)	3912.6 (5304.78)	4979.6 (6751.44)	4623.9 (6269.17)	3556.9 (4822.51)
	ASTM A354 Grade BC	—	—	—	—	—	—	—

## Other Fastener Torque Specifications

All values in foot-pounds and (Newton-meters)

Nominal bolt size	18 - 8 Stainless Steel	316 Stainless Steel	Brass	Aluminum 2024 - T4
<b>1/4 - 20</b>	6.3 (8.54)	6.6 (8.95)	5.1 (6.91)	3.8 (5.15)
<b>1/4 - 28</b>	7.8 (10.57)	8.3 (11.25)	6.4 (8.67)	4.8 (6.50)
<b>5/16 - 18</b>	11.0 (14.90)	11.5 (15.60)	8.9 (12.06)	6.7 (9.08)
<b>5/16 - 24</b>	11.8 (16.00)	12.3 (16.67)	9.7 (13.15)	7.2 (9.76)
<b>3/8 - 16</b>	19.7 (26.71)	20.6 (27.93)	16.0 (21.70)	11.9 (16.13)
<b>3/8 - 24</b>	21.6 (29.28)	22.6 (30.64)	17.7 (24.00)	13.1 (17.76)
<b>7/16 - 14</b>	31.3 (42.44)	32.8 (44.47)	26.4 (35.80)	19.0 (25.76)
<b>7/16 - 20</b>	33.3 (45.15)	34.8 (47.18)	27.3 (37.00)	20.2 (27.38)
<b>1/2 - 13</b>	43.1 (58.43)	45.2 (61.28)	35.2 (47.72)	26.1 (35.38)
<b>1/2 - 20</b>	45.1 (61.14)	47.1 (63.86)	36.9 (50.00)	27.3 (37.00)
<b>9/16 - 12</b>	56.8 (77.00)	59.4 (80.53)	46.5 (63.04)	34.4 (46.64)
<b>9/16 - 18</b>	62.7 (85.00)	65.6 (88.94)	51.3 (69.55)	38.0 (51.52)
<b>5/8 - 11</b>	92.5 (125.41)	96.7 (131.10)	75.6 (102.50)	59.6 (80.80)
<b>5/8 - 18</b>	103.7 (140.60)	108.4 (146.97)	84.7 (114.84)	66.5 (90.16)
<b>3/4 - 10</b>	127.5 (172.86)	131.8 (178.70)	104.1 (141.14)	81.7 (110.77)
<b>3/4 - 16</b>	124.2 (168.39)	129.8 (175.98)	101.7 (137.88)	79.8 (108.19)



## Other Fastener Torque Specifications

All values in foot-pounds and (Newton-meters)

Nominal bolt size	18 - 8 Stainless Steel	316 Stainless Steel	Brass	Aluminum 2024 - T4
<b>7/8 - 9</b>	194.0 (263.03)	202.5 (274.55)	158.8 (215.30)	124.6 (168.93)
<b>7/8 - 14</b>	193.2 (261.94)	201.7 (273.47)	157.9 (214.08)	124.2 (168.40)
<b>1 - 8</b>	286.7 (388.71)	299.6 (406.20)	234.6 (318.07)	183.8 (249.20)
<b>1 - 14</b>	259.2 (351.43)	270.8 (367.16)	212.1 (287.57)	166.3 (225.47)
<b>1-1/8 • 7</b>	413.0 (559.95)	432.0 (585.71)	337.0 (456.91)	265.0 (359.29)
<b>1-1/8 • 12</b>	390.0 (528.77)	408.0 (553.17)	318.0 (431.15)	251.0 (340.31)
<b>1-1/4 • 7</b>	523.0 (709.09)	546.0 (740.28)	428.0 (580.30)	336.0 (455.55)
<b>1-1/4 • 12</b>	480.0 (650.80)	504.0 (683.33)	394.0 (534.19)	308.0 (417.60)
<b>1-1/2 • 6</b>	888.0 (1203.97)	930.0 (1260.91)	727.0 (985.68)	570.0 (772.82)
<b>1-1/2 • 12</b>	703.0 (953.14)	732.0 (992.46)	575.0 (779.60)	450.0 (610.12)



**Section**

**2**


# **Shell and Door Assemblies**

## DOOR SEAL REPLACEMENT ON RAPID LOAD MODELS

### Door Seal Replacement

The seal components referred to herein are contained in kits K28 0005R (for 60" machines) or K36 0003R (for 72" machines).


1. Remove old seal from the door cavity and carefully pull air tubing out of inner door so as not to cut tubing.
2. Remove as much as possible of the old adhesive from the rubber filler strip inside door cavity.
3. Carefully remove old seal from the air tubing fittings and attach new seal.
4. Carefully stretch new seal around door and into cavity. Because the new seal is fabric reinforced it is slightly narrower than the old style rubber seal; the wall is thinner and it does not stretch as easily. It will therefore feel much tighter than the all rubber seal when stretching it over the edge of the door.
5. After new seal is fitted and aligned into the door cavity, close both doors and inflate. Check to see that seals contact each other along the seam between the doors and that the seal contacts the shell front all around. To check this, attempt to slide a piece of paper between these surfaces.
6. If the seal does not contact the shell at locations A or D (see FIGURE 1), open the doors and stretch the seal toward these points.
7. If seals do not contact each other or the shell front in other areas, install rubber shims (part number 02 175267) between seal and filler strip as required to bring the seal further out from the door. Use adhesive (part number 20C015A) to attach shims to filler strip.
8. If seals do not contact each other at locations A and B, (see FIGURE 1), then at these points, glue tapered patches (part number 02 175134), as required, to the outside of seal (using adhesive 20C080C) to add thickness.
9. After seal has been completely fitted, roll seal up on one side, and with a small brush, paint adhesive (part number 20C015A) on filler strip to hold seal in place.

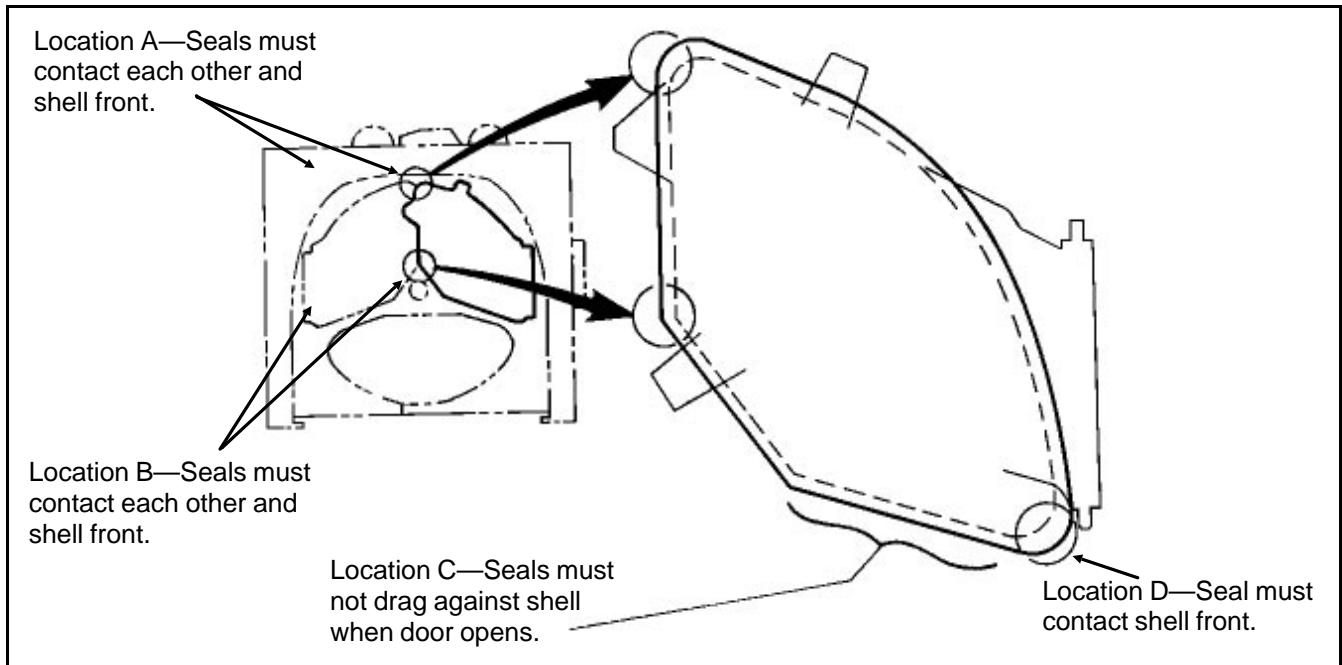

**FIGURE 1** (MSSMA413AE)  
**Door Seal Checks**


## Door Seal—Preventive Maintenance

**Check Door Alignment About the Shell Opening**—Each door must be centered in its respective shell front opening. If the doors are not centered, the inflatable door seals will drag on the sealing edge of the shell front as the doors are opened and closed. The doors can be moved in any direction for centering by loosening the 1/2" hex cap nuts which hold the door assembly to the hinge cross brace as shown below.

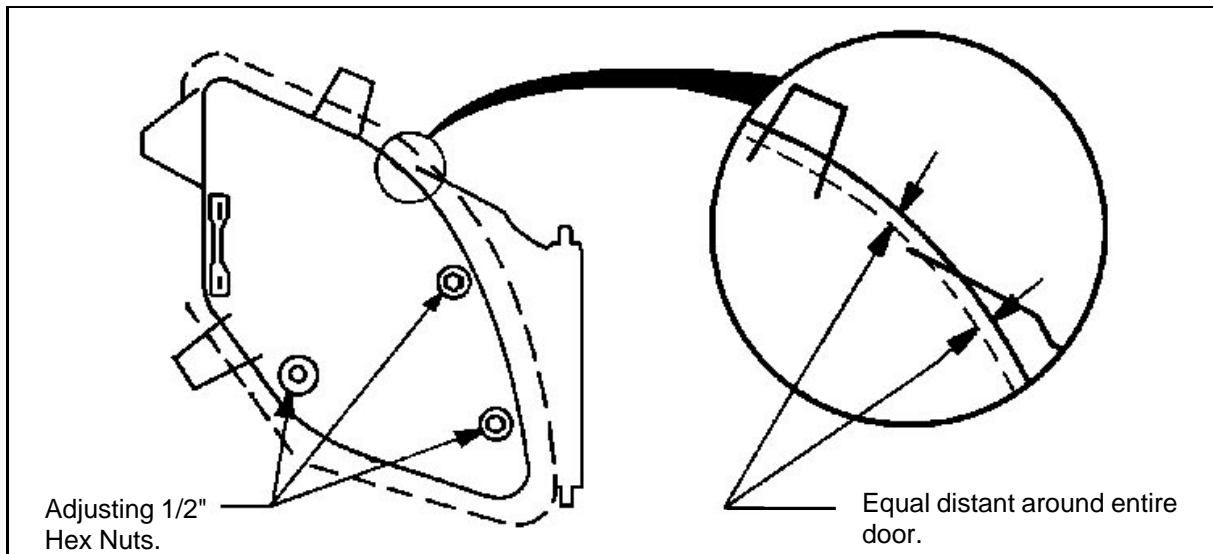


**FIGURE 2** (MSSMA413AE)  
**Door Alignments**

**Check Condition of Door Seal Channel**—Be certain the sides of the channel in which the door seal fits are straight and that mainly the inner edge is not bent. See FIGURE 3 below. Because outer edge is double thickness it is not likely to be bent out of shape. But it is possible for the inner edge to become bent as shown.

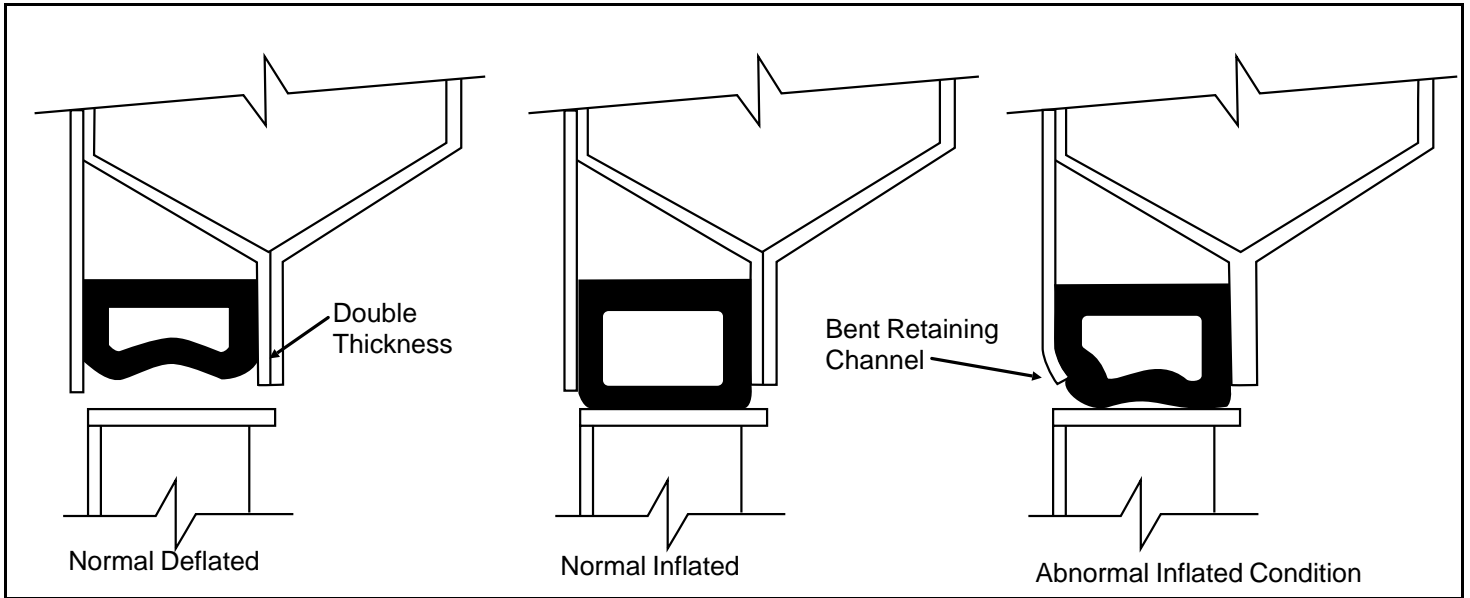


**FIGURE 3** (MSSMA413AE)  
**Door Alignment**

**Replace Worn Striker Plates**—Each of the outer doors are securely held in the closed position by air latches. These air latches snap into striker plates bolted to the shell front. If the hole in these striker plates becomes worn, the shell doors will be allowed to move while the machine is in operation. It will look as though the doors are “breathing.” This will cause rapid wear and premature seal failure. Striker plate components are shown below.

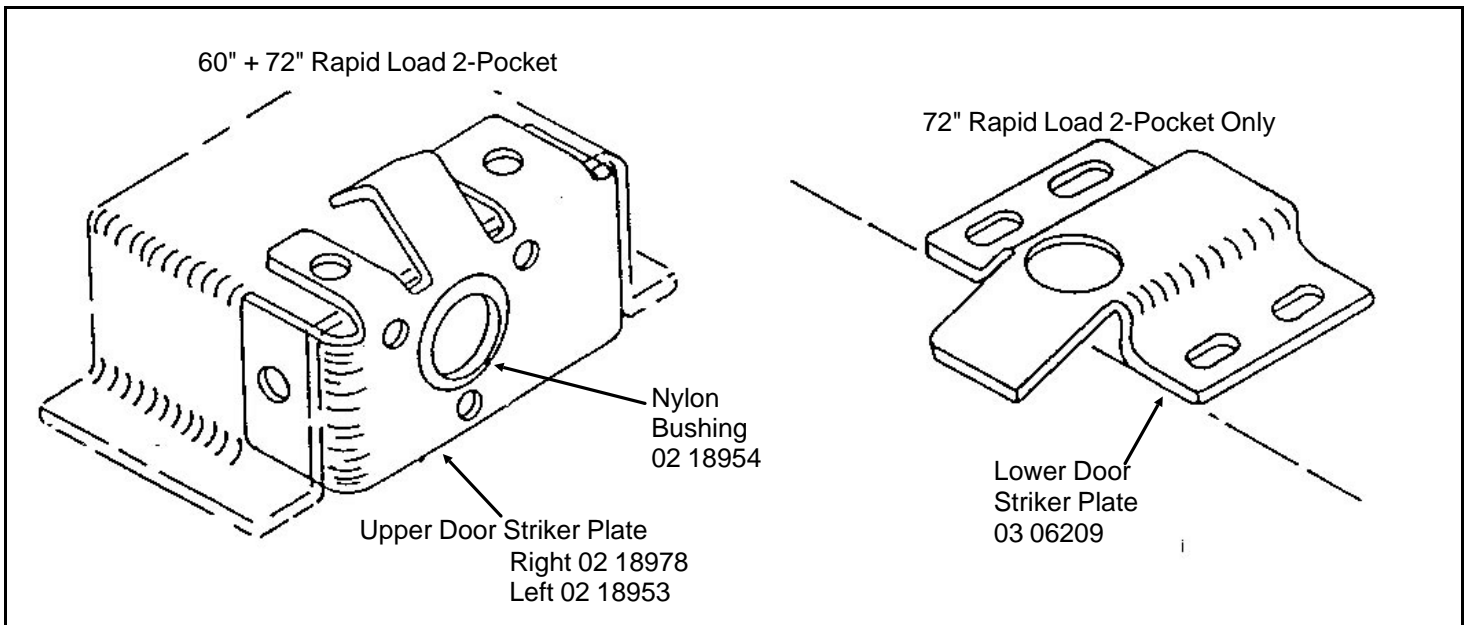

**FIGURE 4** (MSSMA413AE)  
**Worn Striker Plate**

**Check Door Alignment In and Out**—Misalignment of the doors in and out of the shell front opening can be most often attributed to worn striker plates as described above. The doors should be adjusted so that, with one door open and one door closed, the closed door's inflatable seal channel will be centered on the shell front sealing surface when viewed edgewise (see FIGURE 5). If the door latch mechanism is loose, worn, or mismatched the door can travel too far into the machine, with the result that the inflatable seal can protrude past the door channel and the shell front sealing surface and be scissored when the door is reopened.

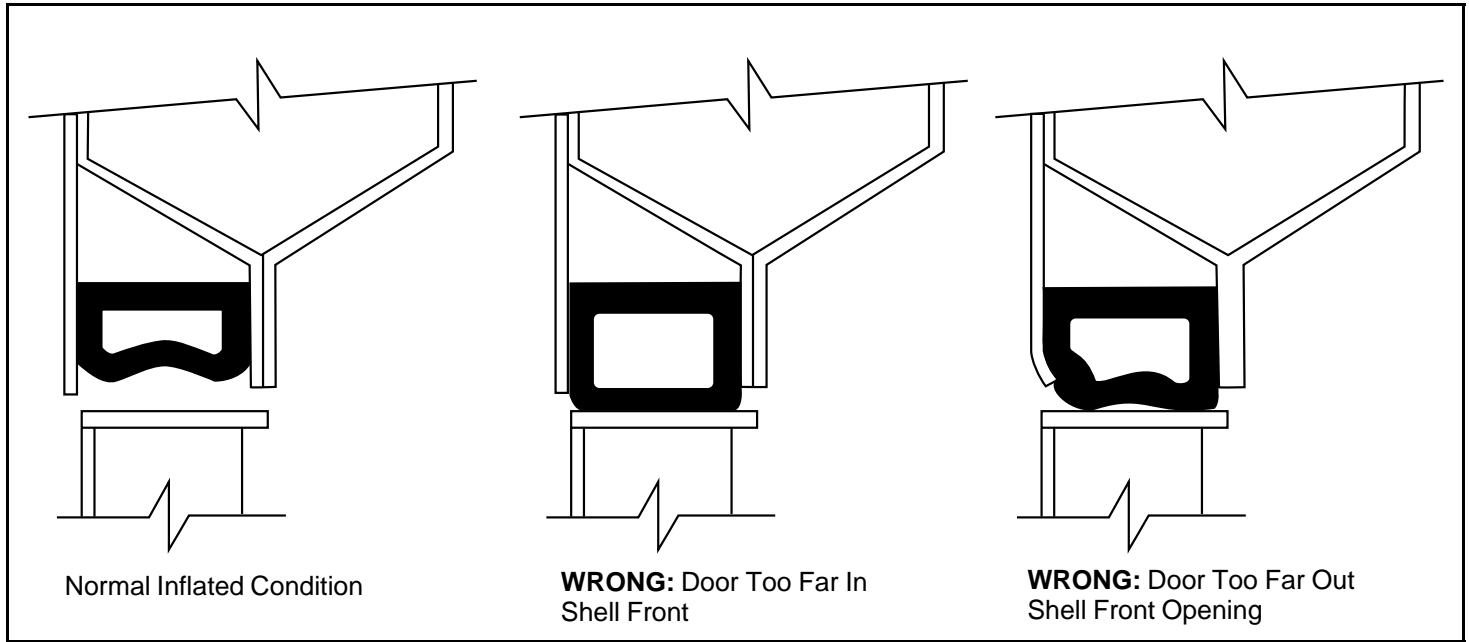

**FIGURE 5** (MSSMA413AE)  
**Door Seals**

**Check Seal Air Pressure**—Air pressure on these inflatable door seals should be set and maintained at 25 to 28 PSI. Too high air pressure will cause blowouts and too low air pressure will cause not enough contact between seal and shell front, thus movement and rapid wear. Kit K28 0011, which contains a fixed at 25 to 28 PSI regulator, plus a pressure gauge is available from the Milnor<sup>®</sup> factory. If yours is inoperative, it should be replaced.

**Check Door Bumper**—Be sure large rubber bumper (part number 60C075) on right hand door is in place and not worn.

## Seal Vacuum Pump Feature

Since approximately June of 1980, all production machines have a vacuum pump which delays the opening of the door by 7.5 seconds and during that time literally sucks the air from the inflatable door seal. This is the single greatest extender of the life of the inflatable door seal. This feature is retrofitable to all 60" and 72" WE2 machines manufactured prior to June 1980. Order retrofit kit, part number K28 0013.

# Shell Door


## 6036SP2,6044SP2



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

BMP800182/2006305B  
(Sheet 1 of 2)

Litho in U.S.A.

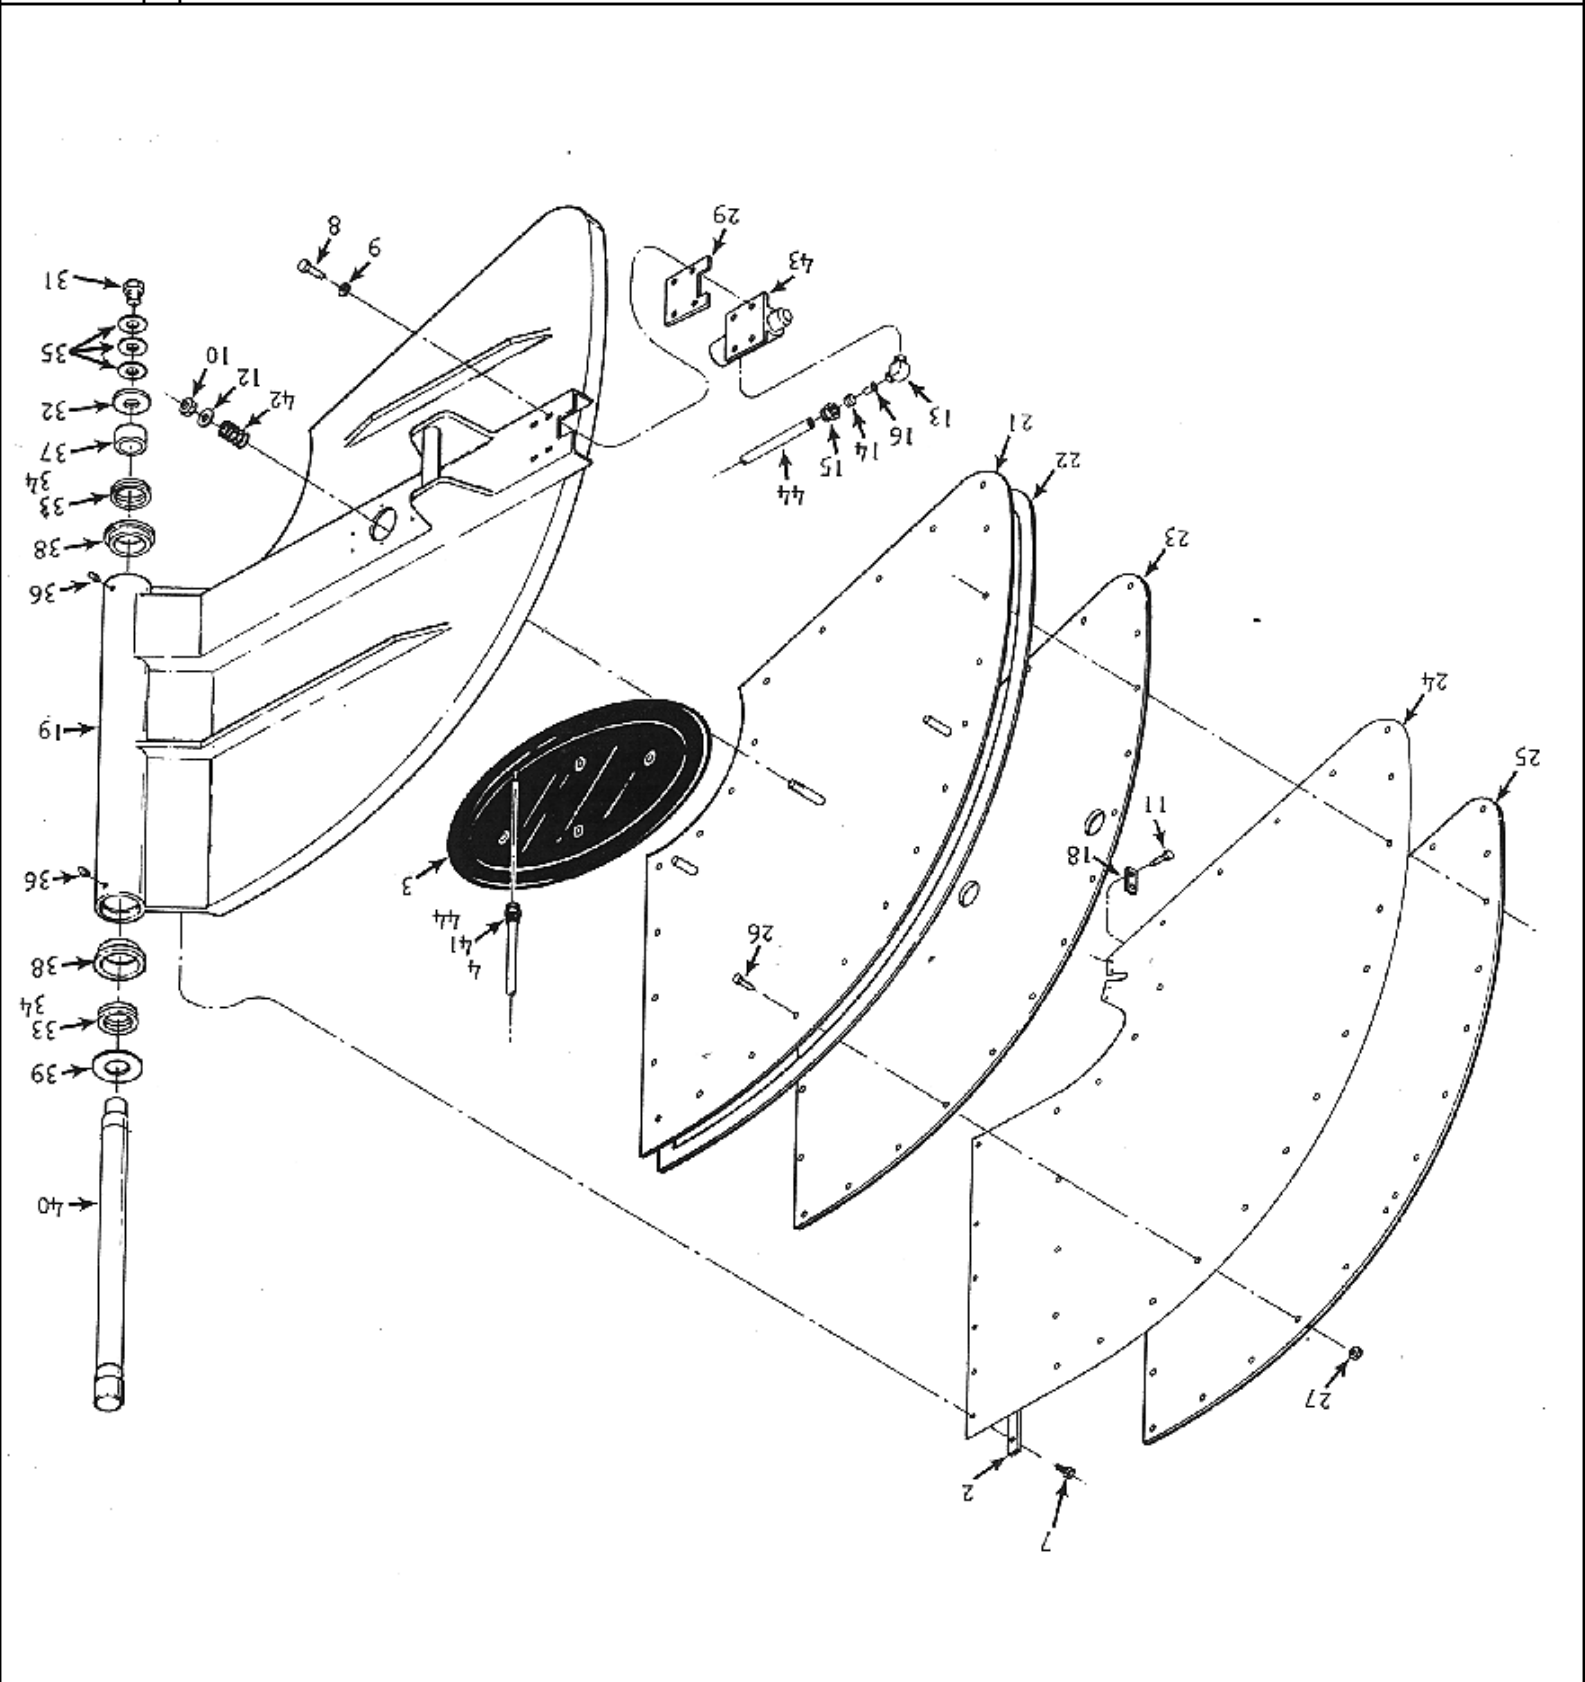

**Parts List—Shell Door**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			ASSEMBLIES	
			none	
			COMPONENTS	
all	1	SA 28 117	*SHELL DOOR ASY 60SG2 CLEAN	(60"SG2CLEAN)
all	1	SA 28 118	*SHELL DOOR ASY 60SG2 SOIL	(60"SG2SOIL)
all	2	02 175149	STRIP=RUBBER DOOR GASKET-SG	FOR 60" SG2 LOAD SIDE
all	3	02 18982G	DOORTUBE-60WEHU-PRES.TUB	FOR 60" SG2 CLEAN SIDE
all	3	02 18981G	DOOR TUBE-60SGH-PRES.TUBE E	
all	4	60C102	ORING 5/32ID 1/16CS BUNA70#007	
all	5	54M015	GREASEFIT 60X36/60X44 1610BL	
all	7	15N186	HXCAPSCR 1/4-20X3/4 SS18-8	
all	8	15K085	HEXCAPSCR 3/8-16UNC2AX3/4 GR5	
all	9	15U255	LOCKWASHER MEDIUM 3/8 ZINCPL	
all	10	15G234	LOKNU 1/2-13NC CAD FLXLOC#21F	
all	11	15P010	TRDCUT PHILPANHDSR 10-24X1/2S	
all	12	15U280	FL+WASHER(USS STD)1/2 ZNC PL+D	
all	13	53A040B	BODY=EL90MALE5/16X.25#B69A-5B	
all	14	53A508	SLEEVE DELRIN 5/16"OD#60PT-5	
all	15	53A060A	NUT BRASS 5/16 COMP#61A-5	
all	16	53A509	TUBE INSERT 5/16"OD X .53"LG.	
all	17	51P034	SCREWSOCKET 5/8-11X5/8 PLASTIC	
all	18	02 175231	PLATE=SHELL DOOR GASKET	
all	19	W2 18847	* SHELDOR WELD 60SG2 CLEANSID	FOR 60"SG2CLEAN
all	19	W2 18846	* SHELDOR WELD 60SG2 SOILSIDE	FOR 60"SG2SOIL
all	20	SA 28 162	LINER ASSY=SHELDOR=60SGD-CS	FOR 60"SG2CLEAN
all	20	SA 28 161	LINER ASSY=SHELDOR=60SGD-SS	FOR 60"SG2SOIL
all	21	W2 18861A	*PRESPLT WELD=SHLDR 60SG2 SS	
all	21	W2 18861B	*PRESPLT WELD=SHLDR60SG2 CS	





**Pellerin Milnor Corporation**  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List, cont.—Shell Door				Parts List, cont.—Shell Door			
Used In	Item	Part Number	Description	Used In	Item	Part Number	Description
all	22	60A006	NEO RUB STRIP 1/4X1X10' CLSD C				
all	23	X2 18860	FILPLATE=SHELDOOR-SGD				
all	24	02 175170	GASKET=SHELLDOOR 2/SGD				
all	25	02 18862	LINER=SHELL DOOR SGD				
all	26	15N188D	HXCAPSCR 1/4-20UNC2X7/8SS18-8				
all	27	15G164	HX THIN LOCKNUT NYL 1/4-20 SS				
all	29	02 15633	ADJPLATE=DOORLATCH CAD				
all	30	ASD29001	BEARING & HINGE PIN ASSY 60"				INCL ITEM 31 THRU 40
all	31	15K214E	HXCAPSCR 5/8-11UNC2AX1.5 GR5 Z				
all	32	15U314	FLATWASHER(USS STD) 5/8" ZNC P				
all	33	54A974	CUP TIMKEN #L68111 1/BX+PT#				
all	34	54A975	CONE TIMKEN #L68149 IND. BOX				
all	35	15U521	SPRINGWSHR.630ID 1.250D.051T				
all	36	54M021	GRSFIT 1/8PIPE X 1/4STR 1607-B				
all	37	03 06132	BUSHING,HINGE PIN 60&72 SG				
all	38	X3 06146	BEARING ADAPTER 60&72 SG DR.				
all	39	03 06136	WASHER,BRG BACKUP 72SG				
all	40	03 06145	HINGE PIN 60 SG2,SG3,WE2&WE3				
All	41	02 18181	FITTING-BRASS FOR INNER TUBE				
all	42	02 18187	SPRING=OUTER DOOR 60WEHU CAD				
all	43	SA 15 028	* DOOR LATCH ASSY-DIVCYLS				
all	44	60E005	TUBING BLK.POLY.5/160DX3/16ID				

# Shell Door


## 6036WP3,SP3 6044WP3,SP3



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

BMP800183/2006305B  
(Sheet 1 of 2)

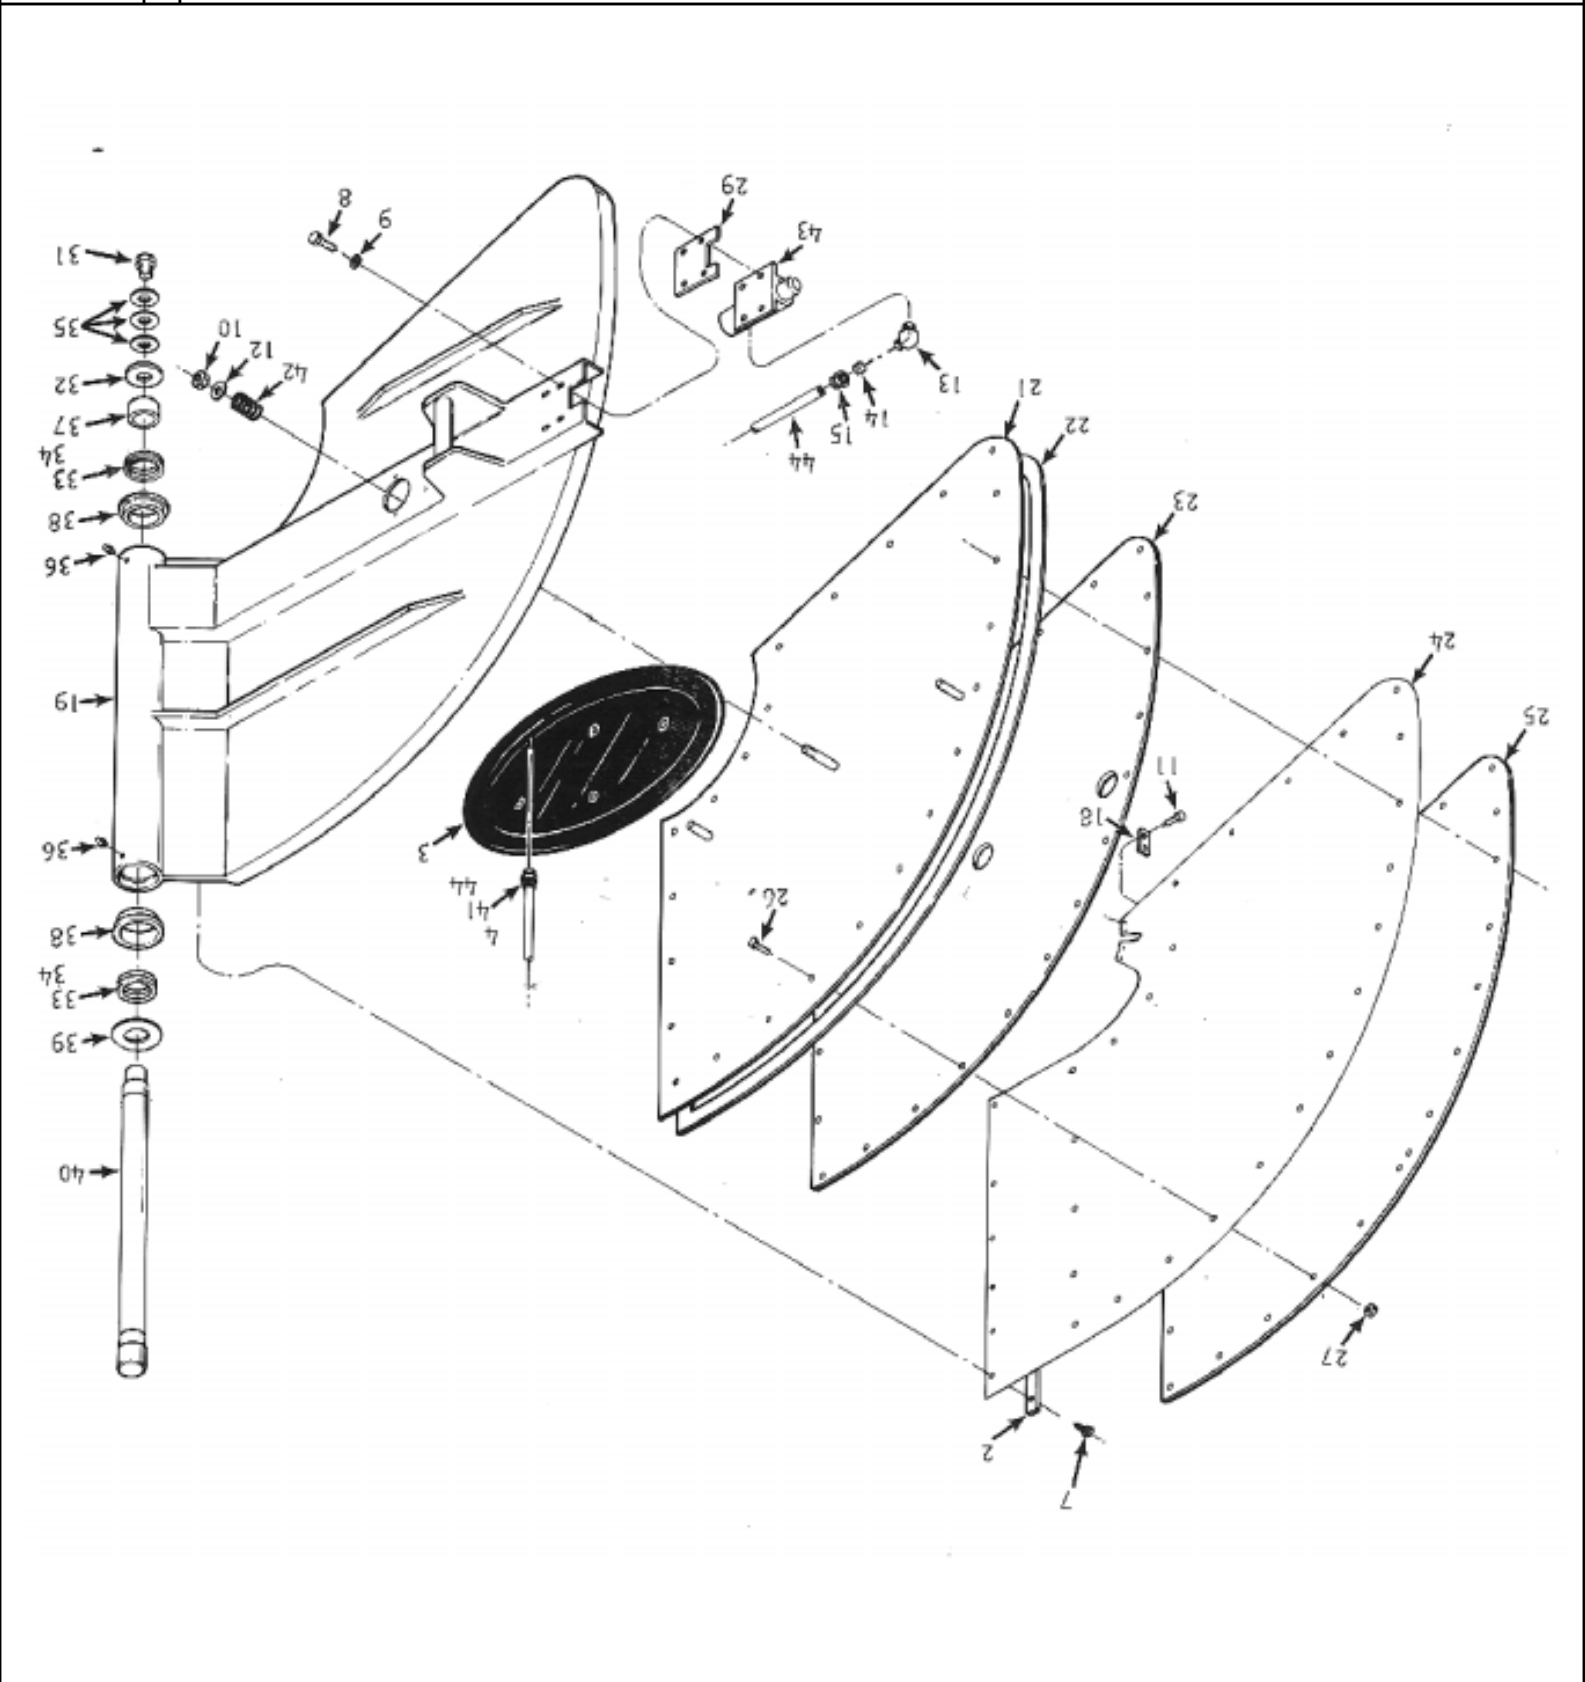

**Parts List—Shell Door**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			ASSEMBLIES	
	A	SA 28 043	* SHELLDOOR ASSY 60"SG3SOIL	(60"SP3 SOIL)
	B	SA 28 044	*SHELL DOOR ASY 60SG3 CLEAN	(60"SP3 CLEAN)
	C	SA 28 017	* SHELLDOOR ASSY 60"WE3	(60"WP3)
			COMPONENTS	
A	1	SA 28 043	* SHELLDOOR ASSY 60"SG3SOIL	(60"SP3 SOIL)
B	1	SA 28 044	*SHELL DOOR ASY 60SG3 CLEAN	(60"SP3 CLEAN)
C	1	SA 28 017	* SHELLDOOR ASSY 60"WE3	(60"WP3)
all	2	02 175149	STRIP=RUBBER DOOR GASKET-SG	
AC	3	02 18982G	DOORTUBE-60WEHU-PRES.TUB	FOR 60"SP3 SOIL & 60"WP3
B	3	02 18981G	DOOR TUBE-60SGH-PRES.TUBE E	FOR 60"SP3 CLEAN
all	4	60C102	ORING 5/32ID 1/16CS BUNA70#007	
all	5	54M015	GREASEFIT 60X36/60X44 1610BL	
all	7	15N186	HXCAPSCR 1/4-20X3/4 SS18-8	
all	8	15K085	HEXCAPSCR 3/8-16UNC2AX3/4 GR5	
all	9	15U255	LOCKWASHER MEDIUM 3/8 ZINCPL	
all	10	15G234	LOKNUT 1/2-13NC CAD FLXLOC#21F	
all	11	15P010	TRDCUT PHILPANHDSR 10-24X1/2S	
all	12	15U280	FL+WASHER(USS STD)1/2 ZNC PL+D	
all	13	53A040B	BODY=EL90MALE5/16X.25#B69A-5B	
all	14	53A060	SLEEVE 5/16 COMP IMP#60-F	
all	15	53A060A	NUT BRASS 5/16 COMP#61A-5	
all	17	51P034	SCREWSOCKET 5/8-11X5/8 PLASTIC	
all	18	02 175231	PLATE=SHELL DOOR GASKET	
A	19	W2 18316	**SHELDOR WELD 60SG3 SOILSIDE	FOR 60"SG3SOIL
B	19	W2 18319	**SHELDOR WELD 60SG3 CLEANSID	FOR 60"SG3CLEAN
C	19	W2 18143	* SHELLDOOR WELDMT 60WE3 ONLY	FOR 60"WE3
AC	20	SA 28 159	LINER ASSY=SHELLDOOR=WEH+SGH	FOR 60"SG3SOIL & 60"WE3
B	20	SA 28 160	LINER ASSY=SHELLDOOR=SGH-CS	FOR 60"SG3CLEAN
AC	21	W2 18152B	*PRESSPLT WELD=SHLDR60SG3 CS	



**Pellerin Milnor Corporation**  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List, cont.—Shell Door				Parts List, cont.—Shell Door			
Used In	Item	Part Number	Description	Used In	Item	Part Number	Description
B	21	W2 18152A	*PRESPLT WELD=SHLDR60SG3SS+WE				
all	22	60A006	NEO RUB STRIP 1/4X1X10' CLSD C				
all	23	X2 18367	PLATE=DOOR FILLER				
all	24	02 175169	GASKET=SHELLDOOR 1WE3				
all	25	02 18150	LINER=DOOR BACK				
all	26	15N188D	HXCAPSCR 1/4-20UNC2X7/8SS18-8				
all	27	15G164	HX THIN LOCKNUT NYL 1/4-20 SS				
all	29	02 15633	ADJPLATE=DOORLATCH CAD				
all	30	ASD29002	BRG.&HINGEPIN ASSY 60SG3&WE3				INCL ITEM 31 THRU 40
all	31	15K214E	HXCAPSCR 5/8-11UNC2AX1.5 GR5 Z				
all	32	15U316	FLTWASH 5/8 HARD ASTM F436				
all	33	54A974	CUP TIMKEN #L68111 1/BX+PT#				
all	34	54A975	CONE TIMKEN #L68149 IND. BOX				
all	35	15U521	SPRINGWSHR.630ID 1.250D.051T				
all	36	54M021	GRSFIT 1/8PIPE X 1/4STR 1607-B				
all	37	03 06148	BUSHINGHINGE PIN 60 SG3PW3				
all	38	X3 06146	BEARING ADAPTER 60&72 SG DR.				
all	39	03 06136	WASHER,BRG BACKUP 72SG				
all	40	03 06145	HINGE PIN 60 SG2,SG3,WE2&WE3				
All	41	02 18181	FITTING-BRASS FOR INNER TUBE				
all	42	02 18187	SPRING=OUTER DOOR 60WEHU CAD				
all	43	SA 15 028	* DOOR LATCH ASSY-DIVCYLS				
all	44	60E005	TUBING BLK.POLY.5/160DX3/16ID				

# Interlock Plunger Assembly


BMP700630/94087V  
(Sheet 1 of 1)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

BMP700630/94087V (1 of 1)

Litho in U.S.A.

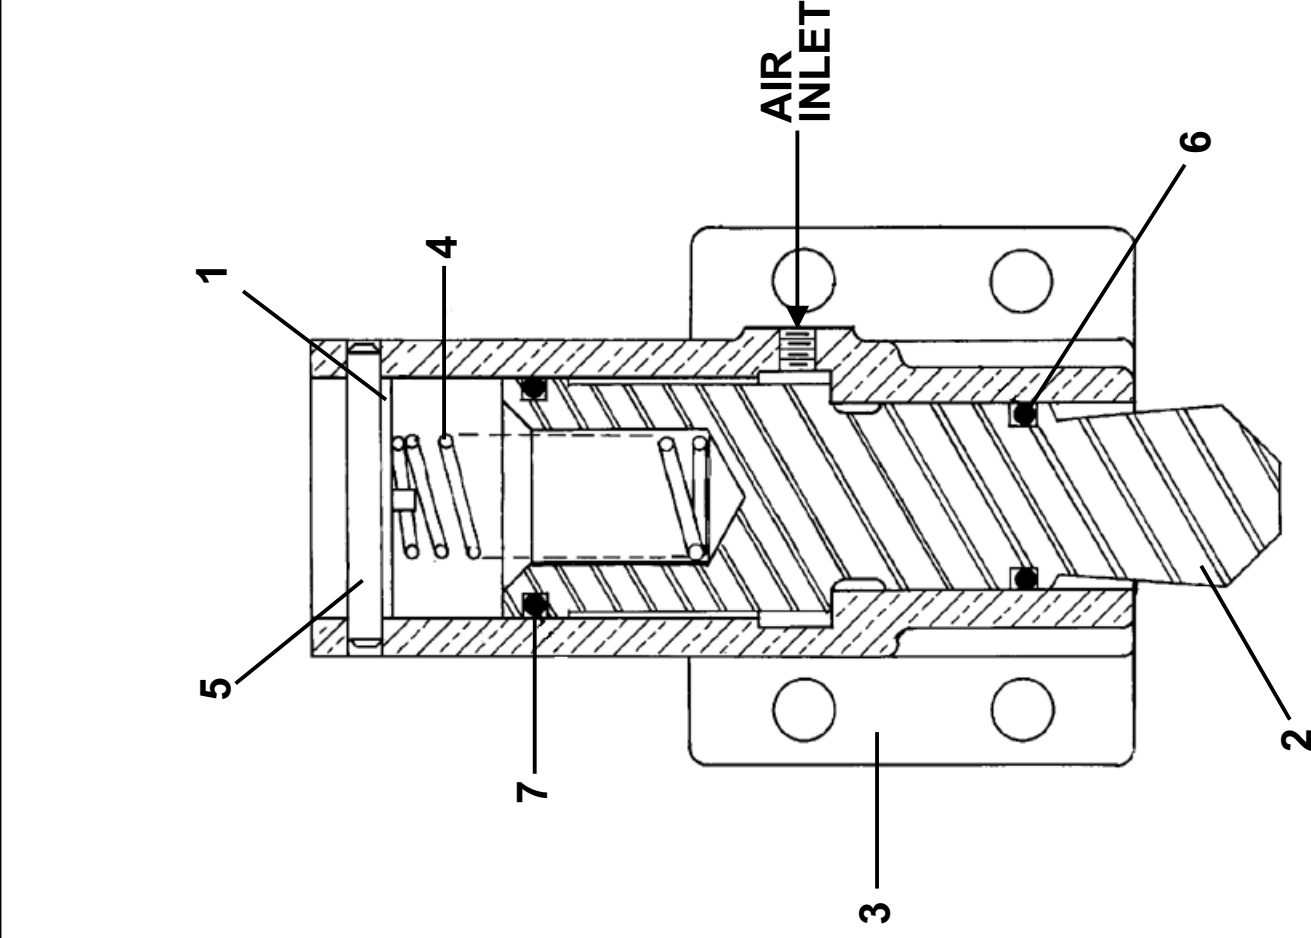

**Parts List—Interlock Plunger Assembly**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
	A	SA 15 028	ASSEMBLIES 70239D* DOOR LATCH ASSY-DIVCYLS	
			COMPONENTS	
all	1	02 15105	RETAINER LATCHSPRING	
all	2	02 15297	91103B PLUNGER=DOORLOCK(DIVCYL)	
all	3	02 15298	CYLINDER-DOORLATCH INTERLOCK	
all	4	02 15836	68201A DOOR LATCH SPRING (302SS)	
all	5	15H090	01Z SPRNG PIN 1/4X1+7/8 LONG PLAIN	
all	6	60C122	ORING 1" ID 1/8CS BN 70 DURO #214	
all	7	60C128	ORING 1+3/8 ID 1/8CS BN 70DURO #220	

# Cylinder Door Installation


## 6036 & 6044 WP3,SP3

BMP970080/2006304B  
(Sheet 1 of 1)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

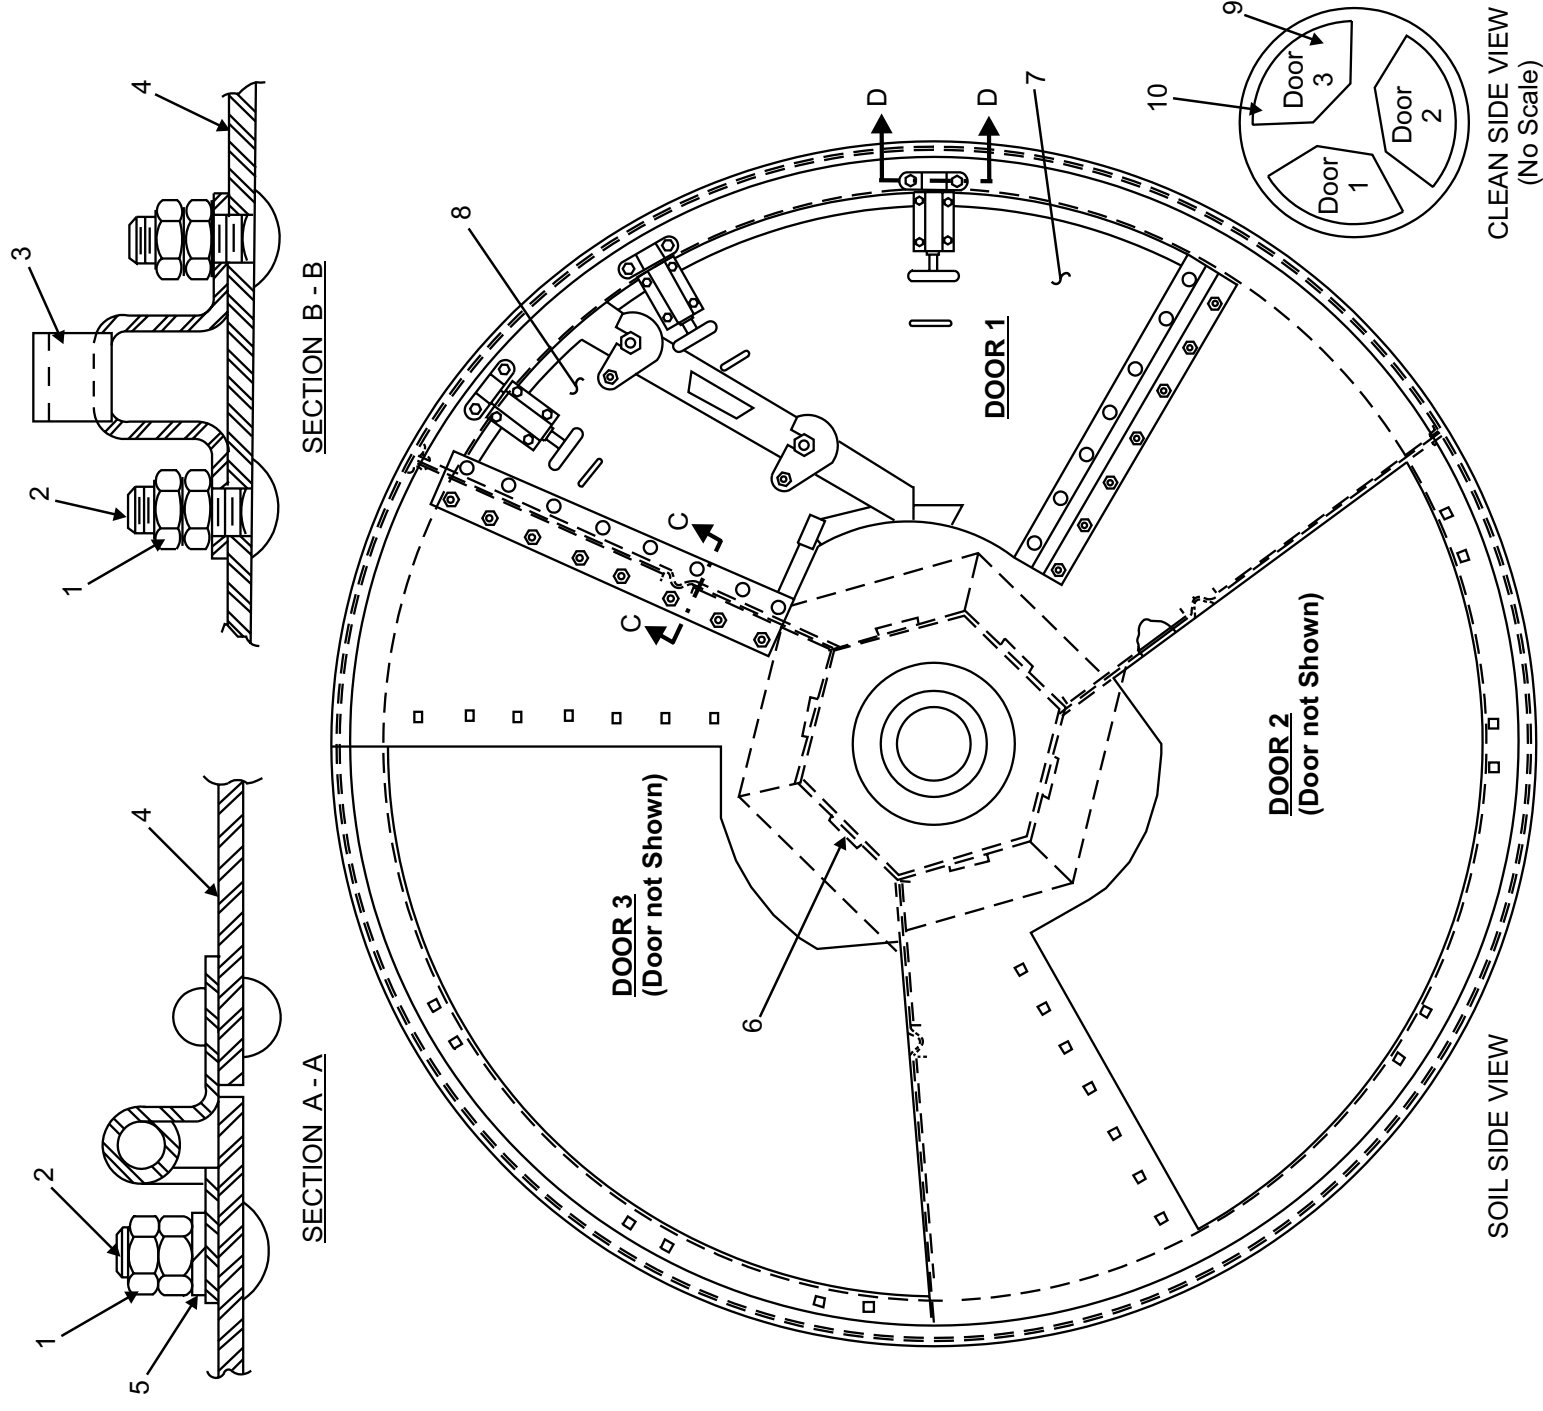

**Parts List—Cylinder Door Installation**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
A		ACA19SG3A	80496D* CYL ASSY=6044SG3 WELD/SHAFT	
1		15G206	HEXNUT 3/8-16 UNC2 SS 18-8	
2		15A010	67346A CARRSCR 3/8-16 UNC2X1 SPECIAL	
3		X2-15201	89207A KEEPER=CYLDOOR LATCH	
4		X2-18677	92413C CYLEND 1/60WE3;60SG3	
5		15U260	LOCKWASHER MEDIUM 3/8 SS18-8	
6		02-19290	81201B FILLER=CYLINDER DIVIDER=60"	
7		SA 28 073	77422C* CYLDOOR ASSY, UP-LOAD 60WE3+	
8		SA 28 074	82157C* CYLDOOR ASSY, LO-LOAD 60WE3+	
9		SA 28 075	77422C* CYLDOOR ASSY, UP-CLEAN 60SG3	
10		SA 28 076	82157C* CYLDOOR ASSY, LO-CLEAN 60SG3	

# Cylinder Door Assembly


## 6036 & 6044WP3,SP3

BMP970081/06304B  
(Sheet 1 of 2)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

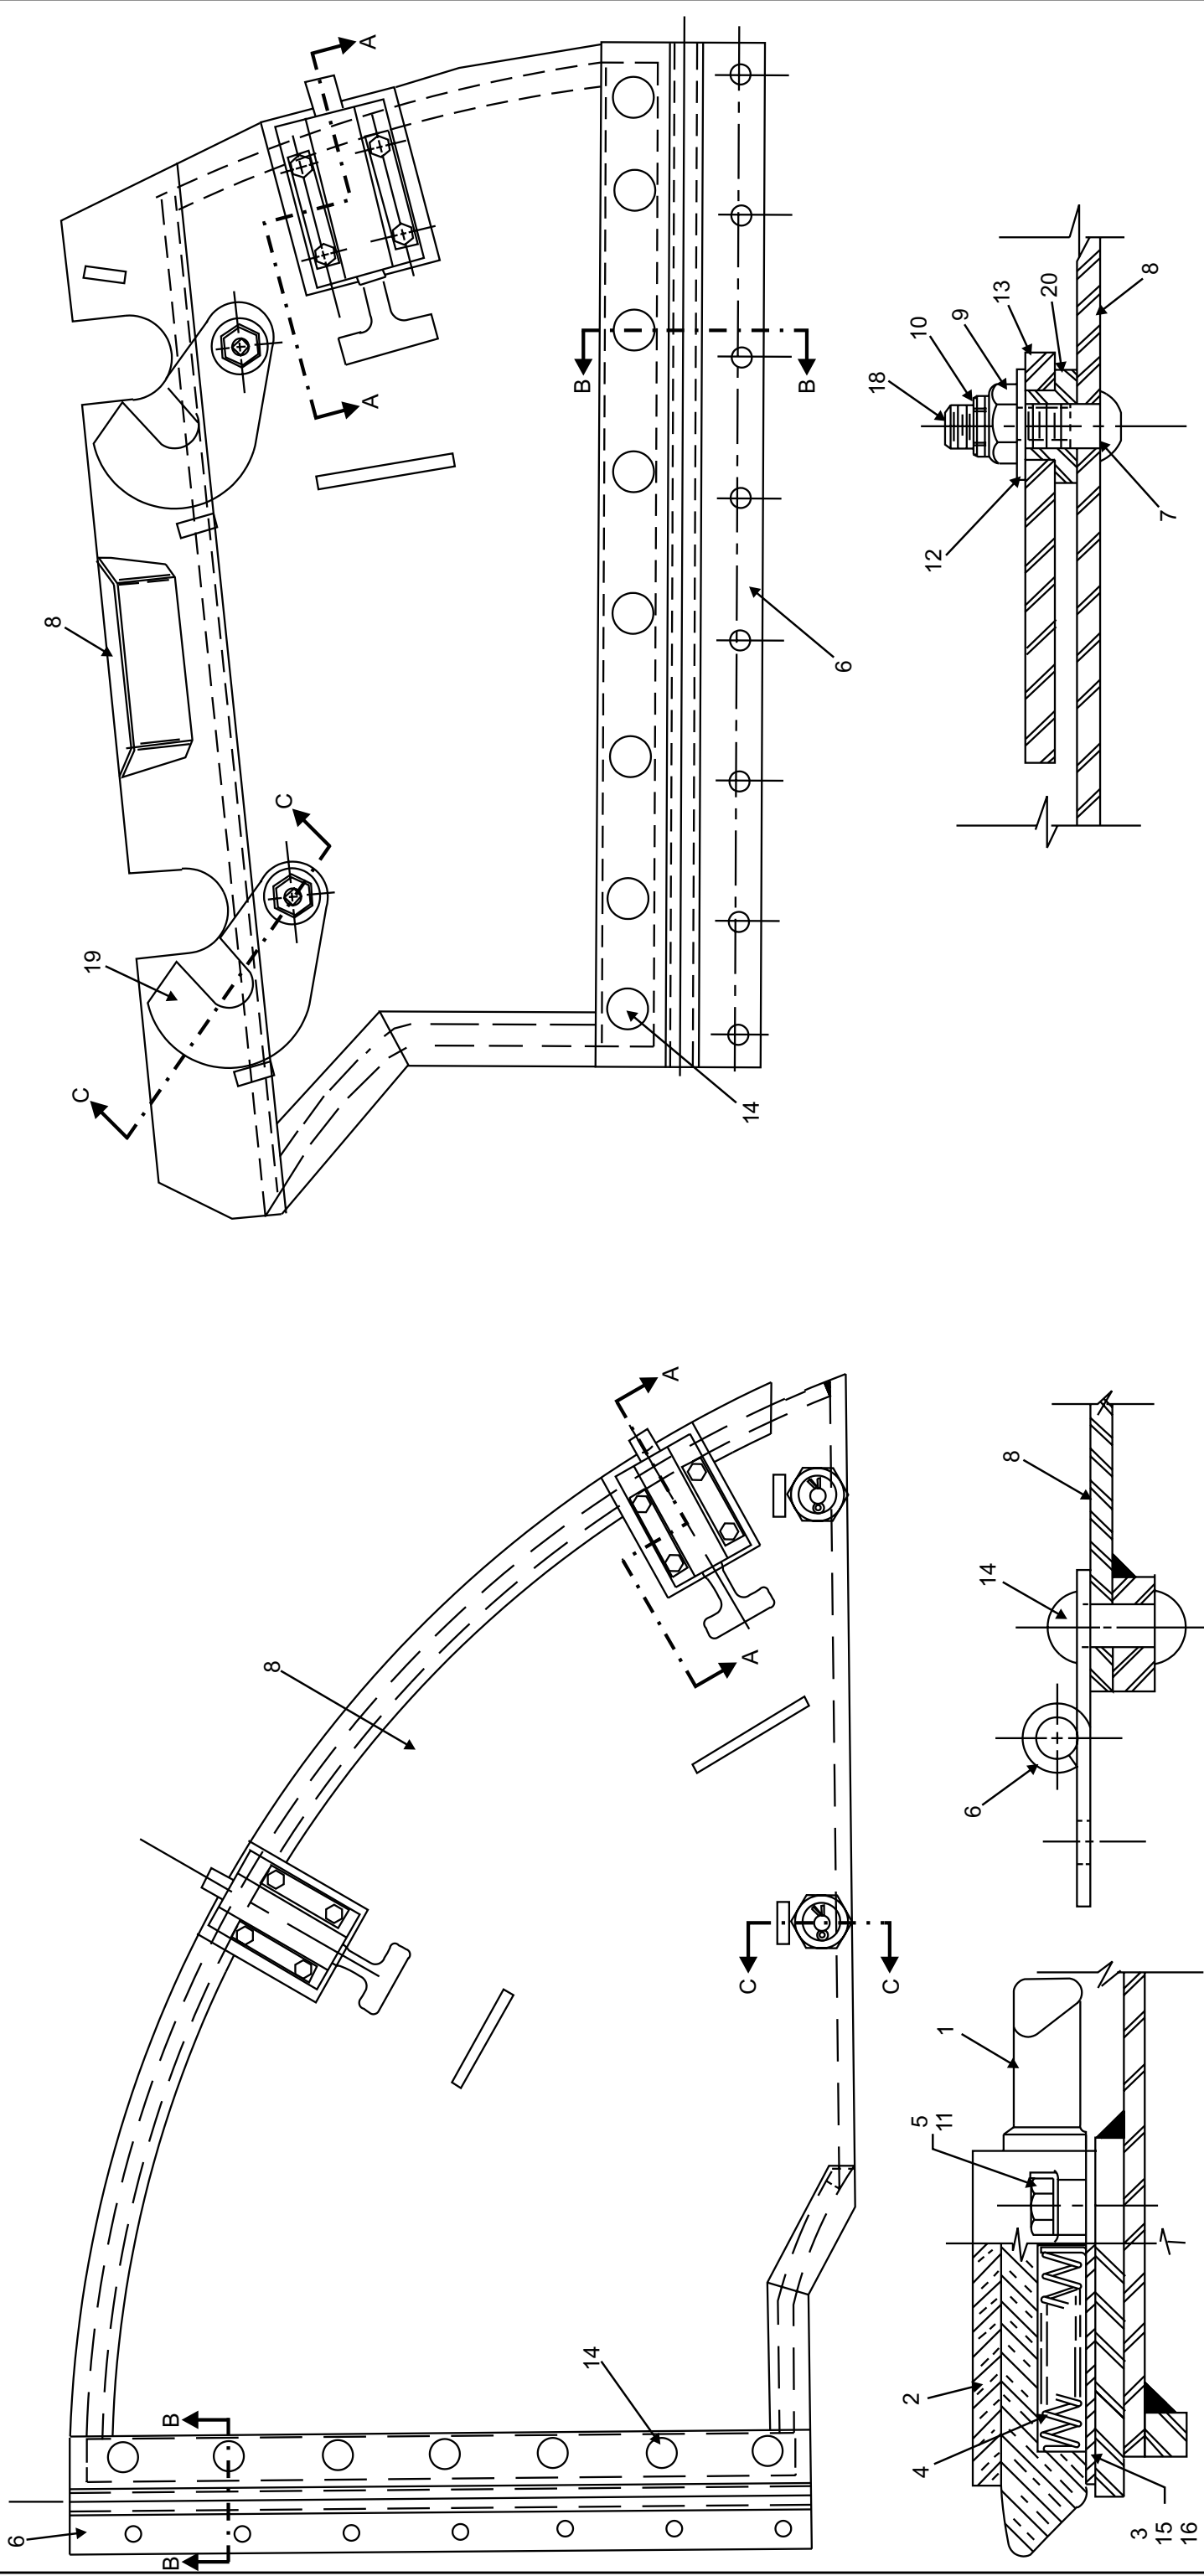

SECTION A - A

SECTION B - B

SECTION C - C



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

### Parts List—Cylinder Door Assembly

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	A	SA 28 073	CYLDOOR ASSY,UP-LOAD 60WE3+	UP LOAD 60WP3
	B	SA 28 074	CYLDOOR ASSY,LO-LOAD 60WE3+	LOW LOAD 60WP3
	C	SA 28 075	* CYLDOOR ASSY,UP-CLEAN 60SG3	UP CLEAN 60SG3
	D	SA 28 076	* CYLDOOR ASSY,LO-CLEAN 60SG3	LOW CLEAN 60SG3
-----COMPONENTS-----				
all	1	02 15040	PLUNGER=CYLDOOR LATCH(CAST)	
all	2	02 15041	BODY=CYLDOOR LATCH	
all	3	02 15077	PLATE = SMALL DOORLATCH	
all	4	02 15093	SPRING=DOOR LATCH 9.4#/INCH	
all	5	02 15255	LOCKWASHER CYLDOOR LATCH	
A,C	6	X2 18209	* HINGE=UP CYLDOR L=17+21/32"	
B,D	6	X2 18208	* HINGE=6OW CYLDOOR L=18+3/8"	
A,C	7	02 18405	DOORLOCK BOLT 6/60WEH+12/SG	
A	8	W2 18604	* CYLDOOR WLMT UP-LOAD 60WE3+	
B	8	W2 18605	CYLDOOR WLMTLOLOAD 60WE3,6HLAT	
C	8	W2 18606	* CYLDOOR WLMT UP-CLEAN 60SG3	
D	8	W2 18607	*CYLDRWLMT LO-CLN60SG3,6H-LAT	
A,C	9	02 18560	NUT=DOORLOCK SILBRO 6/60WEHU	
B,D	9	15G201	HXLKKNUT 3/8-16 NYL/SS TYPE NE	
A,C	10	15H031	STDCOTTERPIN 3/32X3/4 SS18-8	
all	11	15N186	HXCAPSCR 1/4-20X3/4 SS18-8	
all	12	15U245	FLTWASH 3/8 STD COMM 18-8 SS	
A,C	13	17B062	EXTRETRING S/S INDUST#3100-75-	
all	14	15J016	BUTTON HD RIVET 3/8 X 1+1/4" S	
all	15	03 06172	SHIM=DOOR LATCH-18GA	
all	16	03 06173A	SHIM=DOOR LATCH-11GA	
B,D	18	15K106B	BUTSOKCAPSCR 3/8-16NCX1+3/8 SS	
B	19	02 18407	DOORLATCH LOADSIDE	
D	19	02 18440	DOORLATCH CLEANSIDE	
B,D	20	02 18408	SPACER=CYLDOR SWINGLATCH	


**Cylinder & Door Assemblies**  
**6036SP2, 6044SP2, 7244SP2, 6044SP2 SM**

BMP701304/2006295B  
 (Sheet 1 of 3)




Pellerin Milnor Corporation  
 P. O. Box 400, Kenner, LA 70063-0400


Litho in U.S.A.

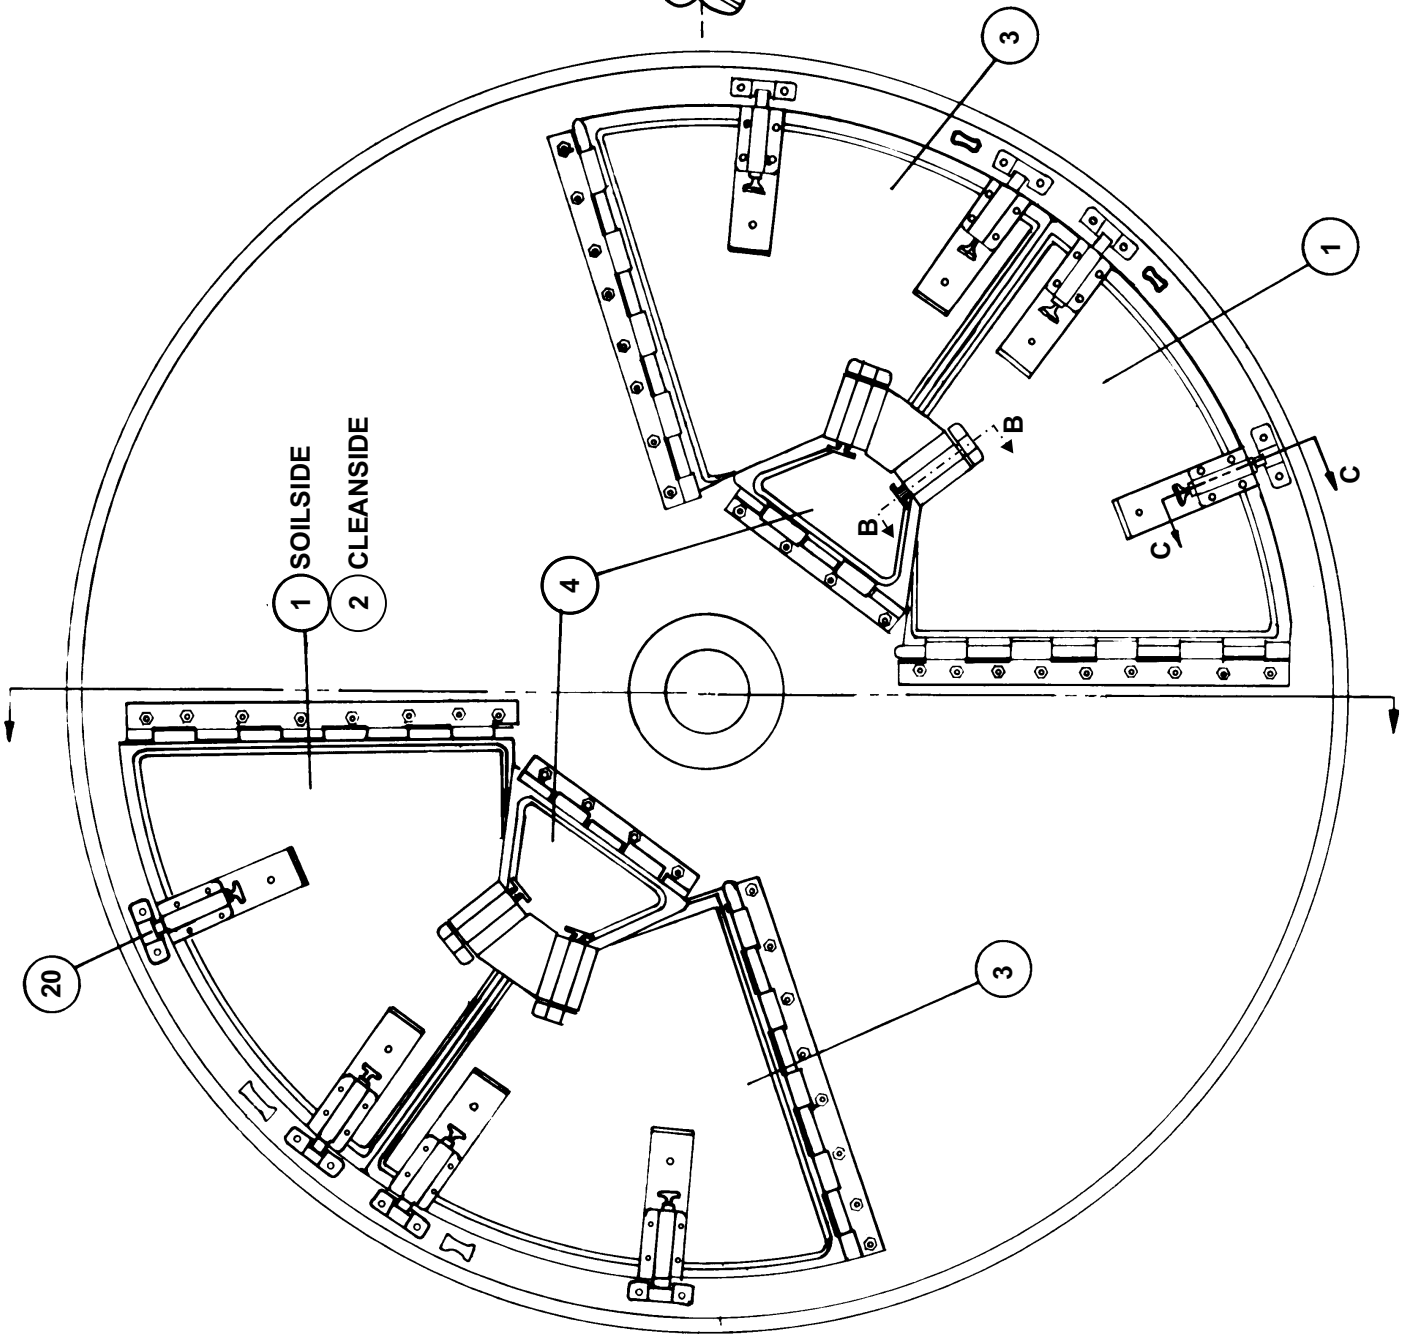


**SECTION A-A'**

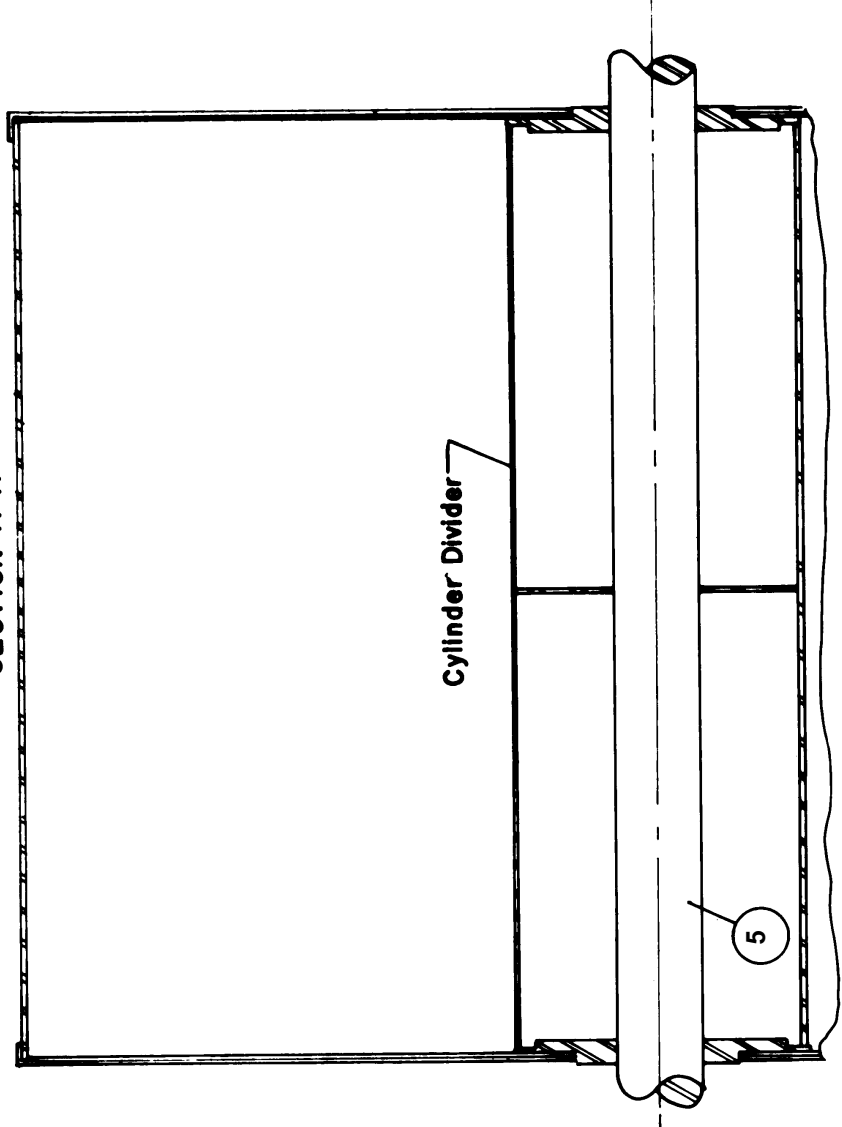

**SECTION B-B:  
 SMALL DOOR LATCH CROSS SECTION**

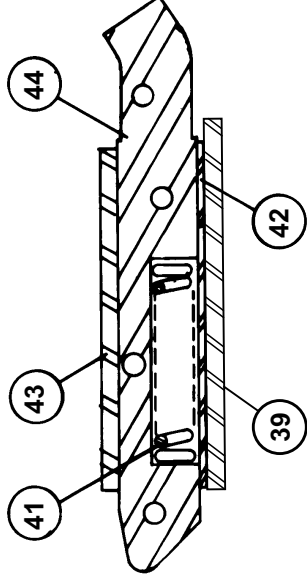

**SECTION C-C:  
 LARGE DOORS LATCH CROSS SECTION**

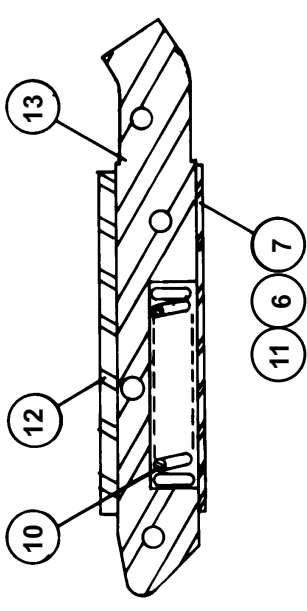







**Cylinder & Door Assemblies**  
**6036SP2, 6044SP2, 7244SP2, 6044SP2 SM**

BMP701304/2006295B  
 (Sheet 2 of 3)



Pellerin Milnor Corporation  
 P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

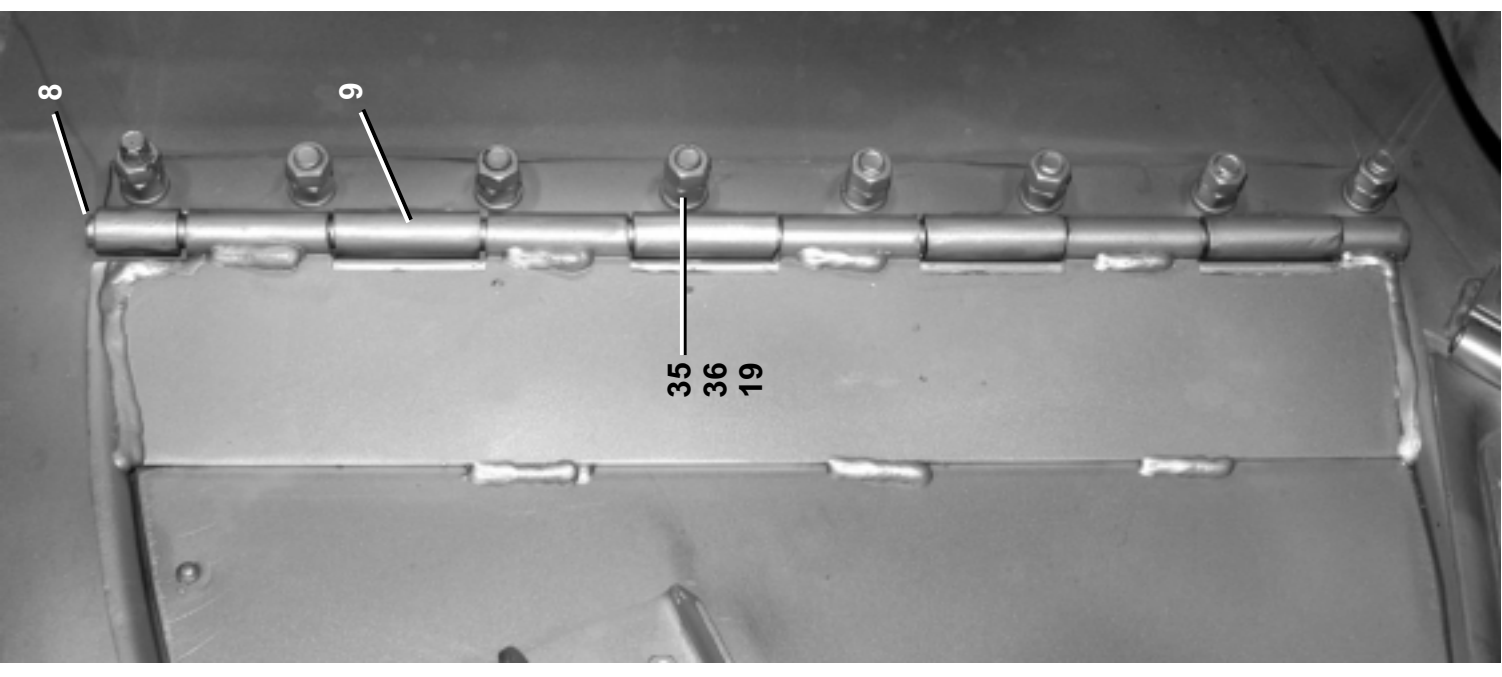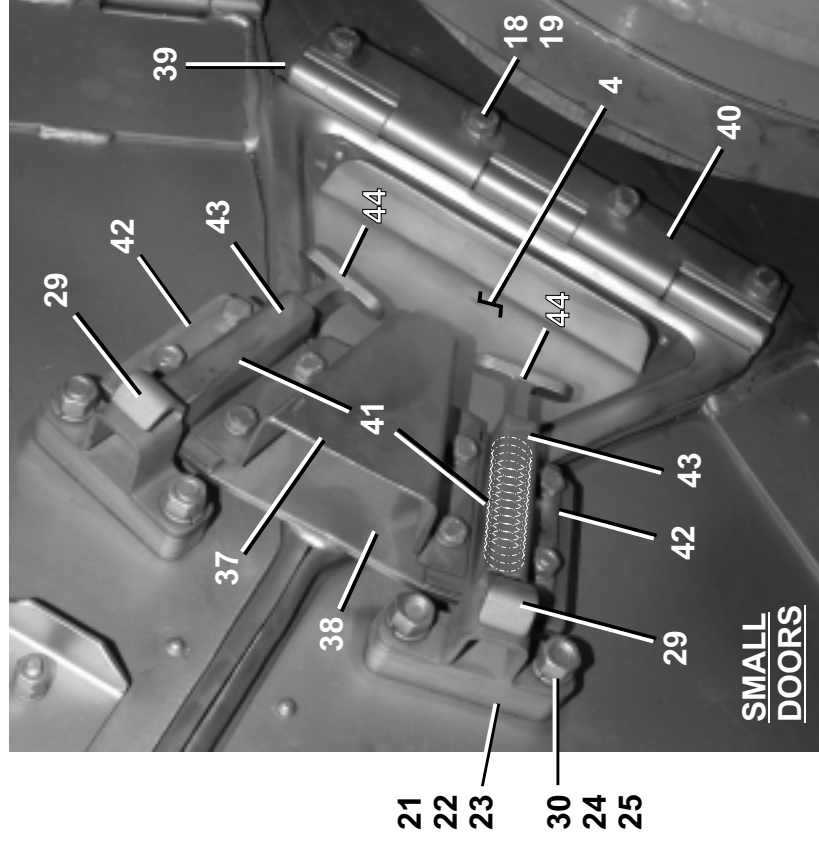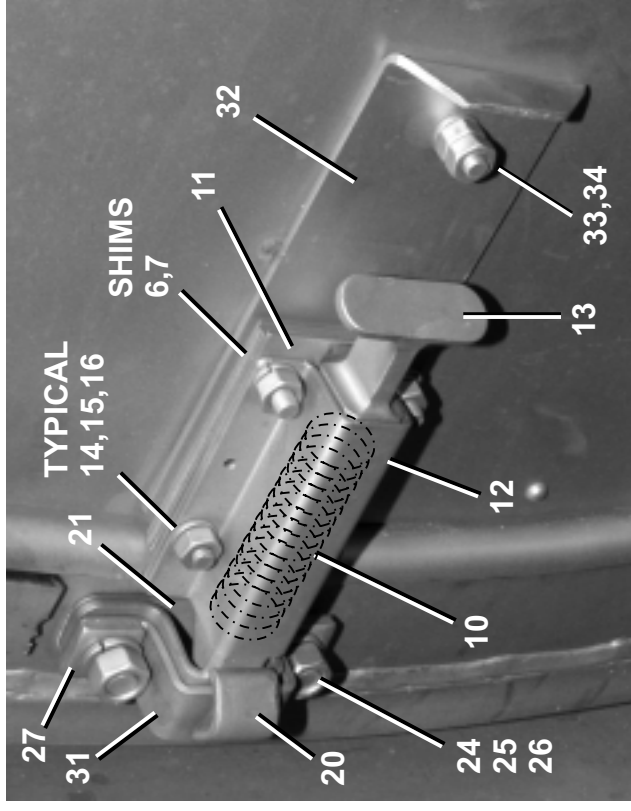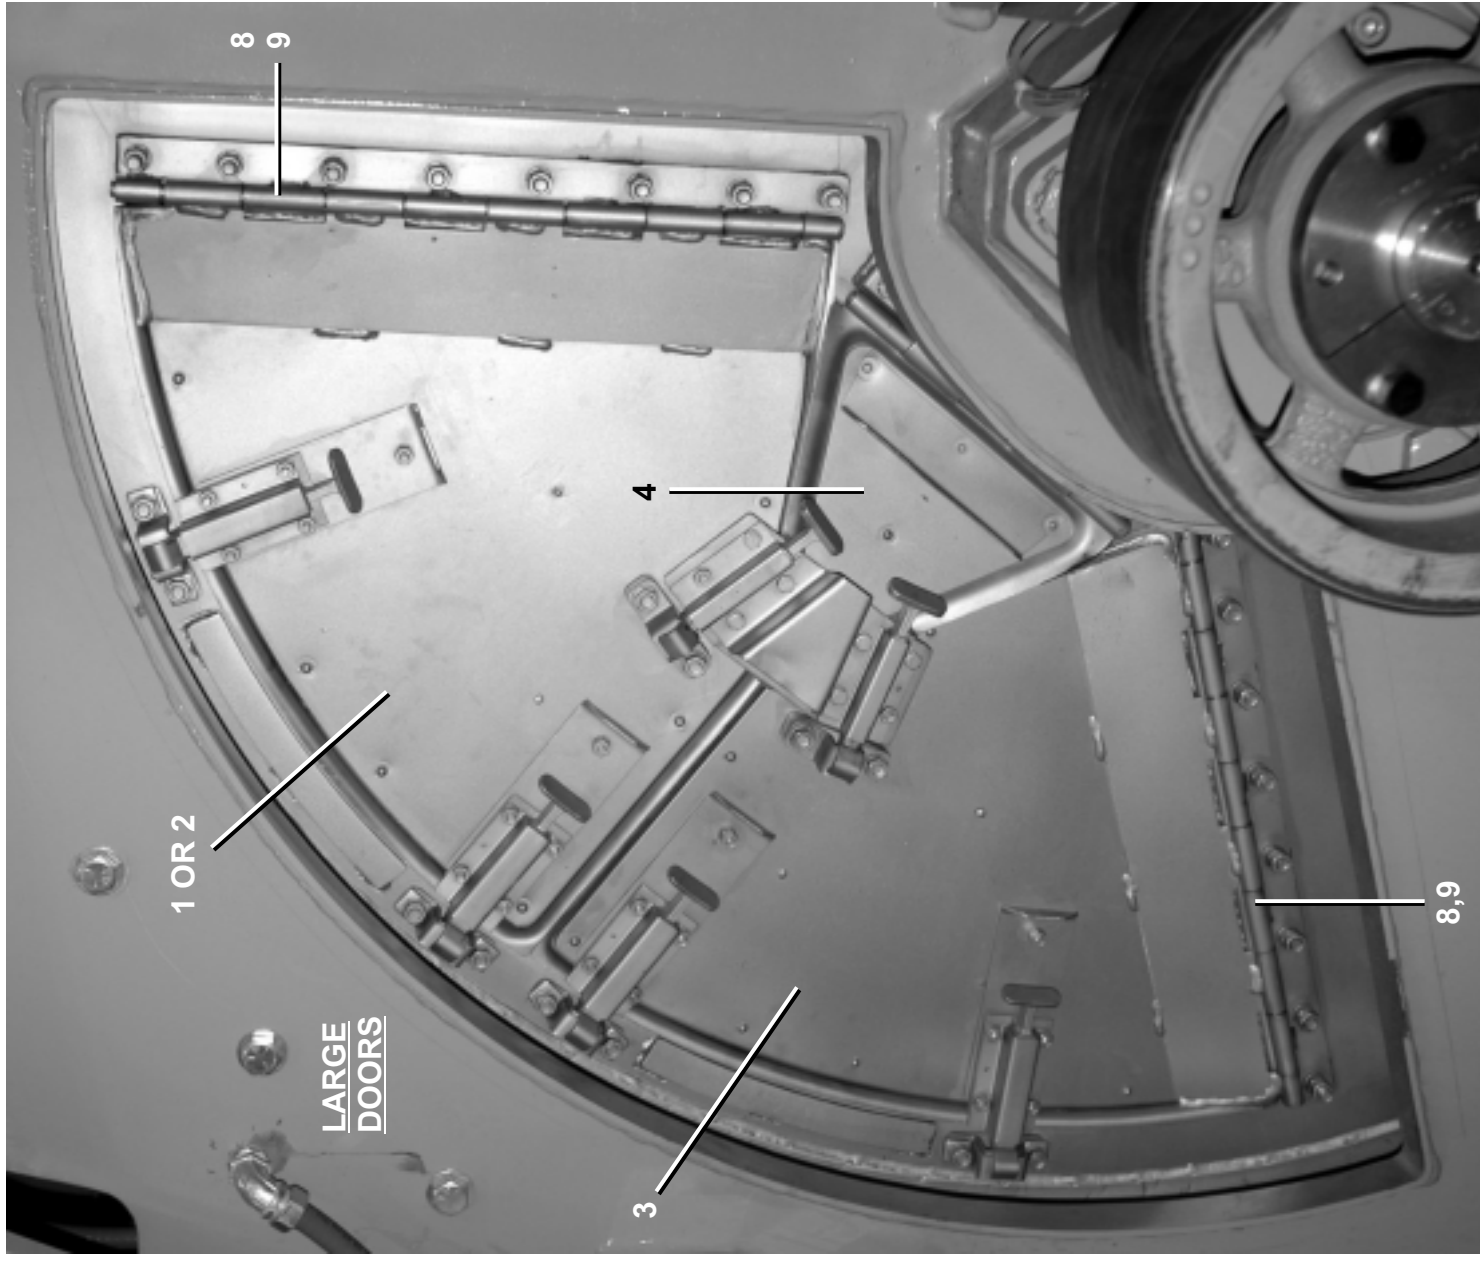



**Pellerin Milnor Corporation**  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**Parts List—Cylinder & Door Assemblies**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			ASSEMBLIES	
A	ACA18SG2A		* CYL ASSY=6036SG2 WELD/SHAFT	6036SP2
B	ACA19SG2A		* CYL ASSY=6044SG2 WELD/SHAFT	6044SP2, 6044SP2 SM
C	ACA36SG2A		* CYL ASSY=7244SG2 WELD/SHAFT	7244SP2
D	SA 28 110		CYLDOOR LOLT 60WE2+ MIN-REIF	
E	SA 28 111		CYLDOOR UPLT 60WE2+ MIN-REIF	
F	SA 28 112		CYLDOOR LORT 60WE2+ MIN-REIF	
G	SA 28 116		* CYLDOR ASY,SMALL =60+72SG2	
			COMPONENTS	
AB	1	SA 28 112	CYLDOOR LORT 60WE2+ MIN-REIF	
C	1	SA 36 004	CYLDOOR UPLT 72WE2+ MAX-REIF	
AB	2	SA 28 111	CYLDOOR UPLT 60WE2+ MIN-REIF	
C	2	SA 36 001	CYLDOOR LORT 72WE2+ MAX-REIF	
AB	3	SA 28 110	CYLDOOR LOLT 60WE2+ MIN-REIF	
C	3	SA 36 003	CYLDOOR LOLT 72WE2+ MAX-REIF	
all	4	SA 28 116	* CYLDOR ASY,SMALL =60+72SG2	
A	5	Y2 175002	MAINSHAFT 6036SG2+3	
B	5	Y2 19217	MAINSHAFT 6044SG2+3	
C	5	Y3 06162	MAINSHAFT 7244SG2+3	
all	6	03 06173A	SHIM=DOOR LATCH-11GA	
all	7	03 06172	SHIM=DOOR LATCH-18GA	
all	8	02 18864	PIN=LG CYL DOOR HINGE	
DF	9	W2 18855	WLMT=HINGE LRG CYL DR MULT	
E	9	W2 18866	WLMT=HINGE LRG CYL DR 2/60WE	
all	10	03 06156	SPRING=LARGE CYLDOOR LATCH	
all	11	X3 06152	PLATE = LARGE DOORLATCH	
all	12	X3 06152	PLATE = LARGE DOORLATCH	
all	13	X3 06150	PLUNGER=LARGE CYLDOOR(CAST)	
all	14	15U181	LOCKWASHER MEDIUM 1/4 SS18-8	
all	15	15K042K	BUTSOKCAPSCR 1/4-20UNCX1+1/4 S	
all	16	15G170	HEXNIUT 1/4-20UNC2 SS18-8	
AB	17	02 18857	TAPSTRIP-CYL DOOR 2/60WEDU	
C	17	03 06044	TAPSTRIP=LARGE 2/72 WED	
all	18	15K086	HXCAPSCR 3/8-16NCX3/4 SS18-8	

**Parts List, cont.—Cylinder & Door Assemblies**

Used In	Item	Part Number	Description	Comments
all	19	15U260	LOCKWASHER MEDIUM 3/8 SS18-8	
AB	20	X2 15201	KEEPER=CYLDOOR LATCH	
C	20	X3 06166	KEEPER=CYL DOOR LATCH	
all	21	02 18977A	SHIM=CYL DRLATCH KEEPER-11GA	
all	22	02 18977B	SHIM=CYL DRLATCH KEEPER-14GA	
all	23	02 18977C	SHIM=CYL DRLATCH KEEPER-18GA	
all	24	15G206	HEXNIUT 3/8-16 UNC2 SS 18-8	
all	25	15U260	LOCKWASHER MEDIUM 3/8 SS18-8	
all	26	15K106E	BUTSOKCAPSCR 3/8-16NCX1+1/2 SS	
all	27	03 06174	KEEPER=DOORLATCH REINFORCE	
all	28	15K106E	BUTSOKCAPSCR 3/8-16NCX1+1/2 SS	
all	29	X3 06166	KEEPER=CYL DOOR LATCH	
all	30	15K106E	BUTSOKCAPSCR 3/8-16NCX1+1/2 SS	
all	31	03 06167	COVER-LARGE CYLDOOR KEEPER	
all	32	02 18869	SPACER-LATCH PULL BND@PRNT	
all	33	15K042	BUTSOKCAPSCR 1/4-20NCX1 SS18-8	
all	34	15G170	HEXNIUT 1/4-20UNC2 SS18-8	
all	35	15A015	CARRSCR 3/8-16X1+1/4 18-8 SS	
all	36	15G206	HEXNIUT 3/8-16 UNC2 SS 18-8	
all	37	02 18990	PLATE=STOP + COVER 2/60+72WD	
G	38	02 18989	PLATE-LATCH MTG2/WED+2/SGD	
G	39	02 18865	PIN=SM CYL DOOR HINGE	
G	40	02 18858	HALFHINGE=60"WED CYLDOR SMAL	
G	41	02 15093	SPRING=DOOR LATCH 9.4#/#INCH	
G	42	02 15077	PLATE = SMALL DOORLATCH	
G	43	02 15041	BODY=CYLDOOR LATCH	
G	44	02 15040	PLUNGER=CYLDOOR LATCH(CAST)	

**Section**  
**Drive Assemblies**

**3**

---

---

# DRIVE BASE COMPONENTS ON HYDRO-CUSHION<sup>®</sup> MACHINES

## General Description of Drive Mechanism


Major drive train components of the drive base include the following:

1. Drive motors: Wash, Drain, E-1 (low extract), E-2 (high extract) and Autospot. (The E1 motor is optional on 42" machines and standard on larger models except for 64" machines, which use one 2-speed extract motor. Autospot is optional on divided cylinder machines and not applicable to open pocket machines.)
2. Belts and pulleys
3. Jackshaft (The jackshaft assembly is used on 52", 60", 64" and 72" machines only. On 42" and 48" machines, the E2 (high extract) motor also serves as the jackshaft.)
4. Clutch and drum assembly
5. Gear reducer
6. Brake assembly (The brake is located on the drive base on 42" and 48" machines only. On larger models, it is located elsewhere.)
7. Centrifugal switch

**Concept of Drive Train Operation**—See FIGURE 1. During washing and inching, the cylinder is driven by the wash motor through the gear reducer and the clutch, while the drain motor and the extract motors merely coast. As soon as the drain valve opens, the wash motor is shut off and coasts with the extract motors, while the drain motor drives the cylinder through the reducer and clutch. During extraction, both the wash and drain motors are shut off, the clutch disengages, and the extract motor drives the cylinder through the jackshaft pulley and main "V" belt drive. At the expiration of extract, the extract motor shuts off, the brake is applied, and either the drain or wash motor (depending upon whether the drain valve is open or closed) starts and runs idle while the brake decelerates the machine. When the machine has slowed down sufficiently to actuate the centrifugal switch, the brake is automatically released, and the clutch engages, returning the machine to wash or drain speed.

## Advance Preparations for Drive Assembly Maintenance

The drive train on your Milnor<sup>®</sup> machine has been designed to give long, trouble-free service under continuous use. Strict adherence to the lubrication schedule, proper belt tensioning, and the normal good practice of inspecting your machine regularly for possible problems is the best way of prolonging service life.

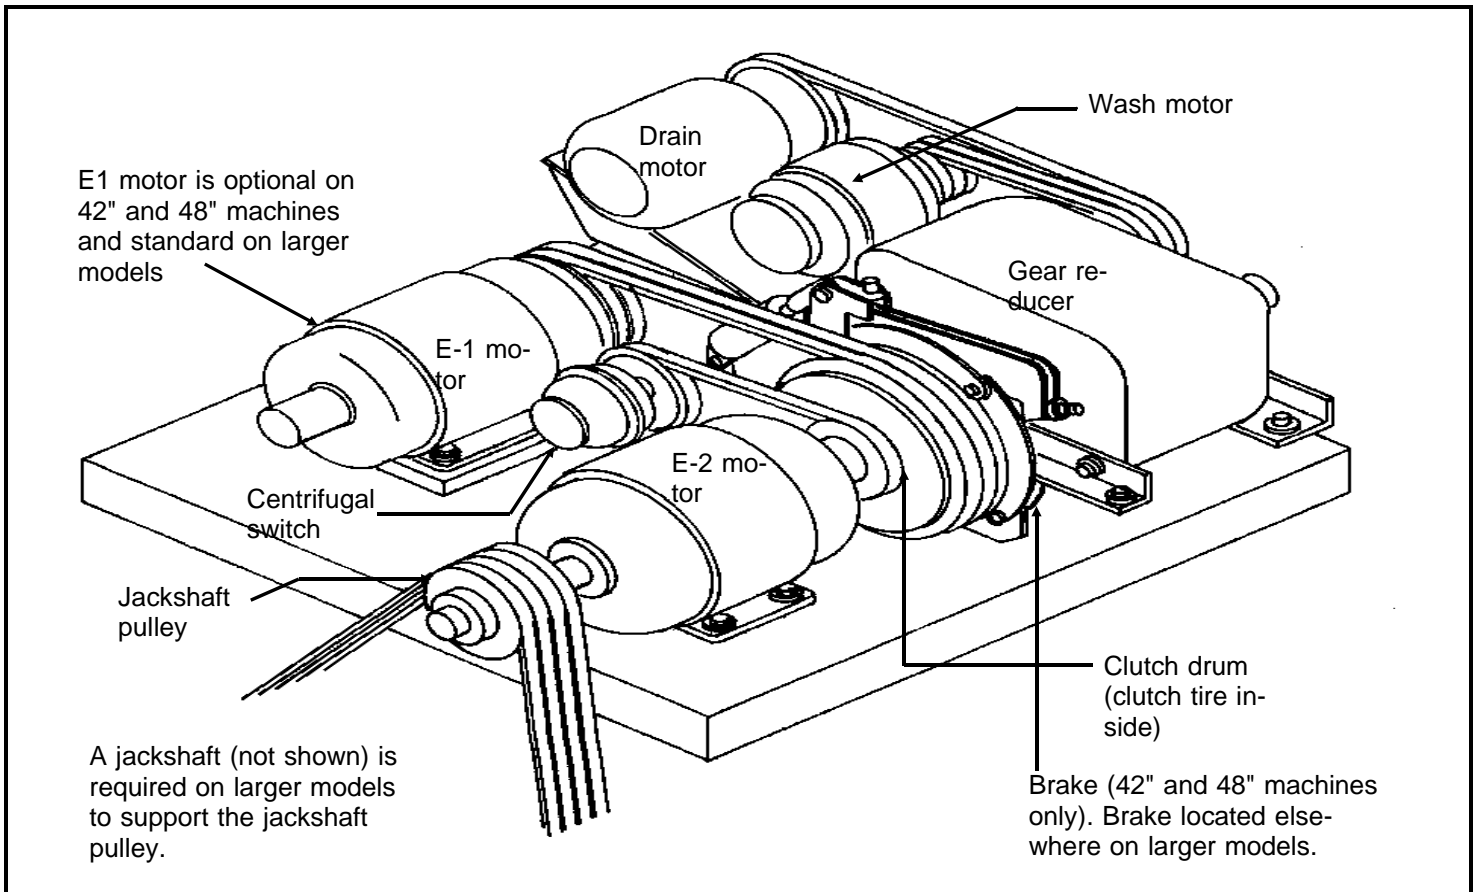

**FIGURE 1** (MSSMA407BE)

**Drive Base: 42" and 48" Machines**

**(Shows Concept of Operation For All Hydro-cushion<sup>®</sup> Washers and Dye-extractors<sup>®</sup>)**

Eventually, however, drive train components may require replacement. If this becomes necessary, the following preparations and precautions will help to minimize down time:

1. Inspect belts regularly and purchase a replacement set for future use, before those on your machine become severely worn. This is especially important for the main drive belts. Purchase a belt tension tester (see "V-BELT TENSION ADJUSTMENTS") and familiarize yourself with its use. It is also recommended to stock an extra clutch tire.
2. Although any motor can fail with no prior warning, two signs of potential failure are 1) motor running slower than normal and 2) motor emitting a loud or unusual noise. If either condition is detected, immediately check for voltage fluctuations in your electrical supply. Fluctuations greater than 10% below or 10% above those specified may cause the above symptoms and are extremely detrimental to the motor. If voltage fluctuations are not detected, yet the symptom persists, then the motor will probably soon fail. A slow running motor may indicate a bad rotor; whereas a loud or unusual noise likely indicates worn bearings. If possible, make immediate repairs to avert complete failure. If this is not possible, make sure replacement parts will be on hand when needed. Note however, that if a motor is allowed to fail, this is almost sure to require a new or completely rebuilt motor.
3. Familiarize yourself with the various components of the drive base and with the procedures herein.

## Motor, Belt, and Pulley Replacement


Part numbers for belts, pulleys, and related components may be found on the Drive Chart and/or Drive Assembly drawings for your machine. When ordering motors and motor parts from the Milnor<sup>®</sup> factory, provide the machine model and serial number and the motor function (i.e., wash, drain, E1 (low extract), E2 (high extract) or Autospot). Replacement rotors and bearings are available from Milnor<sup>®</sup> for some motors.

Whenever a motor, belt, or pulley is replaced, the corresponding pulleys must be precisely aligned when reinstalled, the taper lock bushing properly tightened and the belt(s), properly tensioned. (See “V-BELT TENSION ADJUSTMENTS” for tensioning procedure using a tension testing device available from the Milnor<sup>®</sup> factory.)

All pulleys (used for power transmission) on Milnor<sup>®</sup> Hydro-cushion<sup>®</sup> machines use taper lock bushings. This feature greatly facilitates the removal and/or adjustment of these pulleys. Components of the taperlock bushing are identified below.

### To Remove a Pulley

1. See FIGURE 2.
2. Remove the belts. Release belt tension by adjusting the position of the component to which the pulley is attached with the jack screws, until the belts easily slip off of the sheave. **Do not force belts off by using a pry bar or rolling the sheave.**
3. Loosen all three bushing cap screws.
4. Put two cap screws into the push-off holes in the bushing flange and tighten alternately until the sheave has loosened from the bushing (see FIGURE 2).
5. Remove sheave and bushing from the shaft.

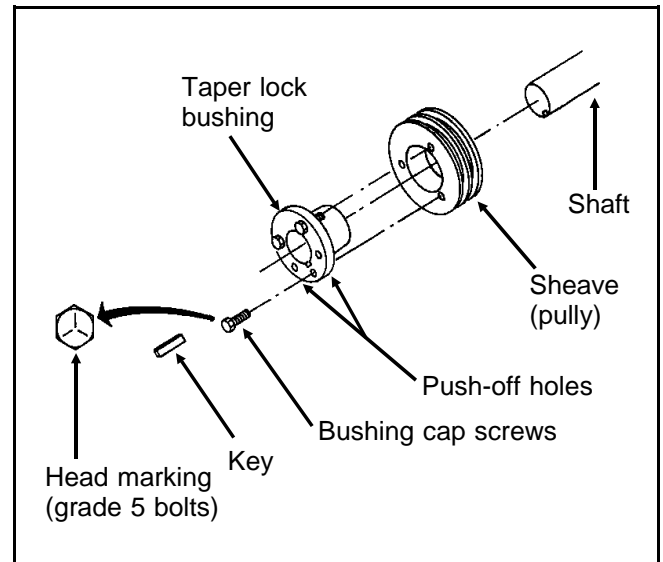

**FIGURE 2** (MSSMA407BE)  
**Typical Taperlock Bushing Construction**

### To Maximize Belt Life


1. Never mix new and used belts on a drive.
2. Never mix belts from more than one manufacturer.
3. Always replace with the right type of belt and observe V-belt matching limits.
4. Inspect belt grooves in sheaves and replace sheave for any of the following reasons:
  - a. Worn groove side walls. Walls should be straight (not curved inward) when viewed in cross section.
  - b. Chipped or broken side walls.
  - c. Shiny groove bottoms (indicating that belt is bottoming out).

## To Replace Pulleys and Belt(s)

1. Clean the tapered bore of the sheave, mating surface of the bushing, bore of the bushing, and the shaft until free of any foreign substance (including paint).

**NOTE:** Do not use lubricants, “Loctite,” or other adhesives on these mating surfaces.

2. Assemble the key in the shaft keyway checking to ensure the key is a snug fit, neither too tight nor too loose.
3. Loosely assemble the sheave and bushing on the shaft in the approximate location for proper belt alignment, allowing for take-up movement of the sheave. Make certain Grade 5 bolts, identified by the head marking shown in FIGURE 3, were supplied.
4. Carefully tighten the cap screws alternately and progressively until the taper is seated (approximately the “Initial Torque” as shown in the “Taperlock Bushing Bolt Torque Specs” elsewhere herein). Rotate the sheave to detect any wobble or runout (see FIGURE 2 next page).
5. Install the belts onto the sheaves (driving and driven) and with the slack of each belt on the same side, adjust

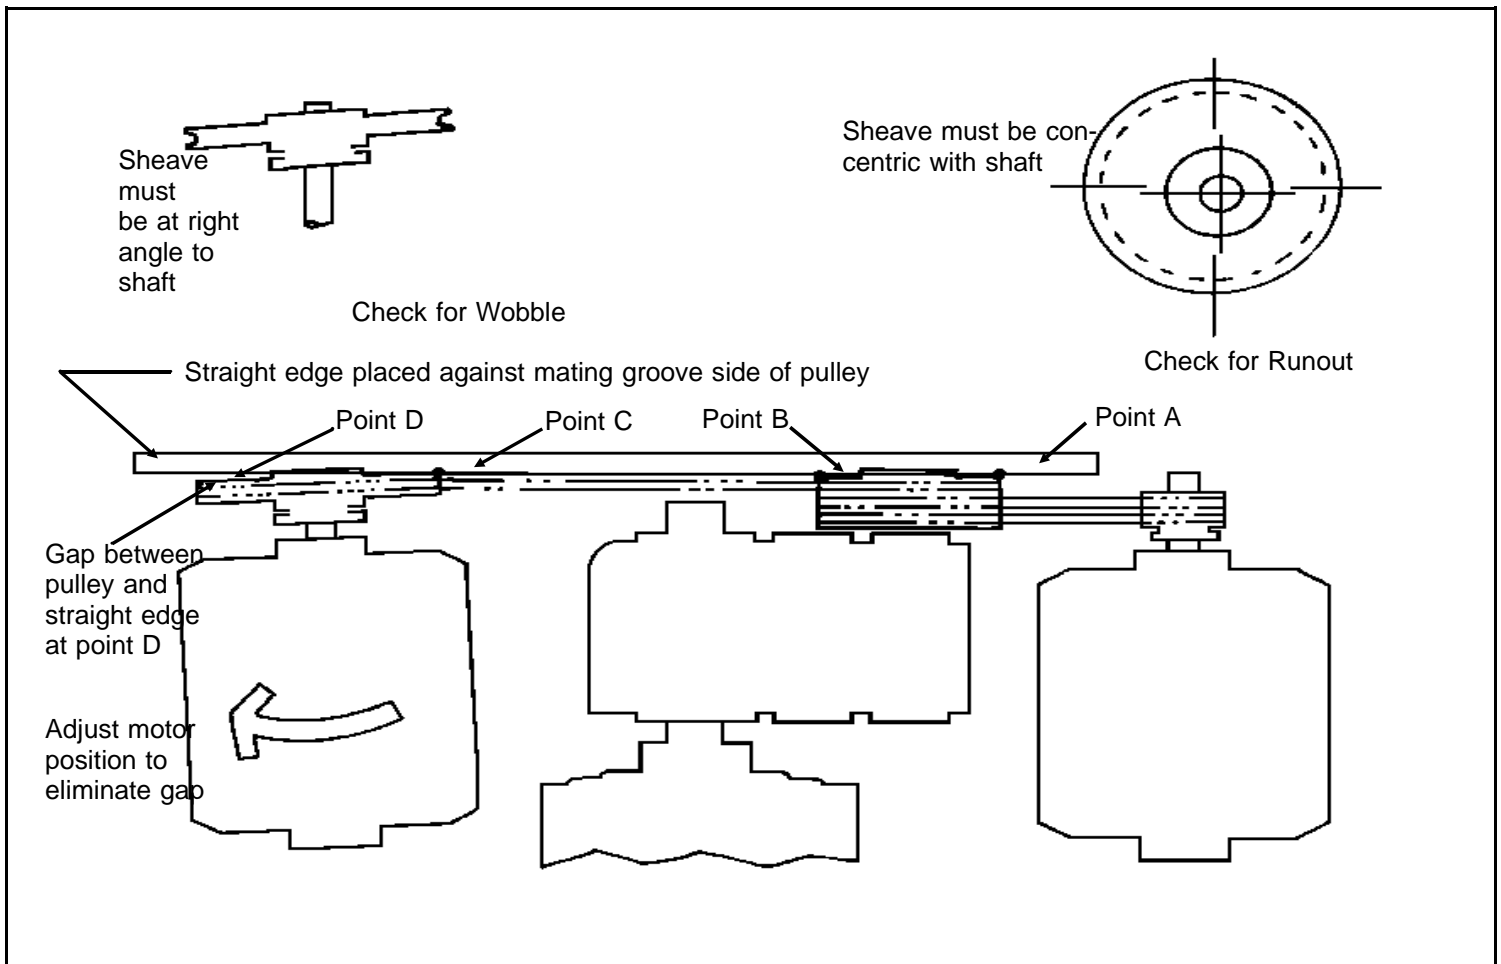

**FIGURE 3** (MSSMA407BE)  
**Test for Pulley Alignment**  
**(Straight edge must touch points A, B, C, and D)**

the motor position with the motor mount (or other component) jack screws until all slack is taken up. **Do not force belts onto the sheaves by using a pry bar or rolling the sheaves.**

6. Check for sheave alignment as shown in FIGURES 3. The sheaves must be aligned within 1/64" per foot between shaft centerlines and in no case greater than 1/8". Readjust the sheave position as required to correct alignment.
7. Continue to alternately and progressively tighten cap screws to the "Final Torque" shown in the table. Use a torque wrench for the final torque check. When properly mounted, the gap between the bushing flange should not be less than .078" nor more than .130".
8. Check for proper belt tension and adjust if required. See "V-BELT TENSION ADJUSTMENTS" (see Table of Contents).

### Taperlock Bushing Bolt Torque Specifications

Size Code (Stamped on bushing)	Bolt Size (All National Coarse Thread)	Initial torque (in lb.)	Final torque (in lb.)
G	1/4 x 5/8	48	115
H	1/4 x 3/4	48	115
P <sub>1</sub>	5/16 x 1	96	240
P <sub>2</sub>	5/16 x 1	96	240
Q <sub>1</sub>	3/8 x 1 1/4	174	430
Q <sub>2</sub>	3/8 x 1 1/4	174	430
R <sub>1</sub>	3/8 x 1 3/4	174	430
R <sub>2</sub>	3/8 x 1 3/4	174	430
S <sub>1</sub>	1/2 x 2 1/4	420	1080
S <sub>2</sub>	1/2 x 2 1/4	420	1080
SH	1/4 x 1 3/8	54	115
SDS	1/4 x 1 3/8	54	115
SD	1/4 x 1 7/8	54	115
SK	5/16 x 2	90	240
SF	3/8 x 2	180	430
M	3/4 x 6 3/4	1350	3700



## Gear Reducer and Clutch

For gear reducer part numbers, see Gear Reducer Assembly and Reducer Air Seal drawings for your machine. For clutch components, see Drive Assembly drawing for your machine.

**Concept of Clutch Operation**—The clutch (see cross section view, next page) consists of a tubeless tire mounted to the gear reducer output shaft and a drum similar to an automobile brake drum, mounted to the jackshaft (or E2 motor shaft), within which the tire nests. When the tire is automatically inflated on command from the machine controls, it grips the inside of the drum, thus engaging the gear reducer and the jackshaft. When air pressure is released, the tire deflates, thus disengaging the gear reducer and jackshaft and allowing the machine to run in extract without overspeeding the reducer, wash motor or drain motor.

Air controlled by a solenoid valve is admitted to the clutch through a hole in the center of the gear reducer shaft. The air is prevented from entering the reducer housing itself by a mechanical end face seal located inside the air inlet on the gear reducer. The reducer is also fitted with a vented fill plug to prevent build up of air pressure in the housing, should the mechanical seal fail. A quick release valve permits instant clutch release by providing a large area “short circuit” exhaust connection near the clutch. The quick release valve is necessary for the clutch used on Milnor<sup>®</sup> washer-extractors, and is furnished as original equipment. The air supplied to the clutch must be free of oil and moisture.


### ▲ CAUTION ▲

If the machine makes a loud screeching sound like skidding automobile tires during deceleration from extract speed to wash speed, turn the *Master switch* to off immediately and refer to the troubleshooting procedures.

**Alignment Requirements**—The gear reducer must be positioned on the drive base such that its output shaft is on the same axis as the jackshaft (or E2 motor shaft), as shown in FIGURE 4. Otherwise, the clutch tire will not properly engage the drum. Slight misalignment reduces the service life of the clutch tire and perhaps other components. Severe misalignment may result in serious damage to the jackshaft, clutch, or gear reducer (i.e., broken shaft).

### To Remove the Gear Reducer and Clutch

1. Remove all belts from the gear reducer and clutch drum pulleys as previously explained.
2. Remove the air line to the quick release valve located on the reducer air seal.
3. Remove any other components which may be mounted to the gear reducer mounting bracket, such as Autospot motor, brake assembly, etc.
4. *On all machines except 64" models*, shims are used under the gear reducer mounting bracket, to align the gear reducer.

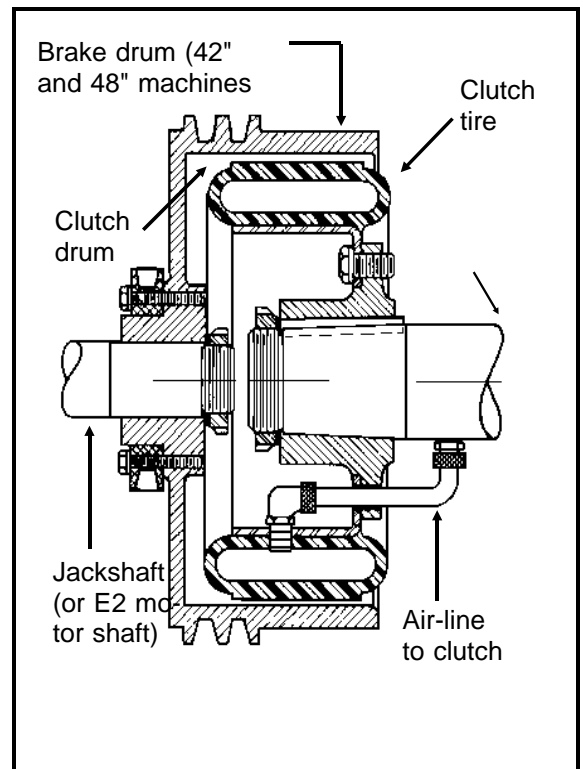

**FIGURE 4** (MSSMA407BE)  
**Cross Section View of Clutch**

---

**It is essential when removing the gear reducer, to record the positions of these shims so that they may be replaced in the exact same position later.** Bearing this in mind, carefully remove the gear reducer mounting bracket (with the reducer attached) from the drive base. Note that the clutch tire, attached to the reducer output shaft, must be allowed to slip out of the clutch drum as the reducer is removed.

- 4a. On 64" machine models only (i.e., 64042BTN),** check and adjust the jacking bolts on the gear reducer support bracket under the input shaft side of the reducer to be sure they are just touching the drive base. Leave the angle bracket between the reducer mounting bracket and the drive base side members firmly attached to the drive base. Remove only the two bolts and one dowel pin on each side of the reducer mounting bracket that attaches it to the angle brackets.
- 5.** The gear reducer should not be unbolted from the mounting bracket unless absolutely necessary (i.e., replacing an old gear reducer with a new one); since this will complicate clutch alignment. The clutch tire may be removed from the gear reducer by removing the retaining locknut, as well as the connection where the short length of copper tubing meets the reducer shaft, then gently working the assembly off of the tapered shaft with a rubber mallet or pulling fixture. The clutch drum may also be removed from the jackshaft, if required, by removing the retaining locknut and pulling the drum off with a pulling fixture. **Do not attempt to drive the drum off with a hammer or mallet.**
- 6.** In addition to any other required maintenance, inspect the various belts and the clutch tire. These components should be replaced at this time if they show appreciable wear. It is highly recommended to replace the belts that drive the clutch drum pulley, unless these are brand new.

**To Replace the Gear Reducer and Clutch**—Reassemble all components in reverse order of their removal. **Remember that all components such as motors, brake, etc. must be properly adjusted, using the alignment procedures described herein.**

When the gear reducer and mounting brackets are replaced on the drive base, *with the shims replaced in their original positions*, this should achieve rough alignment of the reducer. If, however, the gear reducer was removed from its mounting brackets, or the jackshaft was removed from its housing, the reducer may be out of rough alignment.

To align the gear reducer and clutch:

- 1.** Observe the position of the clutch tire within the drum and check for clearance between the tire and drum all around, with a feeler gauge. **Determine that the tire is roughly centered within the drum. If it is, skip to step 3.** If not, proceed to step 2a or 2b.
- 2a. For all machines except 64" models,** add or remove shims from between the gear reducer mounting brackets and drive base as required to roughly position the clutch tire within the drum in accordance with the "CLUTCH ALIGNMENT REQUIREMENTS" drawing.
- 2b. On 64" machine models only (i.e., 64042BTN),** remove the two bolts and one dowel pin from each side of the gear reducer mounting bracket and using C-clamps to secure the mounting bracket to the angle brackets, adjust the position of the gear reducer to achieve rough alignment in accordance with the "CLUTCH ALIGNMENT REQUIREMENTS" drawing. If the existing bolt holes are now misaligned, either enlarge the existing holes or drill new holes as required and reinstall the four bolts. Mark any new bolt holes as being the correct ones. Do not reinstall the dowel pins.

- 
3. Temporarily disconnect the internal air line to the gear reducer and connect an external, valve-controlled air line to the reducer, but do not inflate the tire yet.
  4. Loosen but do not remove the bolts that attach the gear reducer mounting brackets to the drive base. (On 64" machine models, check to be sure the jacking bolts under the input shaft side of the reducer are resting on the drive base then loosen the bolts and remove the dowel pins if they were reinstalled.)
  5. Inflate the clutch tire to cause the gear reducer to position itself with the clutch precisely centered. (It should move very little, if at all.)
  - 6a. **On all machines except 64" models**, add or remove shims as required to firmly seat the reducer mounting brackets on the drive base and tighten down the mounting bolts.
  - 6b. **On 64" machine models only (i.e., 64042BTN)**, tighten down the mounting bolts. If the dowel pin holes are aligned, reinstall the pins. If the holes are not aligned, drill new holes, install the dowel pins, and mark the new holes as being the correct ones.
  7. Replace the internal air line to the gear reducer.
  8. Energize power to the machine and run in wash, while observing for any evidence of gear reducer misalignment such as 1) wobbling of the gear reducer or related components, or 2) any apparent difficulty of the clutch tire to engage the drum (i.e., an extended squealing sound).
  9. If any of the above symptoms are observed, repeat the alignment procedures.

## Jackshaft Replacement: 52", 60", 64", and 72" Machines

Jackshaft components may be found in the JACKSHAFT BEARING ASSEMBLY drawing for your machine. Replacement jackshafts are supplied, preassembled and are installed as a one-piece unit. To replace the jackshaft, proceed as follows:

1. Remove belts, gear reducer, and clutch drum exactly as previously explained.
2. Lower the drive base using the drive base jacking bolts. Remove the main drive belts and the jackshaft pulley.
3. Remove the grease fittings (or grease lines as appropriate).
4. To remove the jackshaft bearing assembly from its housing, it is convenient to remove the mounting plates from both ends of the housing. Shims may have been installed between the mounting plates and the housing to align the jackshaft within the housing. **It is essential to record the positions of these shims, so that they may be replaced in the exact same position later.**

On some models, the front mounting plate differs from the rear plate. Therefore, it is also necessary to identify the mounting plates as front or rear, so that they will be returned to the same positions. Remove each mounting plate by first unbolting the jackshaft from the plate then unbolting the plate from the housing.

5. Remove the jackshaft bearing assembly from the housing.
6. In addition to any other required maintenance, inspect all belts that were removed and replace with new belts, if they show appreciable wear.

---

To replace the jackshaft, reassemble all components in reverse order of their removal. Make certain that the jackshaft is properly oriented with the clutch end of the shaft to the front of the machine and that all shims are returned to their original positions. Install all jackshaft mounting bolts hand tight. Lift each end of the jackshaft with a pry bar (one end at a time) then tighten the bolts on that end, so that the jackshaft will sit as high as possible in the housing. This will provide for greater clearance between the clutch pulley and the drive base for the belts and easier alignment of the jackshaft. When tightening the bolts, tighten first the bolts that secure the jackshaft to the mounting plate, then those that secure the mounting plate to the housing. **Remember that all components such as motors, gear reducers, brakes, etc., must be properly adjusted, using the alignment procedures explained herein.**

## Brake Assembly

**Concept of Operation**—On 42" and 48" Hydro-cushion<sup>®</sup> machines, the brake is located on the drive base. (The clutch drum is also the brake drum.) On 60" and 72" Staph-guard<sup>®</sup> machines, the brake is located on the idlershaft. On all other 52", 60", 64", and 72" machines, it is located on the cylinder shaft (thus, the main drive pulley and brake drum are combined). Machines covered by these instructions use spring loaded air cylinders to hold the brake band against the drum. Open-pocket machines use only one level of braking ("first brake") and divided cylinder machines (WE's and SG's) use two levels ("first" and "second" brake). The "first" brake is normally *on*, and braking pressure is supplied by the action of the springs inside the brake air cylinder. The "first" brake is released by applying air to the top of the air cylinder to counteract the springs. This occurs whenever the cylinder rotates under power. On divided cylinder machines, the "second" brake which is *on* whenever the cylinder is at rest *with the door open*, supplements the "first" brake with air pressure applied to the back of the air cylinder.

**Brake Assembly Maintenance**—For identification of brake components and specific adjustment procedures refer to the Brake Assembly, Drive Assembly and/or Brake Air Cylinder drawings for your machine. Specific adjustment procedures are also found on the Brake Assembly drawing for your machine.

The brake may be readily adjusted to compensate for wear by adjusting the nuts on the air cylinder stem. If brake components must be removed or repaired, it is essential to adjust the brake upon replacement in accordance with the Brake Assembly drawing.

**NOTE:** For any adjustment procedure requiring air pressure to the brake, do not attempt to perform this procedure by energizing the washer as it is not possible to release the "first" brake without the cylinder rotating under power.

To release the "first" brake without energizing the washer:

1. Disconnect the internal air line to the air cylinder. (This is the only air line to the air cylinder on open-pocket machines and the air line closest to the air cylinder stem on divided cylinder machines.)
2. Temporarily connect a direct air line to the air cylinder where the internal line was removed and apply air to release the brake.
3. On divided cylinder machines, make sure the doors are closed (to release the "second" brake).

---

## Centrifugal Switch

**Concept of Operation**—After an extraction, the centrifugal switch will signal the Miltrol as soon as the washer cylinder has slowed sufficiently to permit the wash speed clutch to re-engage. Also, until this low speed has been attained, the Miltrol circuits prevent the opening of the shell door, thus providing safety interlocking.

This centrifugal switch assembly consists of three mercury tube switches wired in parallel, and connected to two copper rings. The shaft of the centrifugal switch is driven by the extract motor shaft and rotates at the same speed as the extract motor. At a predetermined speed, centrifugal force will cause the mercury switches to open the circuit. At lower speeds, there is always at least one switch closed, thus maintaining the circuit continuity. Two spring loaded carbon brushes, riding on the copper contact rings, transmit this electrical signal to the Miltrol.

This electrical signal is used to energize the speed relay at the expiration of extraction, when the predetermined reclutching speed has been reached. The combined operation of the extract relay and the speed relay in the Miltrol perform all the functions of operating the brake, clutch, and extract motors incidental to the automatic entrance into extraction, and subsequent return to wash speed.

**Centrifugal Switch Maintenance**—See Centrifugal Switch Assembly for your machine for identification of switch components.

The centrifugal switch is very simple, yet of *vital* importance. Failure of one of the mercury switches to make contact, an irregular contact between the brushes and the contact rings, a loose connection in the wiring, or any other condition that would cause an open circuit will prevent the clutch from engaging, in which case the machine will not operate after having braked down from extract speed.

The carbon brushes should be inspected occasionally, and replaced when worn. The copper contact rings may be cleaned with *fine* emery when needed. (Do not scratch the surface of the contact rings.)

### **▲ WARNING ▲**

**A short circuit or ground in the centrifugal switch or its associated wiring will cause the wash speed clutch to engage in high speed rotation. This condition would be identified by an extremely loud screeching sound as soon as the machine stops extracting. The sound would be similar to skidding auto tires. Such a malfunction is very dangerous and must be corrected at once before further operation.**

### **▲ CAUTION ▲**


**Turn *off* power at main wall switch before entering centrifugal switch. This assembly carries high voltage, and remains energized when Miltrol master switch is *off*.**

### **▲ CAUTION ▲**

**Over-lubrication of extract motor bearings will force grease into centrifugal switch housing and will cause the centrifugal switch to malfunction.**

BMP850032  
86021D

DRIVE ASSEMBLY  
6036SG2, 3 & 6044SG2, 3

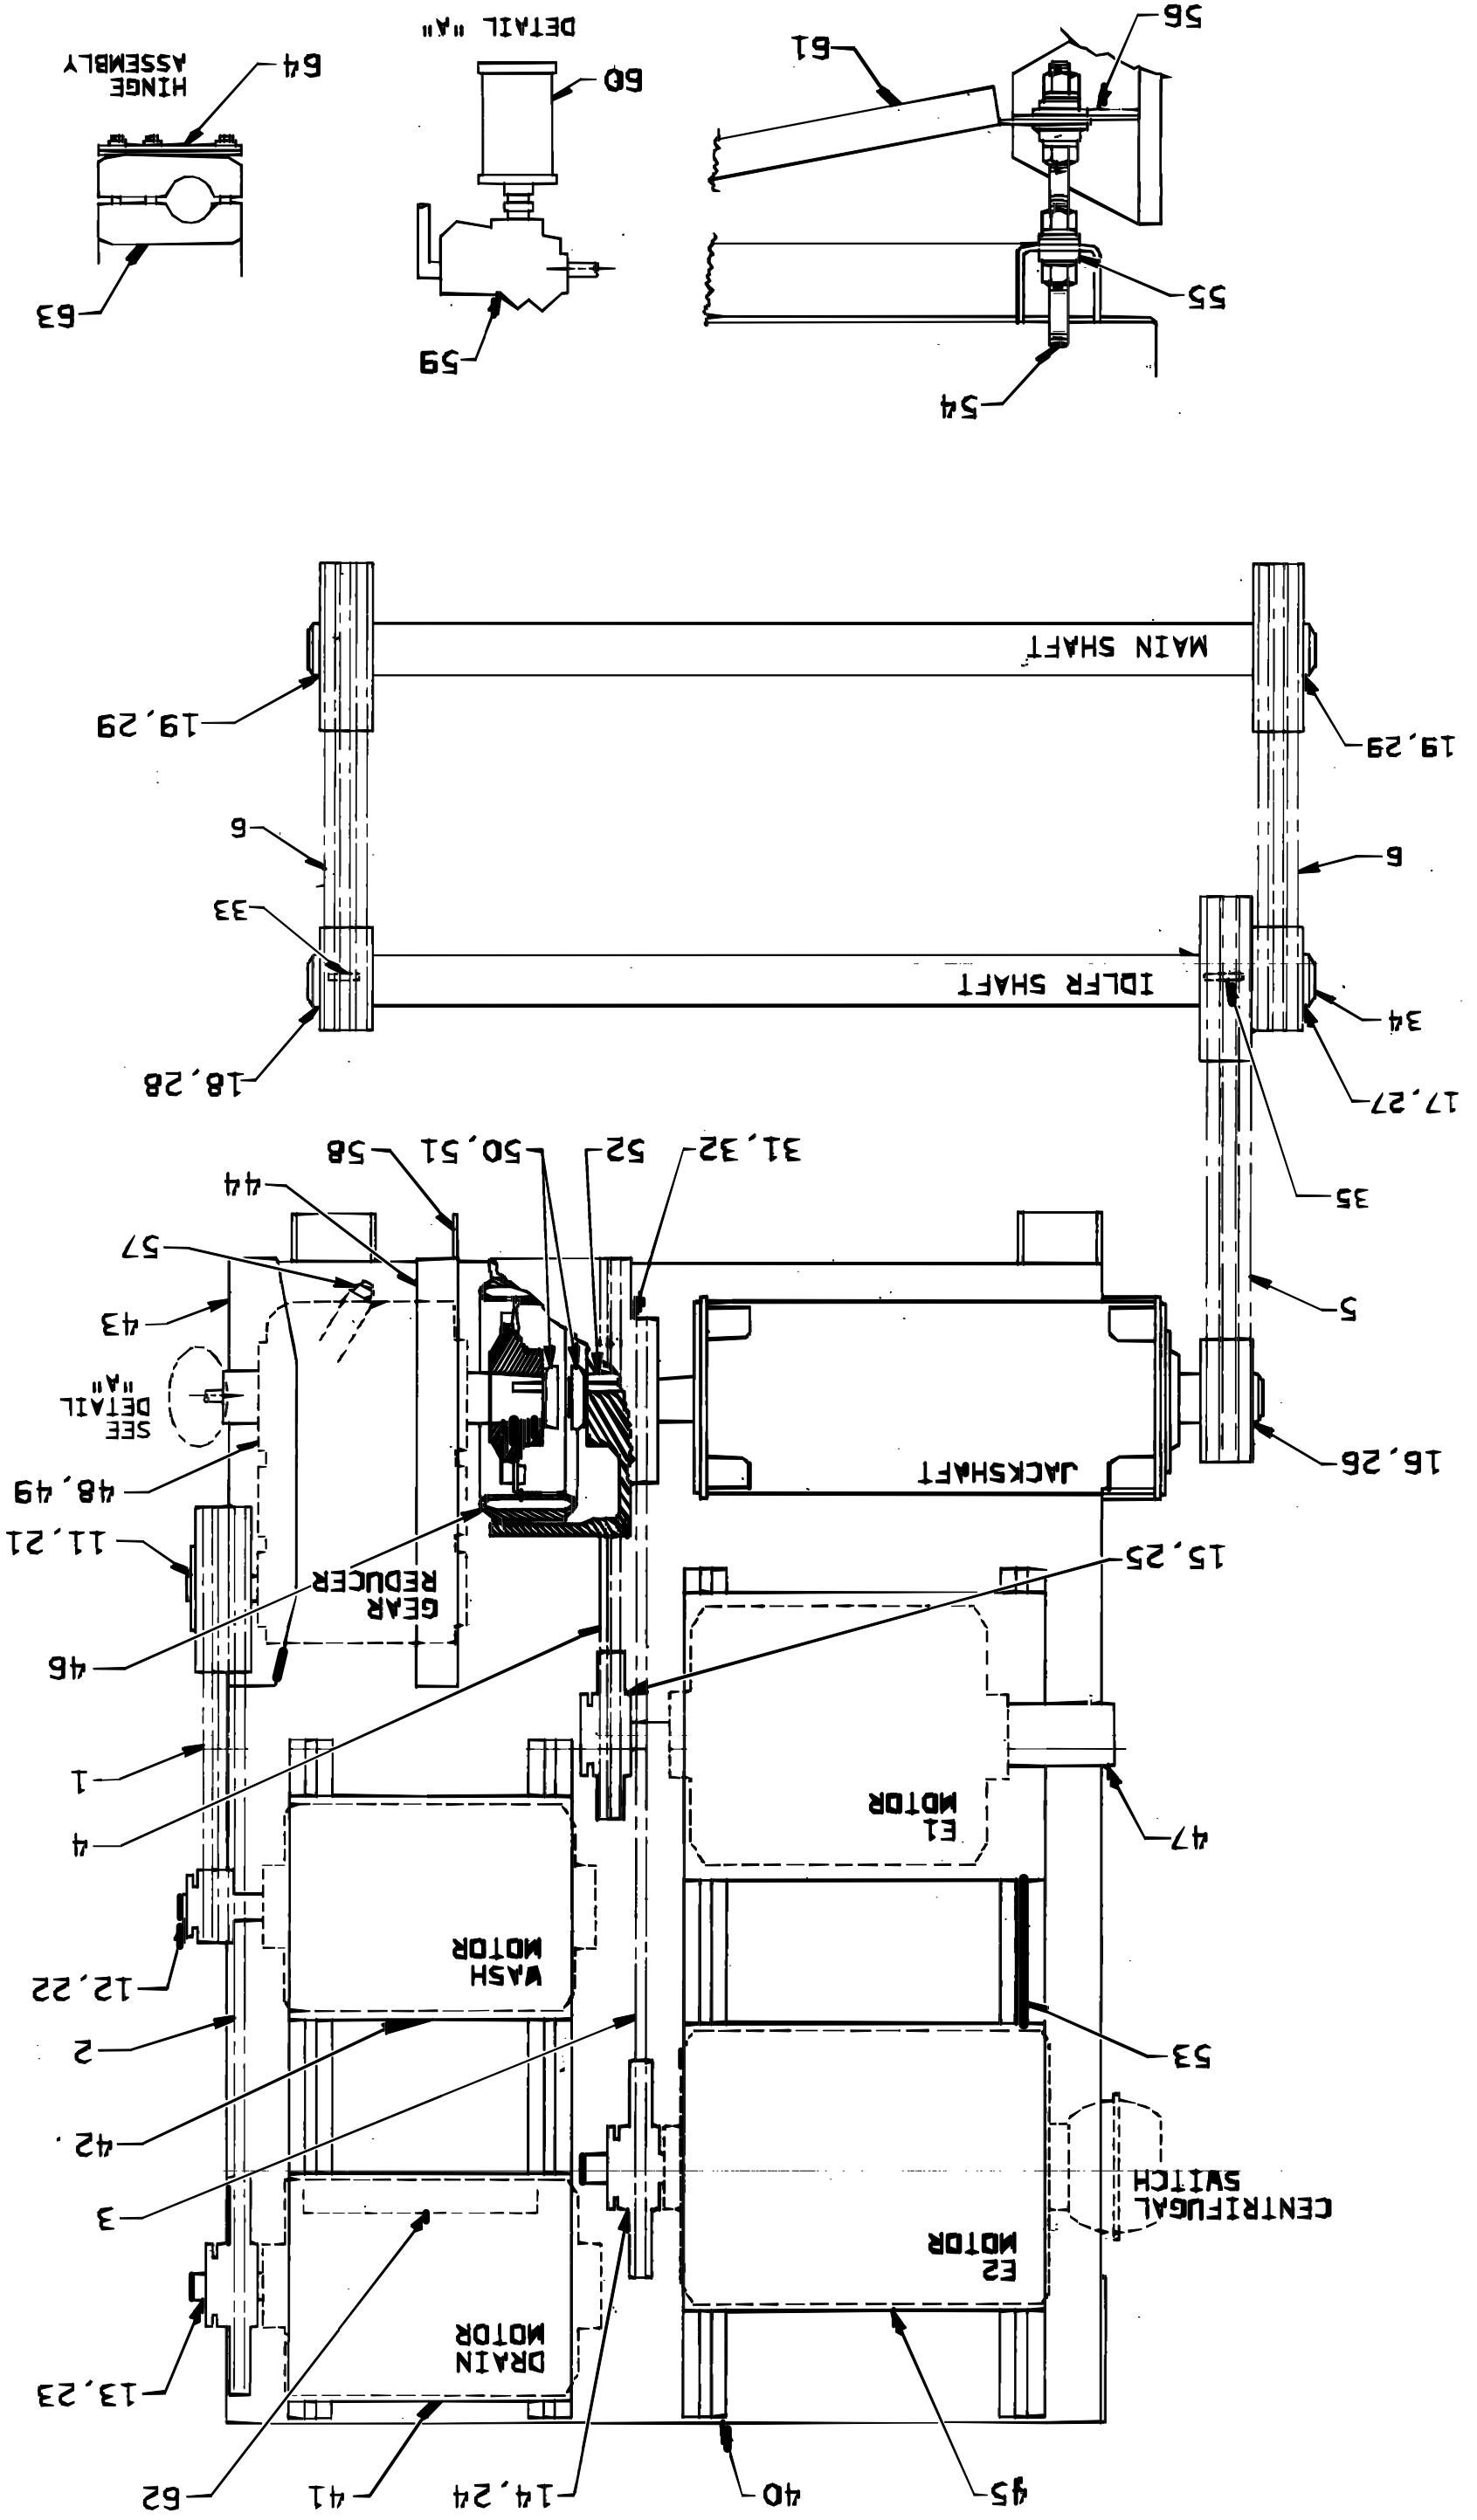

# Drive Base Assembly 60" SG

BMP850032R/97101V  
(Sheet 2 of 2)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Used In	Item	Part Number	Description	Comments
			ASSEMBLIES	
	Q	SA 28 106	89106Y*DRIVE BASE ASSY 60SGU 50+60C	
	R	D28 00950	79431B*DRIVECHART=6036SG2 50HZ 4"IS	
	S	D28 00950A	89351L*DRIVECHART=6036SG3 50HZ 4"IS	
	T	D28 00960	79431B*DRIVECHART=6036SG2 60HZ 4"IS	
	U	D28 00960A	89351L*DRIVECHART=6036SG3 60HZ 4"IS	
	V	D29 00950	90473S*DRIVECHART=6044SG2 50HZ 4"	
	W	D29 00950A	89351L*DRIVECHART=6044SG3 50HZ 4"	
	X	D29 00960	90473S*DRIVECHART=6044SG2 60HZ 4"	
	Y	D29 00960A	89351L*DRIVECHART=6044SG3 60HZ 4"	
	Z	DC0000002	84513D STANDARD DRIVE CHART STAPH	
			COMPONENTS	
all	1	56VR050S	VBELT 3V500	
all	1	56VR0450M4	VBELT 3V450 MATCHSET=4 "EA"=1 BELT	USE ON 2 SPD WASH ONLY
all	2	56VR0900M2	VBELT 3V900 MATCHSET=2 "EA"=1 BELT	
all	3	56VR1060M3	VBELT 3V1060 MATCHSET=3 "EA"=1 BELT	
all	4	56VR067S	VBELT 3V670	
all	5	56VC173XBA	01Z SET OF TWO 3RCX173 VBANDS	
all	6	56VC107XBA	01Z SET OF FOUR 3RCX107 VBANDS	
all	11	56Q1EQ1	1+1/4" BUSHING,VPUL BROWNING "Q1"	
R,T	12	56Q1CP1	1+1/8" BUSHING VPUL BROWNING "P1"	
S,U	12	56Q1CH	1+1/8" BUSHING VPUL TYPE H,D,OR QT	
V	12	56Q1GP1	1+3/8" BUSHING,VPUL BROWNING "P1"	
W	12	56Q1GH	1+3/8" BUSHING,VPUL TYPE H,D,OR QT	
all	12	56Q1CH	1+1/8" BUSHING VPUL TYPE H,D,OR QT	
all	13	56Q1CQ1	1+1/8" BUSHING VPUL BROWNING "Q1"	
all	14	56Q1MQ1	1+5/8" BUSHING,VPUL BROWNING "Q1"	
all	15	56Q1MQ1	1+5/8" BUSHING,VPUL BROWNING "Q1"	
R,S,V,W	16	56Q2HR2S	01Z 2+7/16" SPLIT BUSHIN BROWN "R2"	
T,U,X,Y	16	56Q2HQ2S	02Z 2+7/16"SPLIT BUSHN BROWN "Q2"	
all	17	54V400	86517C BUSHING=3-15/16=SPECIAL	
all	18	56Q3DR2S	02Z 3+3/16" SPLIT BUSHIN BROWN "R2"	
all	19	56Q2TR2S	04Z 2+15/16"SPLIT BUSHN BROWN "R2"	
all	21	02 19201C	92102C V-PUL 6G3V7.95 QD TYPE "SK"	
all	22	560407R4SH	VPUL 4G3V4.07 (SH) TYPE QD	NEEDS QD TYPE SH BUSHING
all	22	560407R4SH	VPUL 4G3V4.07 (SH) TYPE QD	NEEDS QD TYPE SH BUSHING

Litho in U.S.A.

Used In	Item	Part Number	Description	Comments
all	22	560407R4SH	VPUL 4G3V4.07 (SH) TYPE QD	NEEDS QD TYPE SH BUSHING
all	23	560685R2SE	VPUL 2G3V6.85 (SDS) TYPE QD	NEEDS QD TYPE SH BUSHING
all	24	561055R3SK	VPUL 3G3V10.55 (SK) TYPE QD	NEEDS SK BUSHING
all	25	560795R4SK	VPUL 4G3V7.95 (SK) TYPE QD	NEEDS QD TYPE E BUSHING
all	26	56080C6E	VPUL 6C8.0 (E) TYPE QD	NEEDS QD TYPE F BUSHING
R,S,V,W	26	56094C6R2	VPUL 6C9.4 (R2) BROWNING 6C94R	
T,U,X,Y	26	56080C6E	VPUL 6C8.0 (E) TYPE QD	
all	27	X3 06330D	81447D VPUL=6GR 7PDX14.5PD=60SG	
all	28	56070C6R2	86427A VPUL 6C7.0 (R2) SPECIAL	
all	29	56130C6F	VPUL 6C13.0 (F) TYPE QD	
all	31	X2 19032	91463D PULLEY+CLUTCH DRUM=1/60WED	
all	32	X2 15106	94251B FLANGE=CLUTCH DRIVE 2.5	
all	33	15E250	STRSQMACHKEY 1X6 C1018	
all	34	15K226C	06Z SKPSC-5/8-11X3GR8BLK HK	
all	35	15E250	STRSQMACHKEY 1X6 C1018	
all	40	W2 18717A	95162D*DRVBE=60+72WEV (50+60C)TMKN	
all	41	02 19285	76688C MTRPLATE 184/215T BEND@PRINT	
all	42	02 19285	76688C MTRPLATE 184/215T BEND@PRINT	
all	43	02 19131	88473C BRACKET=FRONT REDUCER MOUNT	
all	44	03 06247	86226# BRACKET-REDUCER MTG=SGD	
all	45	02 19286	92571C MTRPLATE 254/256T BEND@PRINT	
all	46	54H150	REPLACED BY KIT K15 0002	
all	47	03 01234	68106A COVER=CENT-SW SHAFT PLATED	
all	48	54S025A	02Z REDUCER T3210-600 EC2=AUTOSPOT	
all	49	20H004T	OIL SHELL MORLINA 220	
all	50	56AHW12	W12 BEARING LOCKWASHER	
all	51	56AHN12	N12 BEARING LOCKNUT	
all	52	15E230	STRMACHKEY 3/8SQX2+1/2 TOL.+0 -.022	
all	53	17R022A09A	*THRD ROD 1/2-13UNCX9"LG ZN PLT GR2	
all	54	17R125A15K	83287# STUD=DRIVEBASEADS 1+1/4X15.5	
all	55	17W125	81422B 1+1/4"SPHERICAL WASHER SET	
all	56	03 25626	82143B FORK=MTR MNT ADJ SCREW 52	
all	57	5SP0GGFSS	NPT PLUG 3/8 SQ SOLID GALSTL	
all	58	02 15605C	75717C ACTUATOR=EXCURSION SW-GERRED	
all	59	96M051	USE KZK5B00100	
all	60	27A005	MUFFLER 3/8" ALLIED #B38 "BANTAM"	
all	61	02 18733	91061C BRACE=SWAY 60"SGH	
all	62	02 19380	89037B MOTOR MOUNT=SHIM 72 SGH	
all	63	X2 18634	90183# CLAMP=MACHINED DR HINGPIN	
all	64	02 18706	70120G REINFORCEMENT=HINGE PINCLAMP	

Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400


Litho in U.S.A.



# JACKSHAFT BEARING ASSEMBLY

5238, 6036, 6044, 6442, 7244

BMP820109  
89253C

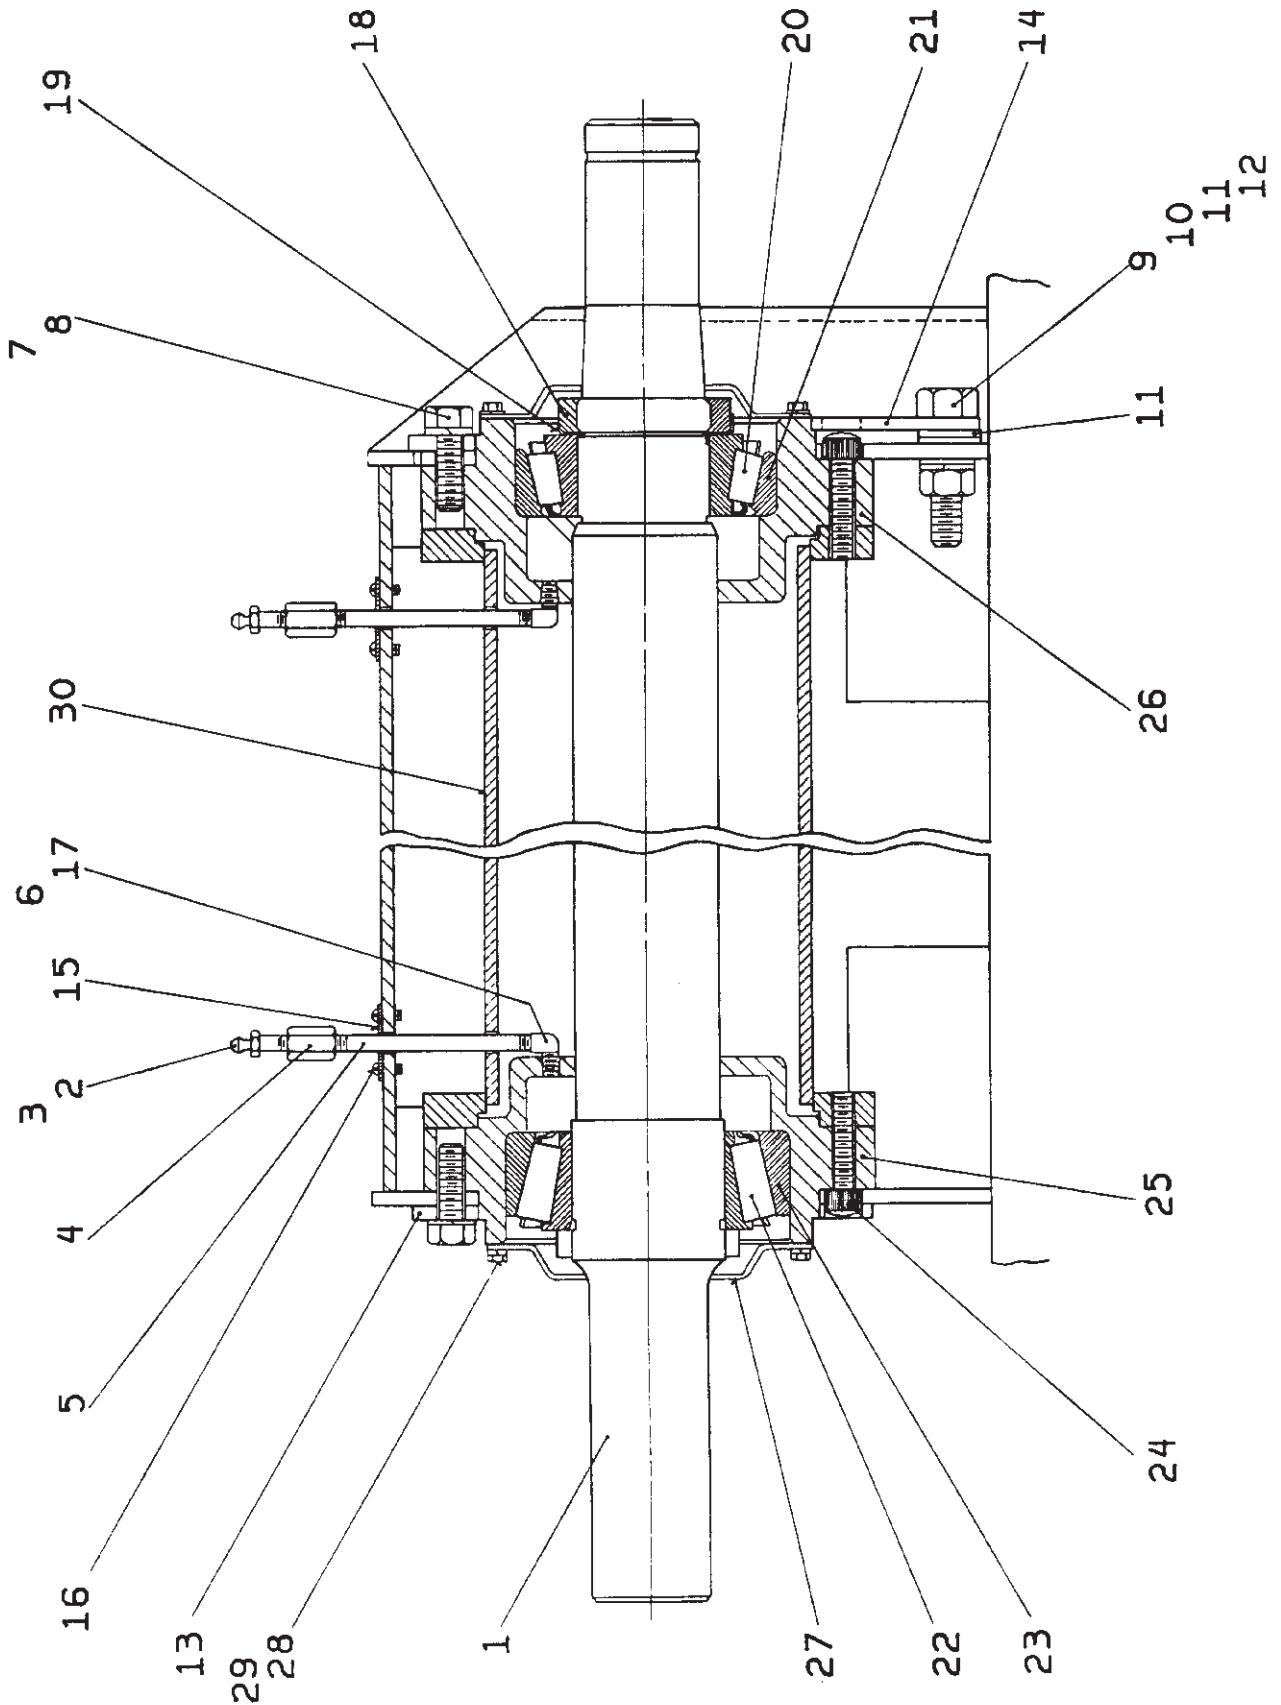



# Jackshaft Bearing Assembly

## 52, 60, 64, 72

BMP820109R/89253A  
(Sheet 1 of 2)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

### Parts List—Jackshaft Bearing Assembly

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	X	GBJ25001	87332# JKSHFT ASSY TIMKEN 52U+72S	52 W/E,60+72 STAPHGUARD
	Y	GBJ28001	87332D JKSHFT ASSY TIMKEN 60W+72W+T	60,64+72 W/E
	Z	ABJ25001	92327C*JKSHFT-BRGHOU ASSY-TIMKENS	ONLY
-----COMPONENTS-----				
all	1	X2 18711B	93417D JACKSHAFT=TIMBRG W/TRUSTWASH	
all	2	54M025	HYDRAULICFIT 1/8"-90 ALEMITE#1613-B	
all	3	20H012	SHELL ALVANIA EP-2 # 71125 E=35LBPL	
all	4	5SCC0CBE	NPT COUP 1/8 BRASS 125# 103A-A	
all	5	5N0C04AG42	NPT NIPPLE 1/8X4 TBE GALSTL SK40	
all	6	5SL0CBEC	NPT ELBOW 90DEG STRT 1/8"BRASS 125#	
all	7	15K151	HXCAPSCR 1/2-13UNC24X1.25 GR5 PLATE	
all	8	15U300	LOKWASHER REGULAR 1/2 ZINC PLT	
all	9	15K221	HEXCAPSCR 5/8-11 UNC2X2GR5 ZINC	
all	10	15U315	LOKWASHER MEDIUM 5/8 ZINCPL	
all	11	15U314	FLATWASHER(USS STD) 5/8" ZNC PLT	
all	12	15G238	HXNUT 5/8-11UNC2B SAE ZINC GR2	
(Y only)	13	02 19382	89016D BEARHOUSE MT PLATE REAR	)
(X,Y)	14	02 19383	89016D BEARHOUSE MT PLATE FRONT	
all	15	01 10237	82446B NAMEPLATE LUBG BRG JACKSHAF	
all	16	15P185	TRDCUT-F HXHD 1/4-20UNC2AX3/4 ZNC	
all	17	51A001	ADAPTER 1/8 PT BRASS	
all	18	56AHN14	N14 BEARING LOCKNUT	
all	19	56AHW14	W14 BEARING LOCKWASHER	
all	20	54AT060	01Z CONE TIMKEN 644 1/BOX+ PT NO	
all	21	54AU060	01Z CUP TIMKEN 632 1/BOX+PT NO	
all	22	54AT050	01Z CONE TIMKEN 6461 1/BOX+ PT NO	
all	23	54AU050	01Z CUP TIMKEN 6420 1/BOX+ PT NO	
all	24	15K193	06Z SKCPSC-1/2-13X2.75GR8 HK	



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**Parts List, cont.—Jackshaft Bearing Assembly**

Used In	Item	Part Number	Description	Comments
all	25	X2 19381	94182D BEARHOUSE=LG BRG REAR TIMKEN	
all	26	X2 19381B	94182D BRGHSE=SM BRG FRONT W/WASHER	
all	27	02 19384	82296C COVER=BRG HOUSE FT+REAR	
all	28	15U180	LOCKWASHER MEDIUM 1/4 ZINCPL	
all	29	15K030	HEXCAPSCR 1/4-20UNC2X1/2 GR5 ZINC	
all	30	X2 19378	88506C BRGHSG SUP=TIMKENS MACHINED	


# Reducer Air Seal

BMP700392/2002496V  
(Sheet 1 of 1)




Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

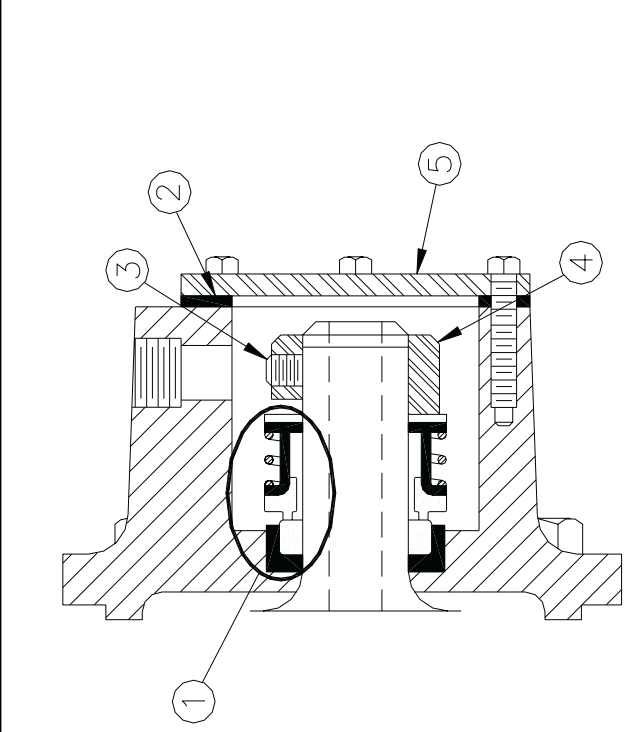

00A-00C

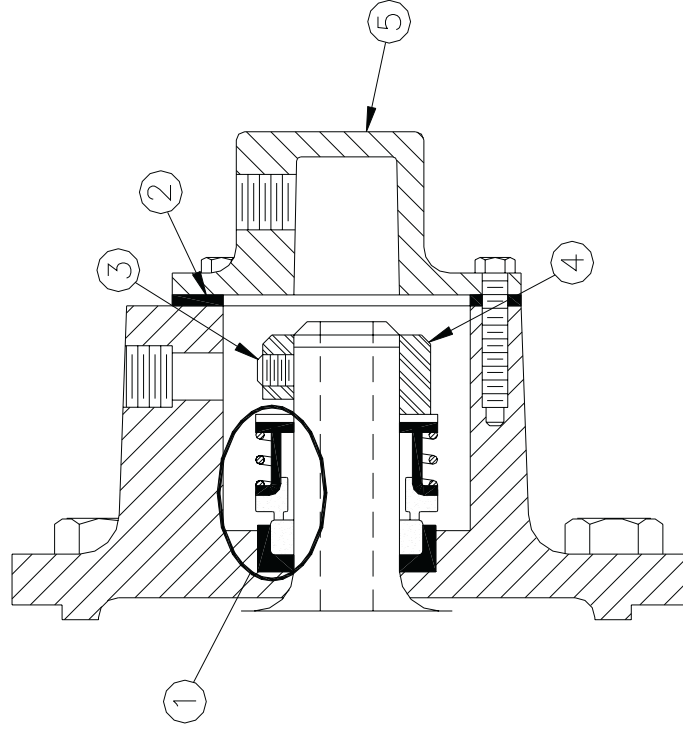

00D-00F

**Parts List—Reducer Air Seal**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			-----ASSEMBLIES-----	
A		54S014HC	REDUCER 15.4 DORRIS#1115-60HC	3621,3626,4226,4832, 4836
B		54S012HC	REDUCER 15.4 DORRIS #1115-25HC	SHUTL36/40/48R+L
C		54S015	REDUCER 19.6 SKK/DOR 3220-60C	4226DYE
D		54S022A	REDUCR 19.59:1 3220-300EC1	4231,4244,5238
E		54S023B	REDUCR 10.16:1 3210-375EC2	6044
F		54S025A	REDUCR 10.16:1 3210-600EC2	6442,6446,7244 6440/50
			-----COMPONENTS-----	
B-F	1	K10 0002	KIT=ROTARY AIR SEAL	
B-F	2	02 15111	GASKET AIRSEALHOUSING COVER	
B-F	3	15Q077	SOKSETSCR 1/4-20X1/4 ZINC ALLE	
all	4	02 10380	Z SHAFT COLLAR FOR AIR SEAL	
A-C	5	02 15108	COVER=ROTARY AIRSEAL HOUSING	
D-F	5	02 15108A	AIRINLET=CLUTCH DIECAST+TAP	


# Autospot Drive Assembly

BMP701411/2000133V  
(Sheet 1 of 2)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

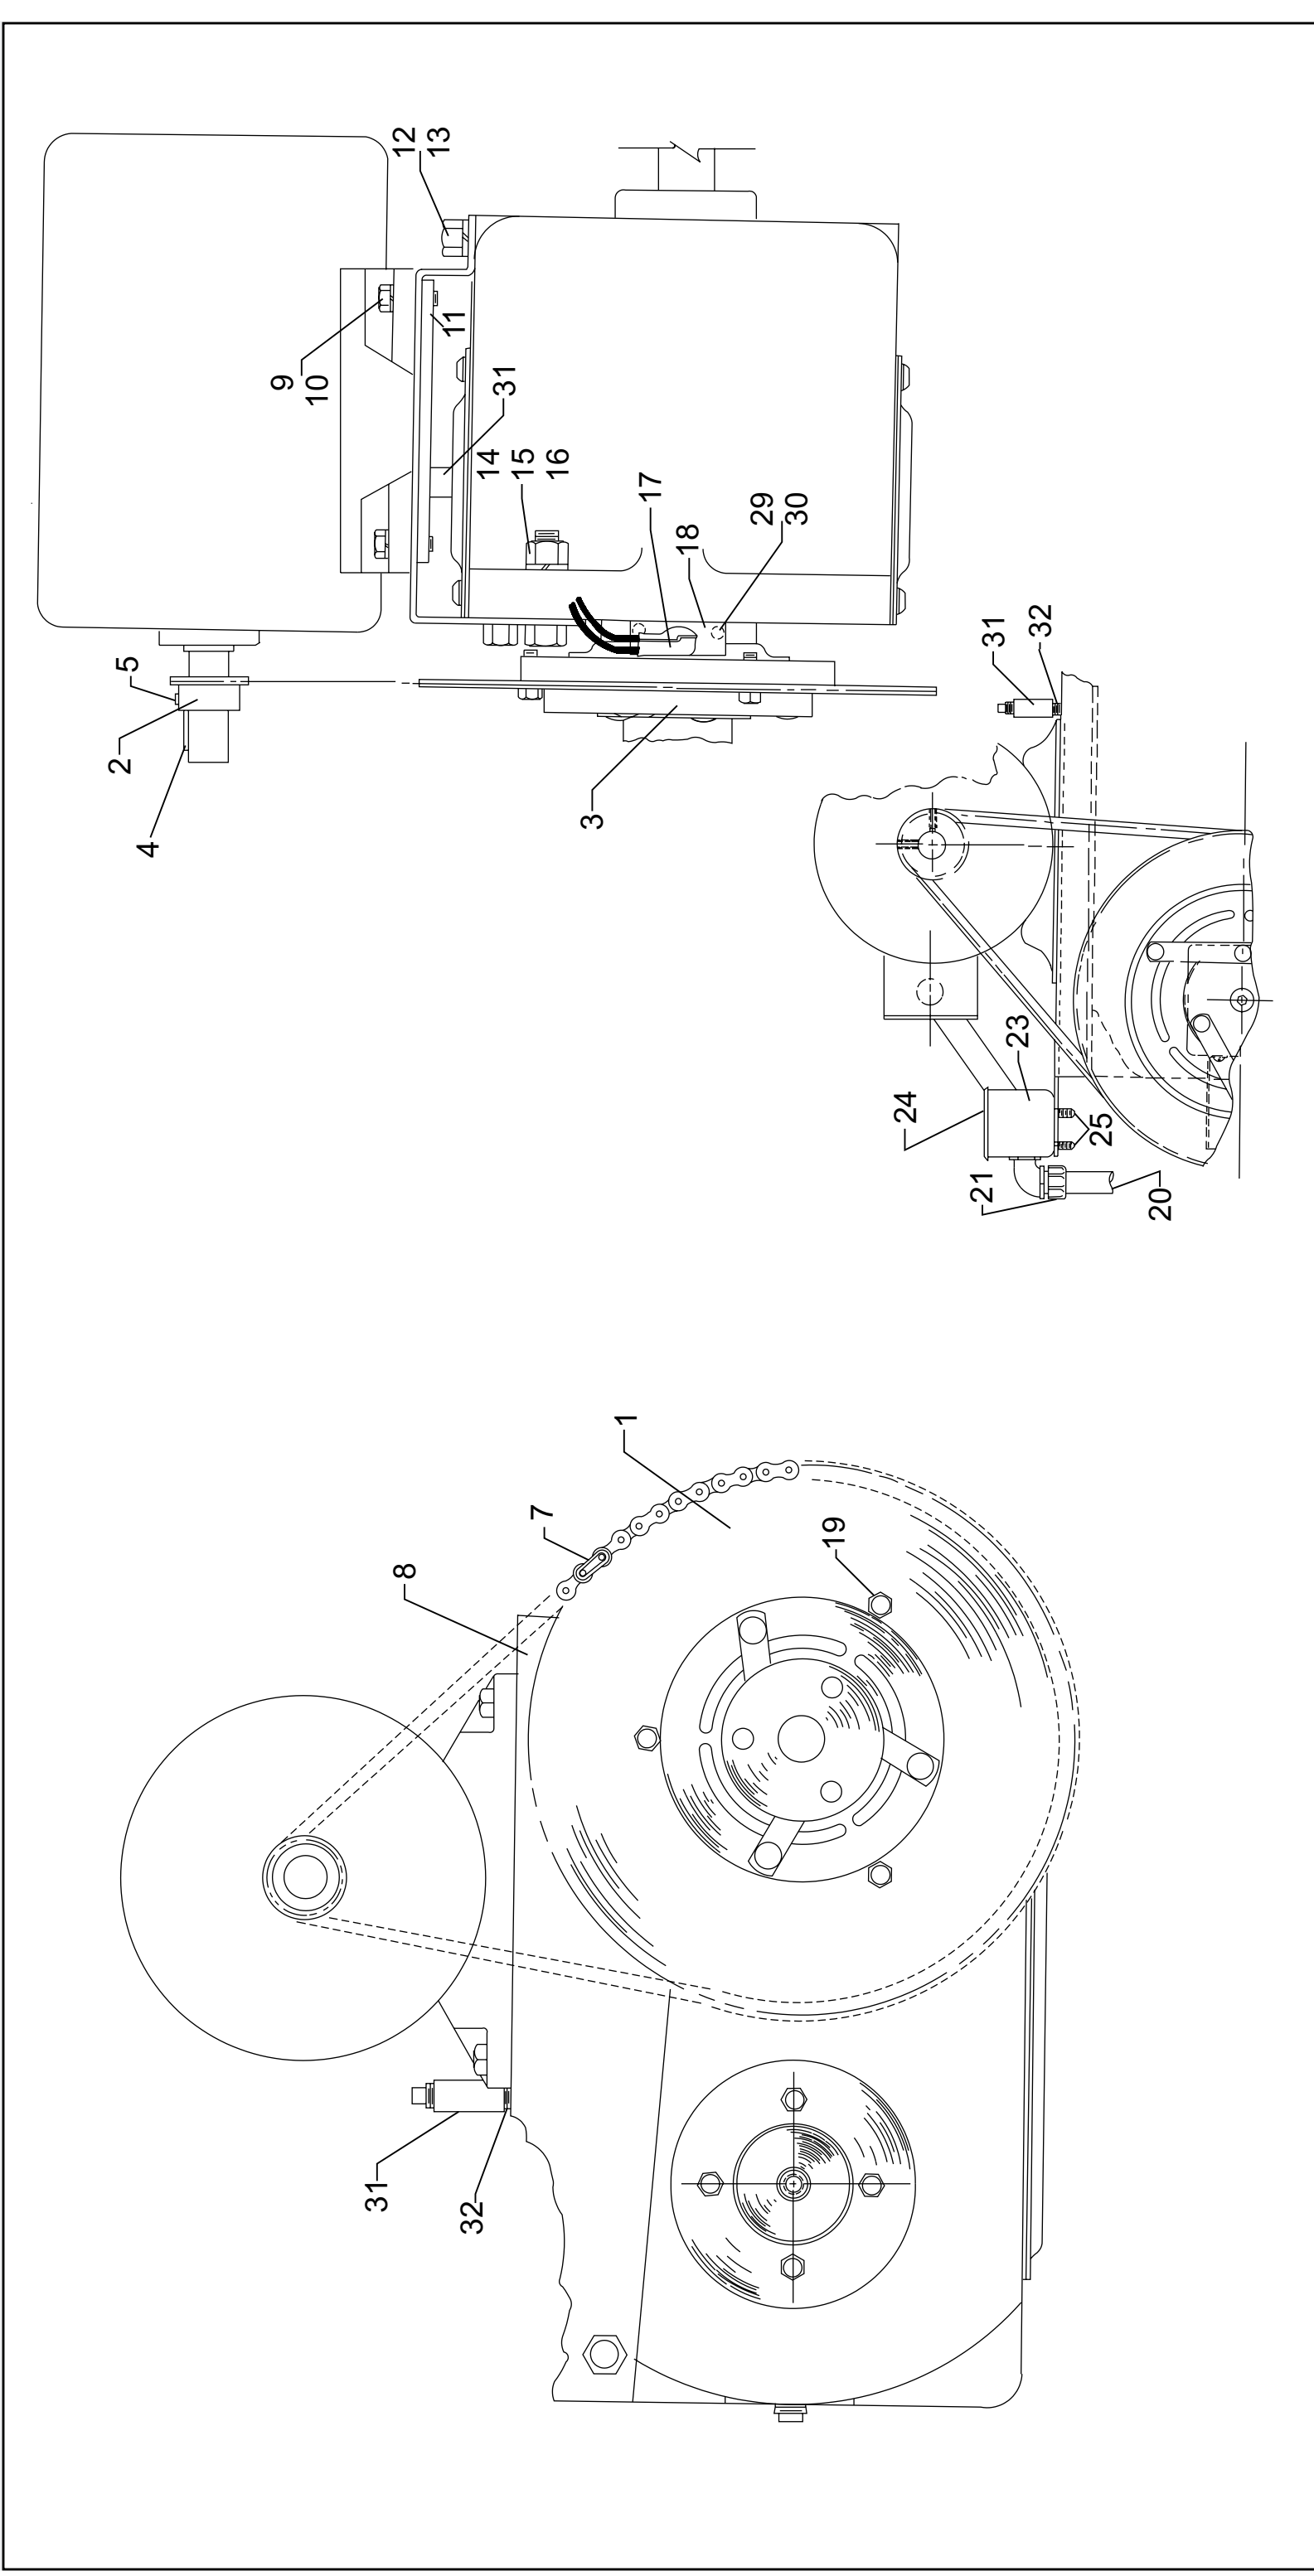



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**Parts List—Autospot Drive Assembly**

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
-----ASSEMBLY-----				
-	A	G15 13400	814811 MOTOR DRIVE ASSY=AUTOSPOT	4231,4244WP2/2 CP2/3 WP2/3 SP2/3 6044SP2 , 72044 SP2/SP3
	B	G28 15600	81481C MOTOR DRIVE ASSY=AUTOSPOT	6044WP2/3 SP2/3 72044WP2/3
-----COMPONENTS-----				
	1	54N015	02Z SPROCKET BROWN#35A96-6"BORE	
	2	54N008	SPRKT BROWN#35-13X7/8" BORE	
	3	54H164A	08Z CLUTCH 12VDC MAPM02	
	4	15E006	KEY #6 WOODRUFF 5/32X5/8 SAE10	
	5	15Q068	SOKSETSCR CUP10-24X1/4ZINCALLE	
	7	54G010B43P	71245N ROLLCHAIN+CONNLINK 3/8"=AUTO	
A	8	02 15865	96101D BASE=AUTOSPOT MOTOR BND@PRT	
B	8	02 175036	96101C BASE=AUTOSPOTMTR60+72WE BND@PT	
	9	15K105	HXCAPSCR 3/8-16UNC2A1.25 Gr5 P	
	10	15U255	LOCKWASHER MEDIUM 3/8 ZINCPL	
	11	02 175027	96101BTAPSTRIP=AUTOSPOT MOTORMOUNT	
	12	15K211	HEXCAPSCR 5/8-11UNC2AX1 Gr5 ZIN	
	13	15U315	LOCKWASHER MEDIUM 5/8 ZINCPL	
	14	15K180	HXCAPSCR 1/2-13UNCAX2 Gr5 ZINC	
	15	15U300	LOCKWSHER REGULAR 1/2 ZINC PLT	
	16	15G230	HXNUT 1/2-13UNC2B ZINC Gr5	
	17	03 01275	69268C COVER=AUTO CLUTCHWIRES	
	18	12M036L	1/2' 90-DEG SHORT ELLS	
	18A	12M035	3/8' SCREW-IN CONNECTOR	
	19	15K041	HXCAPSCR 1/4-20UNC2AX1 GR 5 ZI	
A	20	12C0375FN	3/8" FLX NON-METAL CONDUIT	
A	21	12M040	3/8" X 90-DEG SEALTITE CONN.	
A	23	12H050	HANDYBOX 4X2+1/8X21/8	
A	24	12H095	HANDY BOX COVER 4+2+1/8	
A	25	15P185	TRDCUT-F HXHD 1/4-20UNC2AX3/4	
A	29	15U150	LOCKWASHER MEDIUM #10 ZINCPL	
A	30	15K018	05Z SKCPSCR 10-24 UNC 3X3/8	
	31	5SCC0GNF	NPT COUP 3/8 GALMAL 150#	
	32	5N0G02AG42	NPT NIP 3/8X2 TBE GALSTL Sk40	

# Air Operated Autospot Assembly 60SG2 and 60SG3


BMP710047/96216V  
(Sheet 1 of 2)




Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

BMP710047/96216V (1 of 2)

Litho in U.S.A.

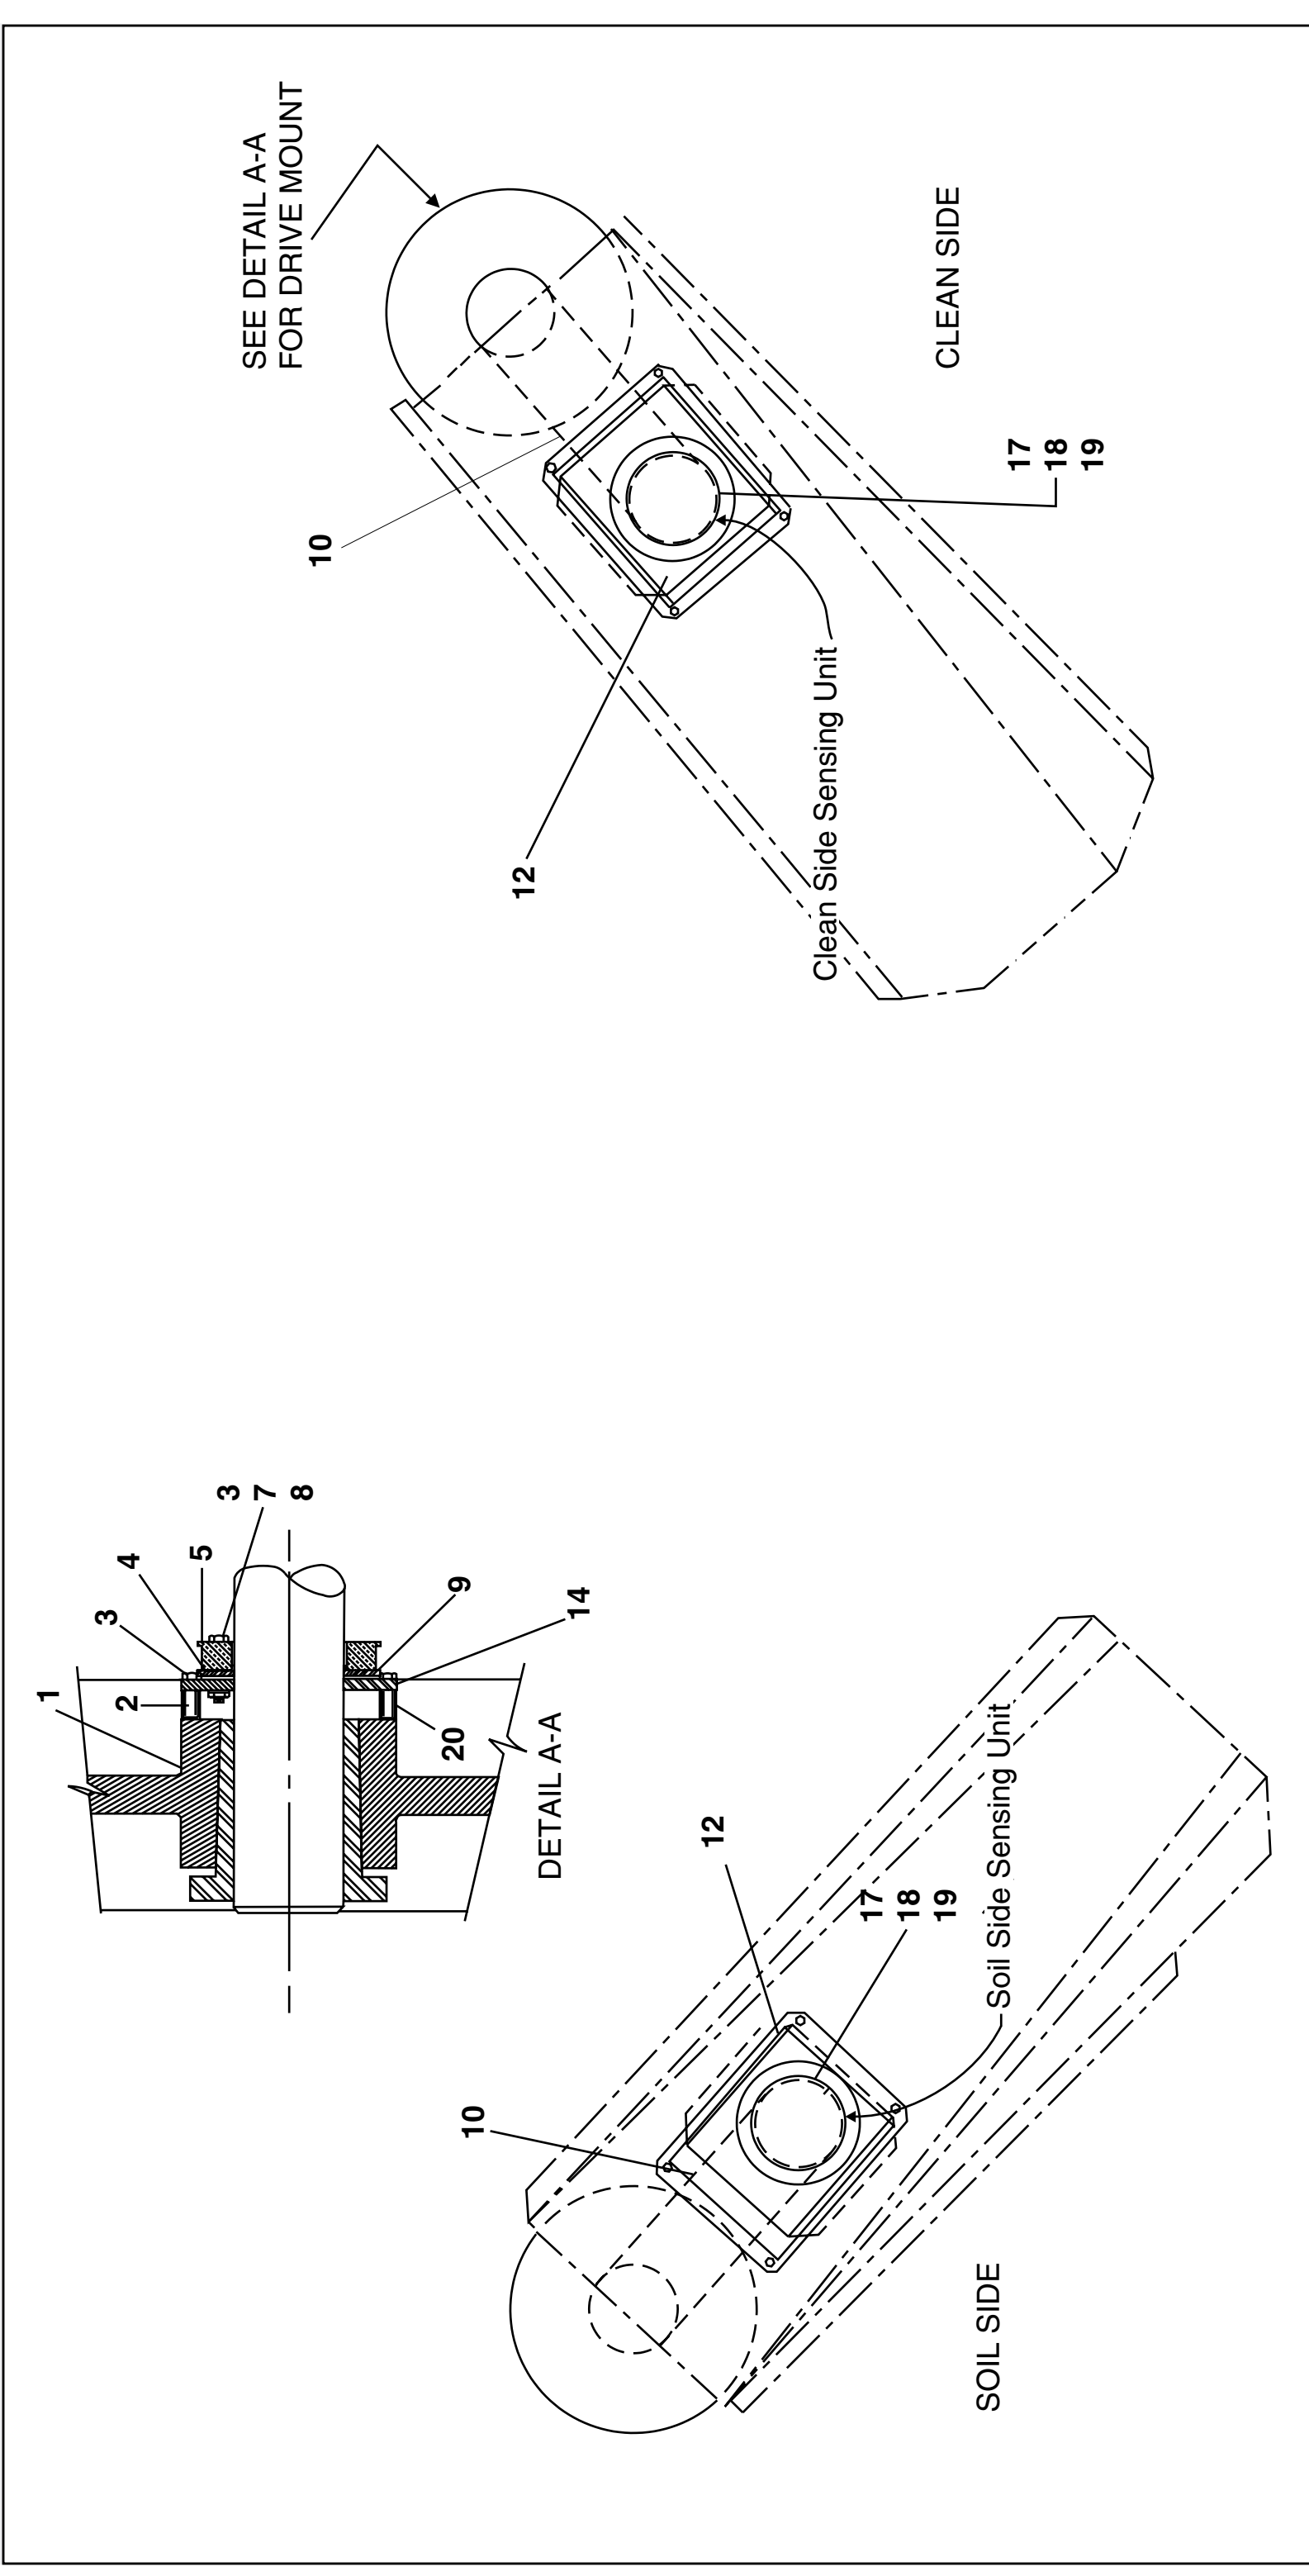

Parts List—60SG2 and 60SG3			Parts List, cont.—60SG2 and 60SG3	
Used In	Item	Part Number	Description	Comments
<p>Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.</p>				
			-----ASSEMBLIES-----	
	A	G28 16900	81523D*AIROP AUTOSPOT ASSY=60SG2	60SG2
	B	G28 17000	81523#*AIROP AUTOSPOT ASSY=60SG3	60SG3
			-----COMPONENTS-----	
all	1	02 19203	77093A VPUL=SGH WITH AUTOSPOT	
all	2	02 10456	65025A BUSHING=SENSEDEV PIVOTPIN	
all	3	15K043	HXCAPSCR 1/4-20UNC2AX1.5 GR5 STLZN	
all	4	15U185	FLATWASHER(USS STD) 1/4" ZNC PLT	
all	5	X3 01264	70256B DRIVEPULLEY=AUTOSPOT GEARBLT	
all	7	15G165	HXNUT 1/4-20UNC2BSAE ZC GR2	
all	8	15U180	LOCKWASHER MEDIUM 1/4 ZINCPL	
all	9	02 19204	81523A ADAPTER-AUTOSPT DRIVE PULLEY	
all	10	54C100	GEARBELT SYNCRO-COG DAYCO #420L050	
B	12	E28 01000	81263D* SENSE UNIT AUTOSPOT 60SG3	
A	12	E28 00900	71263Y* SENSE UNIT AUTOSPOT 60SG2	
all	14	02 19209	71322A PLATE=AUTOSPOT PULLEY MTG	
all	17	54X020	PULLEY-TIMEBELT (LH) ELECT #40L050D	
all	18	56Q0MHS	05Z .627" BUSHING,VPUL TYPE H,DORQT	
all	19	15E007	KEY #7 WOODRUFF 3/4X1/8 SAE1035	
all	20	15U255	LOCKWASHER MEDIUM 3/8 ZINCPL	

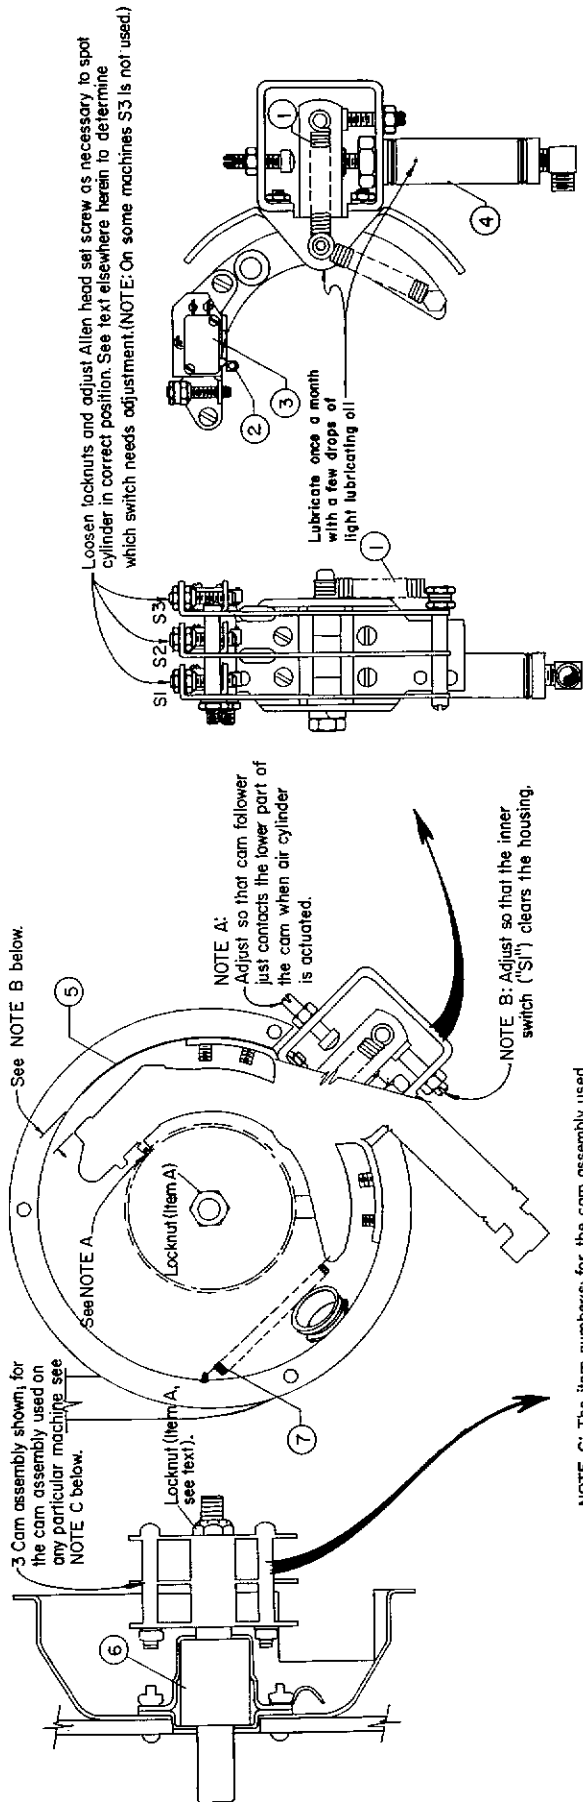

NOTE C: The item numbers for the cam assembly used on any particular machine is indicated in the table below.

MACHINE MODEL	ITEM NO.
4231WE2, 4244WE2	11
4231SG2, 4244SG2	11
4231WE3, 4244WE3	9
4231SG3, 4244SG3	9A
6036WE2, 6044WE2	10
6036SG2, 6044SG2	11
6036WE3, 6044WE3	9A
6036SG3, 6044SG3	9A
7244WE2	10
7244SG2	11
7244WE3	9A
7244SG3	9, 9A

SENSING UNIT - AIROP AUTOSPOT  
PELLERIN MILNOR CORPORATION



809A/PS0205 PARTS LIST FOR: RMP710042R/85353A P/I AUTOSPOT SENSING UNIT

ITEM	HOW PART IS USED IN ASSY (ONLY IF PERTINENT)	P/N	DESCRIPTION
001	SEE DESCRIPTION ----->	03 01355	71157A SPRING-EXT-AIROP AUTOSPOT
002	SEE DESCRIPTION ----->	09R015	ACTUATOR-MICROSW #JV-9 (CLASS 004)
003	SEE DESCRIPTION ----->	09R014	017 MICSW SPDT LEVELSW V3-1-B (13)
004	SEE DESCRIPTION ----->	27C205	027 AIR CYL 3/4 BORE 1" SIZE
005	SEE DESCRIPTION ----->	03 IF2X3	85046B INSUL AUTOSPOT/CENTRIFUGL SW
006	SEE DESCRIPTION ----->	03 01329	84493A SHAFT-AIROPAUTOSPOT DUR MATI
007	SEE DESCRIPTION ----->	02 02463	82362B SPRING-CHART HOLDING
009	SEE DESCRIPTION ----->	E15 02700	71333B\$CAM A/S 42WE3.42DY3+SS72SG3
009A	SEE DESCRIPTION ----->	E15 02700A	74558B\$CAM AS60+72WE3.42+60+CS72SG3
010	SEE DESCRIPTION ----->	E28 00700	71157B\$CAM ASSY A/S 60+72WE2
011	SEE DESCRIPTION ----->	E15 03100	790368\$CAM AS42WE2+SG2+DY2+60-72SG2


# Centrifugal Switch Assembly

BMP701195/2000242V  
(Sheet 1 of 2)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

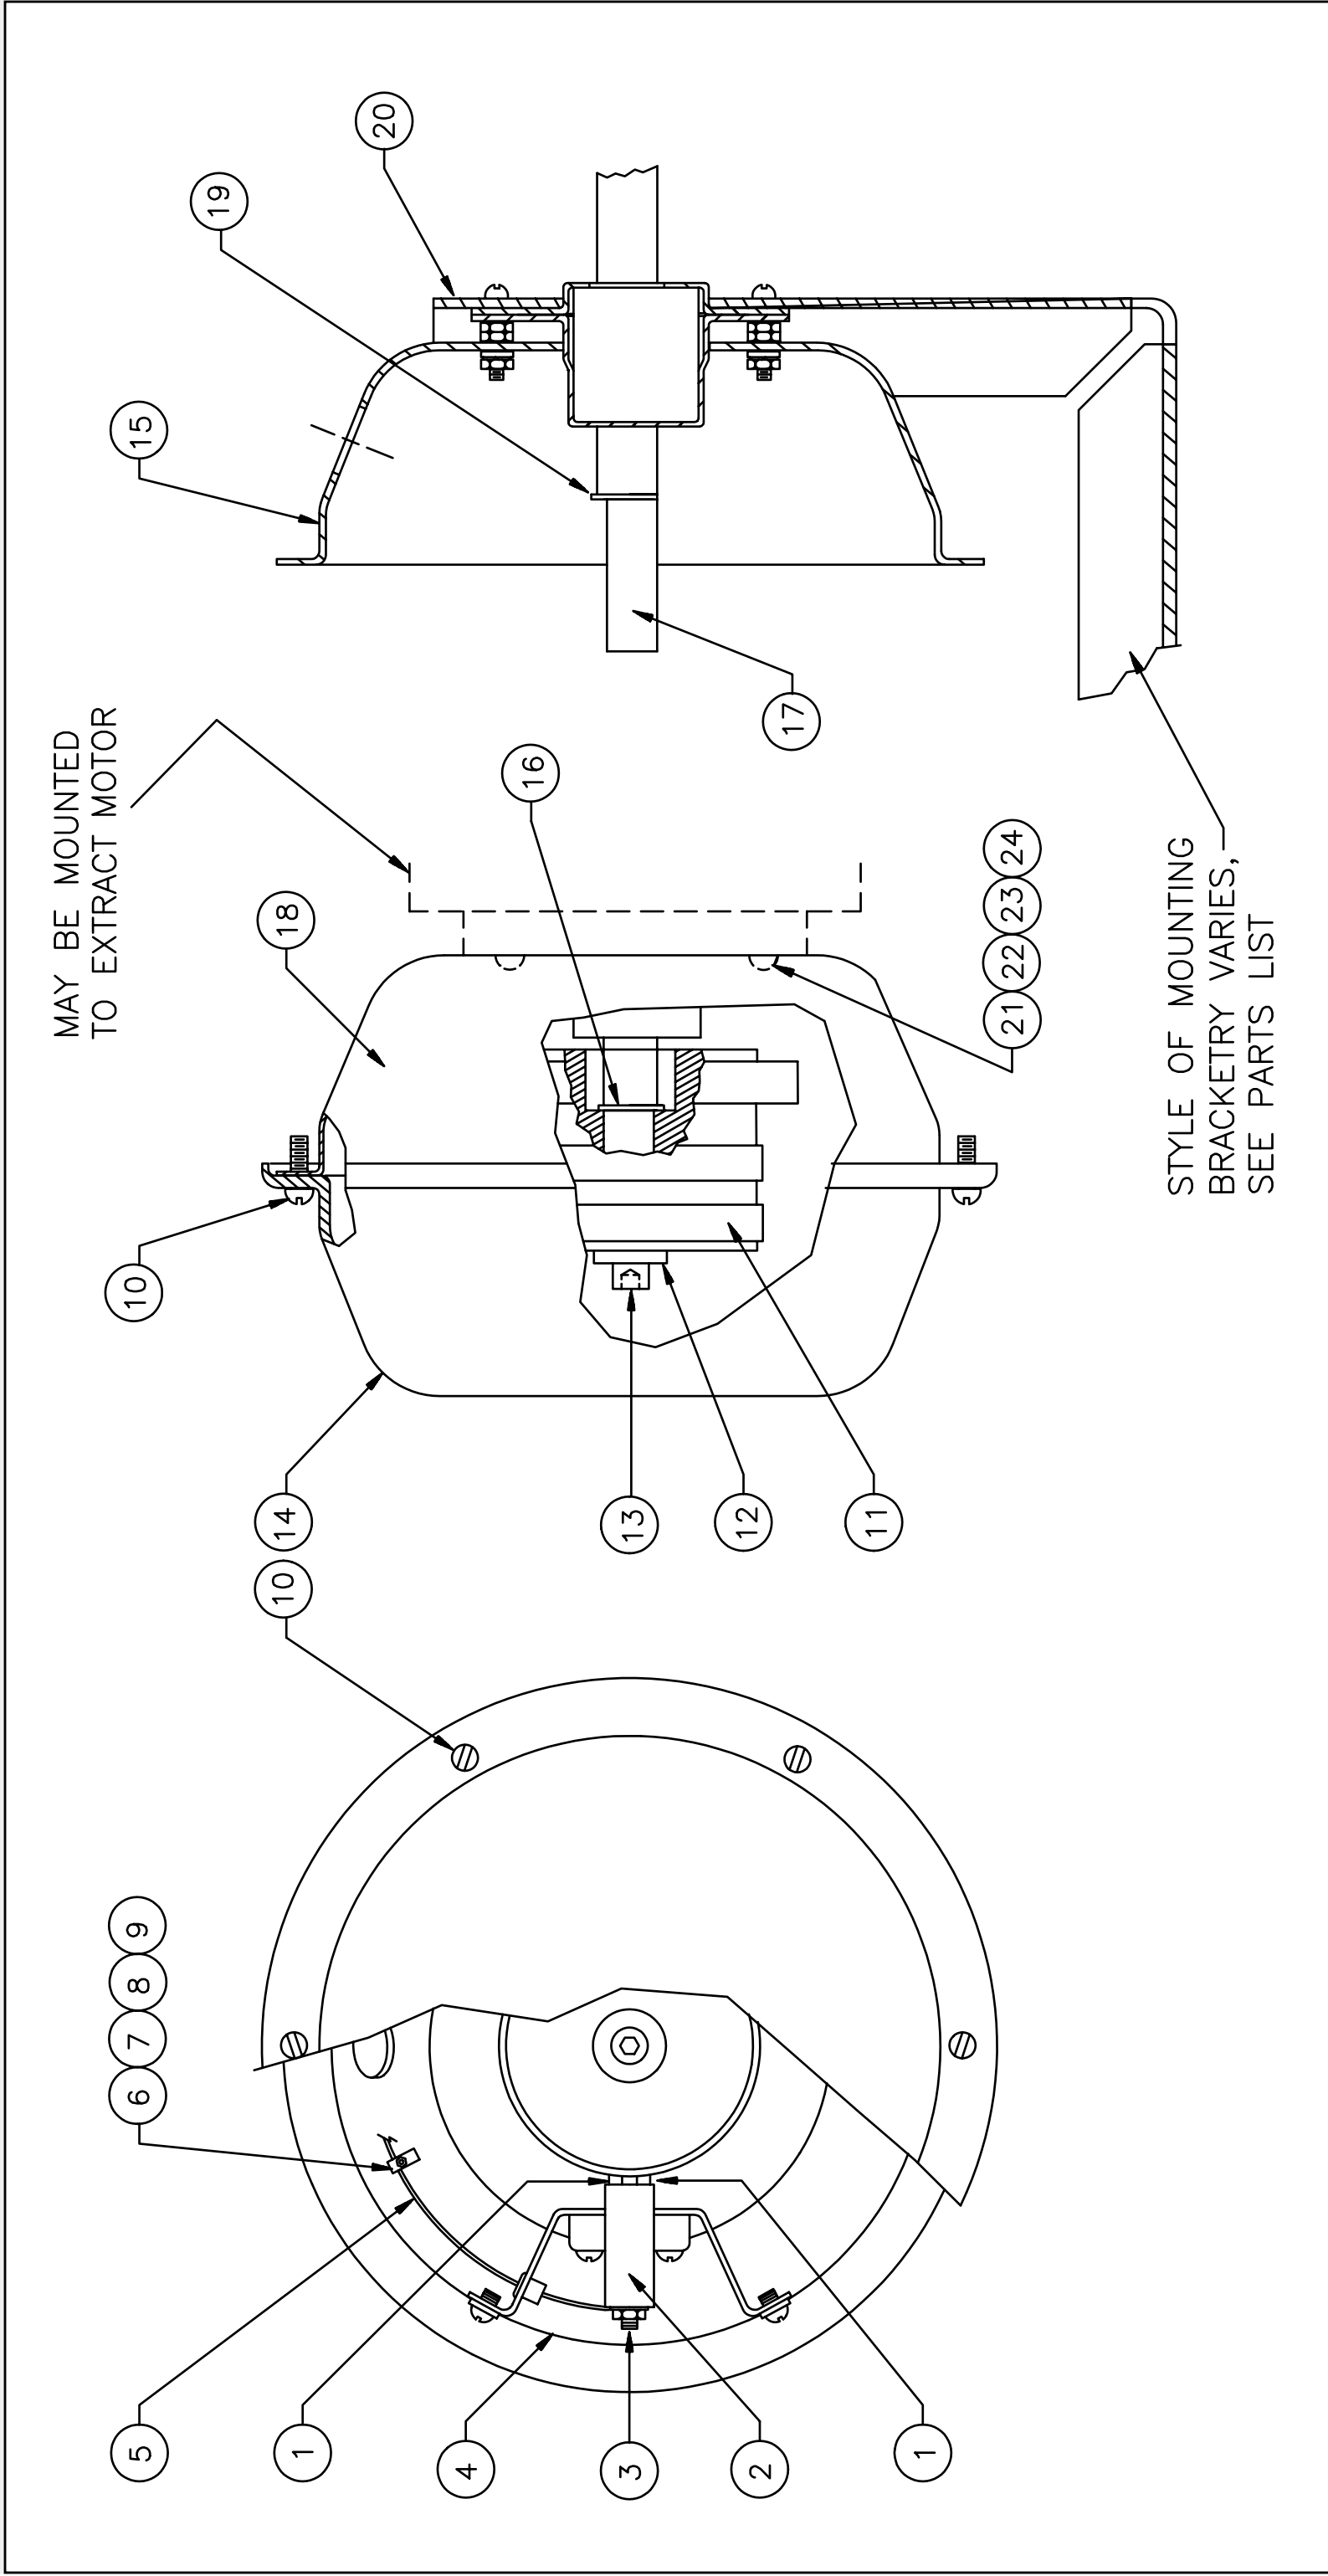



**Pellerin Milnor Corporation**  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**BMP701195/2000242V**  
(Sheet 2 of 2)

**Parts List—Centrifugal Switch Assembly**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			-----ASSEMBLIES-----	
N		EDC14003	92000Z*CENTSW + MTG BRKT 3621/26F	3621Q'S MANUFACTURED AFTER JAN. 6, 1993
P		EDC14002	90000Z CENTSW+MTG BRKT 36/42QG/J/P	3621/26+4226Q4'S, Q6'S
Q		G10 05000B	84412# CENTSW ASSY=FRAME NO-PLATE	3621CPE,BWP,NSP 4226DA1, 64040/64050E6N 64046E6N/J6N/D6N
R		G03 04500A	84412C CENTSWITCH=MOTOR MT NO-PLATE	6044,6442,6446,7244
T		SAE03 088	792571 ASSY=CENSW + MOUNTBKT 42	42031,42044,48032,48036
U		SAE03 088A	83417J ASSY=CENSW + MOUNTBKT 42DYA	5238 DYE
V		ADC11001	84122D ASSY=CENSW + MOUNTBKT4226QH	4226
W		ADC14001	90351C CENT SWITCH ASSY 3621F8P	3621F8P
X		EDC14801	86252C ASSY=CENSW+MTGBRKT RWP	3621/26,4226RWP/SYS 7
Y		SAE13 001	83246I ASSY=CENSW + MOUNTBKT SWE	3626SWE
Z		SAE13 001A	83417J CENTRIFUGAL SW ASSY 42QHE	4226,4832,4836
			-----COMPONENTS-----	
all	1	09X100	CARBON BRUSH 3/16"SQ=CENSW	
all	2	ESC0001	82281B* CENT SWITCH BRUSHOLDER ASSY	
all	3	15G071	MACHSCRLOKNUIT 6-32 NM SER ZINC	
all	4	03 IF2X3	85046B INSUL.AUTOSPOT/CENTRIFUGL.SW	
all	5	60E005E	TUBING VINYL 3/8IDX.025"W #HT105C *	
all	6	12P015C	CABLECLAMP 5/16-1/2	
all	7	15G070	HXMACHSCRNUIT 6-32UNC2B ZINC GR2	
all	8	15N045	RDMACHSCR 6-32UNC2AX3/8 ZINC GR2	
all	9	15U100	LOKWASHER MEDIUM #6 ZINCPL	
all	10	15P010	12Z PHILPAN TRDCUTSCRTP10-24X1/2SS	
all	11	SAE03 012B	83407#*SLIPRING+CENT SW.ASSY(LORES)	
all	12	15U342	FLTWASH .255/.260IDX.750DX.125T SS	
all	13	15K036	05Z SKSELLOKCP SCR 1/4-20X5/8	

**Parts List, cont.—Centrifugal Switch Assembly**

Used In	Item	Part Number	Description	Comments
all	14	02 15582	COVER=CENSW-CADSTL	
N-R	15	03 01147	HOUSING FOR CENTRIFUGAL SWITCH	
all	15	A33 11000	75675B\$ HOUSE+BKT+SHAF=CENSW CWM	00S
T	15	A03 01300	75491C*HOUSE+BKT+SHAFT=CENSW 42+52U	
U	15	A03 01300A	75491#* HOUSE+BKT+SHAF=CENSW 42DYA	
V	15	A03 11000	82506T*CENTSWITCH=HOUSING+BRKT 42Q	
W	15	ADC14001A	93381C*C-SWITCH=MNT BRKT+HOUSING	
X	15	ADC14801	86246C*CENT SW HOUSING & BRKT ASSY	
Y	15	A13 02700	83246C\$ HOUSE+BKT+SHAF=CENSW SWE	
Z	15	A13 02700A	83246# CENSW HSG+BRKT ASSY 2SPD WAS	
T-Z only	16	17B059W	RETAIN RING-ROTOR CLIP# SH-62-ST	
T-Z only	17	A03 01400	71103B SHAFT ASSY=CENTSWITCH	
T-Z only	18	03 01147	HOUSING FOR CENTRIFUGAL SWITCH	
T-Z only	19	17B059W	RETAIN RING-ROTOR CLIP# SH-62-ST	
T	20	02 15359	CENSW MOUNTBRACKET	
U	20	03 25417	76154C BRKT=CENT SWITCH MT	
V	20	02 11452	94222D CENTRIFUGAL SWITCH BRKT-42Q	
W	20	02 14609	93381D+BRKT=CENTRIF SWITCH 3621F8P	
X	20	02 14836	89391C CENT=SW MTG BRKT	
Y	20	02 13111	77481C BRKT=CENT-SWITCH MT BND@PRNT	
Z	20	03 48170	83246C BRACKET=CENT.SW.MT.2SP WASH	
all	21	15N117	RDMACSCR 10-24UNC2X3/8SS18-8	
all	22	15U130	FLAWAS#10 .031X7/16ODX.203ID ZINCPL	
all	23	15U150	LOKWASHER MEDIUM #10 ZINCPL	
all	24	15G201	01Z HXLOKNUIT 3/8-16 NYL/SS TYPE NE	

## CENTRIFUGAL SWITCH OPERATION

After an extraction, the centrifugal switch will signal the MILTROL as soon as the washer-cylinder has slowed sufficiently to permit the wash speed clutch to reengage. Also, until this low speed has been attained, the MILTROL circuits prevent the opening of the shell door - thus providing safety interlocking.

This centrifugal switch assembly consists of three mercury tube switches wired in parallel, and connected to two copper rings. This entire assembly is mounted on a rear extension of the extractor motor shaft, and rotates at the same speed as the extract motor. At a predetermined speed, centrifugal force will cause the mercury switches to open the circuit. At lower speeds, there is always at least one switch closed, thus maintaining the circuit continuity. Two spring loaded carbon brushes, riding on the copper contact rings, transmit this electrical signal to the MILTROL.

This electrical signal is used to energize the speed relay at the expiration of extraction - when the *predetermined re clutching* speed has been reached. The combined operation of the extract relay and the speed relay in the MILTROL perform all the functions of operating the brake, clutch and extractor motors incidental to the automatic entrance into extraction, and subsequent return to wash speed.

The centrifugal switch is very simple - yet of VITAL importance. Failure of one of the mercury switches to make contact, or an irregular contact between the brushes and the contact rings, or a loose connection in the wiring, or any other condition that would cause an open circuit will prevent the clutch from engaging - in which case the machine will not operate after having braked down from extraction speed.

**WARNING:** A SHORT CIRCUIT OR GROUND IN THE CENTRIFUGAL SWITCH OR ITS ASSOCIATED WIRING WILL CAUSE THE WASH SPEED CLUTCH TO ENGAGE IN HIGH SPEED ROTATION. THIS CONDITION WOULD BE IDENTIFIED BY AN EXTREMELY LOUD SCREECHING SOUND AS SOON AS THE MACHINE STOPS EXTRACTING. THE SOUND WOULD BE SIMILAR TO SKIDDING AUTO TIRES. SUCH A MALFUNCTION IS VERY DANGEROUS AND MUST BE CORRECTED AT ONCE - BEFORE FURTHER OPERATION.

**CAUTION:** Over-lubrication of extractor motor bearings will force grease into centrifugal switch housing and will cause centrifugal switch to malfunction.

The carbon brushes should be inspected occasionally, and replaced when worn. The copper contact rings may be cleaned with fine emery when needed. (Do not scratch the surface of the contact rings.)

**WARNING:** TURN "OFF" POWER AT MAIN WALL SWITCH BEFORE ENTERING CENTRIFUGAL SWITCH. THIS ASSEMBLY CARRIES HIGH VOLTAGE, AND REMAINS ENERGIZED WHEN MILTROL MASTER SWITCH IS "OFF".

## V-BELT TENSION ADJUSTMENTS FOR 48", 52", 60" AND 72" WASHER-EXTRACTORS

This instruction is to be used for adjusting the belt tension on the following machine models:

48032BHE	48032BTG	48032BTH	48036QHE	48036QTG	48036QTH		
52038WE1	52038WTF	52038WTB	52038WTG	52038WTH			
60036WE2	60036WE3	60036SG2	60036SG3	60044WE2	60044WE3	60044SG2	60044SG3
72044SG2	72044SG3	72044WE2	72044WE3	72044WTB	72044WTG	72044WTH	

A belt tension testing device (Milnor<sup>®</sup> part number 30T001) and a straight edge are required when tensioning unbanded belts.

### Tension Settings—Unbanded Belts


Set the o-rings on the tension testing device (see FIGURE 1) as follows:

1. Move the upper o-ring to the topmost position, resting against the bottom edge of the cap.
2. Find the proper belt deflection setting (by machine model and belt function) in the appropriate table below.
3. Move the lower o-ring on the tension tester to this deflection setting on the inches scale.

**NOTE 1:** The tension testing device is marked on one side in inches and pounds and on the other side in centimeters and kilograms. All values in the tables are in inches (in.) and pounds (lbs.).

**NOTE 2:** The instruction sheet provided with the tension testing device should not be used. Use only the instructions provided herein.

**NOTE 3:** The reference (ref.) code shown in the tables are for factory use only.

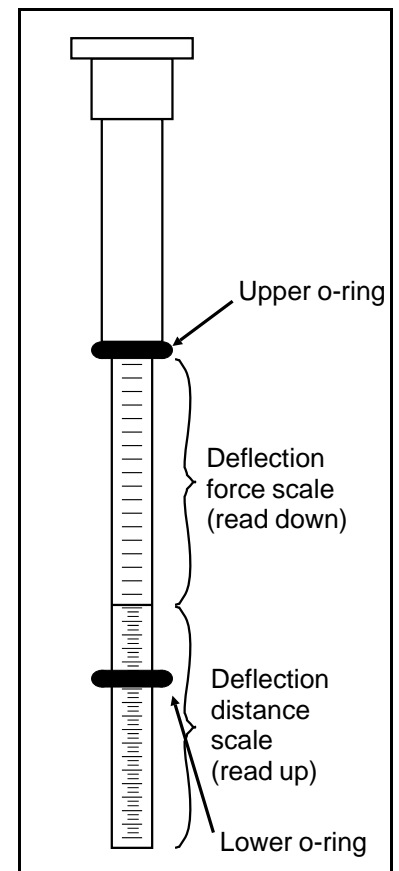


**FIGURE 1** (MSSMA405AE)  
**Tension Settings**

# Belt Tension Measurements

## Unbanded Belts

1. Place a straight edge along the top edge of the belt to be tested so that it spans both pulleys. Place the tension tester in the center of the belt and press down on the cap until the lower o-ring is in line with the straight edge, as shown.
2. Read the setting of the upper o-ring on the lbs scale of the tension tester.
3. Compare this value with the acceptable range in the appropriate table. If the belt is brand new (has never been run), use the range in the Initial Tension column. If the belt is not brand new, locate the acceptable range in the Final Tension column.
4. If the reading on the tension tester is *less* than the range shown in the table, the belt is *too loose* and must be tightened. If the reading is *greater* than the range shown in the table, the belt is *too tight* and must be loosened. Adjust the belt until the reading falls within the acceptable range in the table.

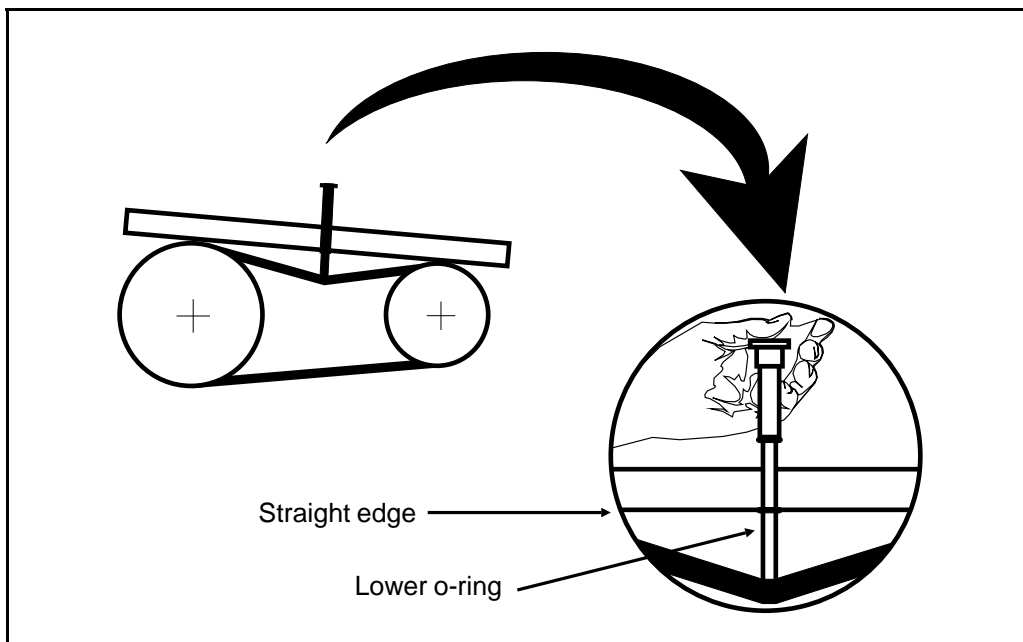

**FIGURE 2** (MSSMA405AE)  
**Measuring Belt Tension**

## Tensioning Banded Belts

### 48032BHE, BTG, BTH

### 48036QHE, QTG, QT

	Belt Deflect. (inches)	Initial Tension		Initial Tension		Belt Deflect (in.)	Initial Tension		Initial Tension	
		(lbs.)	(ref.)	(lbs.)	(ref.)		(lbs.)	(ref.)	(lbs.)	(ref.)
WASH/ 2 SPEED WASH	9/32	6.6 - 9.2	KP3	5.1 - 7.1	KN	5/16	5.7 - 7.6	JP3	4.4 - 5.9	JN
DRAIN	5/32	5.7 - 7.6	JP3	4.4 - 5.9	JN	5/32	6.6 - 9.2	KP3	5.1 - 7.1	KN
MAIN	50C 35/64	10.5 - 14.3	NP3	8.1 - 11.0	NN	17/32	10.5 - 14.3	NP3	8.1 - 11.0	NN
	60C 17/32									
LOW SPEED EXTRACT	13/64	6.6 - 9.2	KP3	5.1 - 7.1	KN	3/16	9.62 - 13.0	MP3	7.4 - 10.0	MN

### 52038WE1, WTF, WTB, WTG, WTH

### 60036 + 60044WE2 + WE3

	Belt Deflect. (inches)	Initial Tension		Initial Tension		Belt Deflect (in.)	Initial Tension		Initial Tension	
		(lbs.)	(ref.)	(lbs.)	(ref.)		(lbs.)	(ref.)	(lbs.)	(ref.)
WASH/ 2 SPEED WASH	25/64	10.5 - 14.3	NP3	8.1 - 11.0	NN	3/16	5.7 - 7.6	JP3	4.4 - 5.9	JN
DRAIN	5/32	10.5 - 14.3	NP3	8.1 - 11.0	NN	13/32	6.6 - 9.2	KP3	5.1 - 7.1	KN
E1	1/4	6.6 - 9.2	KP3	5.1 - 7.1	KN	17/64	6.6 - 9.2	KP3	5.1 - 7.1	KN
E2	1/2	6.6 - 9.2	KP3	5.1 - 7.1	KN	11/32	6.6 - 9.2	KP3	5.1 - 7.1	KN
MAIN	50C 11/16	18.2 - 26.0	SP3	14.0 - 20.0	SN	43/64	16.9 - 20.8	RP3	13.0 - 16.0	RN
	60C 23/32	16.9 - 20.8	RP3	13.0 - 16.0	RN	45/64				

**48032BHE, BTG, BTH**

**48036QHE, QTG, QT**

	Belt Deflect. (inches)	Initial Tension		Initial Tension		Belt Deflect (in.)	Initial Tension		Initial Tension	
		(lbs.)	(ref.)	(lbs.)	(ref.)		(lbs.)	(ref.)	(lbs.)	(ref.)
WASH/ 2 SPEED WASH	1/4	5.7 - 7.6	JP3	4.4 - 5.9	JN	17/64	5.7 - 7.6	JP3	4.4 - 5.9	JN
DRAIN	3/64	6.6 - 9.2	KP3	5.1 - 7.1	KN	33/64	6.6 - 9.2	KP3	5.1 - 7.1	KN
E-1	9/32	6.6 - 9.2	KP3	5.1 - 7.1	KN	17/64	6.6 - 9.2	KP3	5.1 - 7.1	KN
E-2	39/64	6.6 - 9.2	KP3	5.1 - 7.1	KN	5/8	6.6 - 9.2	KP3	5.1 - 7.1	KN
UPPER JACK TO LOWER JACK  LOWER JACK TO UPPER JACK	BANDED BELTS NEED SPECIAL INSTRUCTIONS					BANDED BELTS NEED SPECIAL INSTRUCTIONS				

**52038WE1, WTF, WTB, WTG, WTH**

**60036 + 60044WE2 + WE3**

	Belt Deflect. (inches)	Initial Tension		Initial Tension		Belt Deflect (in.)	Initial Tension		Initial Tension		
		(lbs.)	(ref.)	(lbs.)	(ref.)		(lbs.)	(ref.)	(lbs.)	(ref.)	
WASH/ 2 SPEED WASH	15/64	5.7 - 7.6	JP3	4.4 - 5.9	JN	15/64	5.7 - 7.6	JP3	4.4 - 5.9	JN	
DRAIN	13/32	6.6 - 9.2	KP3	5.1 - 7.1	KN	25/64	6.6 - 9.2	KP3	5.1 - 7.1	KN	
E1	17/64	6.6 - 9.2	KP3	5.1 - 7.1	KN	17/64	6.6 - 9.2	KP3	5.1 - 7.1	KN	
E2	5/16	6.6 - 9.2	KP3	5.1 - 7.1	KN	5/16	6.6 - 9.2	KP3	5.1 - 7.1	KN	
MAIN	50C	45/64	16.9 - 20.8	RP3	13.0 - 16.0	RN	3/4	16.9 - 20.8	RP3	13.0 - 16.0	RN
	60C	11/16	16.9 - 20.8	RP3	13.0 - 16.0	RN	23/32	16.9 - 20.8	RP3	13.0 - 16.0	RN



# SERVICING DISC BRAKES

## Preventive Maintenance

### ⚠ DANGER ⚠



**CRUSH/SEVER HAZARD**—Tilting mechanisms can crush or sever parts of your body caught in them.

- ☞ Install the safety stands before performing maintenance under a tilted machine.
- ☞ **NEVER** test or operate (manually or automatically) any machine function with any portion of a person's body under the machine.

### ⚠ WARNING ⚠



**ENTANGLE AND CRUSH HAZARD**—Moving parts can entangle and crush body parts.


- ☞ Lock OFF and tag out power at the wall disconnect before servicing, except where specifically instructed otherwise.
- ☞ Insure guards are in place during service procedures.

### ⚠ WARNING ⚠



**SLIP/FALL HAZARD**—Spilled brake/hydraulic fluids are slippery.


- ☞ Take precautions to prevent brake fluids from spilling onto the machine.
- ☞ Provide secure footing by cleaning standing surfaces prior to servicing machine.

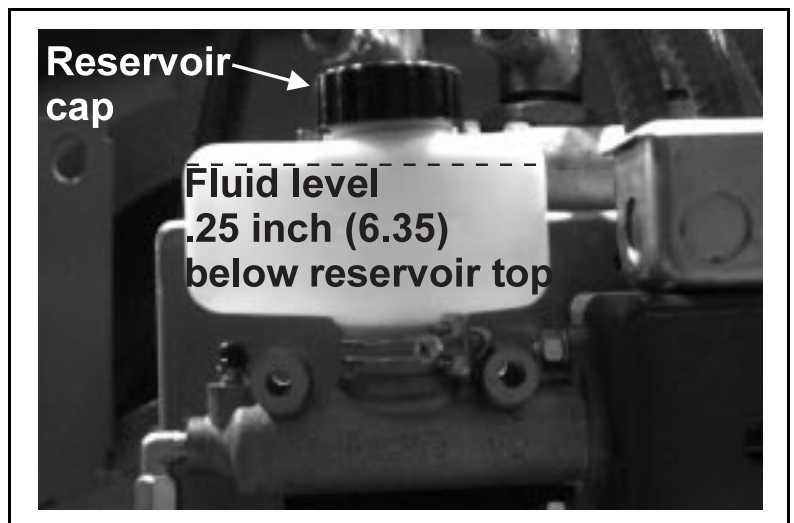

**FIGURE 1** (MSSMA426AE)  
Reservoir Details

Lock off and tag out machine power then perform the following maintenance:

1. Check fluid level in reservoir—If required, add fluid to within .25 inch (6.35) of the top (FIGURE 1). Add only D.O.T. 3 type brake fluid. *Never mix brake fluid with any other type of fluid.*
2. Check that brake components are securely mounted. Tighten if necessary.
3. Check for hydraulic leaks and repair as required.
4. Check disc surface. Replace if warped or worn beyond specifications (FIGURES 2 and 3).
5. Check the brake pads for wear as specified on the preventive maintenance schedule. Replace brake pads worn to less than .125 inch (3.17) (FIGURE 2). Always replace both brake pads at the same time.

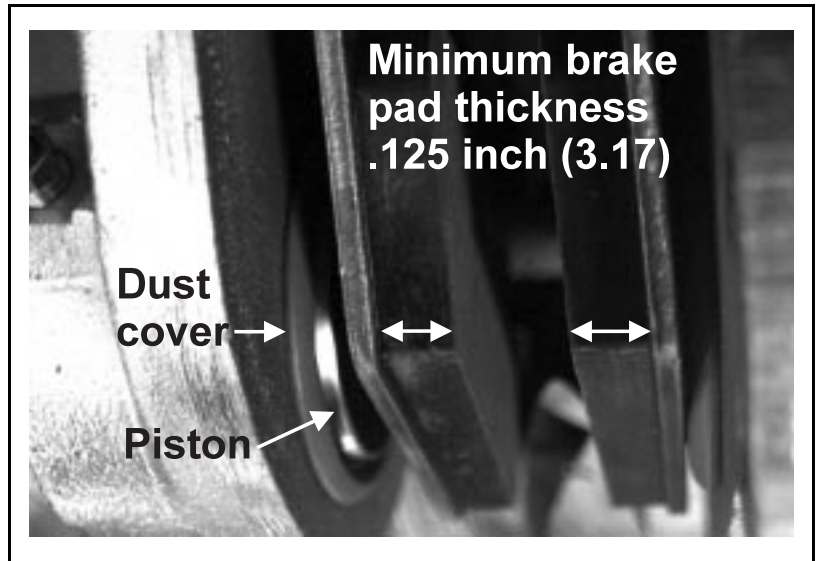

**FIGURE 2** (MSSMA426AE)  
**Brake Pad and Piston Details**  
**( disc removed for clarity)**

## Replacing Brake Pads

### ▲ WARNING ▲



**CRUSH AND ENTANGLE HAZARD**—Machine power is ON and covers are removed for the following procedures. Rotating machinery can entangle and crush body parts.

☞ Use extreme caution and permit only qualified personnel to perform these procedures.

**NOTE 1:** Required equipment includes a bottle or jar and a flexible hose sized to fit the top bleed valve, bleed valve wrenches, and an adequate supply of fresh brake fluid. Before starting, make sure the reservoir is full of D.O.T. 3 brake fluid. Do not allow reservoir fluid level to fall below 1/2" (12.7) above the bottom during this procedure.

**NOTE 2:** Procedure requires two people.


**NOTE 3:** Refer to FIGURES 1 through 4.

1. After energizing machine, manually release the brake, (for M7E models, see INVOKING FORMULAS MANUALLY, ACTUATING OUTPUTS, VIEWING INPUTS..., for other machines see VIEWING INPUTS/OUTPUTS AND ACTUATING OUTPUTS...In the Reference manuals).

**▲ CAUTION ▲**


**DISC BRAKE COMPONENT DAMAGE AND BRAKE FLUID RELEASE HAZARD**—Careless actions can damage brake disc and/or caliper components. Brake fluid is released under pressure during this procedure. Brake fluid irritates eyes and is harmful if swallowed.

- ☞ Take care not to mark face of disc or pistons.
- ☞ Wear eye protection during procedure. Follow procedure carefully to avoid possible injury.

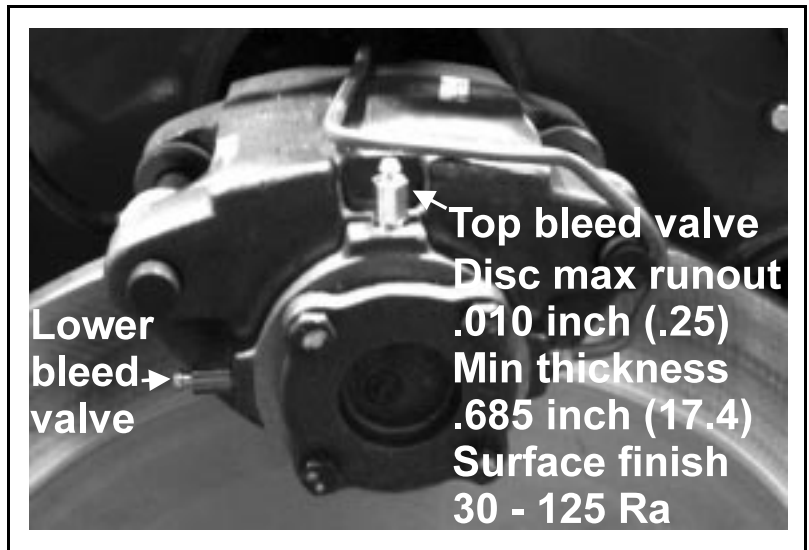

**FIGURE 3** (MSSMA426AE)  
**Disc Brake Bleeder Valves and Disc Specifications**

2. Attach one end of the flexible hose to the top bleed valve. Place the other end of the hose into a bottle or jar containing 1/2 - 1 inches (12.7 - 25.4) of clean brake fluid. Submerge the hose below the fluid surface to prevent sucking air on the return stroke.
3. Remove the reservoir cap. Loosen the top bleed valve. Using a hardwood dowel or the flat of a large screwdriver, gently push the pistons back into their bores by carefully prying between the backs of the old pads and the pistons until the pistons are level with the dust covers. *Take care not to dislodge or tear dust covers.* Remove cotter pins, slide out pad pins, then remove the brake pads. After replacing the pads, close the top bleed valve.
4. As one technician turns the brake output off (applying brake), the technician at the caliper opens the top bleed valve just enough to allow air to escape. Close the bleed valve and repeat step until air bubbles stop, adding new fluid to reservoir as needed.
5. Add new fluid to reservoir to bring level back up to within .25 inch (6.35) of top and replace reservoir cap. Test operation and check for leaks. Discard fluid in the bottle or jar as it contains air and must not be reused.

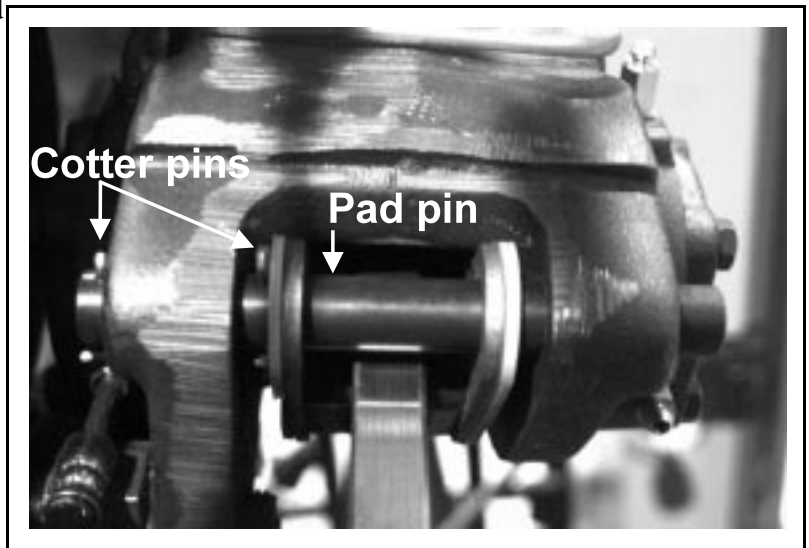


**FIGURE 4** (MSSMA426AE)  
**Caliper Details**


## Setting Stroke

If either the brake cylinder or the air cylinder is removed, the brake stroke must be properly set. Insufficient or excessive stroke causes poor braking and/or damage to the brake cylinder. Set brake stroke as follows:


1. After energizing machine, manually release the brake. This causes the air cylinder rod to fully retract into the air cylinder (FIGURES 5 and 6).
2. Thread the brake cylinder rod into the air cylinder rod until resistance is felt at the brake cylinder rod. This action ensures a full stroke by placing the brake cylinder rod plunger (within the brake cylinder), at the limit of its travel.
3. Tighten lock nuts (FIGURE 6).
4. Observe and mark the position of the lock nuts as viewed through the setting slot shown in FIGURE 5. Verify that the brake pressure (FIGURE 7) is between 10 - 12 PSI (0.70 - 0.84 kg/cm<sup>2</sup>). Manually apply the brake and mark the new position of the lock nuts. Verify that the range between marks is approximately 0.75 - 1.00 inch (19-25 mm).

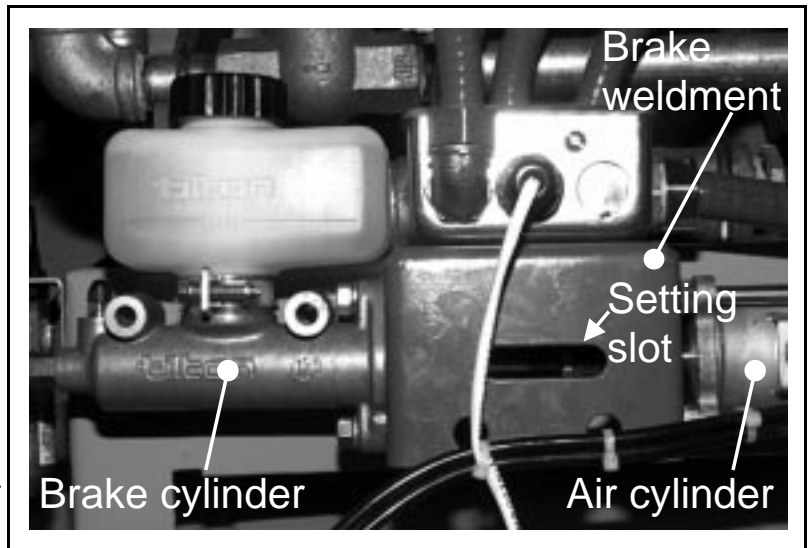

**FIGURE 5** (MSSMA426AE)  
**Brake Cylinder and Actuator**  
**(ExN machine shown)**

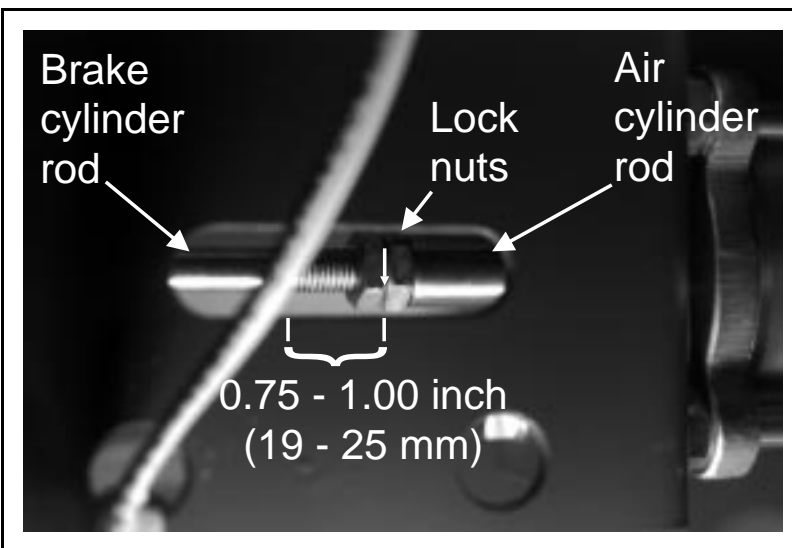

**FIGURE 6** (MSSMA426AE)  
**Brake and Air Cylinder Rod Details**

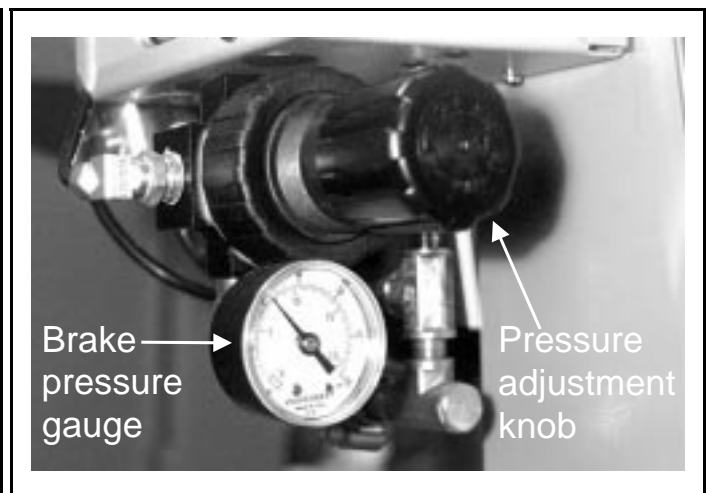

**FIGURE 7** (MSSMA426AE)  
**Brake Air Pressure**  
**Gauge and Regulator**



**Lower Disc Brake Installation**  
**6044SP2/SP3, 6044SP2 SM, 6044SP3 SM, 7244SP2**

BMP970005/2007155B  
 (Sheet 1 of 4)



Pellerin Milnor Corporation  
 P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

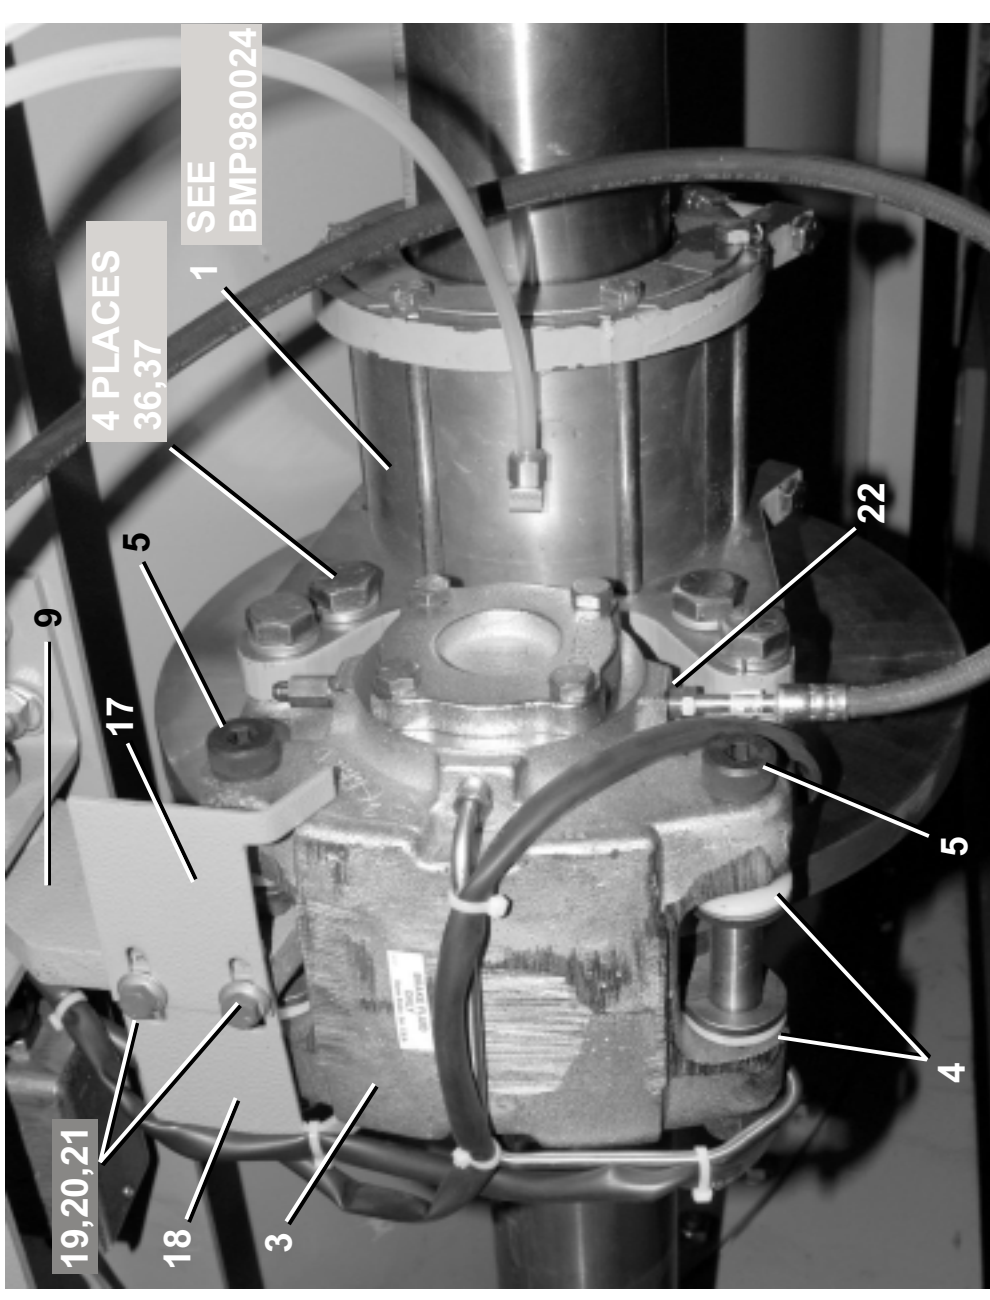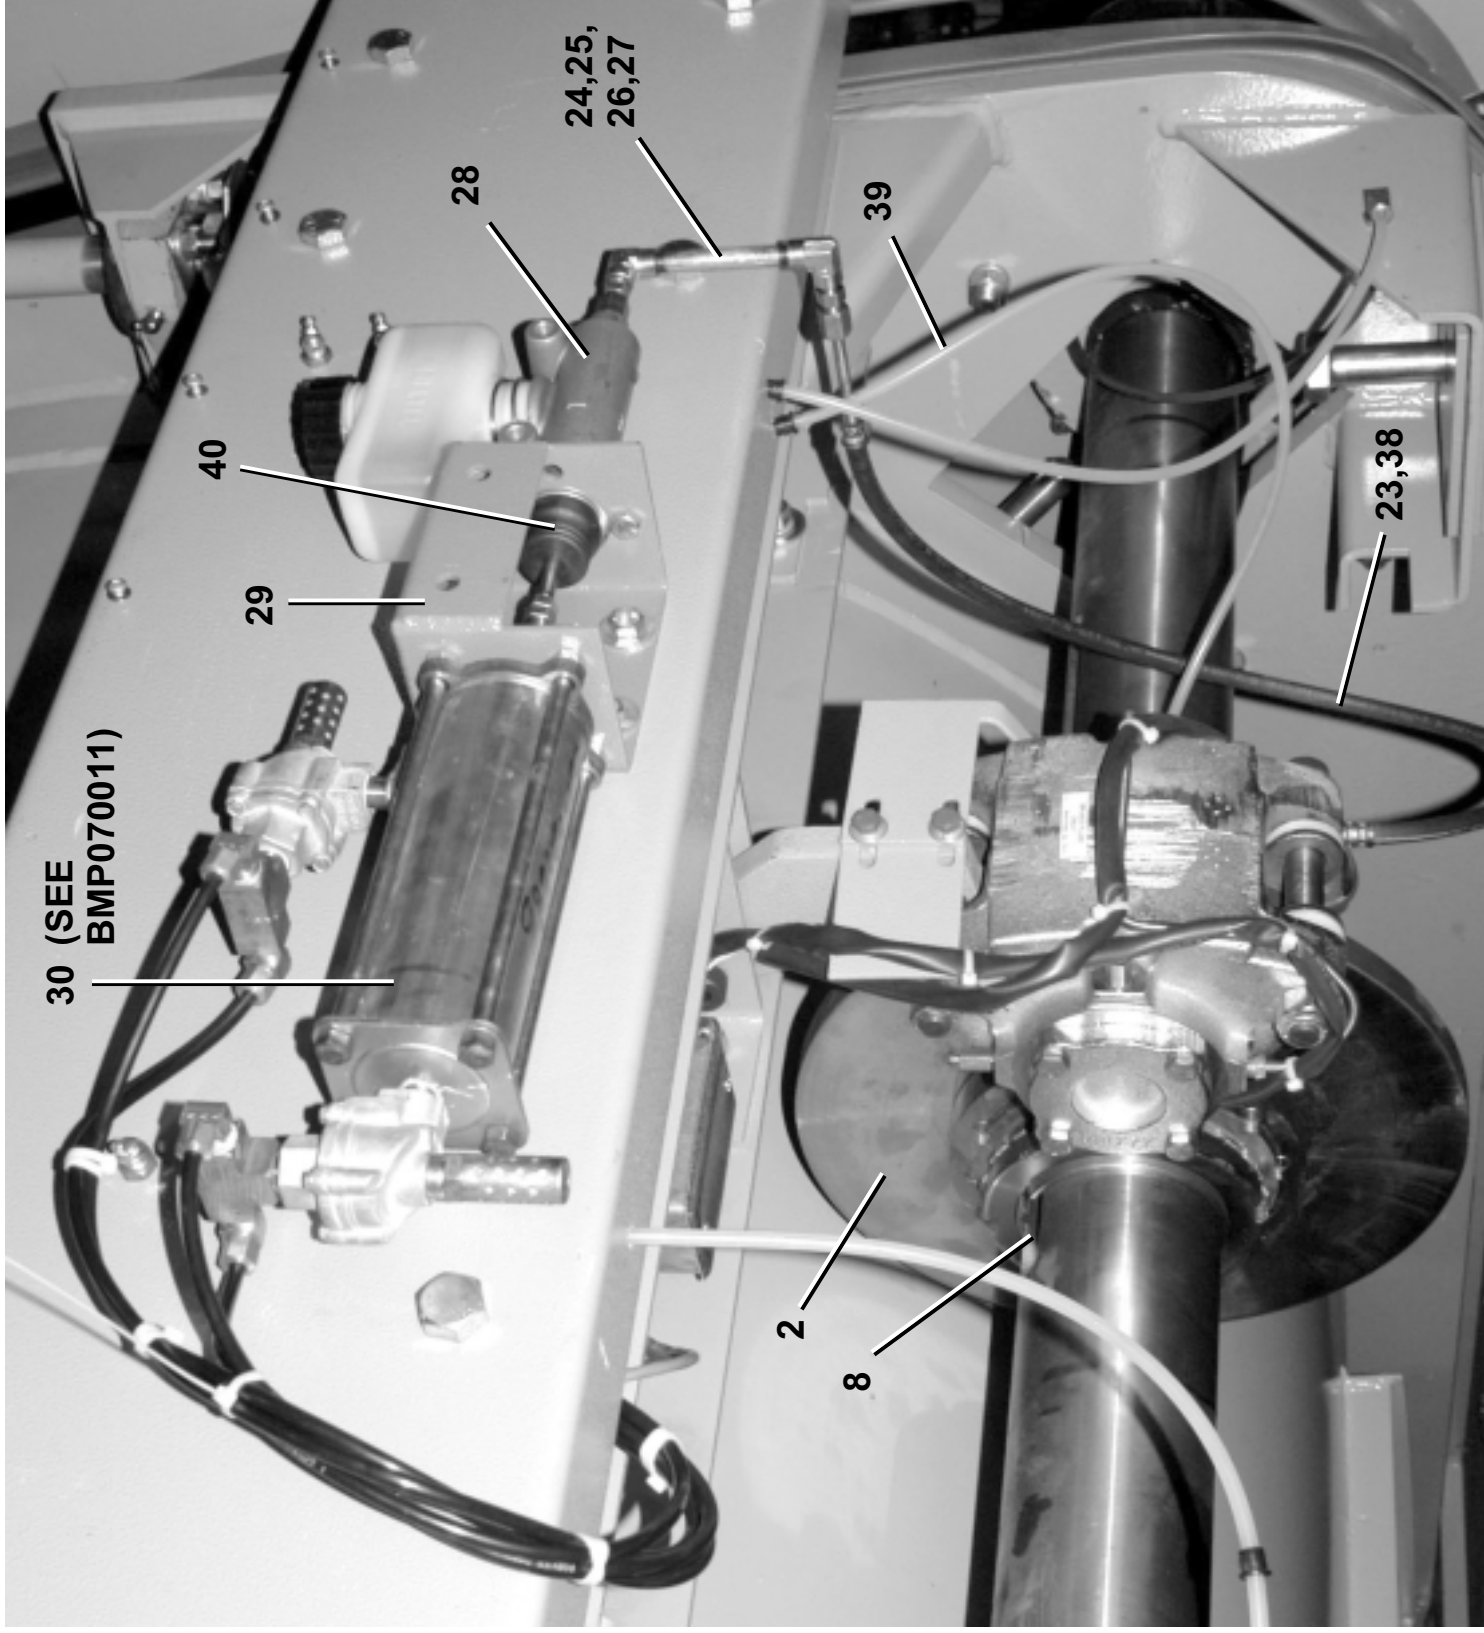




**Lower Disc Brake Installation**  
**6044SP2/SP3, 6044SP2 SM, 6044SP3 SM, 7244SP2**




Pellerin Milnor Corporation  
 P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

BMP970005/2007155B  
 (Sheet 2 of 4)

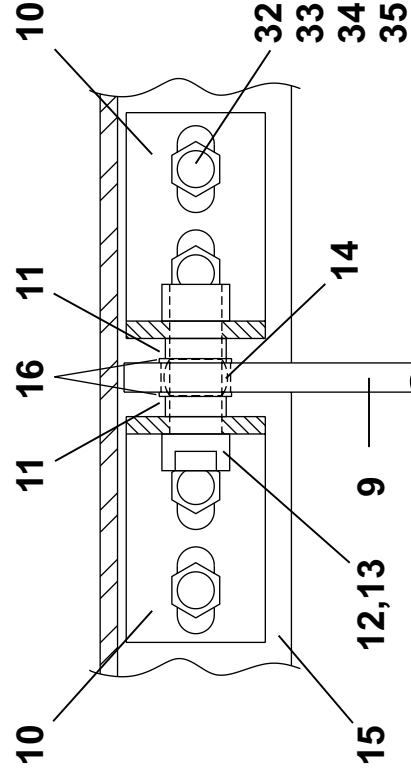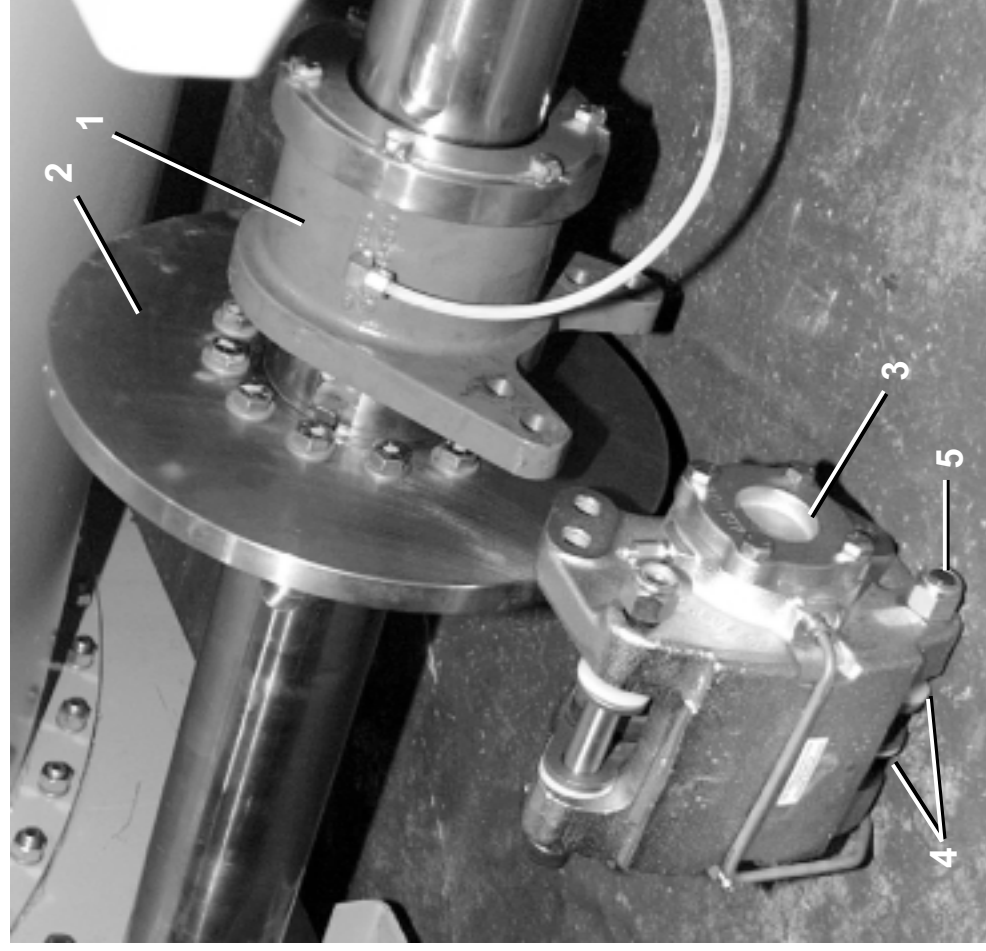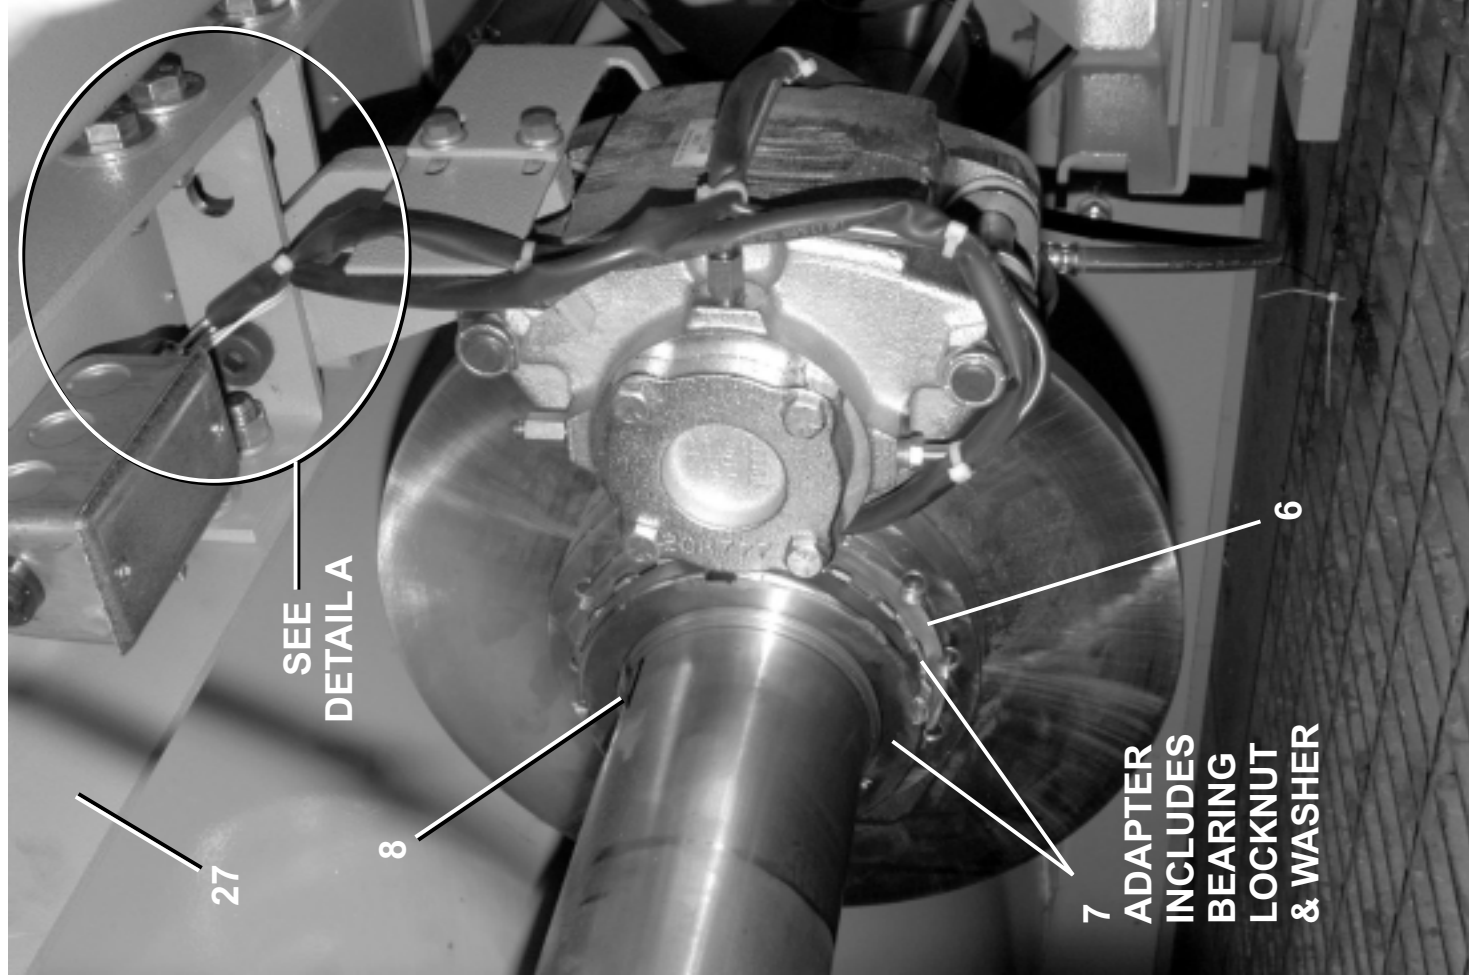

**DETAIL A: TORQUE ARM MOUNTING**

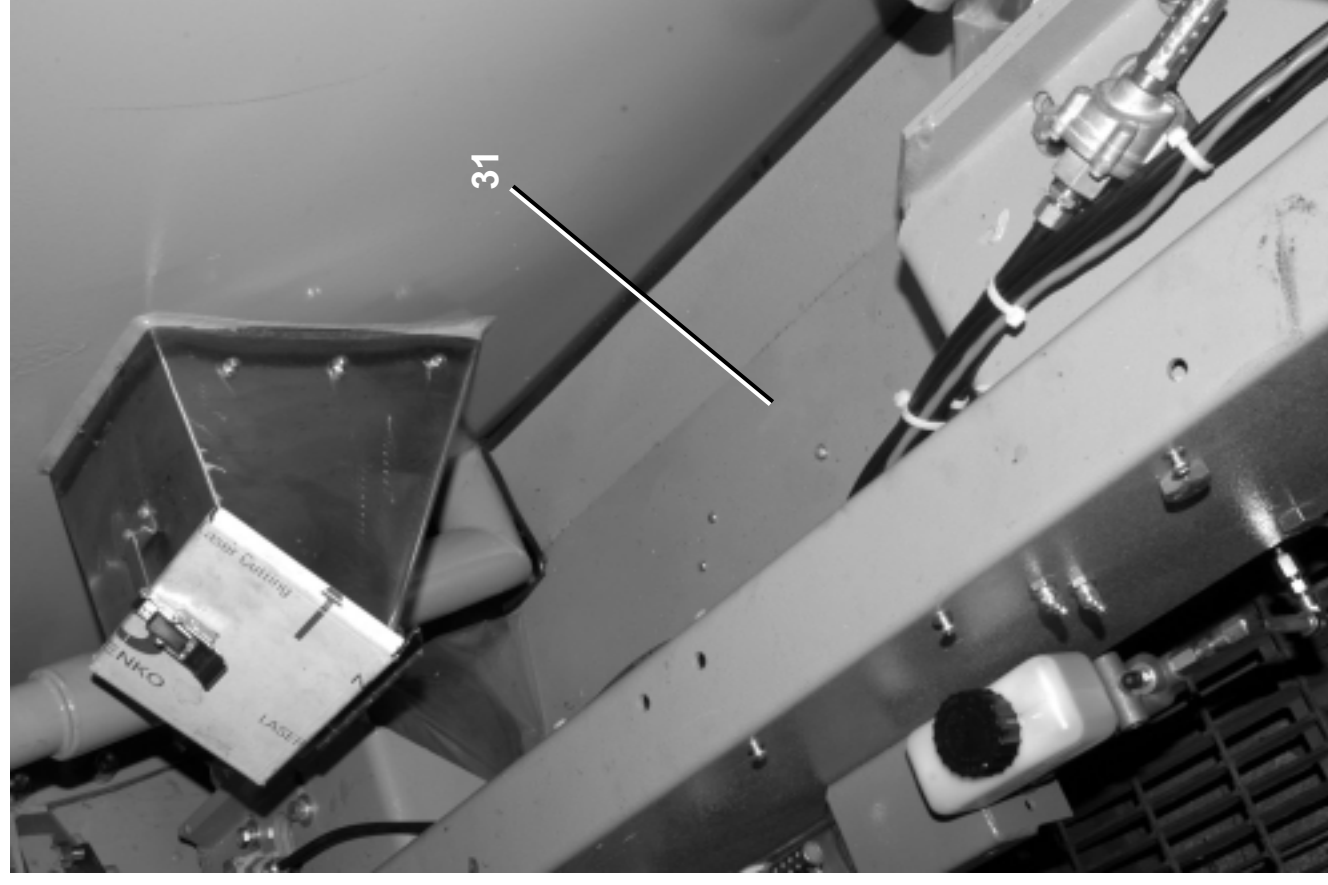

# Lower Disc Brake Installation

## 6044SP2/SP3, 6044SP2 SM, 6044SP3 SM, 7244SP2



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

BMP970005/2007155B  
(Sheet 3 of 4)


Litho in U.S.A.



44

41,42

41,42

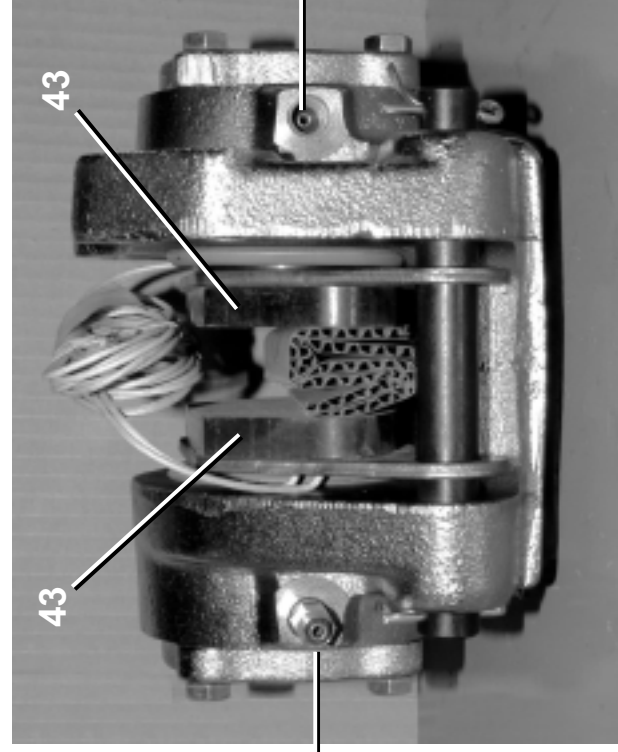

41  
42

43

42

### Parts List—Lower Disc Brake Installation

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			-----ASSEMBLIES-----	
A		GBR28001	INST=DISC BRAKE=60SG	
B		GBR36001	INST=DISC BRAKE=72SG	
			-----COMPONENTS-----	
all	1	ABR28002A	ASSY=DISK BRAKE SPLIT BRNG	
all	2	ABR28003	DISC ASSY +BALANCE=60+725G	
all	3	54KC7961	CALIPER HYD FIXMT 12/20 ROTOR	
all	4	03 65203	DISC BRAKE PAD DAMPENER 1/8T	
all	5	15C098	HXSOKSTRPBLT 3/4X5+1/2X5/8-11	
all	6	01 09294	RETAIN RING-FLANGE(STEEL)+\$4S	
all	7	56AHS22	SNW22 BRG ADAPTER 4" CYL BORE	
all	8	15E260	KEY-DISC BRAKE	
all	9	W2 19569	*WELD TORQUE ARM 60+72SG	
A	10	02 19570	BRKT=TORQUE ARM MOUNT	
B	10	03 06531	BRACKET=TORQUE ARM MT 72SG	
all	11	X4 22046C	7/8" DIA. SPACER=COBUCK	
all	12	15C095	HXSOKSTRPBLT 3/4X1+3/4X5/8-11	
all	13	15G238N	HXLOCKNUT NYL 5/8-11UNC STL/	
all	14	54AA00PBB	BUSH BALL 3/4 RBC-B12L	
A	15	02 19573	CHANNEL=TORQUE ARM MT	
B	15	03 06530	CHANNEL=TORQUE ARM MT 72SG	
all	16	17B132	INDUSTRIAL RETAIN.RING 4000-12	
all	17	02 19572A	RT BRKT=DISCBRAKE HOLDER FRNT	
all	18	02 19572	LT BRKT=DISCBRAKE HOLDER FRNT	
all	19	15K054	HXCAPSCR 5/16-18X3/4 GR5 XYLAN	
all	20	15U185	FLATWASHER(USS STD) 1/4" ZNC P	
all	21	15U210	LOKWASHER MEDIUM 5/16 ZINCPL	
all	22	54KC7961B0	O-RING 08-11070 BRAKE 2-660	
all	23	54KC7961H2	BRAKEHOSE #W2511 1/8X32" OAL	
all	24	52LY0CR001	HEXPIPNIPI 1/8"XCLOSE#5404-2-2	
all	25	52JY0CR001	ELBOW 1/8"FEM.#5504-02-02	





# Lower Disc Brake Split Bearing

## 60044SP2/SP3, 6044SP2 SM, 6044SP3 SM, 72044SP2/SP3

BMP980024/2006285B  
(Sheet 1 of 3)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

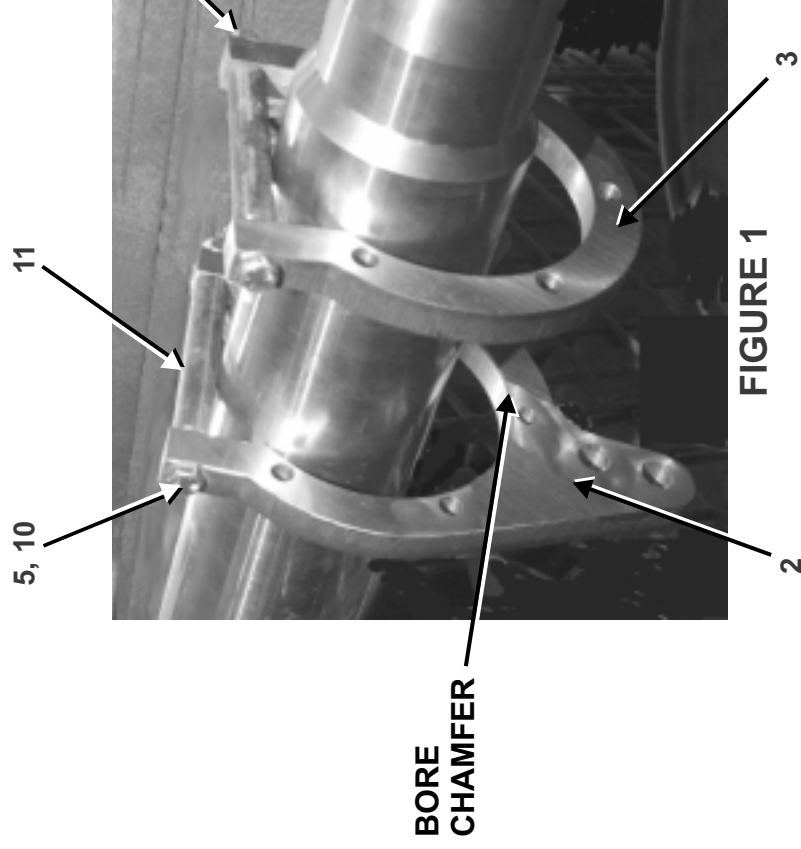
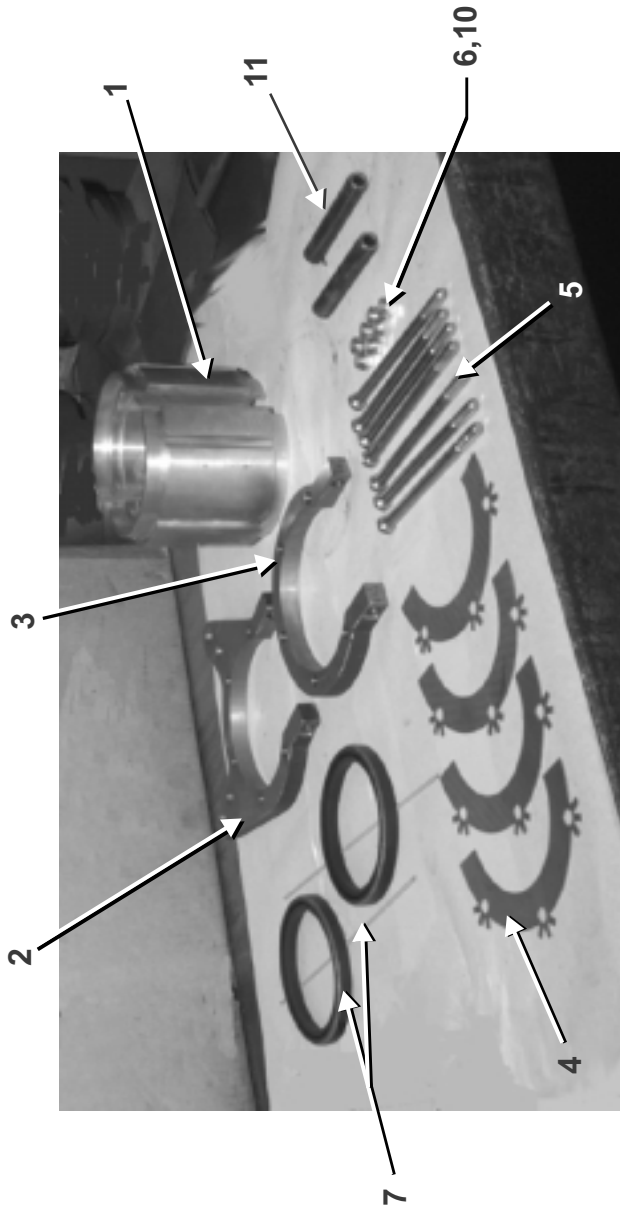


FIGURE 1

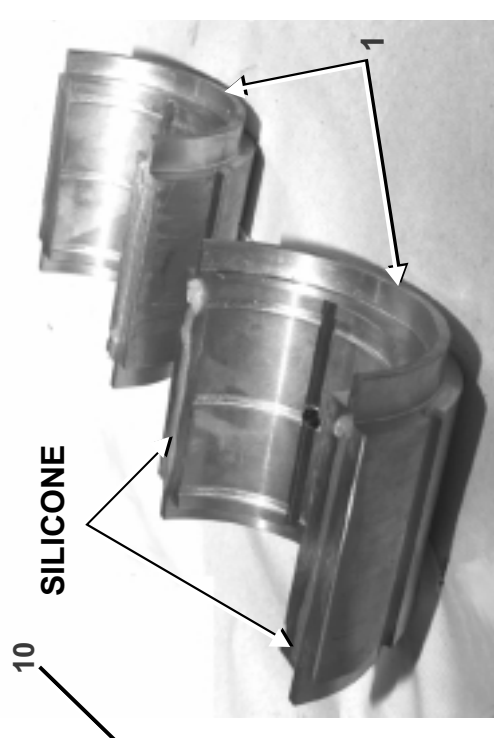


FIGURE 2

### Assembly Procedures:

1. Slide front and rear flanges (Items 2 & 3) onto the shaft. Bore chamfers should face inward. Assemble spacers (Item 11) and ensure bolts are loose. (See Figure 1). (New installation and complete replacement only.)
2. Apply thin bead of high temperature RTV silicone to the bronze bushing seams (Item 1). (See Figure 2).
3. Put two halves of bronze bushing around shaft. Ensure alignment by matching alignment marks. (See Figure 3).
4. Push front and rear flanges (Items 2 & 3) onto bronze bushing (Item 1). Use hard rubber or plastic mallet only! Ensure spacers are loose. Rotate bushing so seams are approximately 90 degrees to the flanges openings. (See Figure 7).
5. Assemble seals (Items 7). Use hard rubber or plastic Mallet Only (See Figure 5).
6. Assemble seal retainers (Item 4) so they overlap seams. Ensure bolts (Items 5 & 6) are loose. (See Figure 6).
7. Tighten spacers (Item 11) until they no longer rotate. Constantly check assembly rotation around the shaft. Use hand wrenches only!
8. Ensure retainers (Item 4) edges meet but do not overlap. Tighten bolts in an alternate pattern. Constantly check assembly rotation. Use hand wrenches only! If binding occurs, loosen bolts and repeat. (See Figure 7).
9. With all bolts tightened rotate assembly. Bend star tabs on retainer. Assembly should rotate freely.
10. Assemble fittings and tubing for grease supply line. (See Figures 7 & 8).

NOTE: Use "Antiseize" Lubricant on all threads.

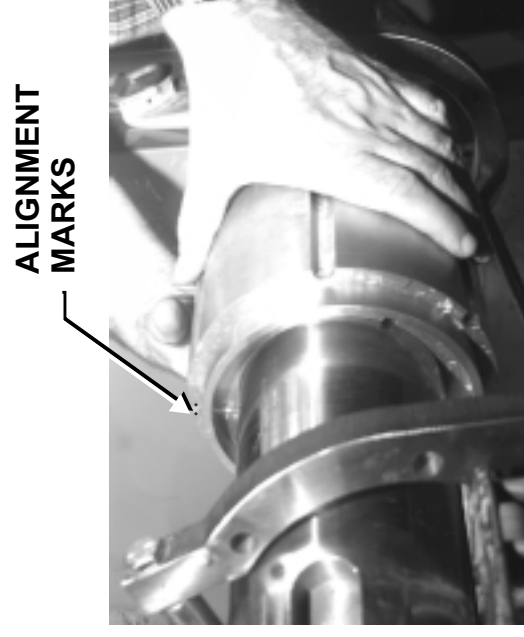


FIGURE 3

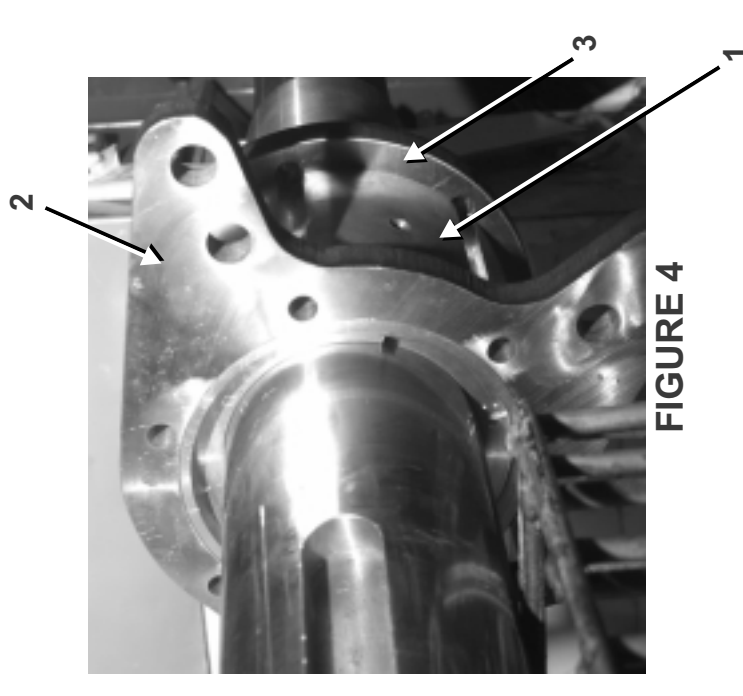


FIGURE 4

**Lower Disc Brake Split Bearing**  
**60044SP2/SP3, 6044SP2 SM, 6044SP3 SM, 72044SP2/SP3**

BMP980024/2006285B  
(Sheet 2 of 3)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.




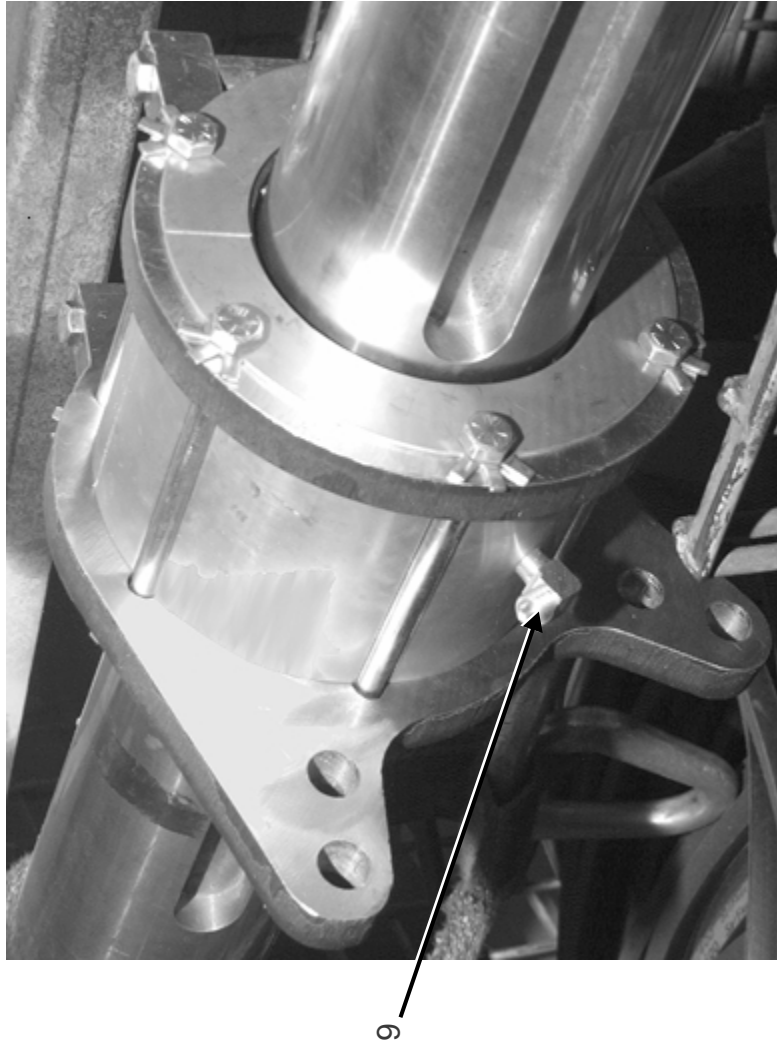


FIGURE 7

FIGURE 5

FIGURE 6

FIGURE 8

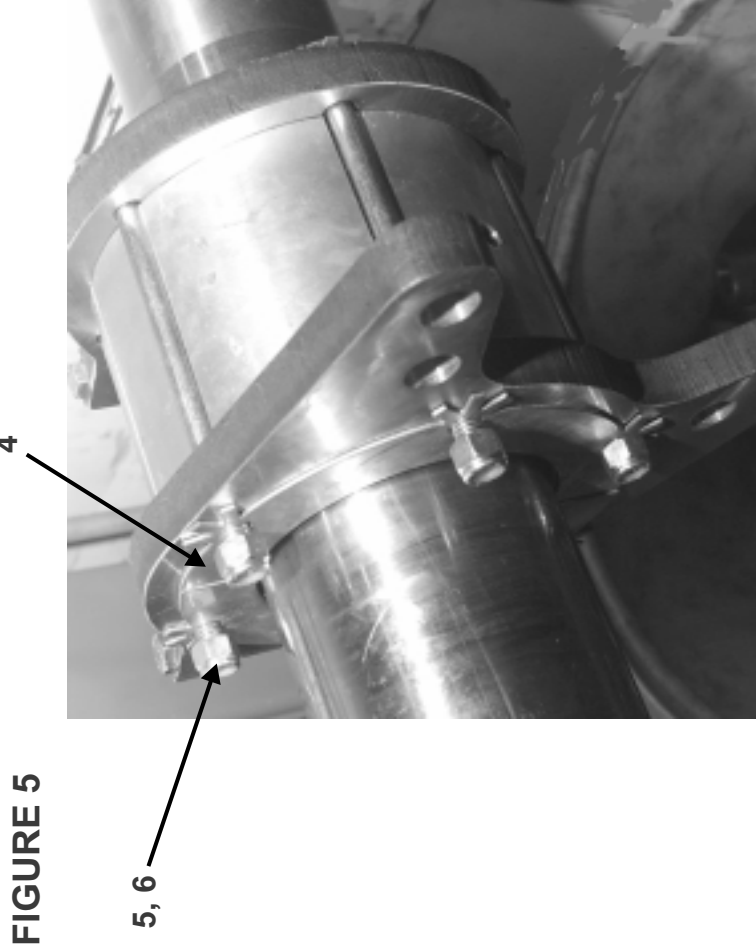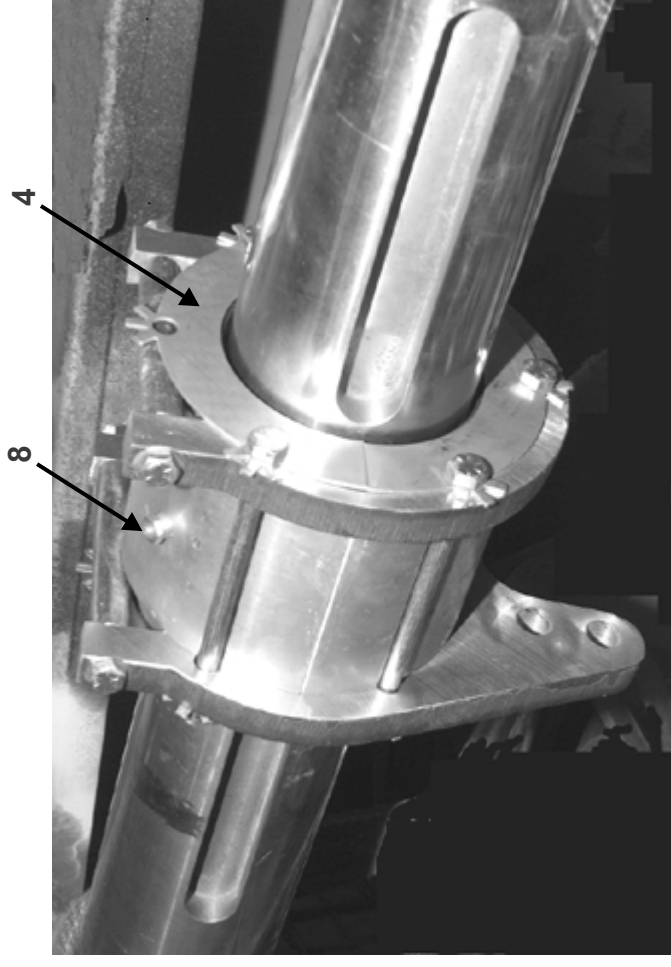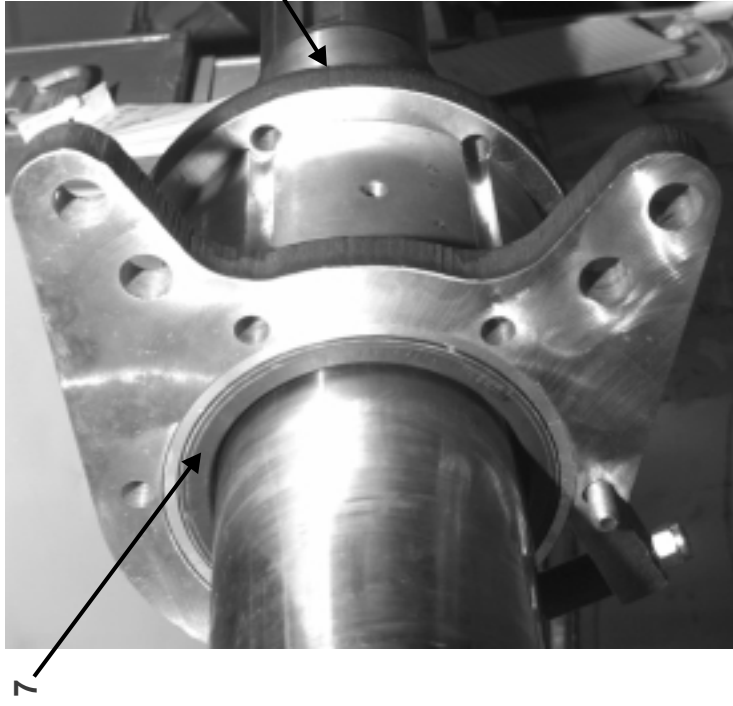

**Pellerin Milnor Corporation**  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**Parts List—Lower Disc Brake Split Bearing**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
	A	ABR28002A	ASSY=DISK BRAKE SPLIT BRNG	
			-----ASSEMBLIES-----	
			-----COMPONENTS-----	
all	1	X2 19577	SPLIT BUSHNG=DISK BRAKE BRNG	
all	2	X2 19578	FRONT FLANGE=DISK BRAKE BRNG	
all	3	X2 19579	REAR FLANGE=DISK BRAKE BRNG	
all	4	02 10426B	WASH=SEAL RETAIN+LOCK+SPLIT	
all	5	15K142	HXCAPSCR 3/8-16X6 GR8ZC	
all	6	15G205	HXNUT 3/8-16UNC2B ZINC GR2	
all	7	24S126	SEAL 4X5X.5 JM#R-0400-10175RUP	
all	8	54M029	RELIEFFIT 1/8STR ALEMITE 47200	
all	9	53A031B	BODY-EL90MALE.25X1/8 #269C-42B	
all	10	15G218	HXLOKNUT NYL 3/8-16 STL/ZNC	
all	11	X2 19580	SPACER=DISC BRAKE BRNG	


# Upper Brake Assembly 60SGU and 72SGU

BMP970006/97072V  
(Sheet 1 of 2)

**MILNOR**  
Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

BMP970006/97072V (1 of 2)

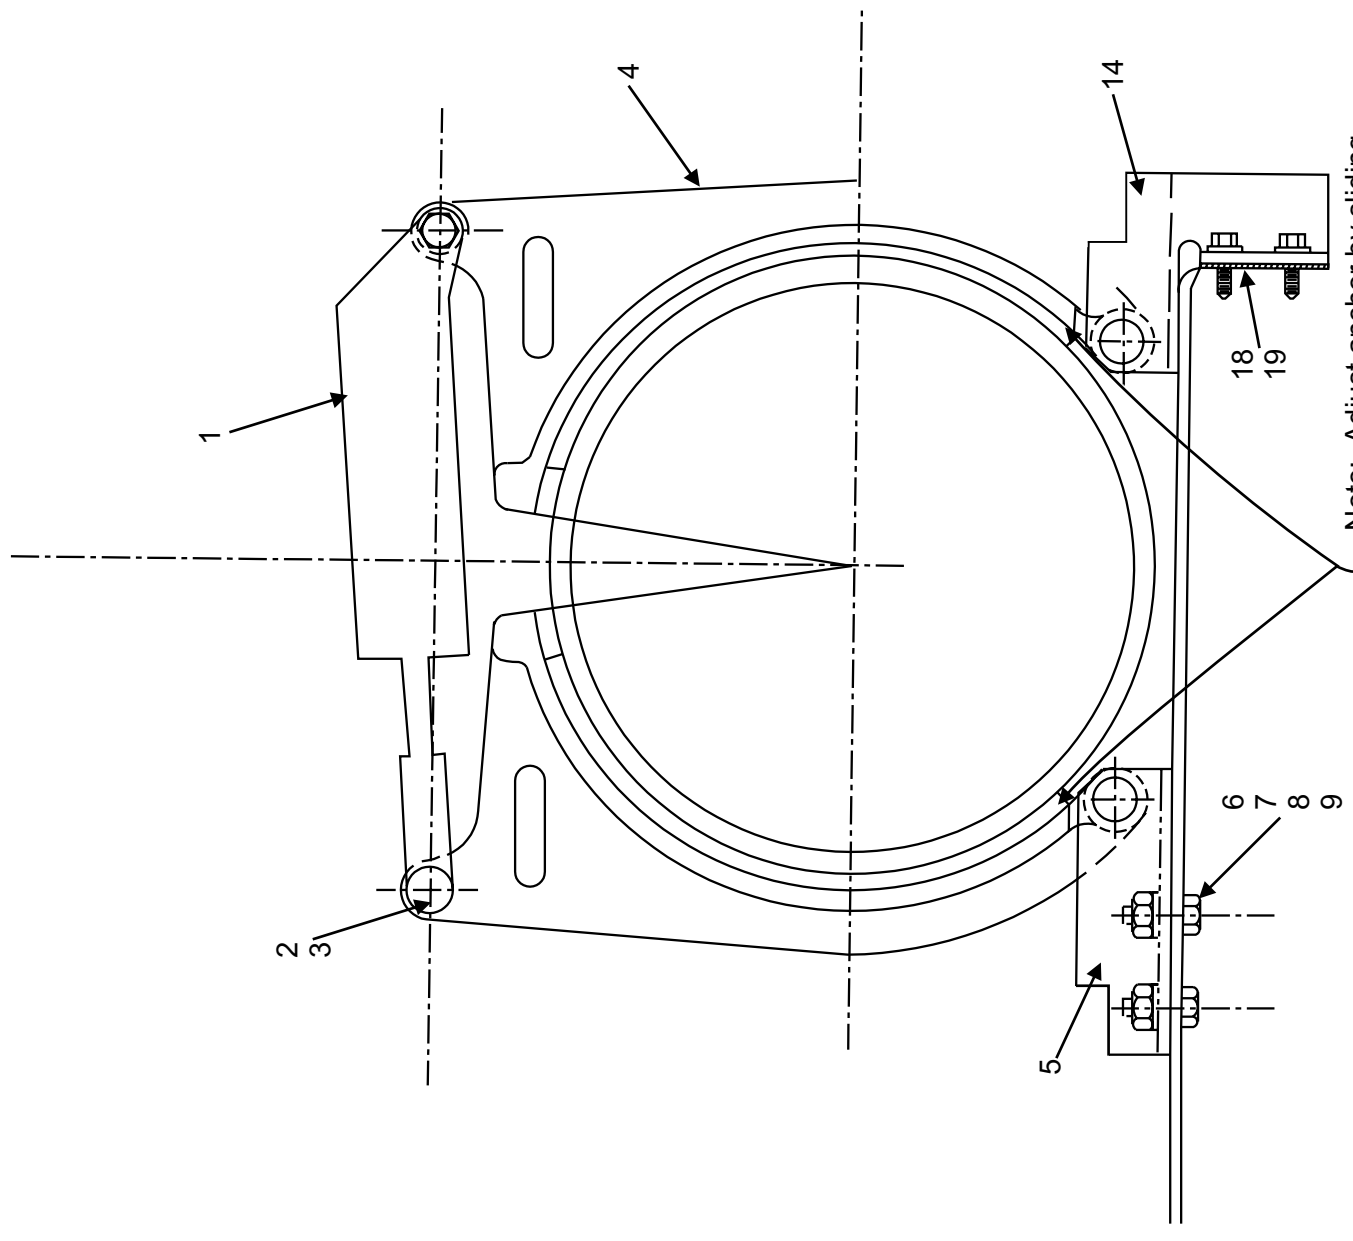

Note: Adjust anchor by sliding back and forward so that brake lining clears drum in open position and contacts drum in closed position.

Note: Tighten these jam nuts enough to take out excess clearance. Do Not Over Tighten, Air Cylinder must move freely.

Note: When Brake is off the back of the shoe pushes against the stop to prevent the brake from rattling. Center open in stop with shoe so that shoe pushes on stop in open position and doesn't drag on drum.

Do not lubricate make sure nyliners are in place.



**Pellerin Milnor Corporation**  
P. O. Box 400, Kenner, LA 70063-0400

BMP970006/97072V (2 of 2)

Litho in U.S.A.

Parts List—Upper Brake Assembly				Parts List, cont.—Upper Brake Assembly	
Used In	Item	Part Number	Description	Item	Part Number
			Comments		
	A	G40 00200	95391D BRAKE ASSY=SAFETY 72SGU		72SGU
	B	G40 00200A	95391# BRAKE ASSY=SAFETY 60SGU		60SGU
			-----ASSEMBLIES-----		
			-----COMPONENTS-----		
all	1	A40 01000	89457U*BRAKE CYLINDER=SAFETY 72SGU		
all	2	17A040	CLEVISPIN 1/2"X1+3/8" DRILLED		
all	3	15H045	STDCOTTERPIN 1/8X1 SS18-8		
A	4	SA 28 131N	85131C*BRAKESHOE(NON-ASB)72SG+WETCH		
B	4	SA 28 127N	84522D*BRAKESHOE=60"WETCHUTE NONASB		
all	5	02 18986	95521B ANCHOR=BRAKE END 1/60SGH		
all	6	15G230	HXNUT 1/2-13UNC2B SAE ZINC GR2		
all	7	15U300	LOKWASHER REGULAR 1/2 ZINC PLT		
all	8	15U490	FLAWASH 1+1/2X17/32X1/4ZINC		
all	9	15K173A	HXCAPSCR 1/2-13UNC2AX1.75 GR5 PLATD		
all	10	17A045	CLEVIS PIN 3/4"X 3" DRILLED + ZNC		
all	11	54E223	NYLNR12L12-FBUSH3/4X13/16X3/4		
all	12	15H051	STDCOTTERPIN 1/8X1+1/2ZINCPL		
all	13	04 00331	95391C LIMIT BKT=BRAKEASSY=SAFETY		
all	14	02 18987	81047C ANCHOR=BRAKE END 1/60SGH		
all	15	15K105	HXCAPSCR 3/8-16UNC2A1.25 GR5 PLATED		
all	16	15U255	LOKWASHER MEDIUM 3/8 ZINCPL		
all	17	15U240	FLATWASHER(USS STD) 3/8" ZNC PLT		
all	18	02 18984	81047A SHIM=BRAKE END 16GA		
all	19	02 18984A	85403B SHIM BRAKE END 10GA		AS REQUIRED



**Section**  
**Bearing Assemblies**


**4**

## MAIN BEARING AND SEAL REPLACEMENT FOR DIVIDED CYLINDER MACHINES

This section applies to the front and rear cylinder shaft bearings of all divided cylinder machines (Rapid Load, Staph-guard<sup>®</sup>, dye machines, etc.). It does not apply to jackshaft bearings, idler shaft bearings or bearings on open pocket machines.

The bearings covered by this section are double row, spherical roller, self aligning bearings; Koya, SKF, FMC, Torrington or equal. Referring to FIGURE 1, the rear (clean side on Staph-guard<sup>®</sup> models) bearing is firmly held in the bearing housing (bearing and seal carrier) by the shaft seal holder, preventing axial movement. The front (soil side on Staph-guard<sup>®</sup> models) bearing is free to move axially in the bearing housing to accommodate thermal expansion of the shaft during operation and is thus the "floating" bearing. Both bearings are held in place on the tapered portion of the shaft by a bearing lockwasher and locknut.

The front and rear bearings are each protected from contamination from wash water by three spring loaded, lip type seals and a shaft seal leak-off cavity (that carries off any water that leaks past the main water seals) as shown in FIGURE 1.

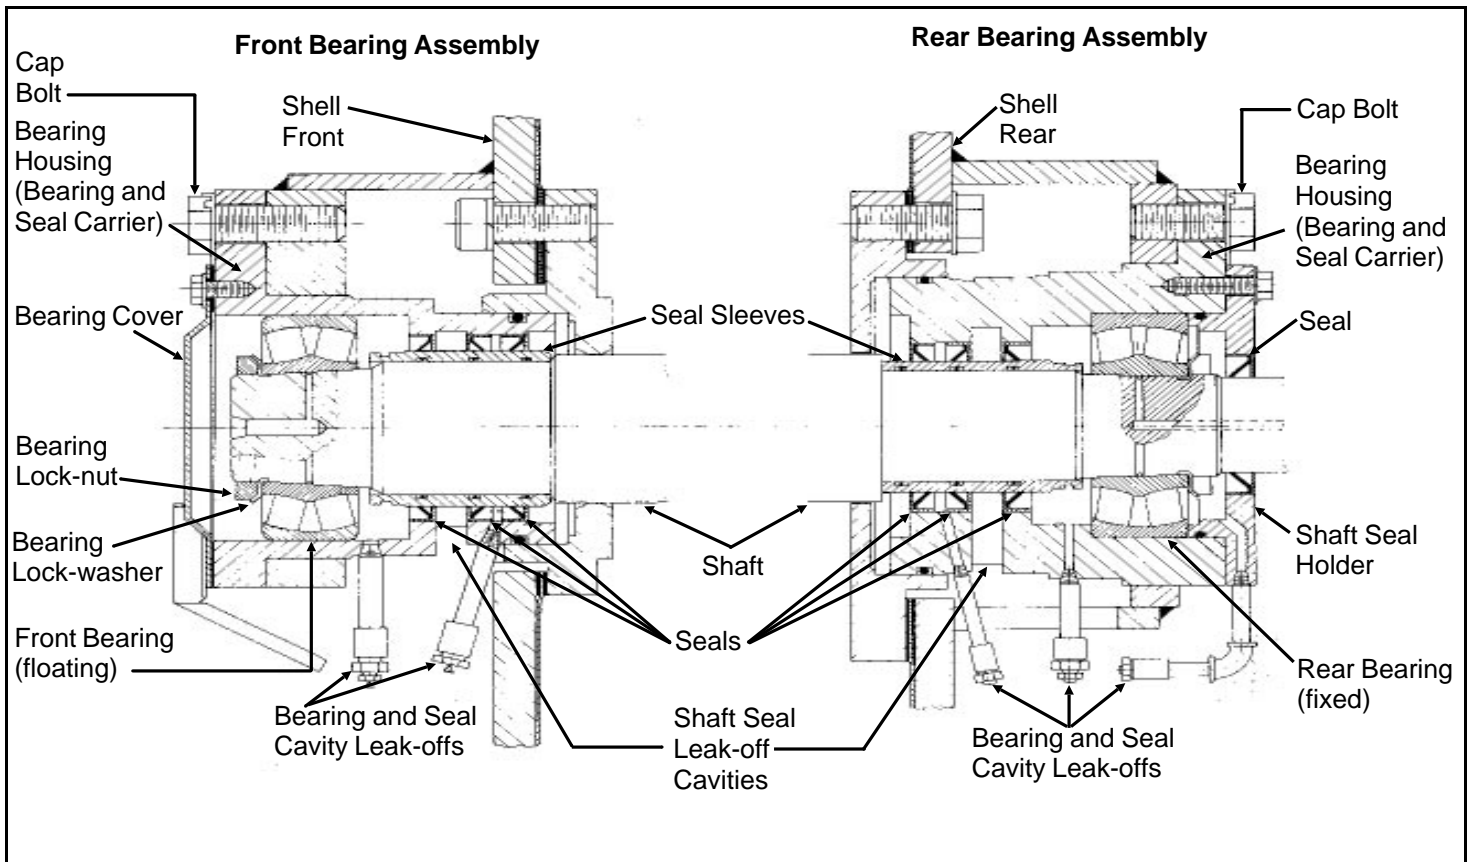

**Figure 1** (MSSM0303AE)  
**Cross Section View of Front and Rear Bearing Assemblies**  
(Bearing Assembly for 60" and 72" WED Shown. Others similar.)



Access to the bearings and seals for lubrication is provided by the various grease passages. Excess lubricant is excreted through the bearing and seal cavity leak-offs as shown on FIGURE 1. The bearings and seals must be lubricated regularly and the leak-off cavities flushed out periodically through the plugged cleanout connections, in strict accordance with the preventive maintenance procedures elsewhere.

If bearing replacement becomes necessary due to wear, it is essential that the bearings *and seals* are replaced. Seal replacement requires removal of the bearing housing and seal sleeve. (In rare instances where the seals are known to be in good condition, it is not necessary to remove the bearing housing, seals or seal sleeve when a bearing is replaced.) **A pulling fixture is required to remove the bearing housing. A set of guide rods, a seal sleeve setting fixture and a bearing setting fixture are required for reinstallation of the housing.** These tools are available for rental or purchase from the Milnor<sup>®</sup> factory and are pictured elsewhere in this section. Contact the factory two weeks in advance of repairs, when ordering these tools.


This maintenance is performed in the following order:

1. Remove old bearing(s). When removing both bearings, remove the front (soil side) bearing first.
2. Remove bearing housings, seal sleeves, and seals.
3. If both bearings were removed, install the bearing housing, seal sleeve, seals, and new bearing on the rear (clean side).
4. Install the bearing housing, seal sleeve, seals, and new bearing on the front (soil side).
5. Tighten bearing(s).

See the Main Bearing Assembly drawing for your machine for bearing component part numbers.

## Removing the Bearing (Front or Rear)

1. Loosen, then remove the main drive belts and cylinder shaft pulley (if applicable) by lowering the drive base with the jacking bolts. Do not attempt to pry belts off with a pry bar or by rolling the sheave. Remove the bearing cover (or shaft seal holder) to expose the bearing.
2. Bend back the locking tang on the bearing lock-washer then remove the locknut and lockwasher.
3. The center tapped hole in the shaft end is an oil passage through which oil may be forced between the tapered shaft and the bearing inner race. Install a pipe fitting into this tapped hole as shown in figure to the right. Using a "Porto-Power" or similar hand operated hydraulic pump, force fluid into the passage. Pump hard to build up fluid pressure. This pressure will cause the inner race to expand slightly; just enough to free the tapered surfaces and allow the bearing to slip off easily. If the bearing is not readily removed, remove the front water level

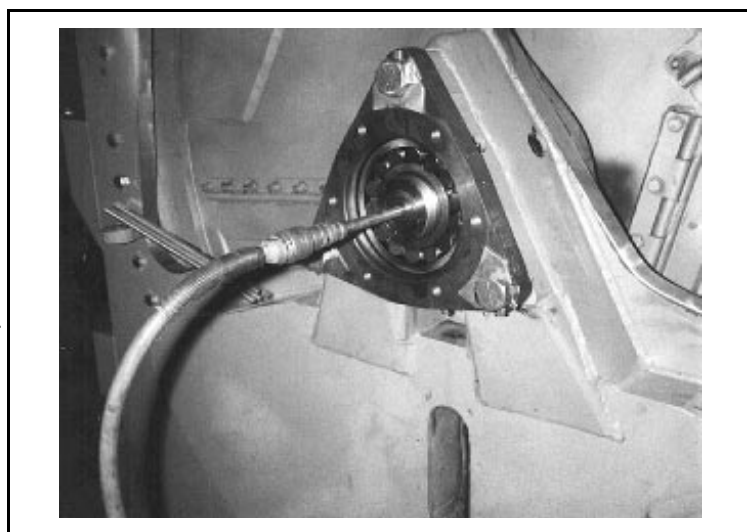

**FIGURE 2** (MSSM0303AE)  
**Connection From Hydraulic Pump to Assist in Bearing Removal**

---


inspection plate and use a timber to pry up the cylinder to remove cylinder weight from the bearings. Once the bearing is removed, the cylinder drops only approximately 1/32" before the shaft comes to rest on the shaft support.

4. Slide the bearing off of the shaft and if it is to be reused, place it on a clean surface and cover with a clean, lint free cloth.


## Removing the Bearing Housing (Bearing and Seal Carrier), Seal Sleeve, and Seals (Front or Rear)

These procedures require the use of a pulling fixture and guide rods available from the Milnor<sup>®</sup> factory. With the bearing cover (or shaft seal holder) and the bearing removed, proceed as follows:

1. Remove the three bearing housing cap bolts and the grease lines from the bearing housing front plate. Install guide rods in two of the bolt holes, as shown in FIGURE 3.
2. Install the pulling fixture as shown in FIGURE 4, by placing each of the four threaded rods through a hole in the steel plate with hexnuts to the outside of the plate then screwing each rod into the appropriate tapped hole in the bearing housing (same holes as used to mount the bearing cover or shaft seal holder).

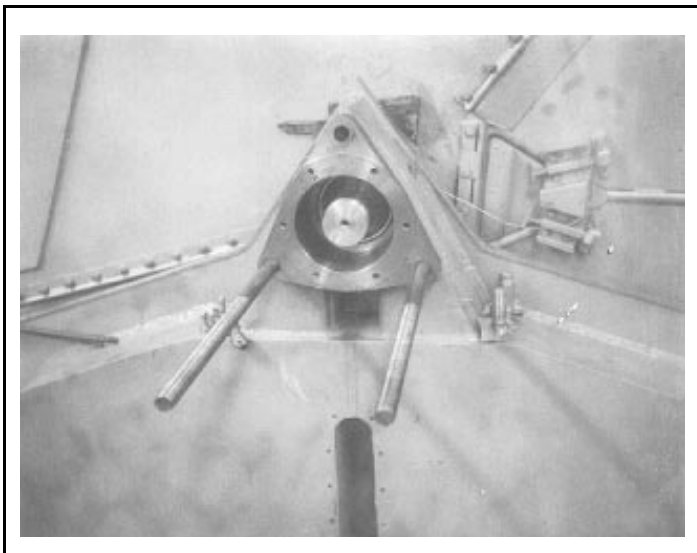

**FIGURE 3** (MSSM0303AE)  
**Two Bearing Housing Guide  
Rods in Position**

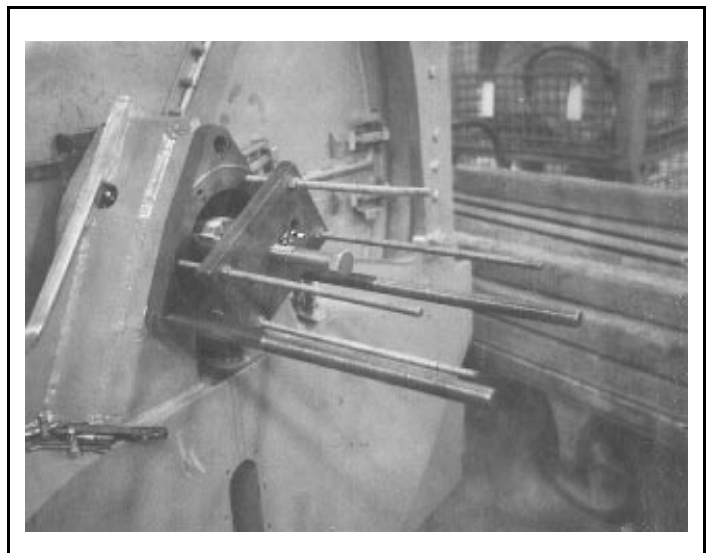

**FIGURE 4** (MSSM0303AE)  
**Bearing Housing Pulling  
Fixture in Position**

---

**NOTE:** Step 2a or 2b below will cause the bearing housing to slide away from the shell. Shims were placed under one or more of the three bearing housing pads during factory assembly to align the housing and insure its being exactly parallel with the shaft. **When removing the bearing housing, be sure to keep these shims separate and identified so that they may be returned to their proper location, otherwise the bearing and seal will be out of line and may be damaged after a short operating period.** As a precaution in case the shims are lost during disassembly, you will find stamped next to the bearing housing the proper thickness of shims required (if any) under each adjacent bearing housing pad. The stamped number indicates the shim thickness in thousandths of an inch. For example, the number “38” indicates that 38/1000 (.038") shims would be required under this pad.

- 2a. Tighten all four hexnuts on the threaded rods such that the pulling fixture plate is pressed against the shaft end. With an impact wrench, tighten down on the center bolt until the housing slides out, or
- 2b. If no impact wrench is available, simply continue to tighten down on each of the four hexnuts behind the pulling fixture plate, alternately and progressively, until the housing slides out. It may be necessary to place a spacer (approx. two inches long) between the plate and the shaft to provide enough clearance between the plate and the bearing housing.
3. Once the bearing housing is free of the shell, carefully slide it off of the guide rods and place on a clean work surface.
4. The seal sleeve will almost always remain on the shaft when the housing is removed. Remove the seal sleeve *taking care not to damage or scar it* and place it on a clean work surface.

## Precautions for Bearing Replacement

The most important ingredient in successful bearing and seal installation is *cleanliness*. The bearing housing must be free of all foreign matter. The grease and leak-off passages must be blown clear and all *foreign* matter removed. You must have a clean work area. Keep your hands and tools free from grit and grime. Wash your hands before starting and as required during these procedures. Foreign matter is, without doubt, the most frequent cause of bearing failure, and one over which the manufacturer has no control.

Where cleaning is required, bearings, bearing housings and seal sleeves may be cleaned with the following solvents or cleaning agents (in strict accordance with the manufacturer’s recommendations as such substances are generally toxic and/or explosive under certain conditions):

Benzene	Gasoline	Naptha
Chlorethane	Kerosene	Trichlorethylene
Freons	Mineral Spirts	

Do not, however, expose any components to the above substances for more than 24 hours and only use at room temperature. Never use the following solvents or cleaning agents: alcohols, cresols, phenols, flouro propanols, or other similar chemicals or mixtures.

**NOTE:** Hammer blows, overheating, or improper use of force can damage precision parts.

## Replacing the Bearing Housing, Seal Sleeve, and Seals (Front or Rear)

1. With the seal sleeve removed, press all old seals out of the bearing housing. Remove the large o-ring from the outside of the housing. Thoroughly clean the bearing housing and flush out all grease passages to make certain they are unblocked. Remove the o-rings from the inside of the seal sleeve and clean the seal sleeve.
2. While the bearing housing is disassembled, charge all grease passages with grease. This will assure that there are no blockages.
3. Replace the o-rings in the seal sleeve and the large o-ring on the outside of the bearing housing. Replace with new o-rings if the old ones are worn.
4. Press new seals into the bearing housing. You may gently work the seals in with a mallet and metal drift as shown in FIGURE 5.

### ▲ CAUTION ▲

Each seal must be of the proper material and face the proper direction. The type of material and direction the seal faces may differ from one seal to another within the same bearing housing and also from one type of machine to another. It is essential to consult the Main Bearing Assembly drawing for your machine for the proper part number and direction to face each seal.

5. Slip the seal sleeve into the bearing housing as shown in FIGURE 6 below right, using care not to damage or fold under any of the seal lips. Be sure to insert the sleeve in the proper direction (see Bearing Assembly drawing).



**FIGURE 5** (MSSM0303AE)  
**Installing Seals in  
Bearing Housing**




**FIGURE 6** (MSSM0303AE)  
**Installing Seal Sleeve in  
Bearing Housing**

**NOTE:** If both housings are being installed, install the rear housing first.

6. With two of the three temporary guide rods in position on the shell, place the bearing housing onto the guide rods and install the seal sleeve setting fixture on to the bearing housing as shown in FIGURE 7. The seal sleeve setting fixture prevents the seal sleeve from being pushed out of the housing as the housing is inserted into the shell. Note that the seal sleeve setting fixture and the bearing setting fixture are very similar, but the seal sleeve setting fixture has a longer hub.
7. With a clean, lint free cloth, apply a coating of light machine oil to the outside of the housing, to assist in installation. Push the housing into the shell as shown in FIGURE 8. Once the housing is far enough into the shell to support itself, place any shims back into position between the housing and the shell. Remove, then replace guide rods if required to place shims under bearing housing pads.



**FIGURE 7** (MSSM0303AE)  
**Installing the Bearing Housing Setting Fixture onto Housing (42" machine shown)**

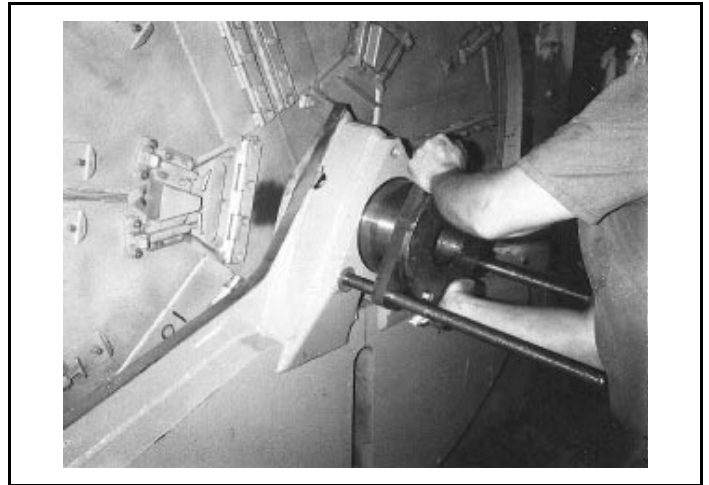

**FIGURE 8** (MSSM0303AE)  
**Pushing the Bearing Housing into the Shell (60" Rapid-load machine shown)**

8. Install the third guide rod, spacers if required, and hex-nuts, using these to seat the housing fully, as shown in FIGURE 9. Remove the seal sleeve setting fixture.
9. Remove the guide rods and install the bearing housing cap bolts. See "BOLT TORQUE REQUIREMENTS" elsewhere, for proper torques.
10. With the grease gun, pump grease into the inner portion of the bearing cavity, such that when the bearing is installed, the space between the bearing and the seals will be approximately 1/3 full of grease.
11. Proceed to "Measuring Unmounted Clearance . . ." below, even if both the front and rear bearings are being replaced. Once the rear bearing is installed, the bearing housing replacement procedures may then be repeated for the front (soil side) bearing housing.



**FIGURE 9** (MSSM0303AE)  
**Tightening the Bearing Housing into the Shell (42" machine shown)**

## Measuring Unmounted Clearance and Setting Bearing (Front or Rear)

The bearings used on Milnor<sup>®</sup> washer and dye extractors are the very best anti-friction devices available for these applications. However, the anti-frictional characteristics of the bearings will be reduced if they are not properly installed. It is of critical importance when installing these tapered roller bearings, to accomplish the following (A step by step procedure follows this synopsis):

1. Accurately measure the unmounted internal clearance of the bearing (gap between the rollers and outer race before the bearing is installed). This is an essential quality control measure.
2. Calculate the final internal clearance by subtracting the specified clearance reduction (amount that the internal clearance must be reduced when the bearing is tightened onto the tapered shaft) from the unmounted clearance.
3. Tighten the bearing onto the shaft until the final internal clearance as calculated is achieved and verified by measurement.

These measurements are taken in thousandths of an inch. Although this requires precise work, attention to detail and a good set of feeler gauges, it is the only way to insure that the bearing will be tightened onto the shaft to precisely the right tension. If you have any questions on performing the measurements or adjustments described below, your local bearing supplier or the Milnor<sup>®</sup> factory can assist you. Although these procedures require precision over and above that normally required for laundry room maintenance, they are standard in bearing installation and absolutely essential:

**NOTE:** Step 1 which follows, requires a good set of feeler gauges including .001" through .010" in thousandths of an inch increments. Contact your local bearing supplier.

1. When you are ready to proceed (and not before) remove the new bearing from it's box or protective wrapping. Do not attempt to clean the bearing or wash out the preservative coating. On a clean work surface, stand the bearing on edge and insert a .003 feeler gauge into the bearing as shown in FIGURE 10, at right. The gauge should be inserted just inside the outer race between two rollers and worked through to the opposite row of rollers. Rotate the inner race of the opposite row so that the end of the feeler gauge is caught between a roller and the outer race.
2. Try to pull the gauge straight out. If it comes out, increase the size of the gauge by .001". If it does not come out, decrease the gauge by .001". The thickest feeler gauge that will come out is the unmounted internal clearance of the bearing.
3. Compare the measured clearance with the "Unmounted Clearance" in the table below. If the measured clearance is not within the range shown, do not use the bearing. Contact your bearing supplier for an exchange.



**FIGURE 10** (MSSM0303AE)  
**Measuring Bearing  
Unmounted Clearance  
(bridge for 42" machine shown)**

**NOTE 1:** The clearances listed in the chart are industry standards and therefore apply to all brands of bearings supplied by Milnor<sup>®</sup>. If other sources of bearings are used, refer to the manufacturer's instructions for proper clearances.

**NOTE 2:** To locate your bearing on the chart, match the first five characters of the manufacturer's part number (*not the Milnor<sup>®</sup> part number*) with those in the chart. For example, for a manufacturer's part number 22217LBK, find under "Manufacturer Part Number" the line "22217 . . ."

**Table of Bearing Clearances**

Manufacturer Part Number	Unmounted Clearance		Clearance Reduction	
	Minimum	Maximum	Minimum	Maximum
22330 . . .	.0071	.0091	.002	.003
22213 . . .	.0030	.0039	.001	.002
22216 . . .	.0028	.0037	.001	.002
22217 . . .	.0044	.0057	.0015	.0025
22312 . . .	.0030	.0039	.001	.002
22316 . . .	.0037	.0049	.001	.002
22320 . . .	.0044	.0057	.0015	.0025
22328 . . .	.0063	.0081	.002	.003
23220 . . .	.0044	.0057	.0015	.0025

4. Calculate and record the final internal clearance by deducting the "Clearance Reduction" for your bearing (see above chart) from the measured clearance. For example, if you measured .004 and the clearance reduction is .001 to .002, then the final internal clearance should be between .002 and .003.
5. Hand pack the bearing with grease by rotating the inner race and rollers, forcing grease between all rollers.

**NOTE:** The bearing will be set into position in Step 6. If both front and rear bearings are being installed, the rear (clean side on Staph-guard<sup>®</sup> models) bearing should be set in position first because it is the fixed bearing.

6. Set the bearing into the housing (with the taper facing the proper direction) and seat the bearing using the bearing setting fixture. This fixture is installed in similar fashion to the seal sleeve setting fixture. If you have just set the rear bearing and the front bearing housing is yet to be installed, leave the bearing setting fixture in place for now.
7. If you have just set the rear bearing and the front bearing housing is yet to be installed, repeat all steps in bearing housing installation, measuring unmounted clearance and setting bearing, for the front bearing and housing. The bearing setting fixture should not be removed from the rear housing until it is needed to seat the front bearing. This will prevent rear bearing components from being pushed out of position by the shaft as the front housing components are seated. Remove the bearing setting fixture from the front housing once the bearing is seated.

---


## Tightening Bearing(s) (Front and/or Rear)

1. Once both bearings are seated, or if only one bearing was replaced, install the bearing lockwasher(s) and locknut(s). Use a hammer and a metal drift as shown in FIGURE 11, to tighten the locknut. **It is imperative to only tap lightly and to assure that metal chips from the drift or locknut do not fall off and contaminate the bearing.** If both bearings are being tightened, work between the front and rear bearings and turn the basket by hand periodically, while tightening the locknut(s).
2. After tightening the bearing(s) onto the tapered shaft, check the internal clearance as pictured in FIGURE 12, by working a feeler gauge between the outer race and a roller of the outer row then between the outer race and a roller of the inner row.


**NOTE:** Sometimes, when setting the bearings, all the load is taken by only one row of rollers (although the load would quickly equalize on both rows after the machine has run for only a few minutes). If all the load is taken by one row, you will get an erroneous clearance reading. It is therefore, necessary to use the feeler gauge to measure the *clearance of both rows of rollers*. With the bearing in place on the machine it is admittedly rather difficult to get a feeler gauge back past the first row of rollers to measure the second *but it must be done*.

3. If one row of rollers is tight but the other has measurable clearance, tap lightly on the end of the shaft nearest the tight row of rollers to cause the shaft to shift axially and equalize the roller loading. Adjust the bearing tightness to achieve the internal clearance previously calculated.
4. When the proper internal clearance has been attained, lock the nut by bending over the matching tang on the lockwasher, making sure that all unused tangs are bent as near the nut as possible so that they will not rub against the bearing roller cage.

**Check each unused tab individually to insure this.**

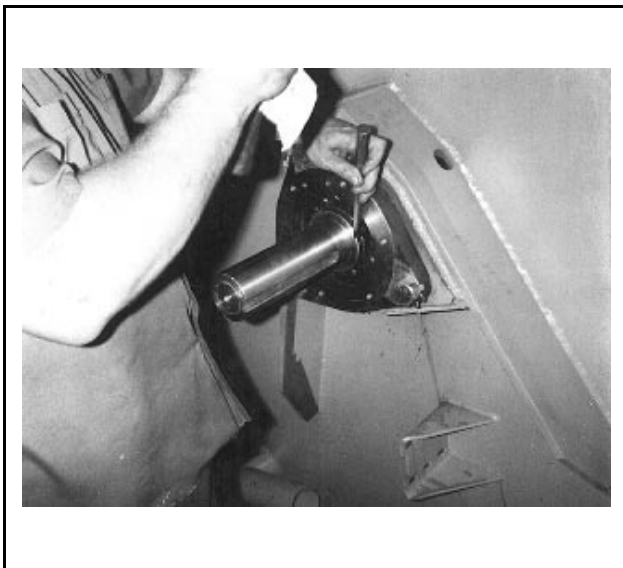

**FIGURE 11** (MSSM0303AE)  
**Tightening the Bearing  
Locknut (42" machine shown)**

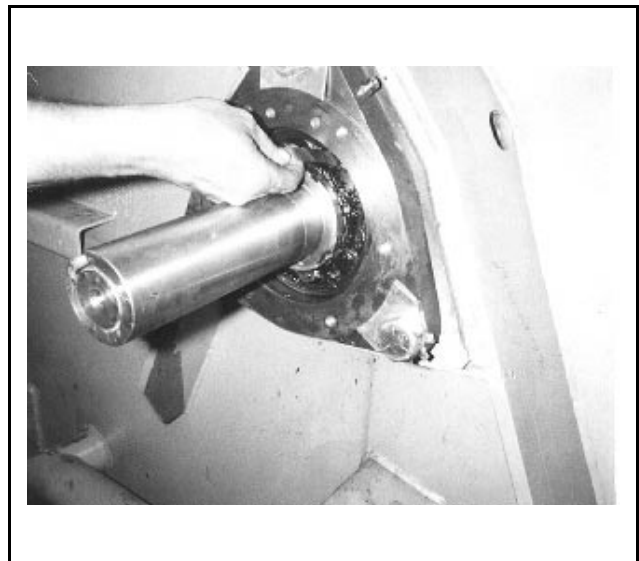

**FIGURE 12** (MSSM0303AE)  
**Measuring the Mounted Internal  
Clearance of the Bearing  
(42" machine shown)**




- 
5. With the grease gun, fill the space between the bearing and the front of the housing 1/3 full of grease.
  6. Install the bearing cover plate or shaft seal holder, as appropriate. When installing the shaft seal holder, take care not to damage the seal as it is gently pushed over the shaft. Cover the keyway on the end of the shaft with tape to prevent the sharp corners of the keyway from cutting the seal lip. Also, make sure that the seal lip does not turn over as it passes over rough areas.

**Main Shaft Bearing Assembly**  
**60036, 60044, 72044 WP2/ WP3/ DA3 & 6044WP2/SP2 SM(Single Motor)**

BMP840039/2006285B  
 (Sheet 1 of 3)

**MILNOR**  
 Pellerin Milnor Corporation  
 P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

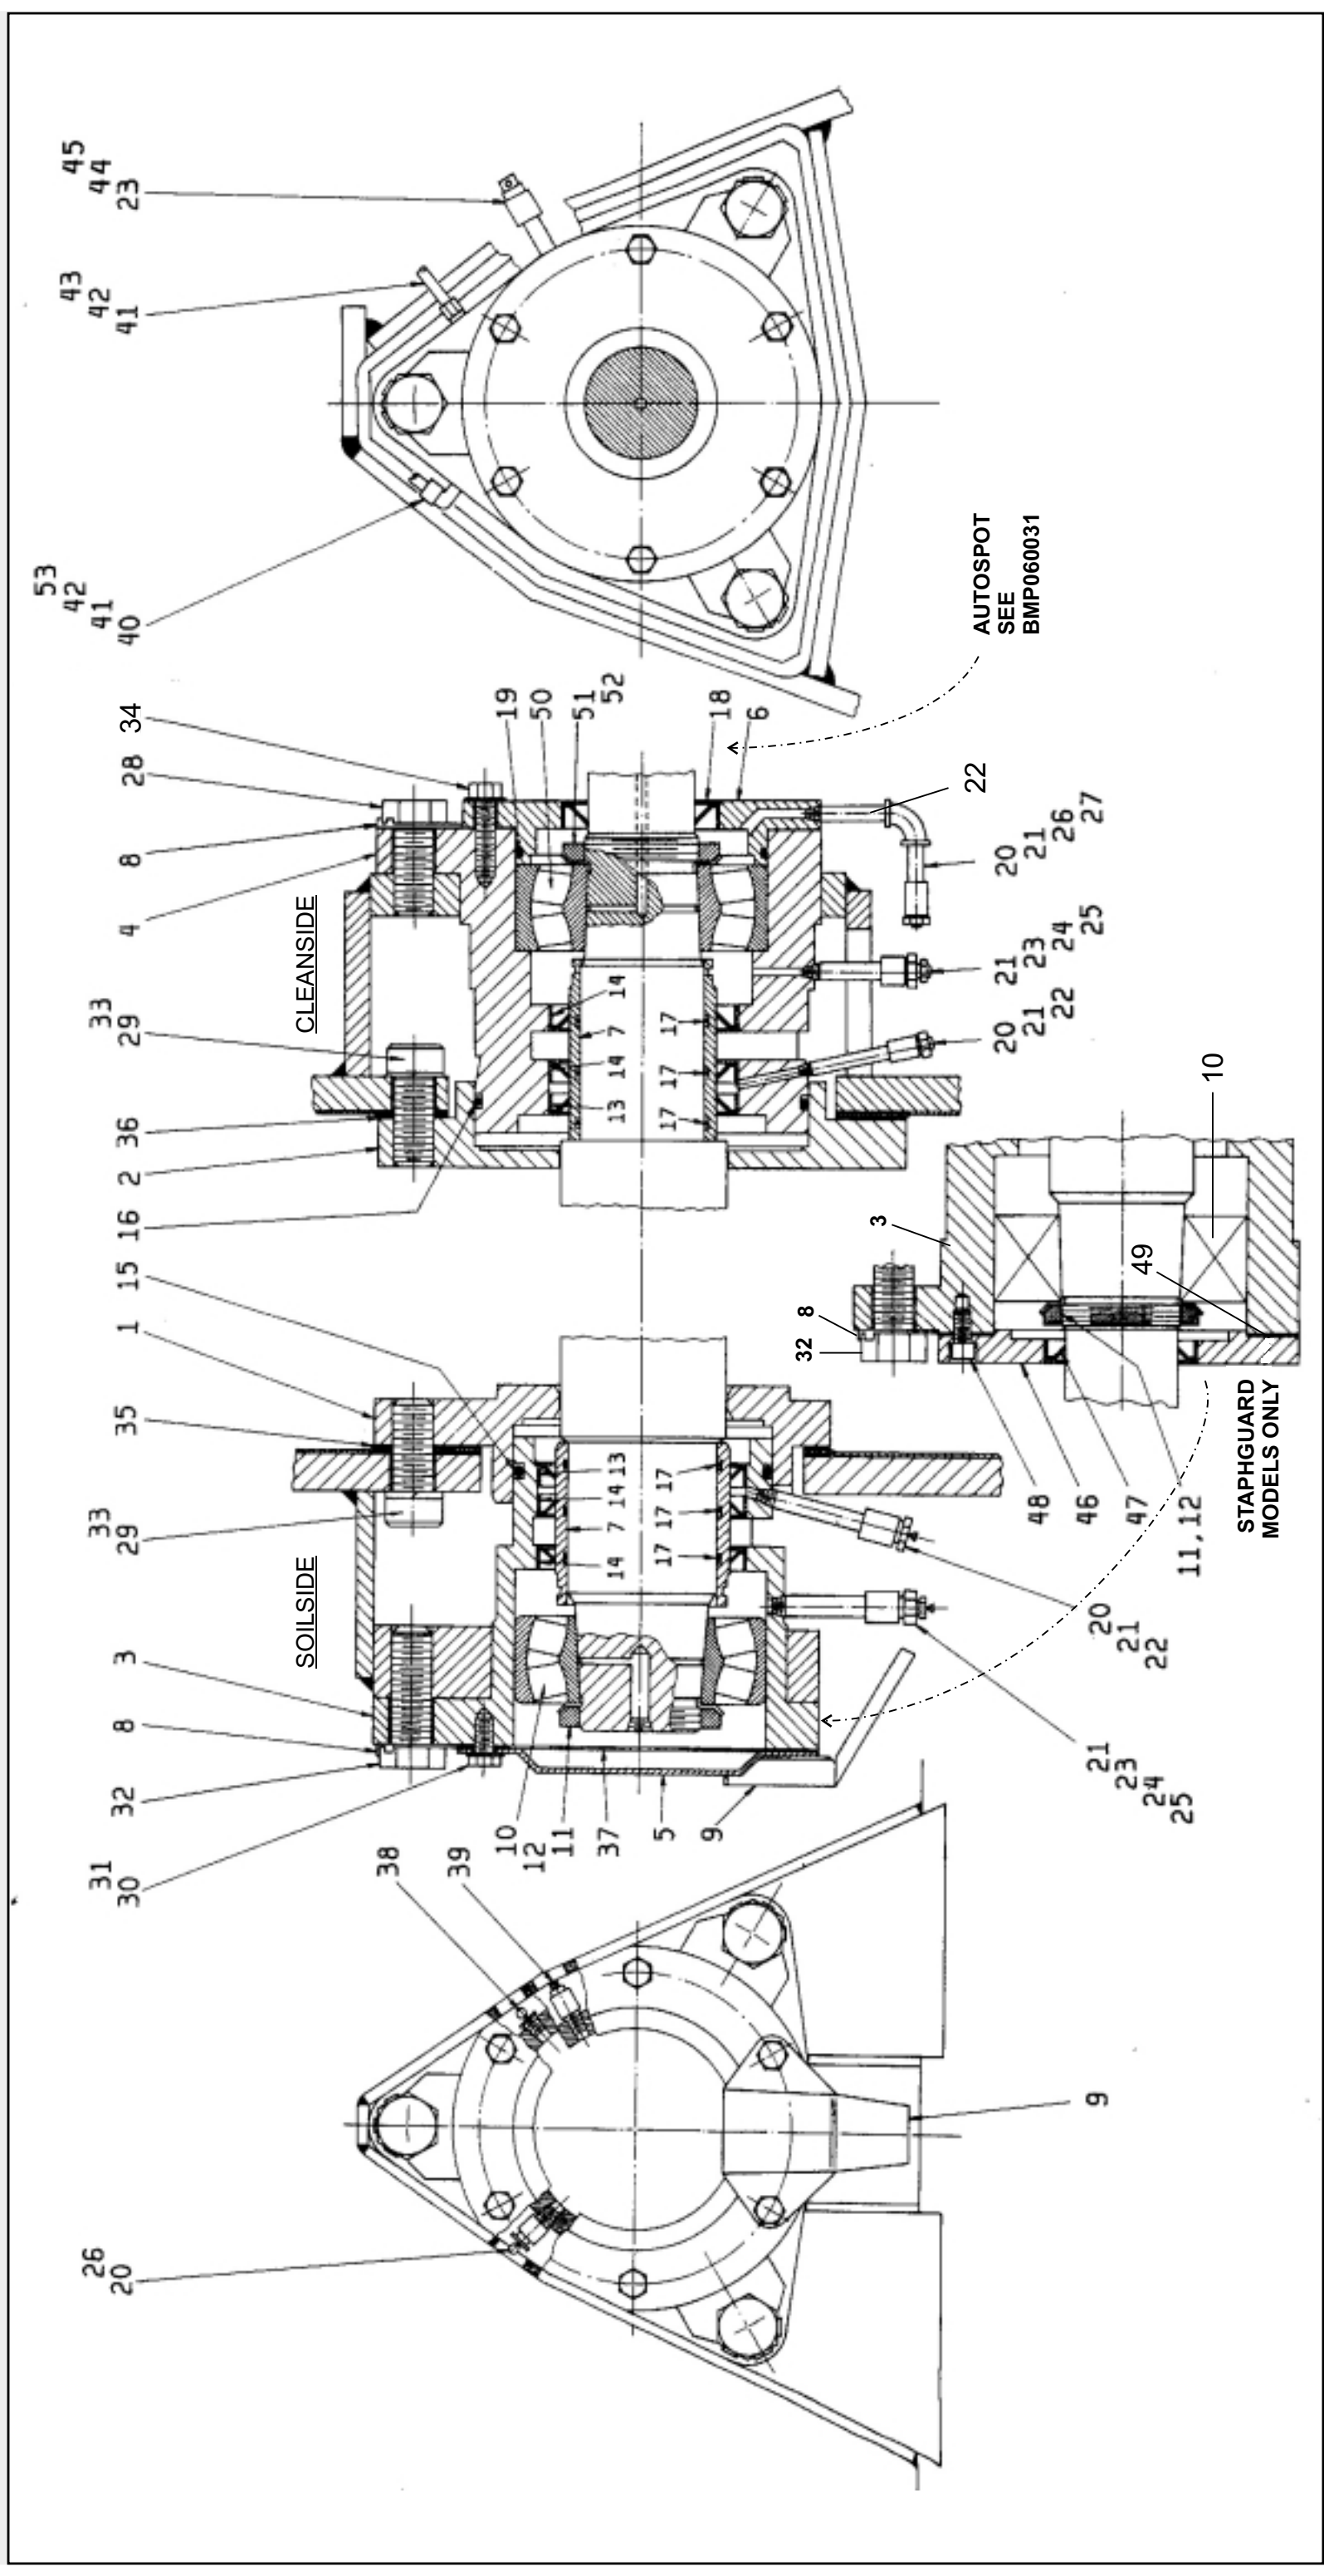



**Pellerin Milnor Corporation**  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**BMP840039/2006285B**  
(Sheet 2 of 3)

**Parts List—Main Shaft Bearing Assembly**

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			COMPONENTS	
all	1	X2 175008	SUPPORT=FRNTSHFT=60": C2-18843	60036,60044WP2
All	1	X2 175009	SHAFT SUPPORT= 60"WE: C2-18592	60036,60044WP3,DA3 SP2/SP3
all	1	X3 06047	SUPPORT=FRNTSHFT=72": C2-18843	72044WP2/WP3
all	1	X3 06047S	SHAFTSUPPORT-FRONT 4.81"D SS	72044DA3
all	1	X3 06003	SHAFT SUPPORT= 72"WE: C2-18592	72044SP2/SP3
all	2	X2 175009	SHAFT SUPPORT= 60"WE: C2-18592	60036,44WP2/WP3,DA3, SP2/SP3
all	2	X3 06003	SHAFT SUPPORT= 72"WE: C2-18592	72044WP2/WP3,SP2/SP3
all	2	X3 06003S	SHAFT SUPPORT-REAR 4.81"D S/S	72044DA3
all	3	X3 06005	HOUSING=FRNT BRG+SIL:C2-18842	60036,60044WP2 72044WP2,WP3
all	3	X2 175005	BRGHOUSE=FRNT=SG: C2-18590	60036,60044WP3,SP2/SP3, DA3; 72044SP2/SP3
all	3	X3 06005S	FRNT BRG HSG W/ S/S CAP 60WEU	72044DA3
all	4	X2 175007	BRGHOUSE=REAR=WEH:C2-18590	60036,44WP2/WP3,DA3 SP2,SP3; 72044SP2,SP3
all	4	X3 06369	HOUSING=REAR=BRG :C2-18590	72044WP2/WP3
all	4	X3 06369S	HOUSING REAR BRG S/S CAP	72044DA3
all	5	02 18618A	COVER=BEARING 60 WED	WP2 ONLY
all	6	X2 18190	HOLDER=SHAFT SEAL	60036,60044WP2/WP3,DA3
all	6	X2 175052	HOLDER=SEAL=60SG CS W/AUTOSP	60036,60044SP2/SP3
all	6	X3 06370	HOLDER=REAR SEAL	72044WP2/WP3,DA3
all	6	X2 175053	HOLDER=SEAL=60SG SS W/AUTOSP	72044SP2/SP3
all	6	X2 175054	SEAL HOLDER=AUTOSPOT SGL MTR	6044SP2 SM W/AUTOSPOT
all	7	X3 06006	SLEEVE=SEAL 2/60WEHU	60036,44WP2/WP3,DA3 SP2/SP3
all	7	X3 06165	SLEEVE=SHAFT SEAL=2/72WEDU	72044WP2,WP3,DA3,SP2/3
all	8	02 18219	LOCKWASH=MAIN BEARHOUSE ZINC	
all	9	02 18928	DRIPSHIELD=60" WE + ZINC	ALL EXCEPT SP2/SP3
all	10	56S22316T	SPHEROLBRG KOYO#22316RKW33C3FY	
all	11	56AHN16	AN16 BEARING LOCKNUT	
all	12	56AHW16	W16 BEARING LOCKWASHER	
all	13	24S114	SEAL 4.5X5.5X.50 JM# 9170 LUP	
all	14	24S114	SEAL 4.5X5.5X.50 JM# 9170 LUP	

**Parts List, cont.—Main Shaft Bearing Assembly**

Used In	Item	Part Number	Description	Comments
all	15	60C161	ORING 6"IDX1/4CS BUNA-70 #437	60036,60044WE2, 7244WP2/WP3,DA3
all	15	60C172	ORING 8"IDX1/4CS BUNA70 #445	60036,44WE3,DA3 SP2/SP3
all	15	60C172	ORING 8"IDX1/4CS BUNA70 #445	72044SP2/SP3
all	16	60C172	ORING 8"IDX1/4CS BUNA70 #445	
all	17	60C154	ORING 3+7/8ID3/16CS BUNA70#344	
all	18	24S111	SEAL 3X4.00X.437#21158-2175	60036,44WP2,WP3,DA3 SP2,SP3
all	18	24S111	SEAL 3X4.00X.437#21158-2175	60036,44WP2/WP3,DA3, SP2/SP3
all	18	24S112	SEAL 3.75X4.75X.500 CS/BUNA	72044SP2/SP3 72044WP2,WP3,DA3
all	19	60C160J	ORING 6+1/4ID1/8CS BUNA70 #259	
all	20	5SCC0CBE	NPT COUP 1/8 BRASS 125# 103A-A	
all	21	54M029	RELIEFFIT 1/8STR ALEMITE 47200	
all	22	5N0C03AG42	NPT NIP 1/8X3 TBE GALSTL SK40	
all	23	5SCC0EBE	NPT COUP 1/4 BRASS 125# W/HEX	
all	24	5N0E02KG42	NPT NIP 1/4X2.5 TBEGALSTL SK40	
all	25	5SB0E0CBEO	NPTHEXBUSH 1/4X1/8 BRASS 125#	
all	26	5N0CCLSB42	NPT NIP 1/8XCLS TBE BRASS STD	
all	27	5SL0CBEA	NPTELB 90DEG 1/8 BRASS 125#	ALL EXCEPT SP2/SP3
all	27	5SL0ENFK	NPTELB 45DEG 1/4 GALMAL 150#	SP2/SP3 ONLY
all	28	15B243	HEXCAPSCR 1-8X2+1/2 GR5 ZINC	
all	29	15U400	LOCKWASHER MEDIUM 1" ZINCPL	
all	30	15K145	HXCAPSCR 1/2-13UNC2AX3/4 GR5 P	WP2/3 ONLY
all	31	15U300	LOKWASHER REGULAR 1/2 ZINC PLT	WP2/3 ONLY
all	32	15B236	HEXCAPSCR 1-8UNC2AX3 SAEGR5 ZN	60036,44WP2, 7244WP2/WP3,DA3
all	32	15B243	HEXCAPSCR 1-8X2+1/2 GR5 ZINC	60036,44WE3,DA3, SP2/SP3
all	32	15B243	HEXCAPSCR 1-8X2+1/2 GR5 ZINC	72044SP2,SP3
all	33	15K236	SOKCAPSCR 1-8X2.75 BLK	
all	34	15K162	HXCAPSCR 1/2-13UNC2AX1.5 GR5 P	60036,44WP2/WP3,DA3 72044WP2/WP3,SP2/SP3 DA3



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**Parts List, cont.—Main Shaft Bearing Assembly**

Used In	Item	Part Number	Description	Comments
All	34	15K147C	SKCPSC 1/2-13X1 BLK	60036,44SP2/SP3
all	35	02 18768D	GASKET=SHAFT SUPT DA3	
all	35	02 18870	GASKET=SHAFTSUPPORT 2/60WEDU	60036,44WP2 ONLY
all	36	02 18768D	GASKET=SHAFT SUPT DA3	
all	37	02 18105	BEARING CAP GASKET	ALL EXCEPT SP2/S3
all	38	54M015	GREASEFIT 60X36/60X44 1610BL	
all	39	5SP0CFESSV	NPTPLUG1/8SQSLDBLKSTL LVENT125	
all	40	53A039B	BODY=EL90MALE5/16X1/8 #B69A-5A	
all	41	53A508	SLEEVE DELRIN 5/16"OD#60PT-5	
all	42	53A509	TUBE INSERT 5/16"OD X .53"LG.	
all	43	53A019B	BODYMALECON5/16X1/8COM#B68A-5A	
all	44	5N0E01KBE2	NPT NIP 1/4X1.5TBE BRASS STD.	
all	45	51P008B	PLUG SQSLD 1/4"BLK LVENT STEEL	
all	46	X2 175053	HOLDER=SEAL=60SG SS W/AUTOSP	60036,44SP2/SP3 ONLY
all	46	X2 175052	HOLDER=SEAL=60SG CS W/AUTOSP	72044SP2/SP3 ONLY
all	47	24S111	SEAL 3X4.00X.437#21158-2175	SP2/SP3 MACHINES ONLY
all	48	15K147C	SKCPSC 1/2-13X1 BLK	60036,44SP2/SP3 ONLY
all	48	15K162	HXCAPSCR 1/2-13UNC2AX1.5 GR5 P	72044SP2/SP3 ONLY
all	49	02 18105	BEARING CAP GASKET	SP2/SP3 MACHINES ONLY
all	50	56S22316T	SPHEROLBRG KOYO#22316RKW33C3FY	ALL EXCEPT 72044WP2/WP3
all	50	56S23220T	SPHEROLBRG NTN#23220BL1KD1C3	72044WP2/WP3 ONLY
all	51	56AHN16	AN16 BEARING LOCKNUT	ALL EXCEPT 72044WP2/WP3
all	51	56AHN20	AN20 BEARING LOCKNUT	72044WP2/WP3 ONLY
all	52	56AHW16	W16 BEARING LOCKWASHER	ALL EXCEPT 72044WP2/WP3
all	52	56AHW20	W20 BEARING LOCKWASHER	72044WP2/WP3 ONLY
all	53	53A060A	NUT BRASS 5/16 COMP#61A-5	

# 4" Idler Shaft Bearing Installation

6036SG2, 6036SG3, 6044SP2, 6044SP3, 6044SP2 SM, 6044SP3 SM (Single Motor)

BMP970016/2006285B  
(Sheet 1 of 2)




Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

For Instructions on Removing  
and Installing Idler Bearings,  
See BMP720012.

For Pulleys  
& Bushings  
See BMP850032  
OR  
BMP060027  
(Single Motor  
Drive)

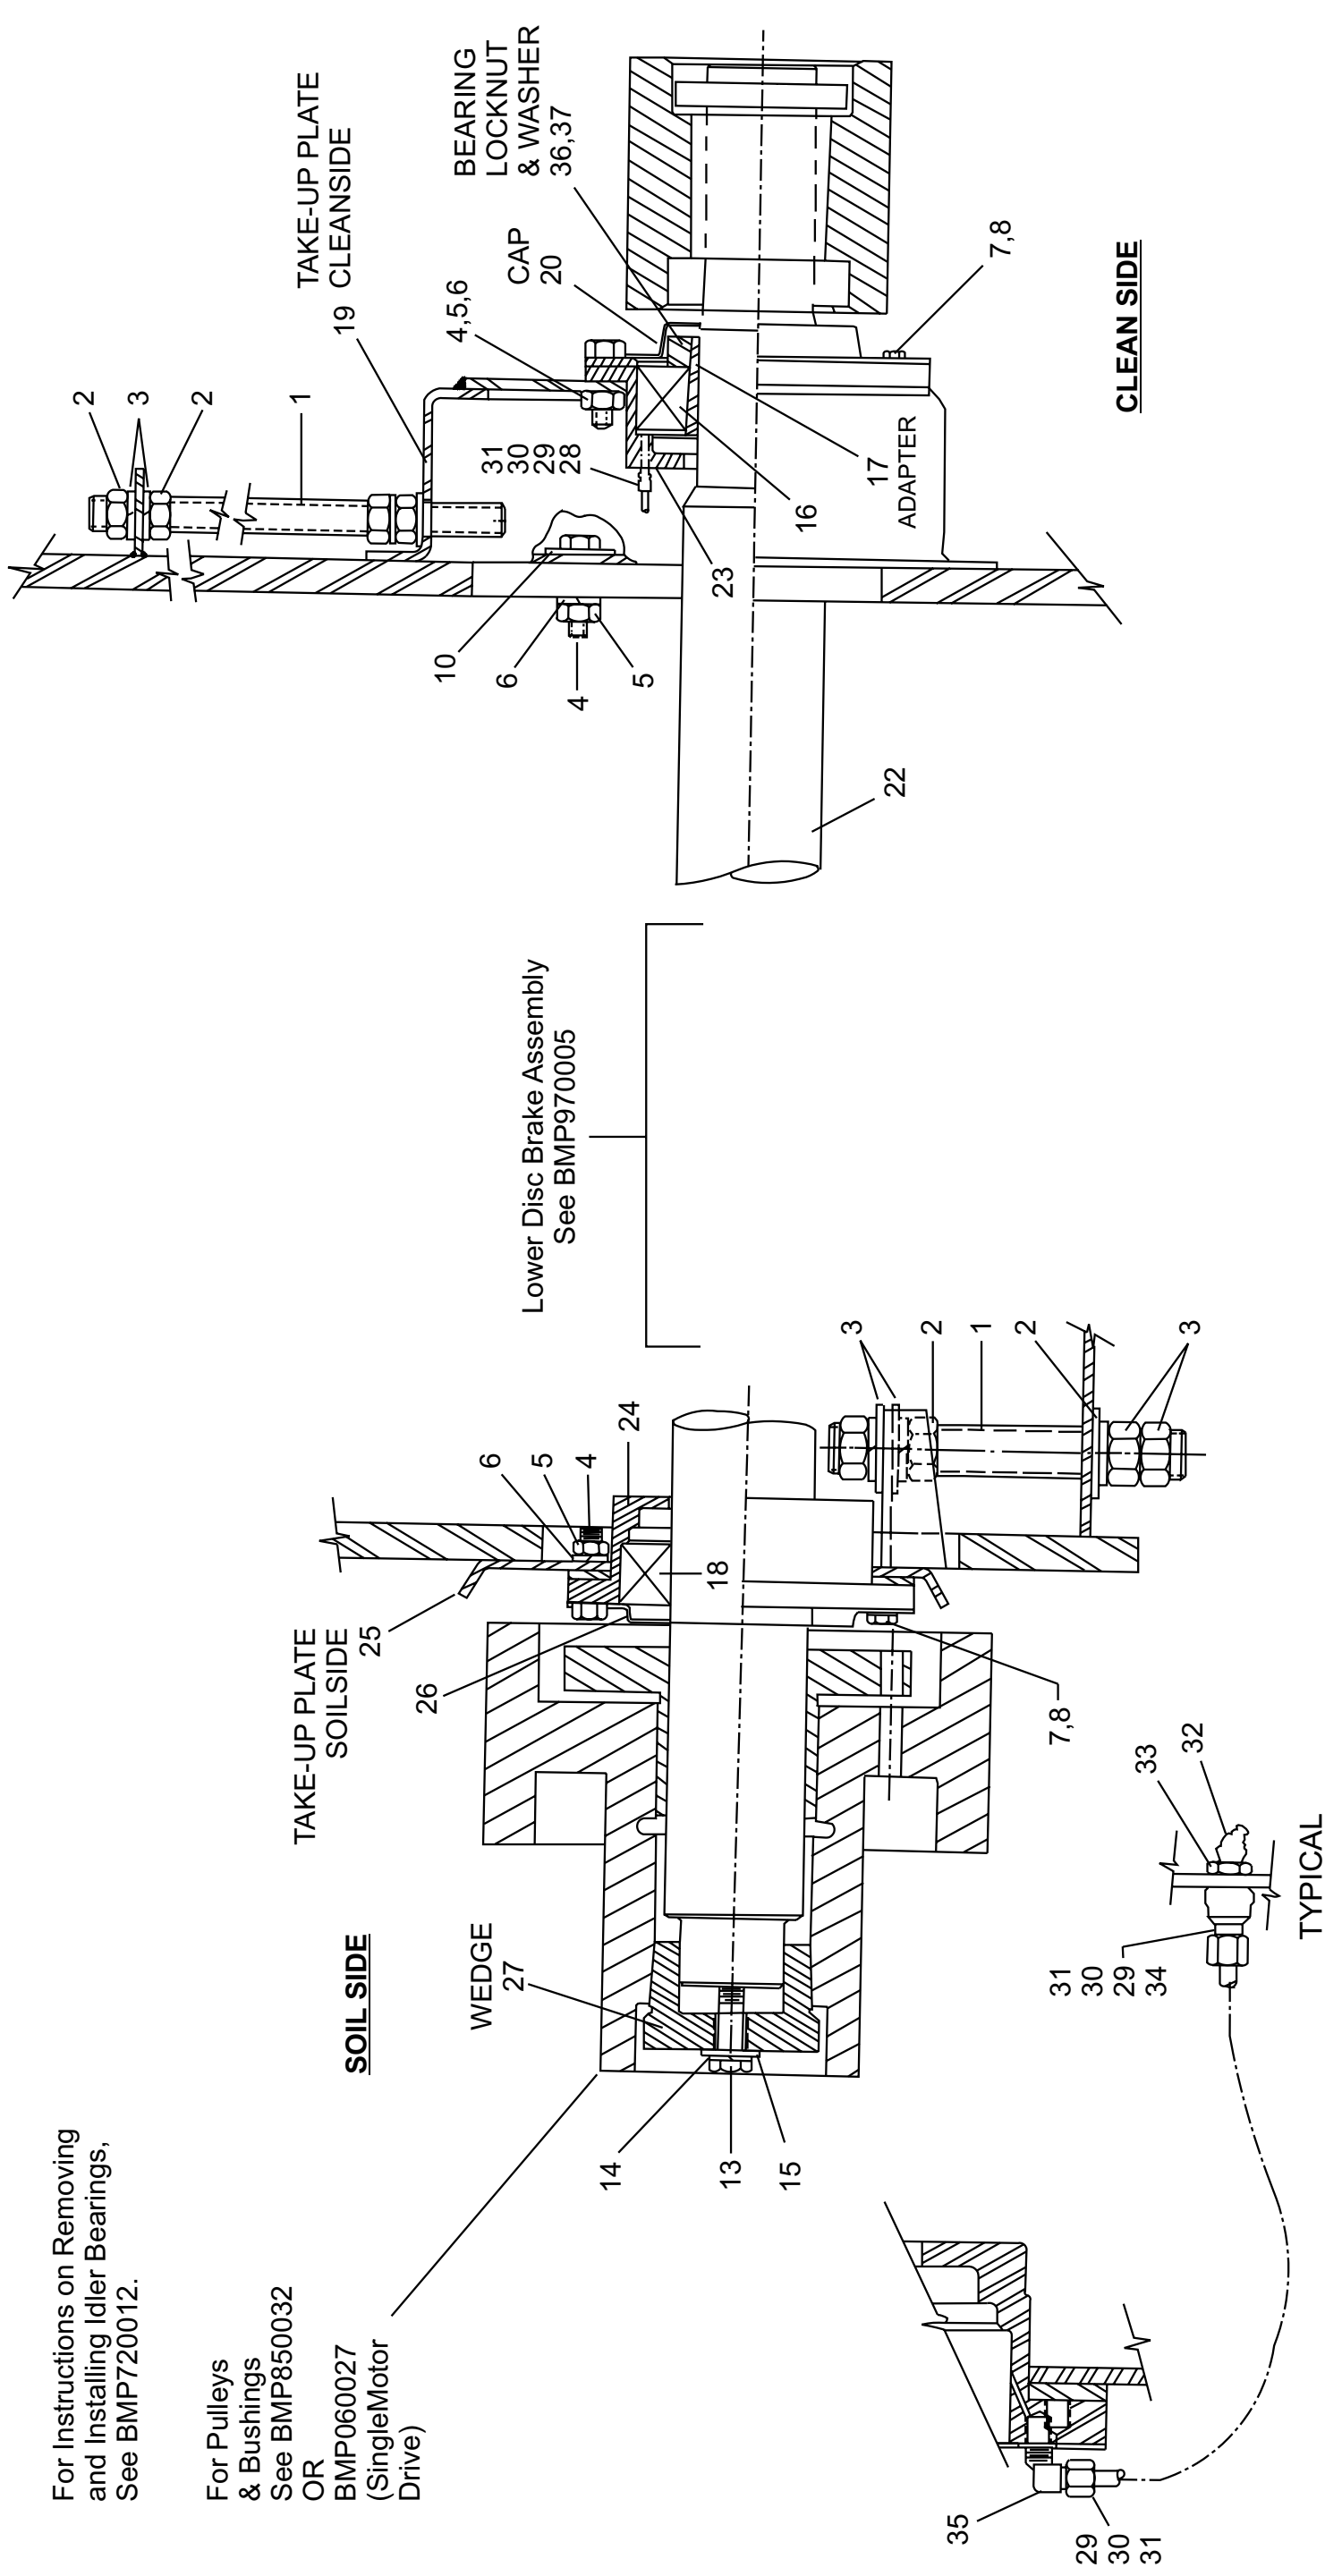



**Pellerin Milnor Corporation**  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**Parts List— 4" Idler Shaft Bearing Installation**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In		Item	Part Number	Description	Comments
	A		ABI28002	95041# BEARASSY=IDLERSHAFT NOBRAKE	
				ASSEMBLIES	
				COMPONENTS	
all		1	02 19023	94353A DRIVE BASE ADJ. SCREW 13.5LG	
all		2	15G250	HXNUT 1-8UNC2B SAE ZNC GR2	
all		3	15U400	LOCKWASHER MEDIUM 1" ZINCPL	
all		4	15K225	05Z HXCPSR 5/8-11X2+1/2	
all		5	15G238	HXNUT 5/8-11UNC2B SAE ZINC GR2	
all		6	15U315	LOKWASHER MEDIUM 5/8 ZINCPL	
all		7	15U180	LOCKWASHER MEDIUM 1/4 ZINCPL	
all		8	15K030	HEXCAPSCR 1/4-20UNC2X1/2 GR5 ZINC	
all		9	15P010	1ZZ PHILPAN TRDCUTSCRTP10-24X1/2SS	
all		10	15U314	FLATWASHER(USS STD) 5/8" ZNC PLT	
all		11	15U450	FLATWASH.1345X3.25X1+11/16 ZINCPLTD	
all		12	15G268	HXFJNANUT 1+1/2-12UNF2B ZINC GR2	
all		13	15K235A	03Z HXCPSR 3/4-10X2.5 GR 8	
all		14	15U340	LOCKWASH MEDIUM 3/4 ZINCPL	
all		15	15U320	FLATWASHER(USS STD) 3/4" UNPLT	
all		16	56S22220T	04Z SPHEROLBRG NTN#22220BL1D1C3	
all		17	56AHS20	SNW20 BRG ADAPTER 3.5" CYL BORE	
all		18	56S22220S	04Z SPHEROLBRG NTN#22220BL1D1C3	
all		19	W2 18747E	92257C*TAKE-UP WLMT=4"IDLER SHAFTCS	
all		20	03 06444A	79337C CAP=BEARING IDLERSHAFT C.S.	
all		21	X2 18763A	92236D IDLER SHAFT 4"DIA 6036SGU	
all		22	X3 06154A	92236# IDLER SHAFT 4"DIA 60+72SGU	
all		23	X2 18697A	79277C BEARHOUSE IDLER SHAFT FLOAT	
all		24	X2 18696A	94283C BEARHOUSE IDLER SHAFT LOCKED	
all		25	X2 18744C	92137# MACH=TAKEUP=4"IDLER 60SG SS	
all		26	03 06444	79507C CAP=BEARING 4"IDLERSHAFT	
all		27	03 06445	94251B WEDGE=SHEAVE+SHAFT=60+72SGU	
all		28	53A005B	BODYMALCON1/4X1/8COMP #B68A-4A	

**Parts List, cont.— 4" Idler Shaft Bearing Installation**

Used In	Item	Part Number	Description	Comments
all	29	53A059A	NUT 1/4"BR.HOLYOKE AND #61A-4	
all	30	53A501	TUBEINSERT .170"OD	
all	31	53A500	1/4" SLEEVE-DELRIN	
all	32	54M020	GREASEFIT 30DEG 1611-B ALEMITE	
all	34	53A007B	BODYFEMCON.25X.25COMP#B66A-4B	
all	35	53A031B	BODY-EL90MALE.25X1/8 #269C-42B	

**9B.1 GENERAL DESCRIPTION**

The bearings used on the idlershaft are double-row spherical roller self-aligning bearings, SKF, Link-Belt, Torrington, or equal. Bearings are attached to the shaft with locknuts and tapered adapters. The idlershaft is designed with one bearing “fixed” and the other bearing “floating”. Lubrication is provided by grease passages that are tubed to two grease fittings located on the lower right cross brace. Grease is retained in the bearing housings by close-fitting covers.

**9B.2 TO REMOVE BEARINGS**

- 9B.2.A. Remove the idlershaft pulleys on both ends of the shaft; remove the bearing caps. Loosen the set screws which lock the bearings for the Brake Assembly to the idlershaft (total of four (4) setscrews).
- 9B.2.B. To remove the soiledside bearing, screw a 1/4"-18NPT pipe fitting into the hole in the soiledside end of the idlershaft. Loosen the bearing locknut. Using a “Porto-Power” or similar hand operated pump, force fluid into the hydraulic removal passage. Pump hard to build up fluid pressure. This pressure will be transferred to the bearing inner race causing the race to expand slightly, just enough to free the tapered surface and allow the bearing to slip off easily.
- 9B.2.C. To remove the cleanside bearing loosen the bearing locknut on the bearing adapter, backing the nut about 1/8" from the bearing. **DO NOT** take the locknut off of the adapter. Slip a piece of pipe (approx. 15" long) over the shaft. Place one end of the pipe against the locknut and adapter. Strike the other end of the pipe with a 5 lb. hammer, gently at first, then harder until the adapter snaps loose. Hitting a block placed over the end of the pipe helps to inflict an even impact on the bearing adapter; this should prove helpful in bearing removal. After the bearing has been snapped loose remove the pipe, bearing locknut, and washer; now the bearing will come out of the housing with a little assistance. Be sure not to remove the bearing locknut from the adapter when trying to snap the bearing loose; otherwise, the bearing and bearing adapter may come apart violently; besides, there is a chance of damaging the adapter which may be used again if it is not damaged during disassembly.
- 9B.2.D. When it is know that only the soiledside bearing is bad, it may be changed by the above mentioned hydraulic method without damaging the cleanside bearing.
- If only the cleanside bearing must be changed, however, the soiled-side bearing should be removed first (hydraulically) before the cleanside bearing is mechanically removed. If it is not removed first, minute indentations, invisible in most cases, will be formed on the inner and outer races of the soiledside bearing rendering it unserviceable.
- When both bearings must be changed the order of bearing removal is not critical.

9B.3 **HOW TO INSTALL NEW BEARINGS**

9B.3.A. NOTICE: The most important ingredient in successful bearing and seal installation is CLEANLINESS. The bearing housing must be free of all foreign matter. The grease and leakoff passages must be blown clear and all foreign matter removed. You must have a clean work area. Keep your hands and tools free from grit and grime. (Wash your hands before actually inserting the bearing in the housing.) Foreign matter is, without doubt, the most frequent cause of bearing failure, and one over which the manufacturer has no control.

BEFORE INSTALLING BEARINGS, YOU MUST USE A FEELER GAUGE TO MEASURE THE INTERNAL CLEARANCE IN THE BEARING. READ THE SECTION “HOW TO ADJUST THE BEARING” BEFORE INSTALLING THE BEARINGS IN THE HOUSING. DESCRIBED IN “REMOVAL, INSTALLATION, AND SETTING MAIN BEARINGS AND SEALS”.

9B.3.B. The “fixed” bearing is always installed first. Install the bearing housings in the take-up units with three mounting bolts. Don’t put the bearing covers on the housings; however, make sure the mounting bolts are tight. Pass the idlershaft through the housings. Slip the bearing adapters on the shaft with the threaded end of the adapter near the end of the shaft; next, pass the bearing over the shaft and onto the tapered adapters. Hand tighten the locknut on the adapter, and adjust the location of the end of the idlershaft assembly drawing.

9B.3.C. With both bearings on the shaft and in the housing, measure the distance from the center of the main shaft to the center of the idlershaft on both ends of the machine. If the center distances are different, loosen the take-up units and adjust the position of the shaft. It is important that the idlershaft be parallel to the main shaft before setting the bearings, so that the plane of rotation of the rollers is approximately in the same plane with the bearing races; further, if the shaft is cocked, the floating bearing will not be located accurately from the face of the bearing housing as shown on the assembly drawing.

9B.3.D. Tighten the bearing locknuts to the proper internal clearance using the procedure explained in section entitled “HOW TO ADJUST THE BEARING”. (This section describes adjustment of the main bearings which also applies to the idlershaft bearing.)

9B.3.E. Loosen the three bearing housing mounting bolts, and put the covers on the bearings as shown on the idlershaft assembly. Check to make sure bearing housing mounting bolts are tight and don’t forget to lubricate the bearing before operation. Follow the instructions for bearing lubrication as outlined in Section 7 of this manual.



**Section**

**5**

# **Frame, Pivots, and Suspensions**

# Hold Down Adjustments

6036WP2/3, 6044WP2/3, 7244WP2/3, 6036SP2/3, 7244SP2/3, 6044SP2/3, 6044SP2/3 SM

BMP701672/2006295B  
(Sheet 1 of 1)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.



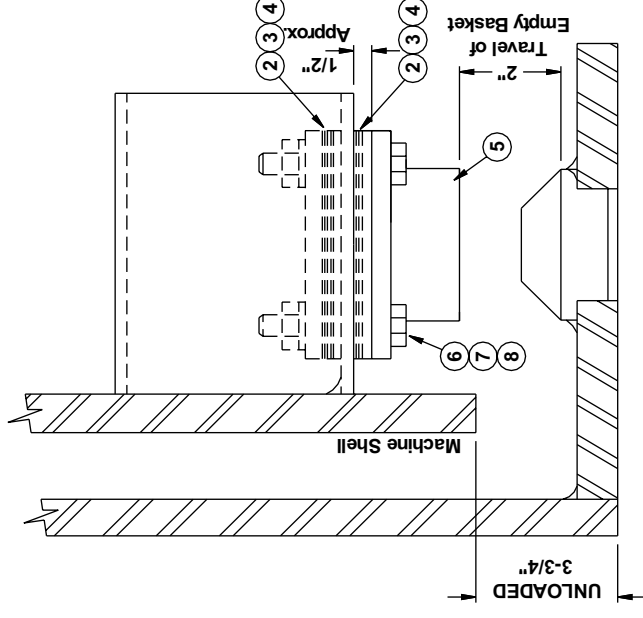


FIGURE 2:  
Adjustment Complete, Machine Up

FIGURE 1:  
Cross Section - Machine Locked Down for Shipment

For Instruction:  
Push-Down Travel Dimensions  
and Adjustment Procedures,  
See MSSM0302AE.

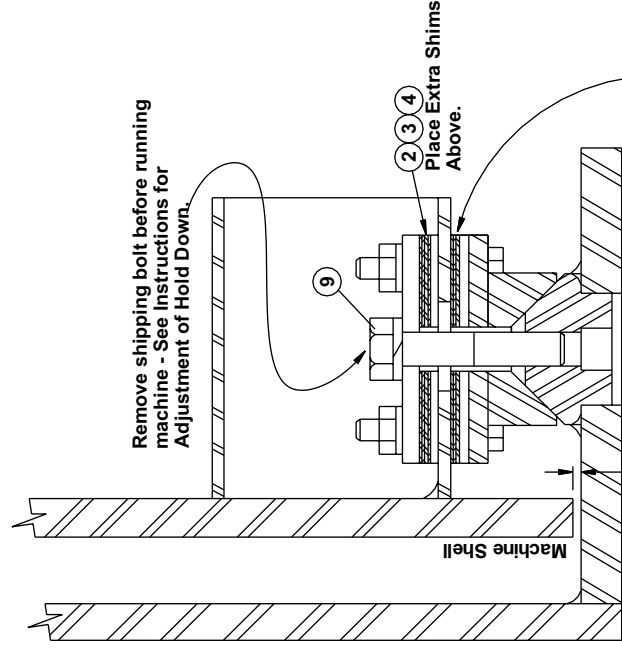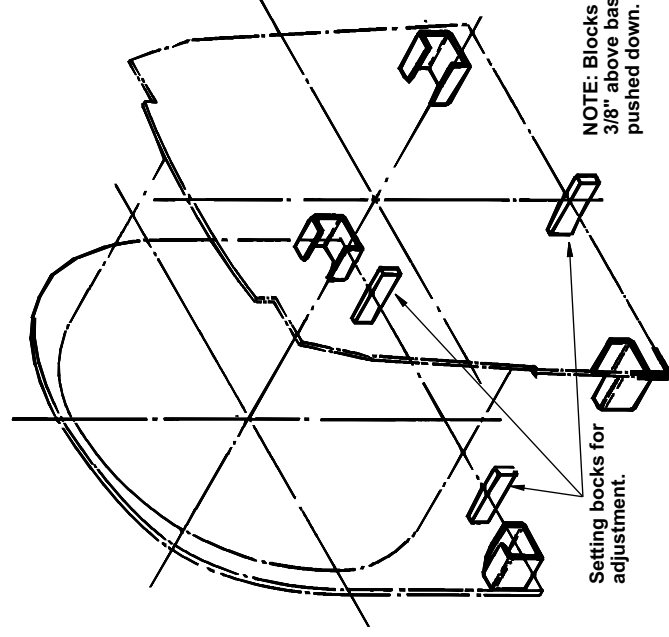

## Parts List—Hold Down Adjustments

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.


Used In	Item	Part Number	Description	Comments
	2	03 06216A	SHIM=HOLD DOWN 1/4" THICK	
	3	03 06216B	SHIM=HOLD DOWN 10GA THICK	
	4	03 06216C	SHIM=HOLD DOWN 16GA THICK	
	5	W3 06406	*RING=HOLD DOWN CENT-STAMPED	
	6	15G238	HXNUT 5/8-11UNC2B SAE ZINC GR2	
	7	15U315	LOKWASHER MEDIUM 5/8 ZINCPL	
	8	15D125	HXTAPSCR 5/8-11X4-FLTHRD GR5	
	9	15K300	HXCAPSCR 1-8UNC2A X4.5 SAE GR5	

## SUSPENSION ADJUSTMENTS FOR DIVIDED CYLINDER MACHINES

The suspension system on Milnor<sup>®</sup> Hydro-cushion<sup>®</sup> machines is adjusted and thoroughly tested at the factory. It should not require subsequent adjustment unless the machine is distorted during shipment or installation or unless some component of the system, such as a Hydro-cushion<sup>®</sup> cylinder is replaced.

There are two primary objectives when adjusting the suspension system on any Hydro-cushion<sup>®</sup> machine model:

1. To position the shell in the proper location within the frame (hanging dimensions) to maximize freedom of movement of the shell and to insure proper draining, and
2. To adjust the length of up and down travel at each of the push-down locations (push down travel) so that the shell will not be distorted (racked) when pushed down.

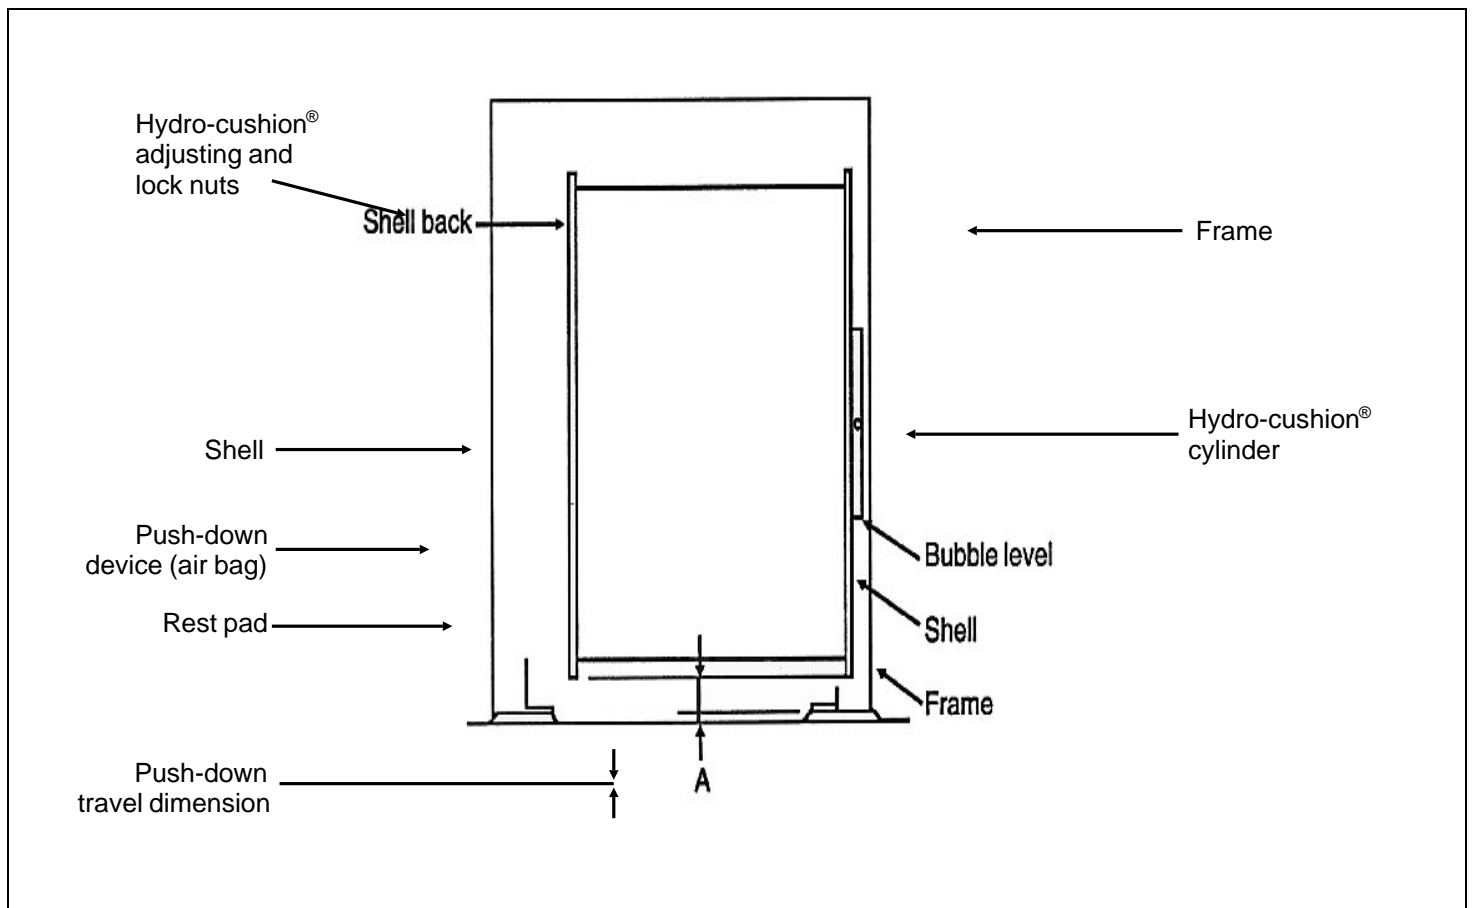

**FIGURE 1** (MSSM0302AE)

**Hydro-cushion<sup>®</sup> Suspension System Components**  
(does not depict a specific machine)

All Milnor<sup>®</sup> Hydro-cushion<sup>®</sup> machines contain the following suspension system components (as shown on the typical system on the previous page):

1. Hydro-cushion<sup>®</sup> cylinder—which suspend the shell and cylinder within the frame and provide vibration damping during extraction.
2. Pneumatic push down devices (air bags)—which when inflated, force the shell downward where it is held against rigid pads during loading, unloading, washing, and draining.
3. Metal or rubber pads—some rigidly fixed to the shell and some rigidly fixed to the frame, which come in contact when the shell is pushed down.

The actual configuration of these components varies from model to model.


## How Shell Adjustments are Made

Regardless of machine model, repositioning of the shell is always accomplished by adjusting the nuts at the top of the upper Hydro-cushion<sup>®</sup> shafts. To move the shell up or down at the location of any Hydro-cushion<sup>®</sup>, see FIGURE 2 and proceed as follows:

### ▲ CAUTION ▲

**These procedures should be accomplished with power to the machine locked off.**

1. Straighten the tongues on the keyed lock washer using pliers, screw driver, etc.
2. Loosen the lock nut (upper hex nut) and move it all the way up to the top of the shaft, but do not remove it.
3. Use the adjusting nut (lower hex nut) to “crank” the shaft up or down as required.
4. Once final adjustment is made, while holding the adjusting nut to prevent it from turning, retighten the lock nut against the adjusting nut (with the lock washer between).
5. Rebend the tongues on the lockwasher as before, to prevent movement of the nuts.

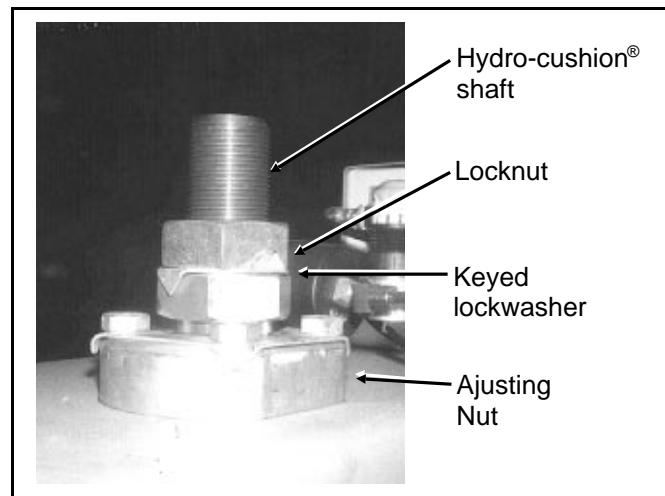


**FIGURE 2** (MSSM0302AE)  
**Hydro-cushion<sup>®</sup> Upper  
Shaft and Adjusting Nuts**

## Shell Hanging Dimensions and Adjustment Procedures

To adjust the shell of a divided cylinder machine, proceed as follows:

1. Locate the shell hanging dimension for your machine in the table below and adjust your machine accordingly. Take measurements on the left and right sides of the shell, to assure that the shell is horizontal, left to right.
2. The shell and cylinder should be level front to back. Check this with a bubble level, as shown in FIGURE 3.
3. If further adjustment is required in order to level the cylinder, make small adjustments at all four corners. For example, if the cylinder slopes down to the front, try raising the two front corners by 1/16" (2mm) and lowering the two rear corners by 1/16" (2mm). Always split the difference.

**NOTE:** Only slight deviations from the dimensions shown should be used to level the shell. If large deviations are required, this may indicate that the frame is out of level. If so, this condition must be corrected before attempting to level the shell.

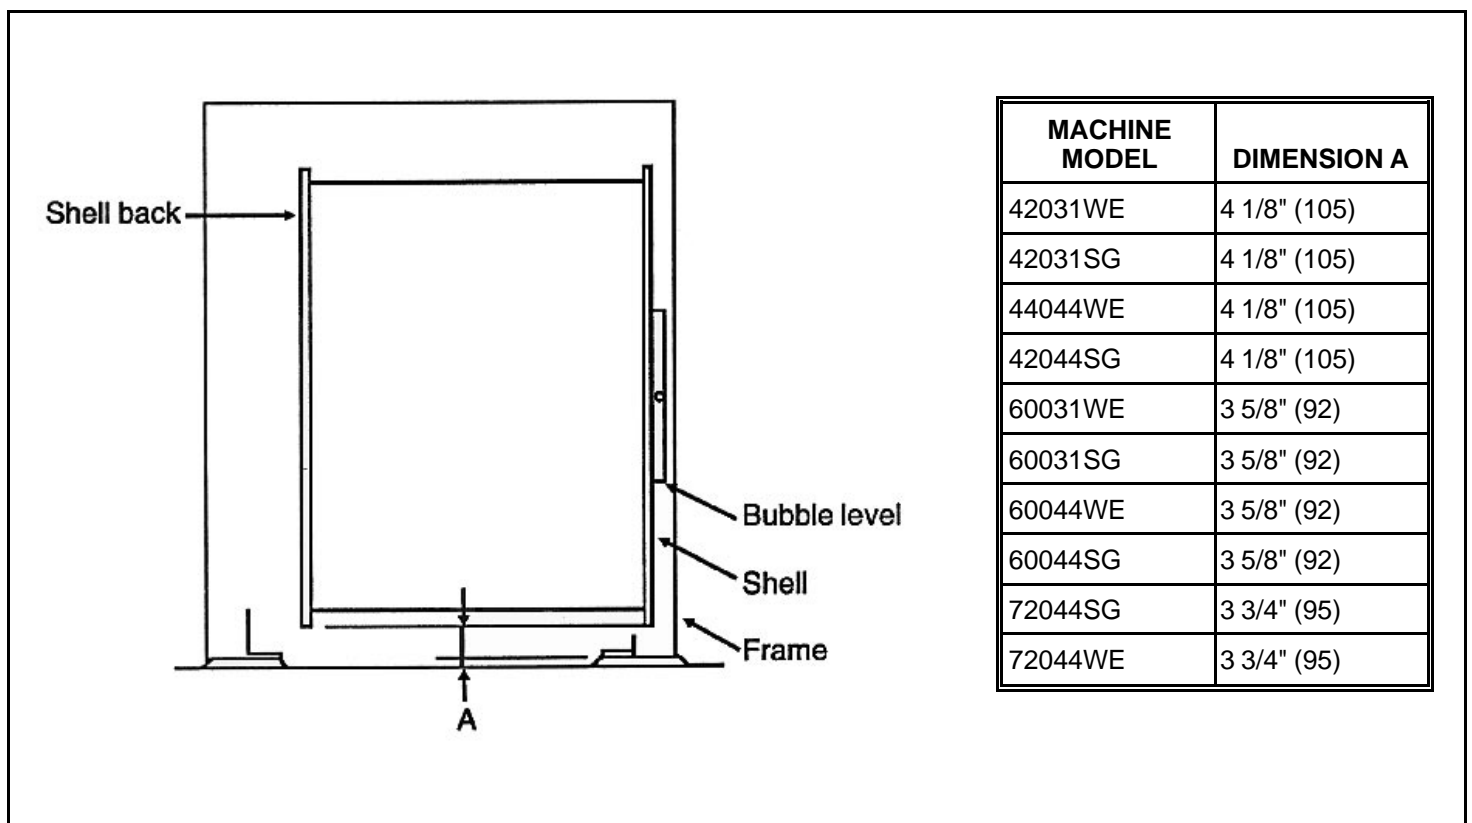

**FIGURE 3** (MSSM0302AE)  
**Shell Hanging Dimensions for Divided Cylinder Machines**  
 (Left side view of 60044WE shown)

## Push-Down Travel Dimensions and Adjustment Procedures

### ▲ CAUTION ▲

Some of the following procedures require power to the machine. Take the necessary precautions to assure that no one operates the machine controls while personnel are adjusting the push-down components.

### 42" Divided Cylinder Machines


The push-down stops on these machines consist of brackets attached to the shell and rubber rest pads, mounted atop the base pads (see figures below) which make contact when the shell pushes down. The rubber rest pads sit in metal pans and are raised or lowered by adding metal shims to or removing the shims from inside the pans. Extra shims and adhesive for securing the shims were supplied with your machine.

There is no specific push-down travel dimension for these machines; however, length of travel must be adjusted as follows:

1. With the *Master switch* set to *off*, and the shell hanging free, measure the gap between each bracket and base pad.
2. Add or remove shims from the appropriate pads as required to make all four gaps equal and to insure that no rest pad protrudes completely from its metal pan.

Test for equal length of travel at all four locations as follows:

3. With four sheet metal shims of *equal* thickness, set one shim *on top of* each rubber rest pad, such that at least a one inch length of the shim overhangs the outside edge of the pad.
4. Set the *Master switch* to *manual*, causing the shell to push-down.

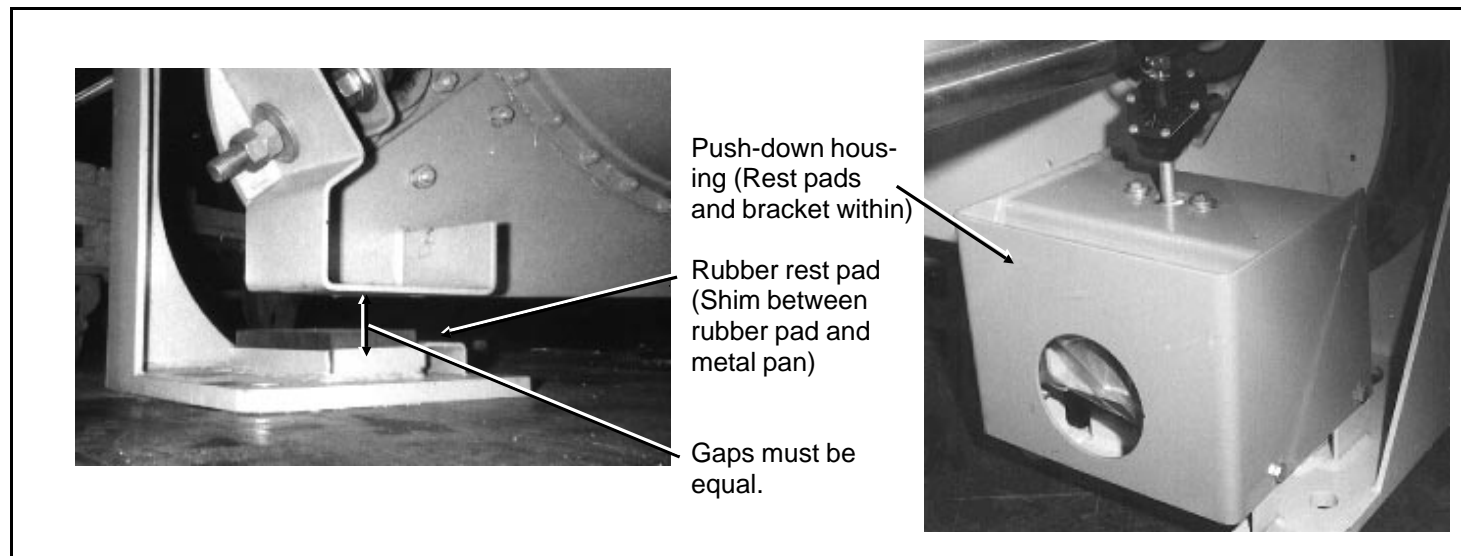

**FIGURE 4** (MSSM0302AE)  
Push-down Travel Adjustment: 42" Div-cyls (42" Staph-guard® shown)

5. With the shell pushed down, attempt to pull each test shim out from between the bracket and rubber pad. The test shims should all be tight. If any shim(s) are not pinched tightly between the bracket and pad, take note of which one(s) are not.


Make final adjustments as follows:

6. Set the *Master switch* to *off*, remove the test shims and make the necessary changes to the shims below the rubber pads as indicated by the above test.
7. Repeat Steps 3 through 6 as required, until this test is successful.
8. Once the adjustments are completed, secure all shims and rubber rest pads with the adhesive provided.


## 60" Divided Cylinder Machines

These machines have push-down stops on the four corners of the frame which appear as shown in FIGURES 5 and 6. When pushed down, the ring weldments (which move with the shell) must seat firmly onto the plugs which are mounted atop the base pads. The push-down travel dimension must assure that 1) the ring weldments and plugs are far enough apart when the shell is not pushed down, so as not to interfere with the free movement of the shell, and 2) that all four stops are in solid contact when the shell is pushed down. To accomplish this, proceed as follows:

1. With the *Master switch* set to *off* and the shell hanging free, remove the bolts securing the ring weldments to the mounting brackets. Set each ring weldment on top of its respective plug, removing any shims which may have been used and placing them next to the ring weldment.
2. Measure the gap between the top of the ring weldment and the bottom of the mounting bracket, at each location.

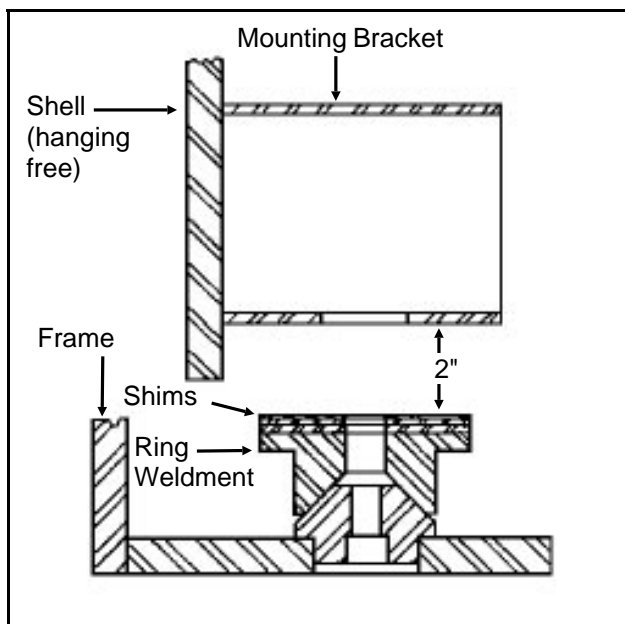

**FIGURE 5** (MSSM0302AE)  
**Shimming Ring Weldments**

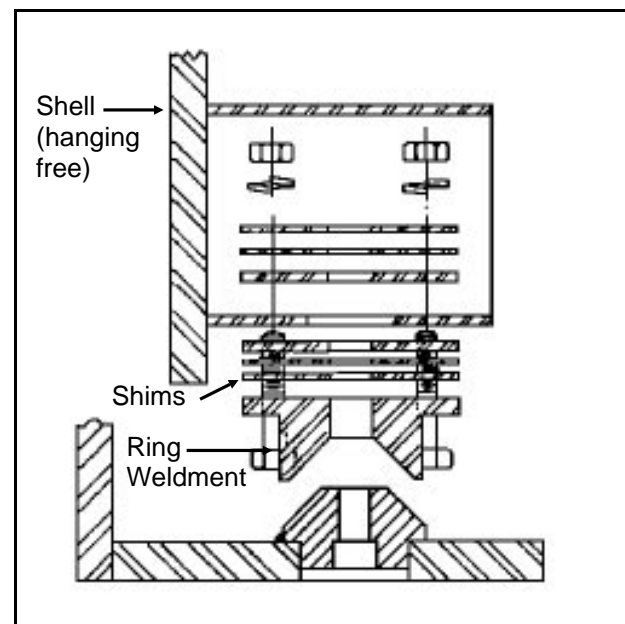

**FIGURE 6** (MSSM0302AE)  
**Reconnecting Ring Weldments**

- 
3. Stack shims on top of the ring weldment as required to make each gap *exactly 2 inches* as shown in FIGURE 5. If the gap at any location is less than 2 inches without shims, the shell must then be raised in the frame, using the procedures previously described.
  4. Once the proper arrangement of shims is made, remount the ring weldment and shims to the mounting bracket (see FIGURE 6). Any extra shims may be stacked on the top side of the mounting bracket plate to which the ring weldment is attached.




**Suspension Cylinder Assemblies**  
**42031,42044,52038,60044,72044**

BMP701408/2006275B  
 (Sheet 1 of 2)

**Pellerin Milnor Corporation**  
 P. O. Box 400, Kenner, LA 70063-0400



Litho in U.S.A.

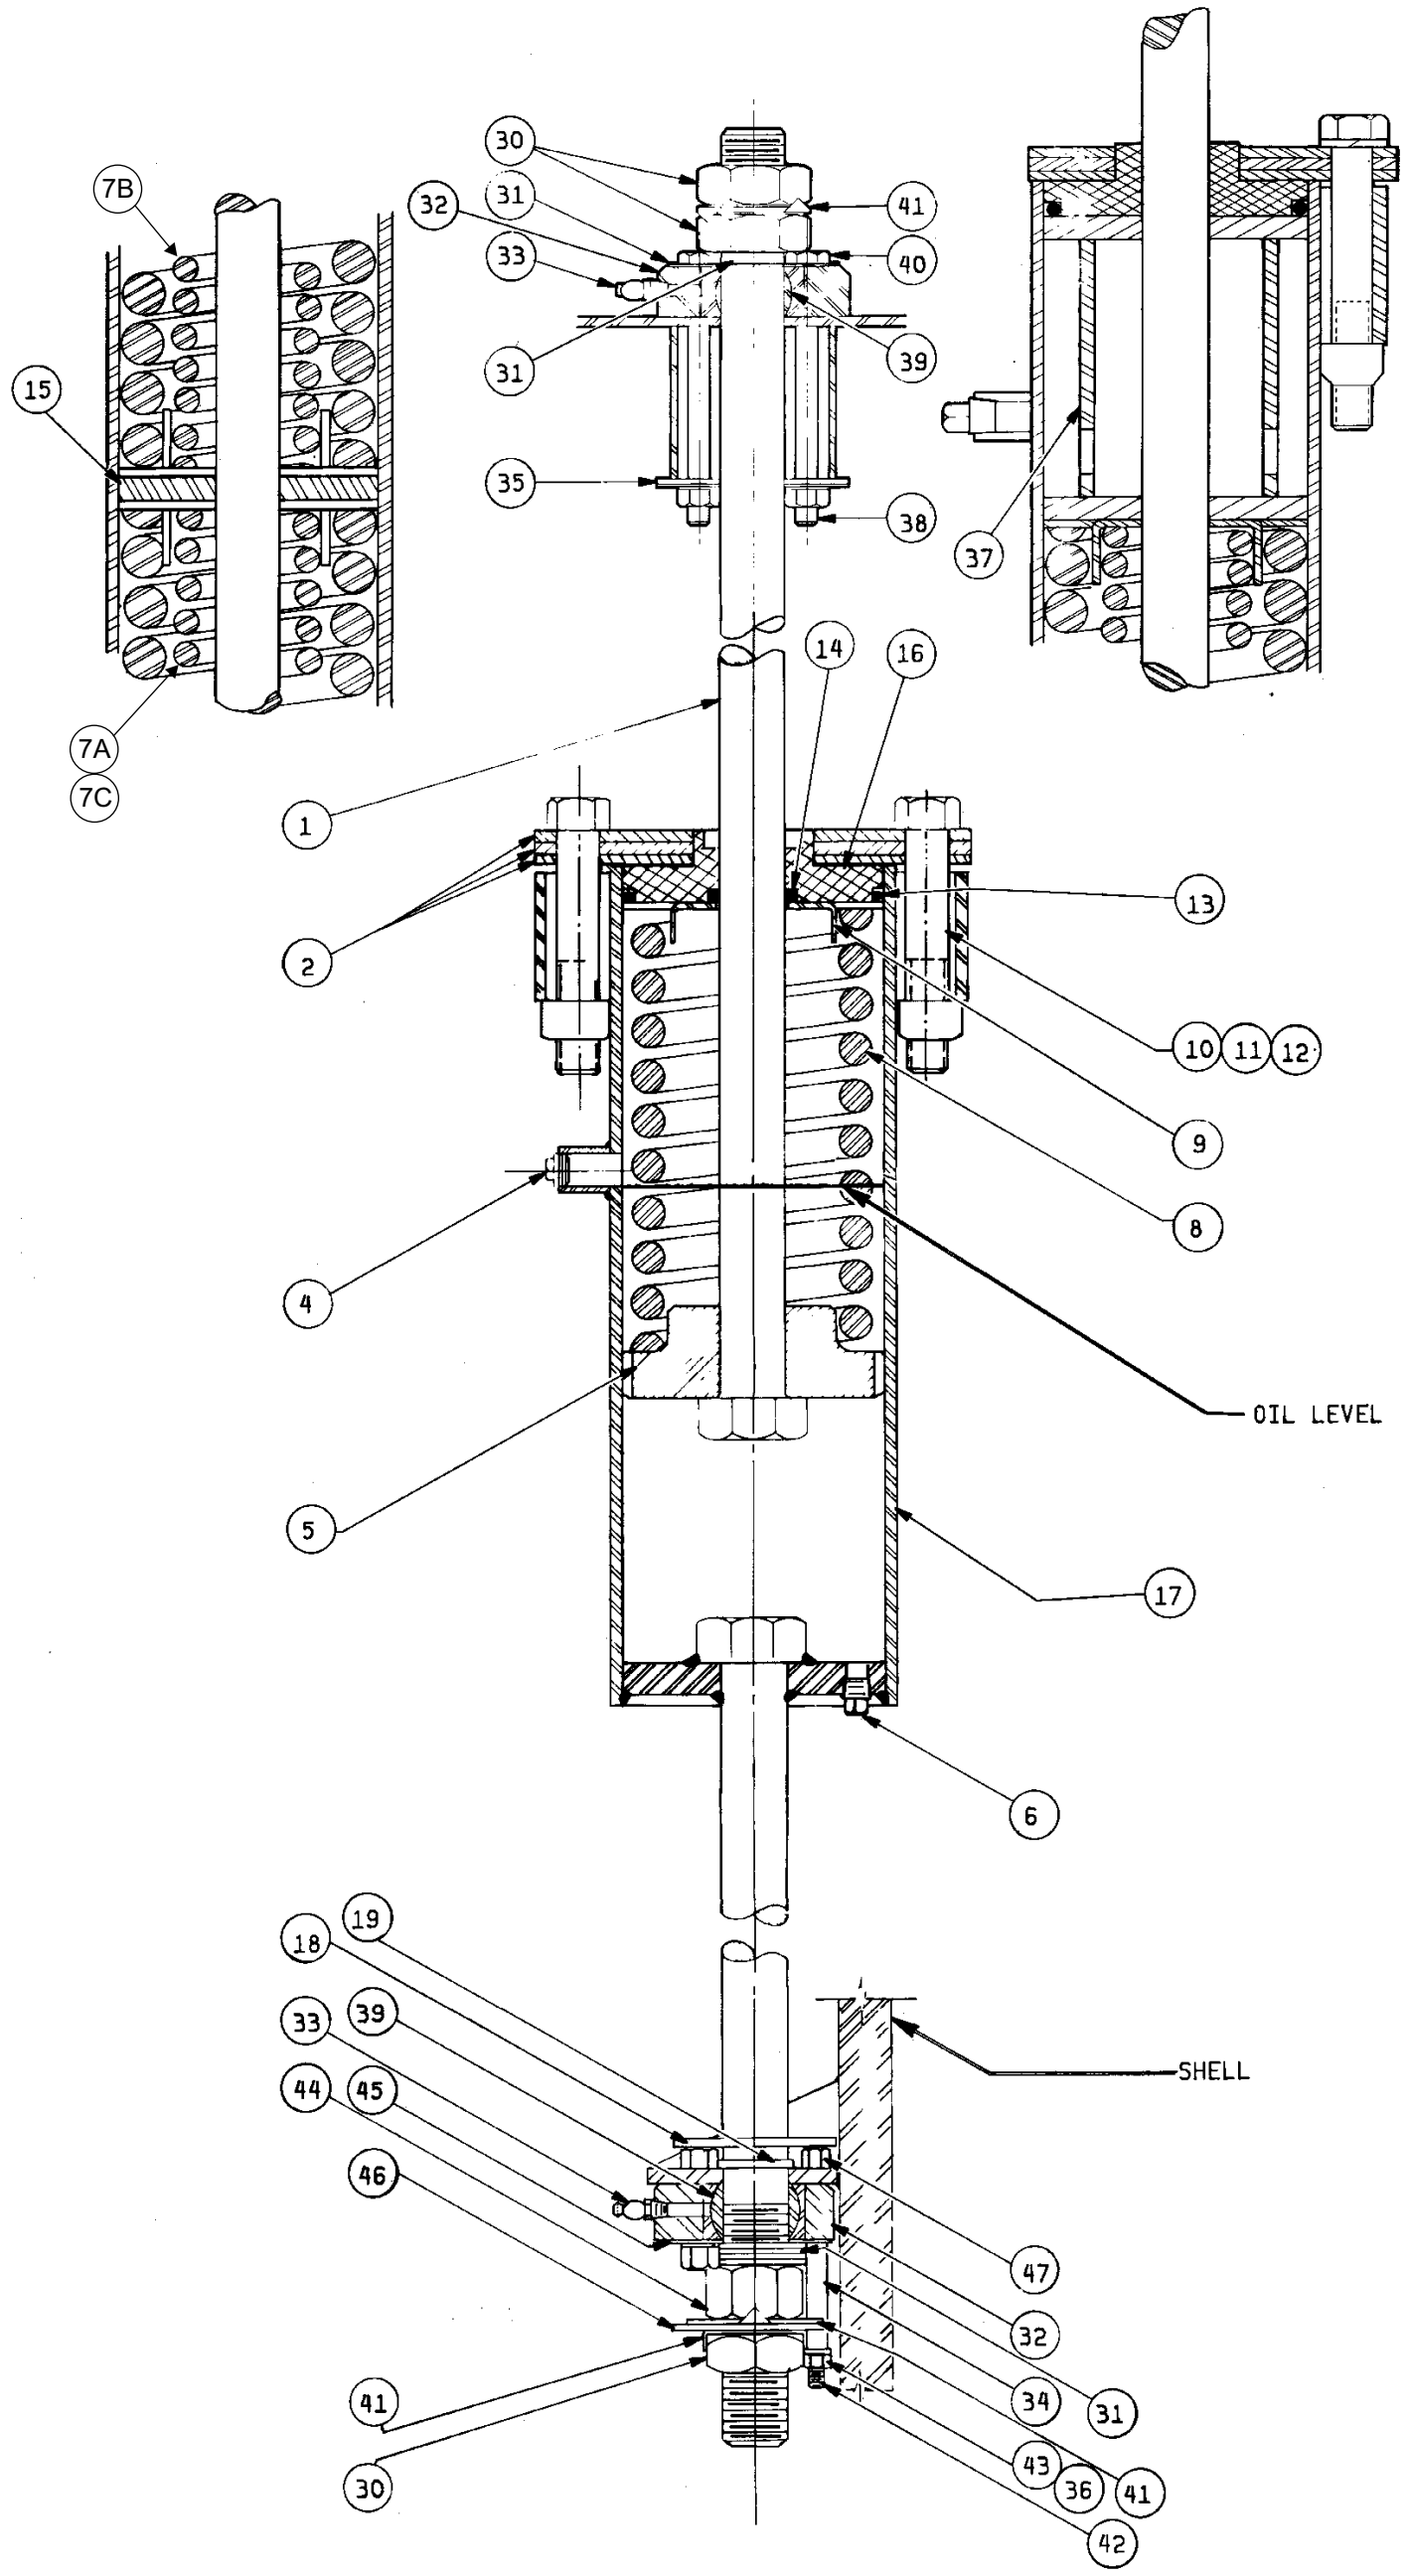

**Parts List—Suspension Cylinder Assemblies**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			ASSEMBLIES	
	B	SA 16 039	*HYDROCUSHION CYL ASSY-"B"	CYLINDER ASSY B
	C	SA 16 038	*HYDROCUSHION CYL ASSY-"C"	CYLINDER ASSY C
	D	SA 28 091	*HYDROCUSHION CYL ASSY-"D"	CYLINDER ASSY D
	F	SA 36 021	*HYDROCUSHION CYL ASSY-"F"	CYLINDER ASSY F
	G	SA 36 023	*HYDROCUSHION CYL ASSY-"G"	CYLINDER ASSY G
	H	SA 36 047	*HYDROCUSHION CYL ASSY-"H"	CYLINDER ASSY H
	K	SA 29 031K	*HYDROCUSHION CYL ASSY-"K"	CYLINDER ASSY K
			(Note: To identify which cylinder is supplied with your machine, see BMP701235 which should be located in the manual next to this document. Once you know which cylinder assembly you have, "B-K" listed above, identify your parts by referencing the "Used In" coding.)	
			COMPONENTS	
ABCDK	1	02 18244	BOLT=HYDCYL 27+7/8LG+KEYWAY	
K	1	02 18244A	BOLY=HYDCYL 28+7/8LG+KEYWAY	
FGH	1	03 06201	BOLT=HYDCYL 41+7/8LG+KEYWAY	
all	2	02 18840A	UPCAP=HYDROCYL 42+52+60	
all	4	5SP0KGFSS	NPT PLUG 1/2 SOSOLID GALSTL	
BC	5	X2 15356	PISTON=HYDROCYL 6"- 6 NOTCH	
DFGHK	5	X2 18228	PISTON=HYDROCYL 6"- 3 NOTCH	
all	6	5SP0GHFHKM	NPT PLUG 3/8"-HEXCSMAGNETIC ZN	
FG	7A	03 06139	SPRING=INNER HYDRO CYL 331LB/IN	FULL SPRING (PURPLE)
G	7B	03 06139A	SPRING=INNER HYDRO CYL	PLUS 1/2 SPRING "G" ONLY (PURPLE)
H	7C	03 06338	SPRING INNER-GOLD 14"LONG	GOLD
B	8	02 16068	MAIN SPRING 212LB/IN RED	RED
C	8	02 16125	MAIN SPRING 300LB/IN BLACK	BLACK
D	8	02 19039	MAIN SPRING 480LB/IN GREEN	GREEN
FG	8	03 06138	SPRING=OUT HYDROCYL 667LB/IN	ORANGE
G	8	03 06138A	SPRING=OUT HYDRO CYL	ORANGE
H	8	03 06337	SPRING-OUTER-GOLD 14.5"LONG	GOLD
K	8	03 09016	MAIN SPRING 1035LB/IN BLUE	BLUE
ABCDGK	9	02 18619	BUSHING RETAINER + CAD	
H	9	03 06358	BUSHING RETAINER.CAD	
all	10	15B237	HXCAPSCR 1-8UNC2AX5.5 SAEGR5 Z	

Used In	Item	Part Number	Description	Comments
all	11	15G255A	SQ Nut 1-8UNC2B SAE ZINC GR2	
all	12	15U400	LOCKWASHER MEDIUM 1" ZINCPL	
all	13	60C159A	ORING 5.475ID 1/4CS BN70 #433	
all	14	24S040	SEAL URETHNE 1-7/16 2.25 13/32	
GH	15	M2 18690	LOWER CAP=HYDROCYL	
all	16	02 18839A	MACHBUSH HYDRCYL CAP #433-OR	
BC	17	SA 15 084	*HYDCUSH CYL WLDMT (18"X/12")	
DI	17	SA 28 090	*HYDCUSH CYL WLDMT (18"/23")	
FGH	17	W3 06203	*HYDCUSH CYL WLDMT (35"/12")	
K	17	W2 18233	*HYDCUSH CYL WLDMT (20"X22")	
all	18	02 175034	SHIELD-BALBUSH-4/HYDRO MACH	
BDFGH	19	02 02230	6 WATER BARRIER (NEOPRENE)	
all	30	15G268	HXFJN JAMNUT 1+1/2-12UNF2B ZINC	
all	31	02 18571A	PISTON ROD WASHER-.25"TK	
all	32	X3 06252	RETAINER-BALBUSH=4/72WEDU	
all	33	54M025	HYDFIT 1/8"-90 ALEMITE 1613-B	
all	34	27B240	SPCROLL.5ID.813L.062T STLZNC	
all	35	02 18534	HOLDPLATE= BALLBUSH ZNC/CAD	
all	36	15G230	HXNUT 1/2-13UNC2B SAE ZINC GR2	
F	37	Y3 06200	SPACER=HYDRO-CUSH CYL-MACH	
all	38	15K203	HXCAPSCR TFL 1/2-13X5 GR5 ZINC	
all	39	54A705	BALBUSH 1.5 SKF#GEZ108ESAVE467	
all	40	15N037	HXCAPSCR 1/2-13UNC2AX6.5 GR5 Z	
all	41	02 18256	LOKWASH-TONGUE 8WEH ZINC	
all	42	15K202	HXCAPSCR 1/2-13UNC2AX5 GR5 ZIN	
all	43	15U300	LOKWASHER REGULAR 1/2 ZINC PLT	
all	44	15G231	HXFJN JAMNUT 1/2-13UNC2B ZINC G	
all	45	02 18534	HOLDPLATE= BALLBUSH ZNC/CAD	
all	46A	02 18795A	WASH-TIMING=HYDRO CYL 45DEG	USE ONE
all	46B	02 18795B	WASH-TIMING=HYDRO CYL 75DEG	USE ONE
all	47	15K191	HXCAPSCR 1/2-13UNC2AX2.5 GR5 Z	
FGH	48	AVH52001	ASSY=OILFIL SPOUT 72HYD CYL	

# Suspension Cylinder Locations

Use with BMP701408


BMP701235/2006304A  
(Sheet 1 of 1)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Note: A letter is stamped on the end of the upper bolt to designate the cylinder assembly.

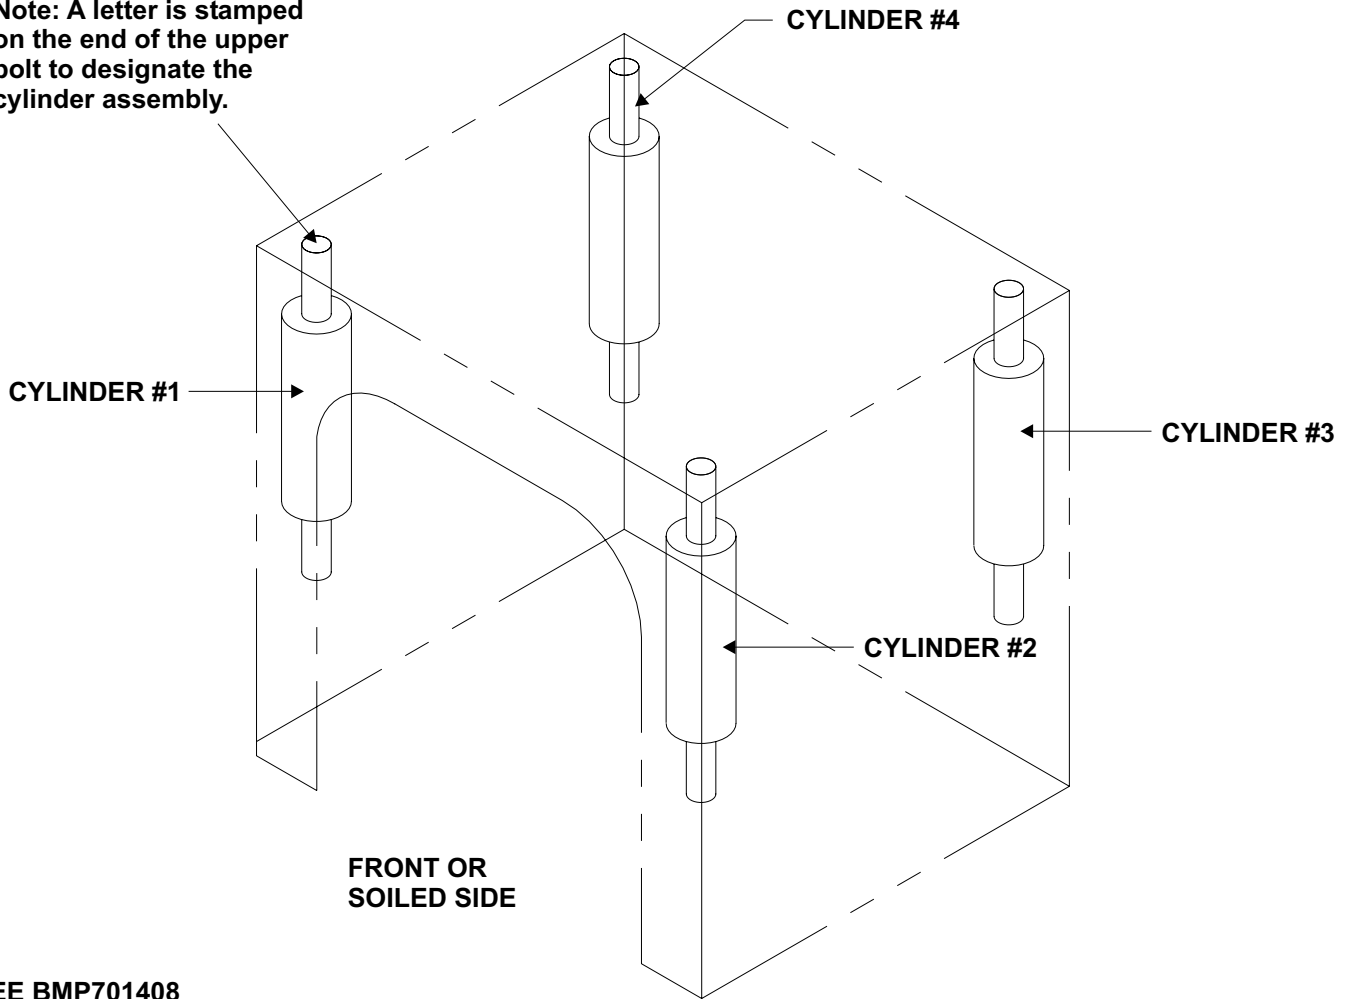

SEE BMP701408  
FOR REPAIR PARTS:  
HYDROCUSHION CYLINDER ASSEMBLY "B"  
THROUGH HYDROCUSHION CYLINDER ASSEMBLY "K"

MACHINE MODELS:

	42031 CP2,NP2 WP2,WP3	42031 SP2,SP3	42044 CP2,NP2 WP2,WP3 D7P	42044 SP2,SP3; SP2 SM	42044 WP2 SM, WP3 SM	52038 WTL,WTN WP1	60044 WP2,WP3, WP2 SM, WP3 SM, SP2,SP3, SP2 SM	72044 WP2,WP3 DA1	72044 SP2,SP3
POSITION:									
CYLINDER #1	B	B	C	C	C	D	K	H	G
CYLINDER #2	B	C	B	C	C	D	K	H	G
CYLINDER #3	B	C	B	C	C	D	K	F	G
CYLINDER #4	B	C	C	C	C	D	K	F	G



**Push Down  
6044SP2,SP3 6044SP2 SM,SP3 SM**



**Pellerin Milnor Corporation**  
P. O. Box 400, Kenner, LA 70063-0400

**BMP060035/2006305B**  
(Sheet 1 of 2)

Litho in U.S.A.

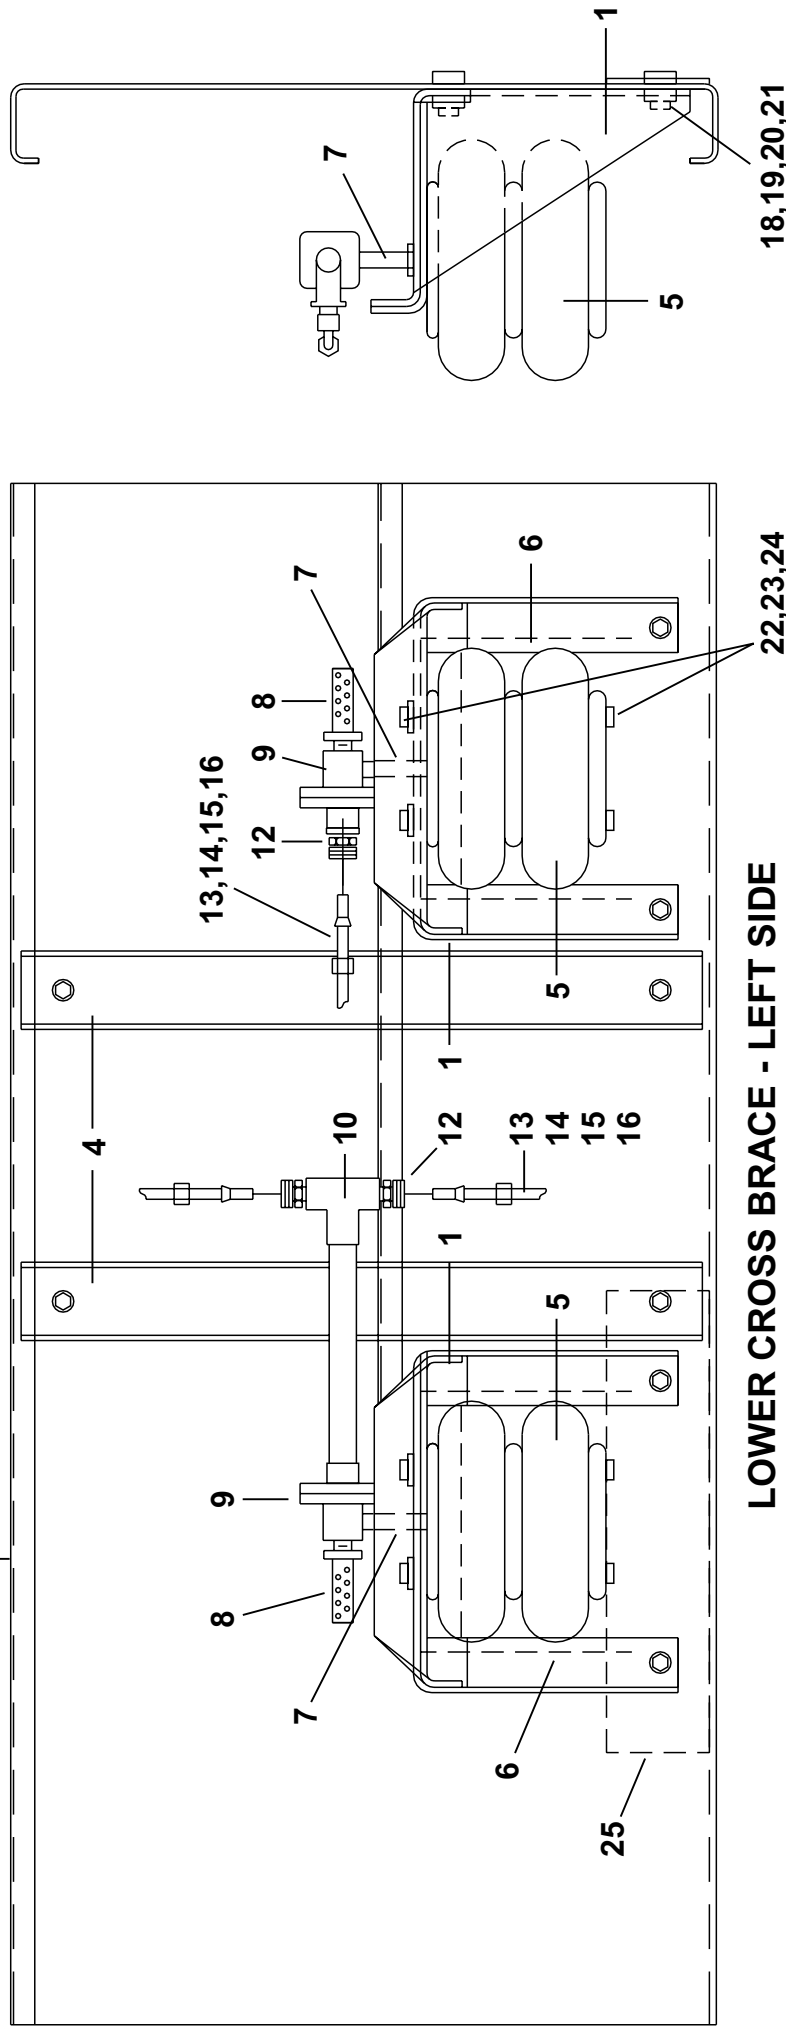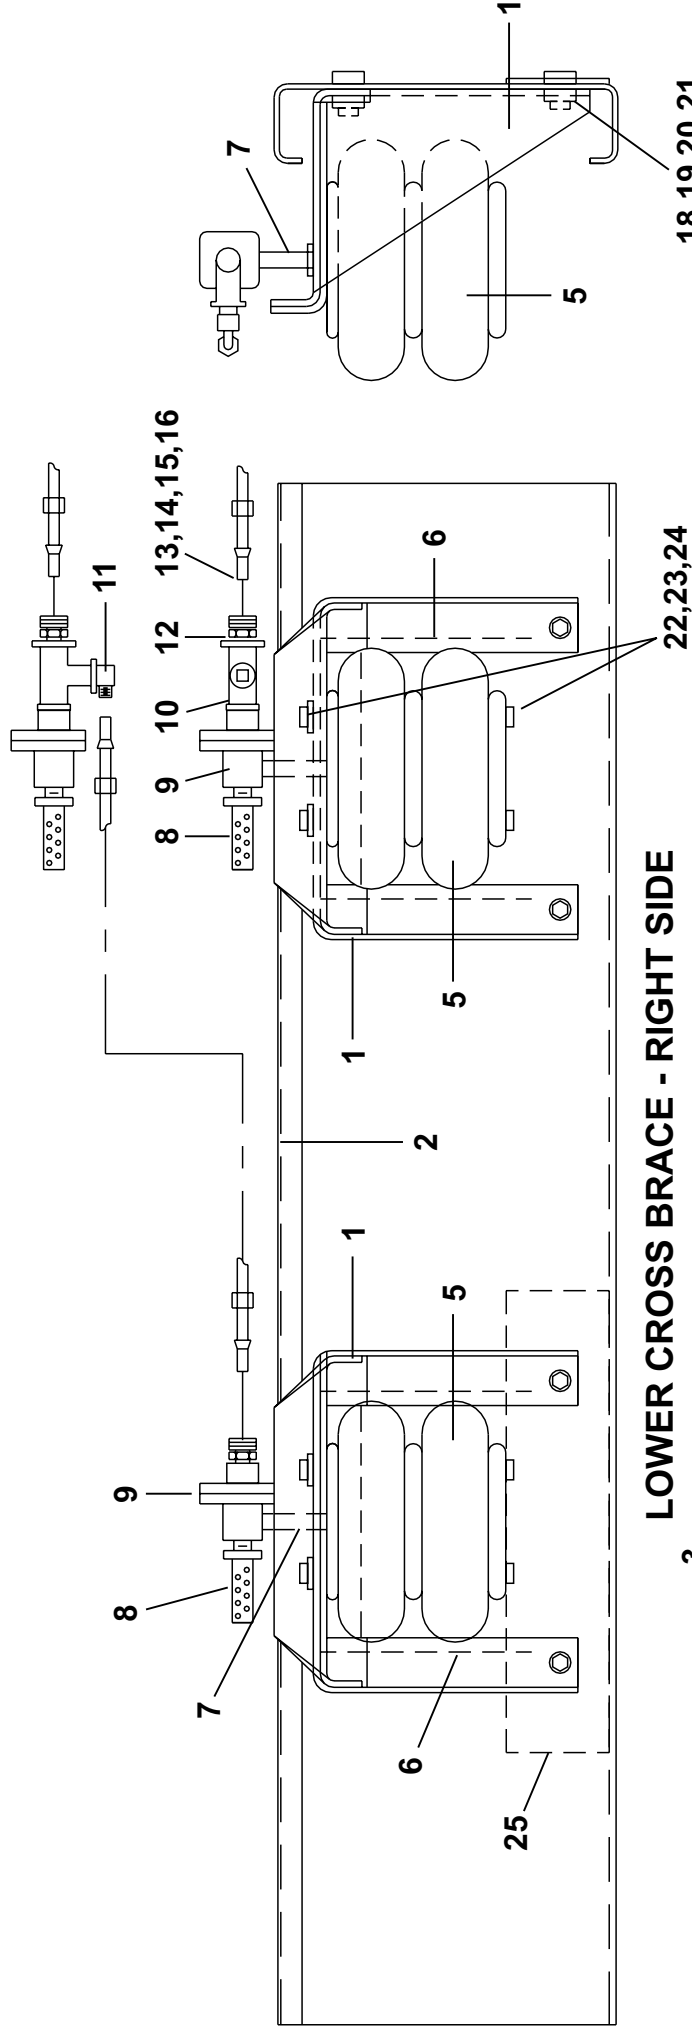



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**Parts List—Push Down**

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	A	G29 05200	XBRACE ASSY-LOWER RT 6044 SG	
	B	G29 05100M	XBRACE ASSY-LOW LF 6044SP213	
-----COMPONENTS-----				
all	1	W2 175087	*WLDMNT BRACKET-PUSH DOWN=TOP	
all	2	02 19149	XBRACE,LO-RT 6044W BEND@PRNT	
all	3	02 19148M	BRACE=LOW LF CROSS 6044SP2/3	
all	4	02 19246B	XBRACE-STIFFENER 6044WP2/WP3	
all	5	60B120	AIRMT S-20 2CONV F#W013586910	
all	6	69C050A	POLYETHYLENE BAG 9X6X13X.005	
all	7	5N0E02KG42	NPT NIP 1/4X2.5 TBEGALSTL SK40	
all	8	27A005	MUFFLER 3/8" BANTAM B38	
all	9	96M055	DELTROL QUICK EXHAUST VLV.1/4"	
all	10	51V015	TEE 1/4 FGDBRASS 101T7-444	
all	11	53A040B	BODY=EL90MALE5/16X.25#B69A-5B	
all	12	53A020B	BODYMALECON5/16X.25COM#B68A-5B	
all	13	53A509	TUBE INSERT 5/16"OD X .53"LG.	
all	14	53A508	SLEEVE DELRIN 5/16"OD#60PT-5	
all	15	53A060A	NUT BRASS 5/16 COMP#61A-5	
all	16	60E005	TUBING BLK.POLY.5/16DX3/16ID	
all	18	15G238	HXNUT 5/8-11UNC2B SAE ZINC GR2	
all	19	15U315	LOKWASHER MEDIUM 5/8 ZINCPL	
all	20	15K214E	HXCAPSCR 5/8-11UNC2AX1.5 GR5 Z	
all	21	15U314	FLATWASHER(USS STD) 5/8" ZNC P	
all	22	15U240	FLATWASHER(USS STD) 3/8" ZNC P	
all	23	15U255	LOCKWASHER MEDIUM 3/8 ZINCPL	
all	24	15K095	HXCPSR 3/8-16UNC2AX1 GR5 ZINC	
all	25	02 19149A	PLT REINFPSHDWN=60SP2+3	



**Section**

**6**

**Control and Sensing  
Assemblies**

## VIBRATION SAFETY SWITCH ADJUSTMENTS

### B What the Vibration Safety Switch Does

The *vibration safety switch* pictured below is an important safety feature. If properly adjusted, the switch will momentarily actuate as a result of repeated machine movement caused by an out-of-balance condition. Table A below illustrates the effect of the *vibration safety switch* actuation.

**Table A—Effect of Tripping Vibration Safety Switch**

Machine Model	Function of Vibration Safety Switch
30015, 30020, and 30022	Disables high speed extract
All microprocessor-controlled washer-extractors not listed above, and all dye machines	De-energizes three-wire relay, effectively terminating machine operation

## Adjustments


When the machine leaves Milnor<sup>®</sup>, the actuator arm is tie-wrapped to prevent damage (except on 30015, 30020, and 30022 models). **This tie wrap must be removed after the machine is set into position but before the machine is operated.**

Adjustment of this switch from the factory setting is not recommended; however, it should be checked for proper functioning and adjusted if its proper setting is lost.

As shown at right in FIGURE 1, the unit consists of a *sensitive micro-switch* with an extended actuating arm supporting an eccentric weight. The weight may be adjusted by moving it up and down on the arm and by rotating it on the arm. In addition, the *micro-switch* itself may be tilted from side to side.

**The sensitivity of the switch increases as the eccentricweight is raised on the actuating arm and decreases as the weight is lowered.**

The unit should be adjusted so that the actuating arm will always reset by itself, this being accomplished by rotating either the switch or the weight to give just enough bias to cause the switch to reset. Check the adjustment by moving the arm to the left then slowly releasing it. Make sure the micro-switch clicks when the arm is **slowly** released, thus indicating

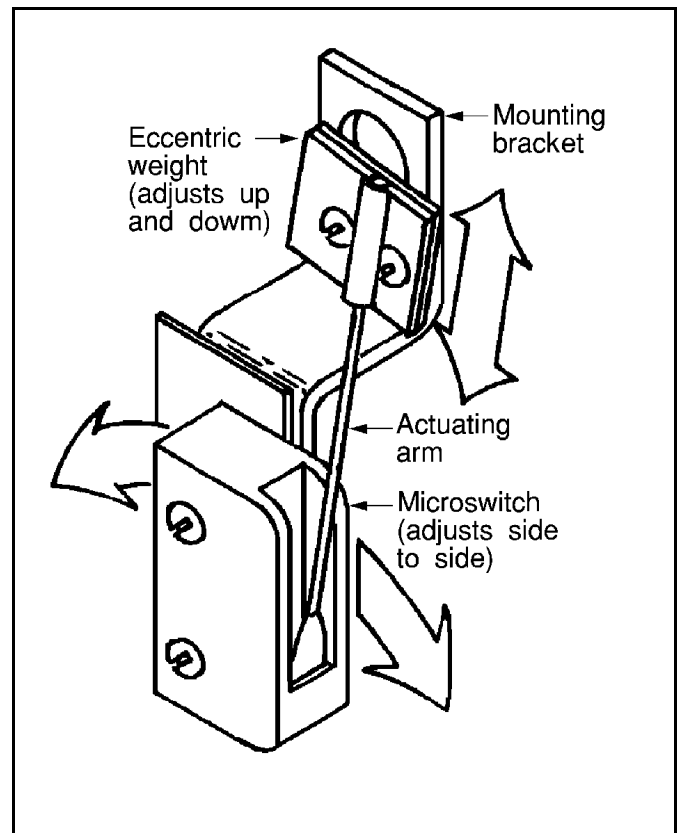

**FIGURE 1** (MSSMA408BE)  
**Vibration Switch**



that it has reset. In the released position the arm should rest **lightly** but definitely against the stop on the *micro-switch* case that prevents any further arm movement to the left.

For machines with rigid mounted shells, where the machine is bolted to a very substantial foundation, very little machine movement will occur for a given degree of out-of-balance. Under such conditions it may be better to adjust the switch to be very sensitive. With less substantial foundations (e.g., ones where the sub-soil is mushy or springy or otherwise not as desirable), considerably greater machine movement will occur for a given degree of out-of-balance, in which case a less sensitive *vibration switch* setting may be indicated.


# Vibration Safety Switch

BMP910038/2007086B  
(Sheet 1 of 1)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

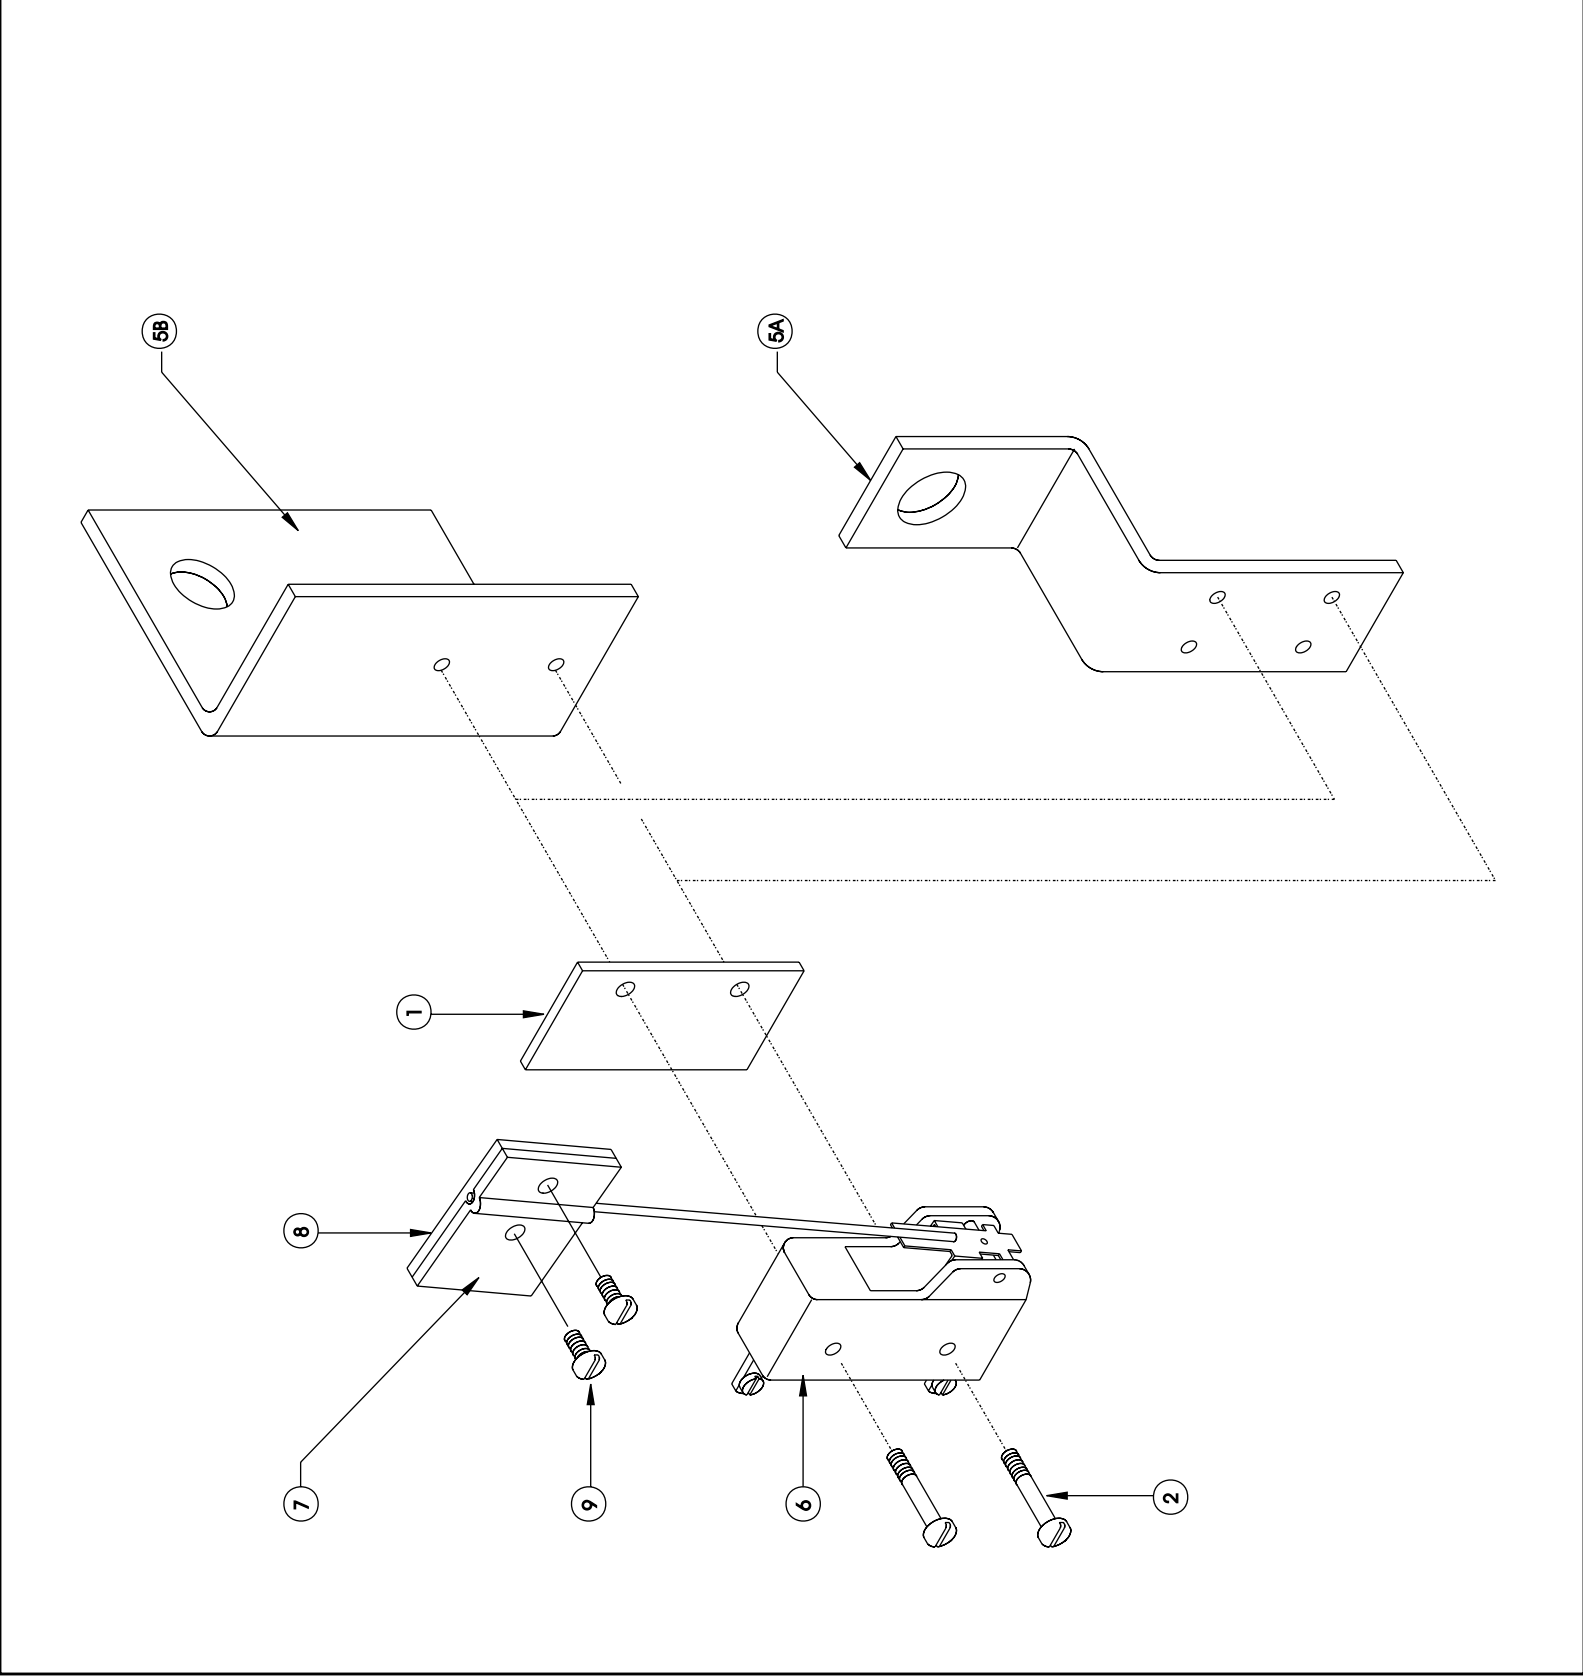

**Parts List—Vibration Safety Switch**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			-----ASSEMBLIES-----	
A		SAE03 151	* ASSY-VIBRATION SWT=LG CONTR	(ALL MODELS EXCEPT BWP,CPE) 3015/22 V/T/G/F 3022F,362F, 4232F 3626,4226, 4230VXX 3022X,3626X,4226X,4232X 4244, 6044,7244WP/SP CONTAINS 001,002, 005A-009  (MODELS 3621BWP,CPE ONLY) CONTAINS 001,002, 005B-009
B		SAE03 151A	*ASSY-VIBRATION SWT=BALCOM	
			-----COMPONENTS-----	
all	1	02 02038	PLATE INSULATING SMALL9NOV51	
all	2	15P008	TRDCUT PANHD 6-32X1 NIKSTL +WA	
A	5	02 15119	BRACKET=VIBSW CAD	
B	5	02 10264	BRACKET=SAFESW CAD	
all	6	09R020	SWITCH NC VIBR#WZ-2RW84429-P52	
all	7	03 01059	VIBSWITCH CLAMP CADSTL	
all	8	03 01058	VIBSWITCH WEIGHT-CADSTL	
all	9	15P101	TRDCUT-F PANHD 8-32X3/8 NIKSTL	

**Section**

**7**

# **Chemical Supply Devices**

## RULES FOR THE FIELD INSTALLATION OF PUMPED-TYPE LIQUID SUPPLY SYSTEMS


**APPLICABILITY:** All Washer-Extractor Models

### GENERAL

Pellerin Milnor Corporation does not guarantee machines against damage from corrosion caused by improper installation and/or operation of pumped-type liquid supply systems. The following precautions must be observed when pumps are used:


1. Always install the pumping unit lower than the discharge end of the chemical delivery tube as shown at right. This will prevent any excess chemical concentrate from dribbling out of the tube and onto unprotected machine surfaces when the machine is idle.

Merely putting a "drip loop" in the delivery tube won't help much. (It might reduce the dribble a little, but not enough to prevent damage.) **The real solution is to install the pumps below the discharge end of the delivery tubes so excess chemical won't dribble out of the tube long after the pumps stop.**

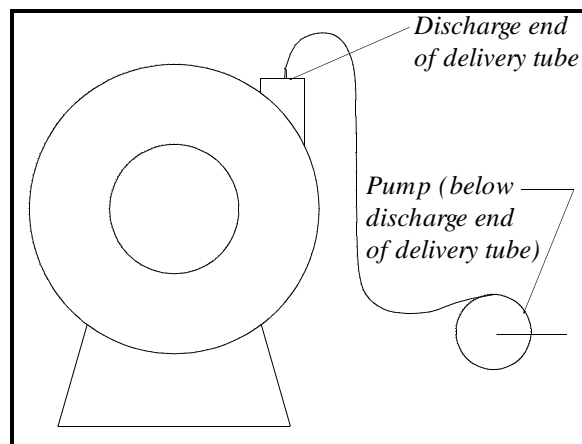

2. If the machine is also equipped with a flushing supply injector:

- a. Always wire the new system so the appropriate flushing valve also operates whenever chemical is being injected. This will dilute the concentrated chemical with obvious advantages. If possible, the water flushing valve should remain on for a minimum of 30 seconds after the longest injection time for that chemical.
- b. Always inject the chemical into a plastic cup (and direct the flushing water into the same cup). This way, any chemical that dribbles out

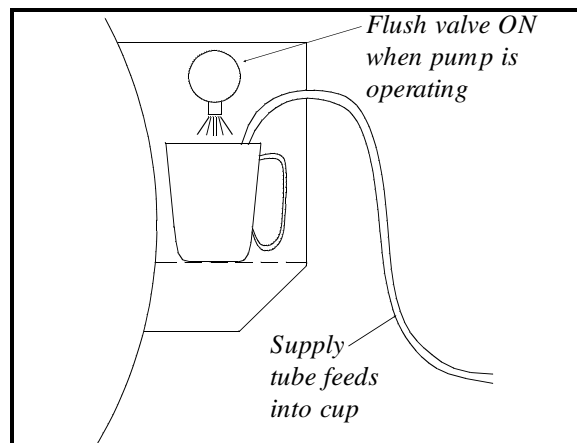

of the tube after the pump stops will be diluted by the water remaining in the cup.

3. Never inject any concentrated chemical directly onto any metal, rubber, or plastic surface of the machine other than the plastic cups provided.

---

**It is not enough to merely inject the chemical onto a surface that will be subsequently flushed or wetted sometime during the wash process.** This is because the "culprit" is the chemical which dribbles out later. The damage occurs when the residue of a chemical (even a diluted chemical) dries on a surface—as when a chemical dribbles out of the delivery tube after the last wash cycle is finished. As the chemical dries, the water content evaporates—leaving a deposit of a very concentrated chemical which is then free to attack the host surface throughout the night (or over the weekend) or until the machine is returned to service.

---

**The only realistic solution is to make sure that the discharge end of each chemical delivery tube is above the pump so excess chemical left in the tube after the pump stops cannot dribble out later.**

**Supply Injector**  
6036, 6044 & 5238


BMP700940/97287V  
(Sheet 1 of 2)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

BMP9700940/97287V (1 of 2)

Litho in U.S.A.

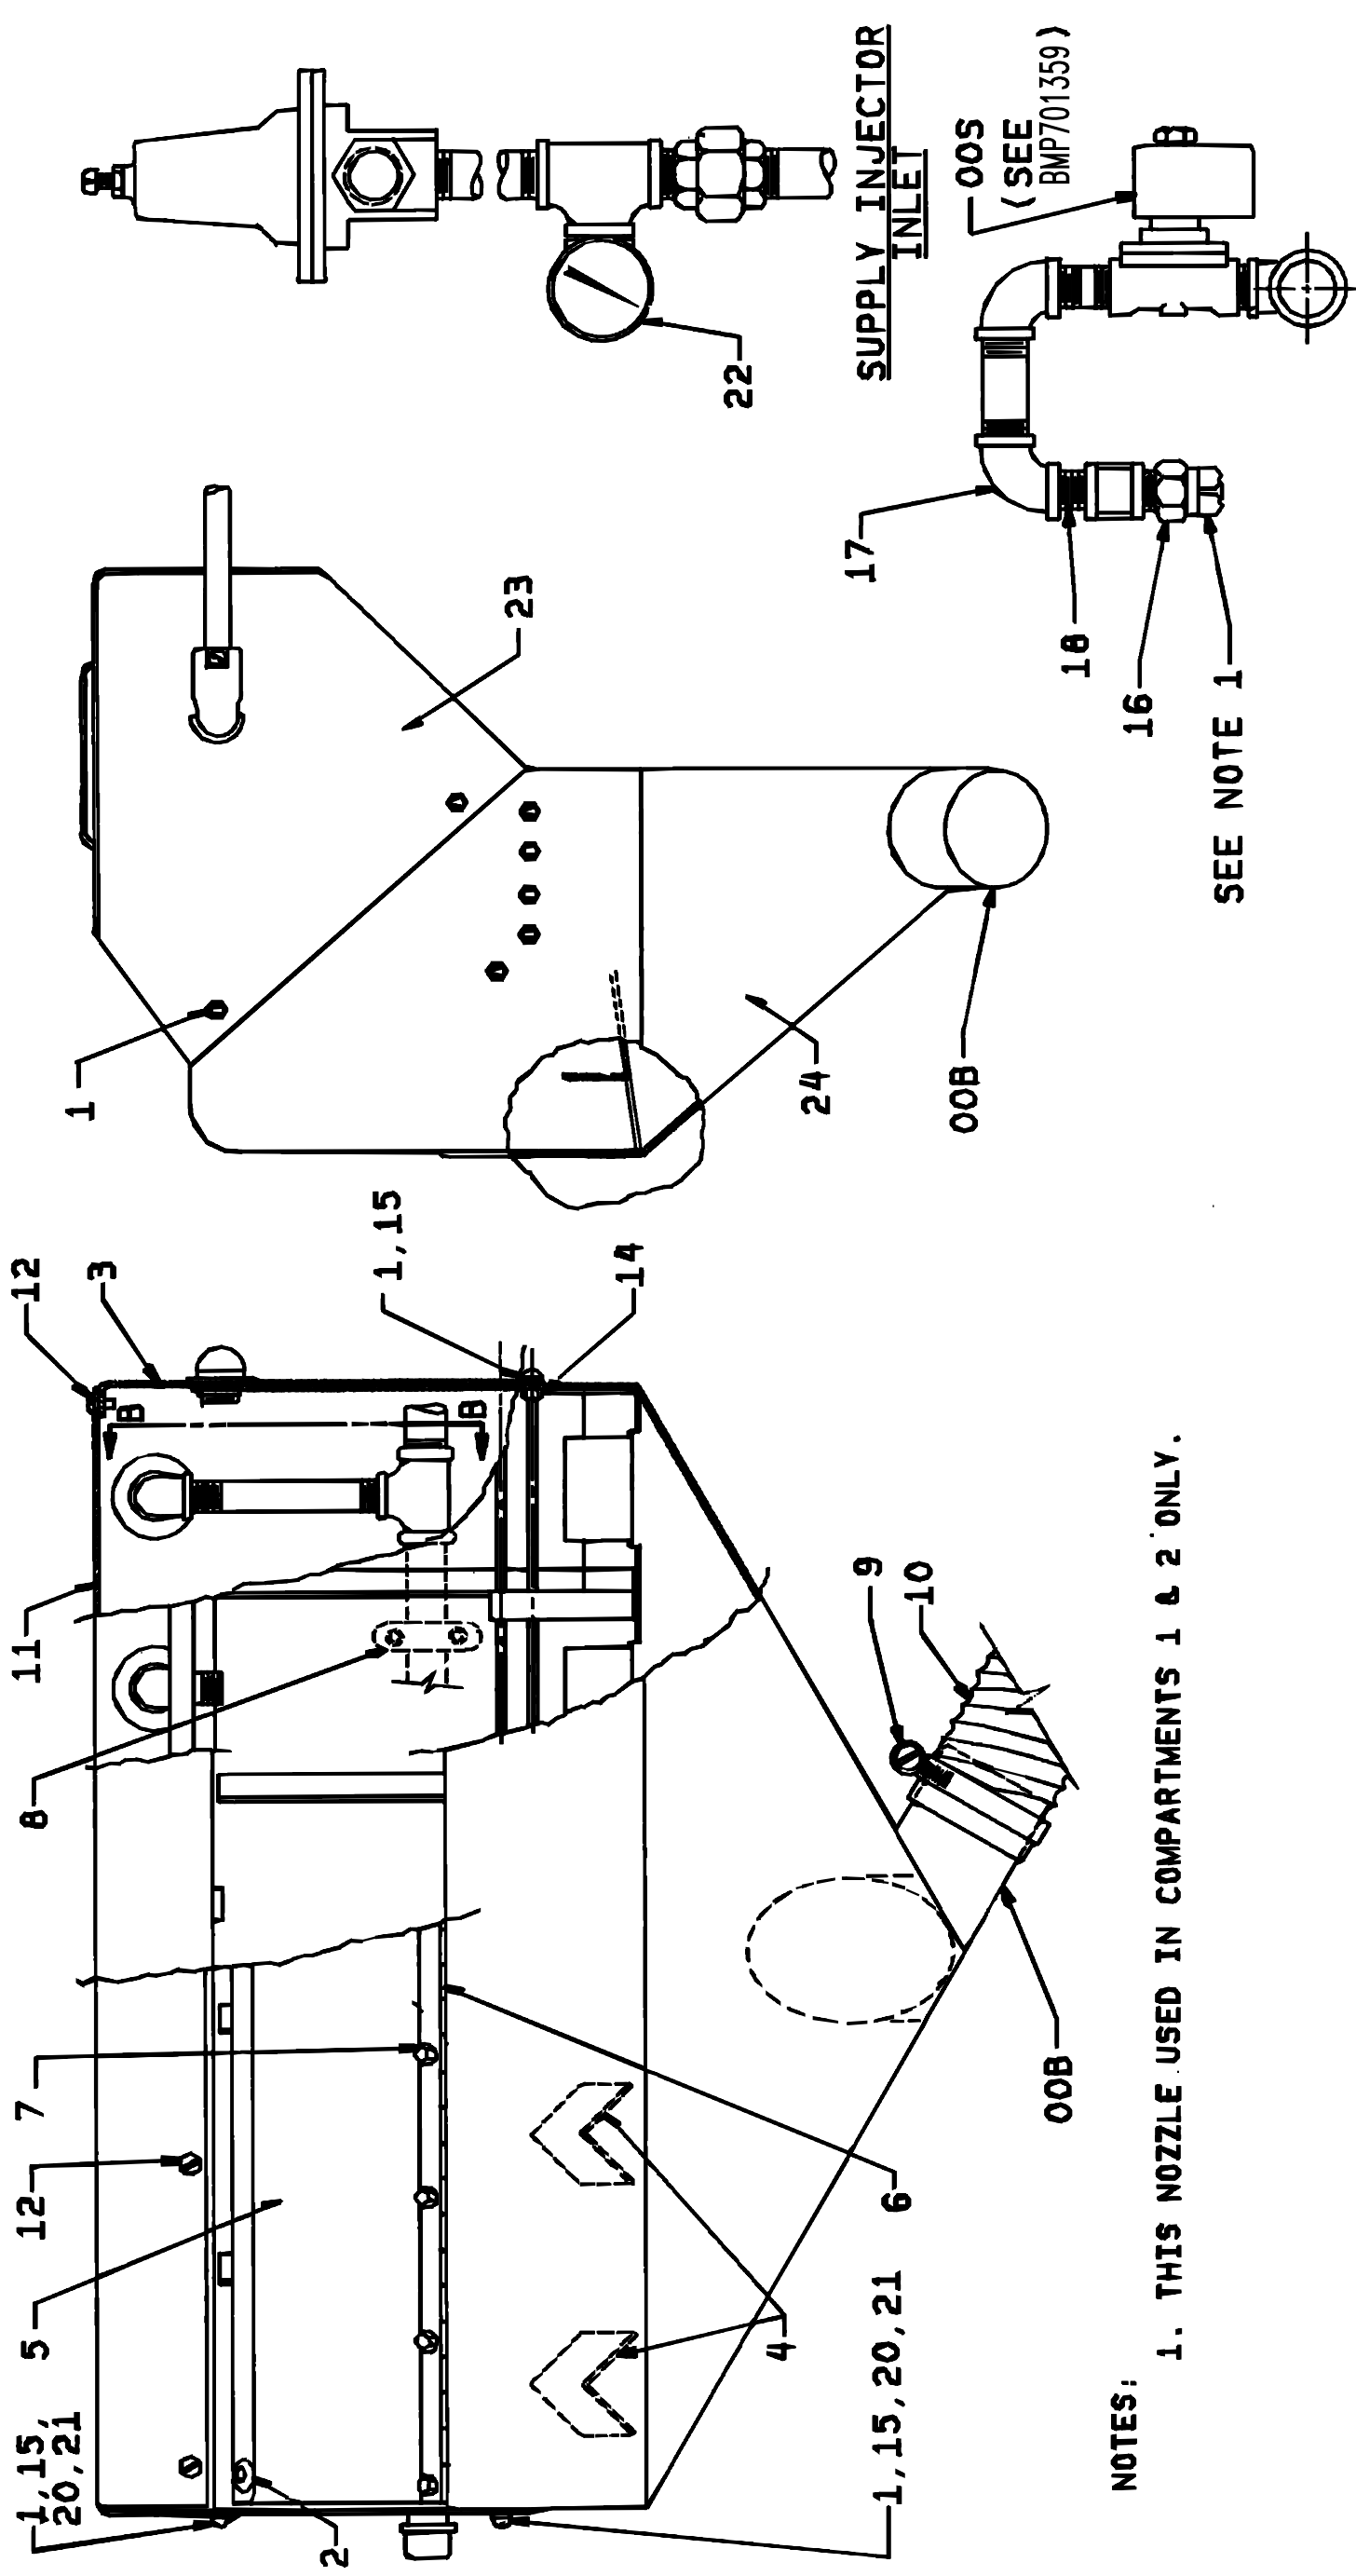

NOTES:  
1. THIS NOZZLE USED IN COMPARTMENTS 1 & 2 ONLY.

SEE NOTE 1

SECTION B-B



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**Parts List—Supply Injector**

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	A	A28 18300	85031D* ASSY,5FLUSH SUPINJ=6036WE	6036
	B	SA 28 085	SUPPLYINJECTOR 5FLUSH=60" DIVCYLS	6044
	D	A28 18600	90346D\$PIPING+VALVE=SUP INJ ASSY	
	E	SA 28 086	70256C* COVER ASSY=SUPPINJ	00A & 00B
-----COMPONENTS-----				
all	1	15G121	HXCAPNUT 10-24UNC2 #3266BR NKLPLTG2	
all	2	60C001	RUBBER BUMPER BLK W/WASHER ONLY#698	
all	3	02 18024	66023Z FRONT VALVCLOZ	
all	4	02 18179	76164B DIVIDER-SUP INJ	
all	5	02 18543	93352C LID=SUPPLY INJECTOR	
all	6	02 02649	89356A HINGE=VALVE ENCLOSURE-16.25"	
all	7	15J004	01Z TUBULAR RIVET TRS#40988 3/16"	
all	8	15K105	HXCAPSCR 3/8-16UNC2A1.25 GR5 PLATED	
all	9	27A074	HOSECLAMP 2+1/16-3"CADSCR+1/25 BAND	
all	10	60E301A24A	HOSE= *2.5"ID PE X 24"	
all	11	02 18564	85013C ENCLOSURE=SUPPLY INJ VALVE	
All	12	15P010	12Z PHILPAN TRDCUTSCR TYP10-24X1/2SS	
all	13	27A126	MEASURECUP 48OZ STOWAY1025P	
all	14	15G130	HEXMACHSCRNUT 10-24UNC2 SS18-8	
all	15	24G018N	ROLLED WASHER .194"ID NYLTITE #10W	
all	16	27A001	NOZZLE BRASS 1/2" SPRAYSYS #HH29SQ	
all	17	5SL0PNFA	NPT ELBOW 90DEG 3/4" GALMAL 150#	
all	18	5N0PCLSB42	NPT NIPPLE 3/4XCLS TBE BRASS STD	
all	20	15N117	RDMACSCR 10-24UNC2X3/8SS18-8	
all	21	15U160	LOCKWASHER MEDIUM #10 SS18-8	
All	22	30N100	07Z PRESSGUAGE 1/8"BACKCONN 0-30PSI	
all	23	02 18025	66022Z REAR VALVCLOZ	
all	24	W2 18559	92612#* SUP-CHUTE 5-FLUSH=6044W+S+	





**Section**

**8**

**Water and Steam Piping  
and Assemblies**


**Water Inlets with Siphon Breaker  
6044SP2/SP3, 6044SP2 SM, 6044SP3 SM**

BMP040077/2006305B  
(Sheet 1 of 3)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

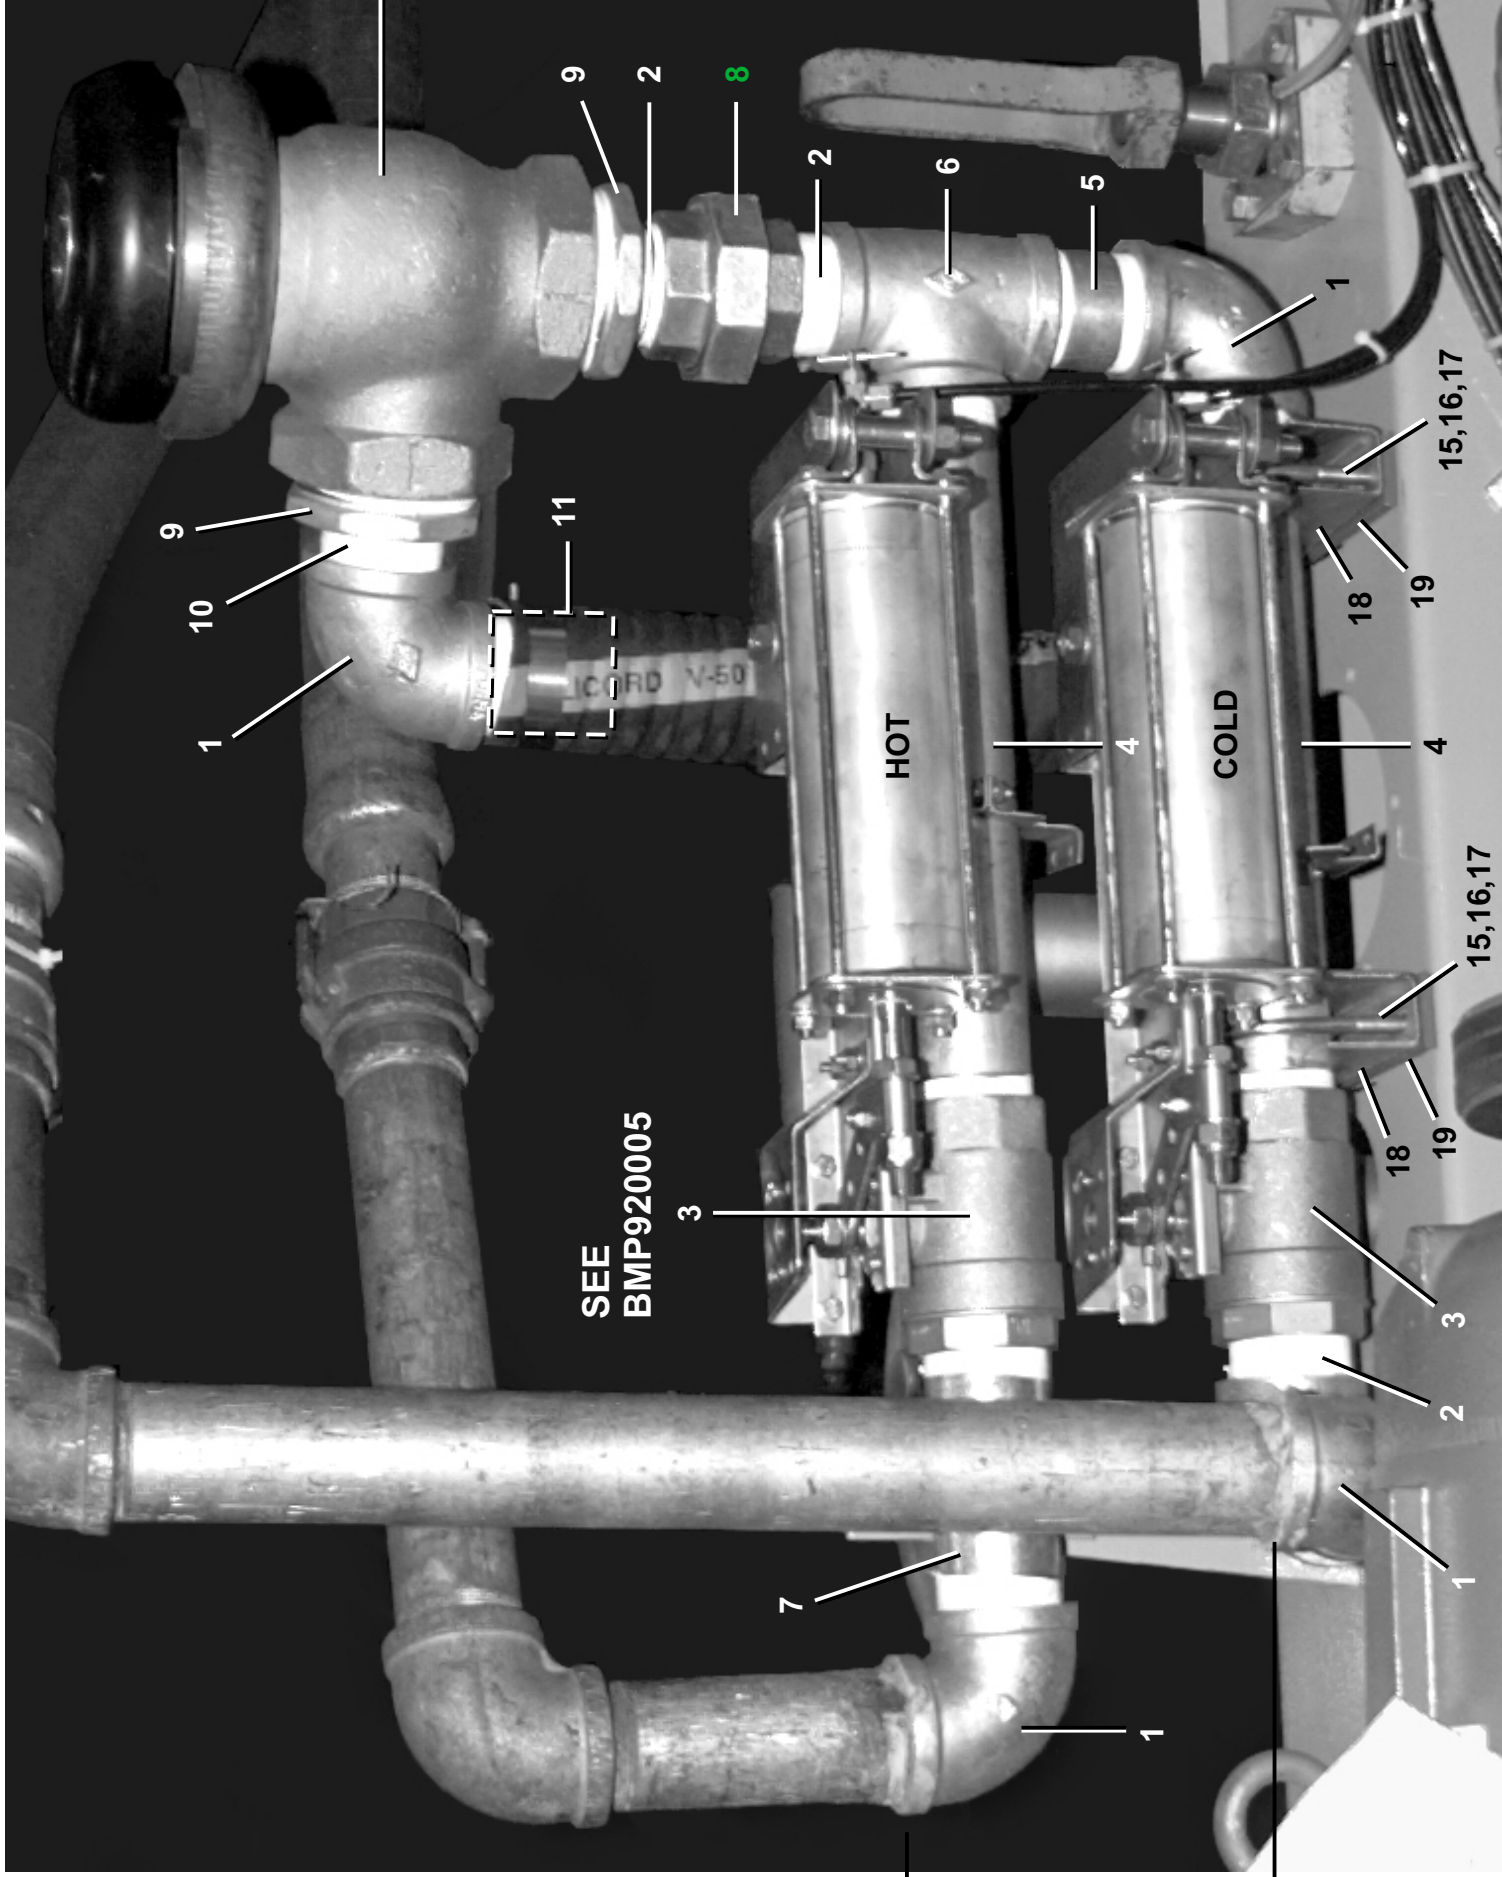

HOT  
WATER  
INLET

COLD  
WATER  
INLET

SEE  
BMP920005

10 SEE  
BMP040078



**Water Inlets with Siphon Breaker**  
**6044SP2/SP3, 6044SP2 SM, 6044SP3 SM**

BMP040077/2006305B  
 (Sheet 2 of 3)



Pellerin Milnor Corporation  
 P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

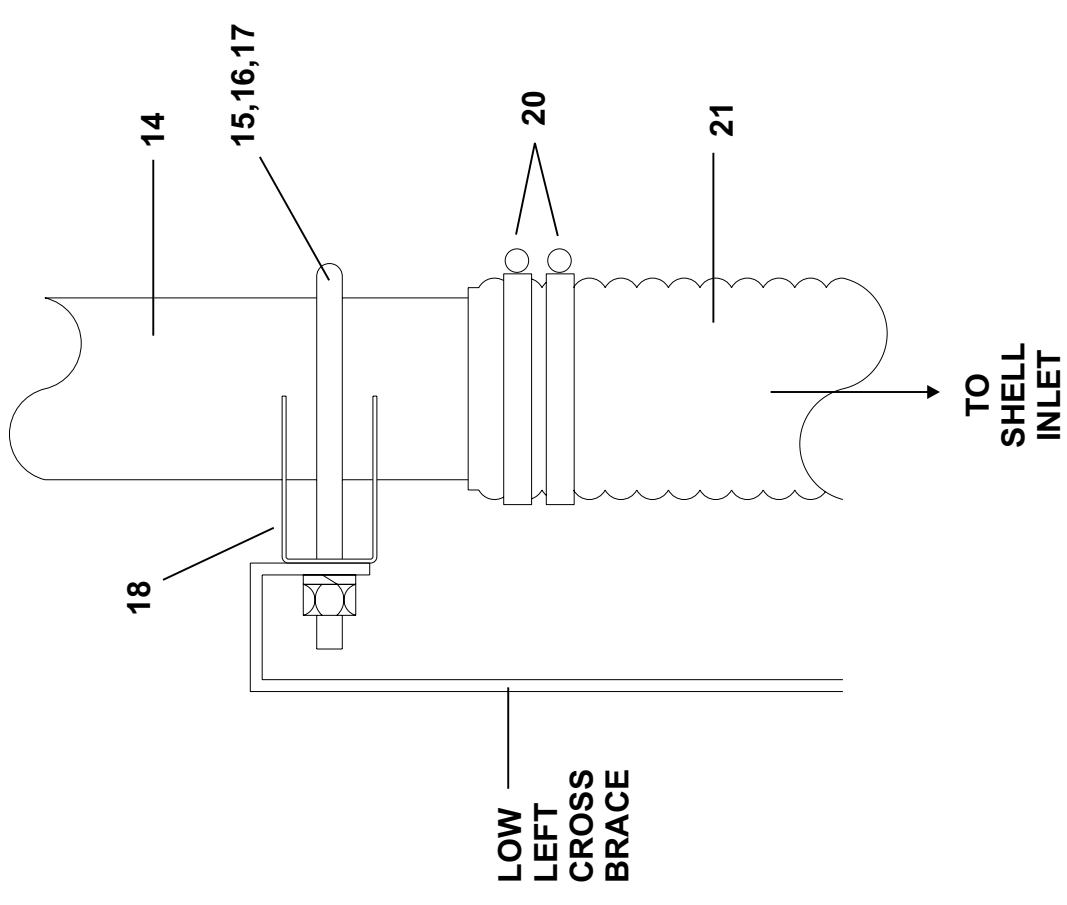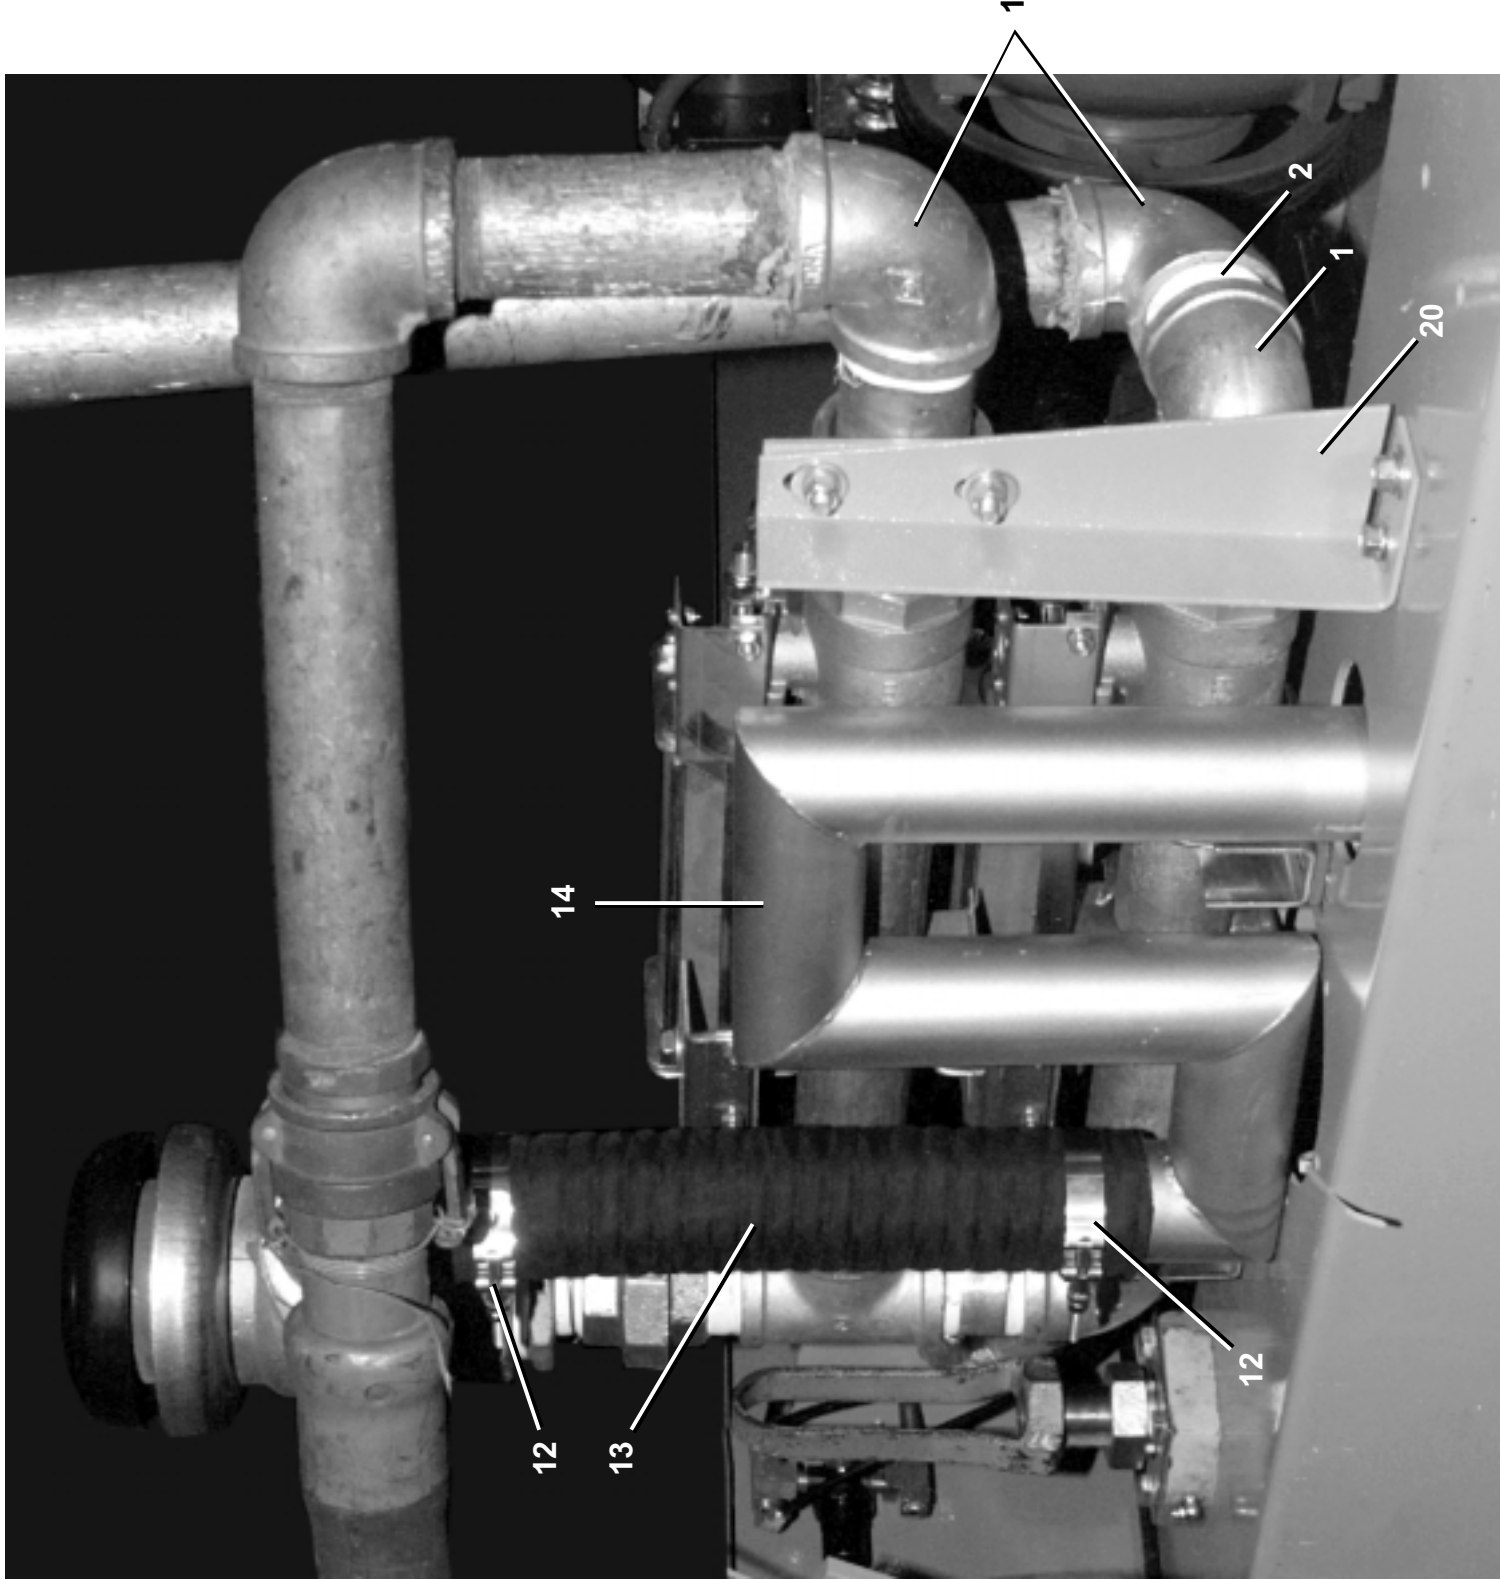

LOW  
LEFT  
CROSS  
BRACE



**Pellerin Milnor Corporation**  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**Parts List—Water Inlets with Siphon Breaker**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			-----ASSEMBLIES-----	
	A	GVW28002	80522# H2O INLTS-MTG HDWE +SB 60SG	
	B	AVW28001	89031D ASSY METHOD=60SG H2O INLTS-<	
	C	AVW28003	80522S *H2O INLT=COLD ONLY ,60SG	
	D	AVW28004	83352S *H2O INLT PIP(FOR SB OPT)60SG	
	E	AVW28005	83352S *H2O INLT=+1 FRESH VALVE 60SG	
	F	AVW28006	80522S *H2O INLT=ADD VACUUM BRKR60SG	
			-----COMPONENTS-----	
C,D,E	1	96M034	3"VAC BREAKER WATTS#288A M2	
C,D,E	2	5N2ACLSG42	NPT NIP 2XCLS TBE GALSTL SK40	
C,D,E	3	96D088BCSL	92177S 2.00WAT BVAL+ACT/BR/NC/ST/LH	
C,D,E	4	5N2A15AG42	NPT NIP 2X15 TBE GALSTL SK40	
E	5	5N2A03AG42	NPT NIPPLE 2X3 TBE GALSTL SK40	
E	6	5S2ANFA	NPT TEE 2" GALMAL 150#	
F	7	5N2A06AG42	NPT NIP 2X6 TBE GALSTL SK40	
F	8	5SU2ANF	NPT UNION 2" GALMAL 150#	
F	9	5SB3A2ADEO	NPTHEXBUSH 3X2 GALCI 125#	
F	10	SA 03 007	78272C 3"SIPHONBREAKER+SCUPPER ASSY	
F	11	51E098B	KINGREDNIP2.5"IDX2"NPT#STC3025	
A	12	27A084	HOSECLAMP 3+9/16-4.5CADSC#HS64	
A	13	60E301A12A	HOSE= *2.5"ID PE X12"	
A	14	W2 19278	93352B * INLET TRAP 2.5"D=SG+VACBKR	
All	15	27A032N	UBOLT 2"PIPE 3/8-16 ZNC4.87"LG	
All	16	15G205	HXNUT 3/8-16UNC2B ZINC GR2	
All	17	15U255	LOCKWASHER MEDIUM 3/8 ZINCPL	
All	18	02 18995	77423B CLAMP=2"PIPE	
All	19	02 13186	73364A SUPPORT=INLET PIPE W/SIPBKR	
All	20	03 01650	91437D BRKT=2"WATS BALVAL 6044 S/G	
All	21	27A075	T-BOLT HOSECLAMP 2.75"-3.06"	
All	22	60E301A48A	HOSE= *2.5"2D PE X48"	

**Used In**   **Item**   **Part Number**   **Description**   **Comments**

**Used In**   **Item**   **Part Number**   **Description**   **Comments**


# Siphon Breaker & Scupper

BMP040078/2006182B  
(Sheet 1 of 1)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

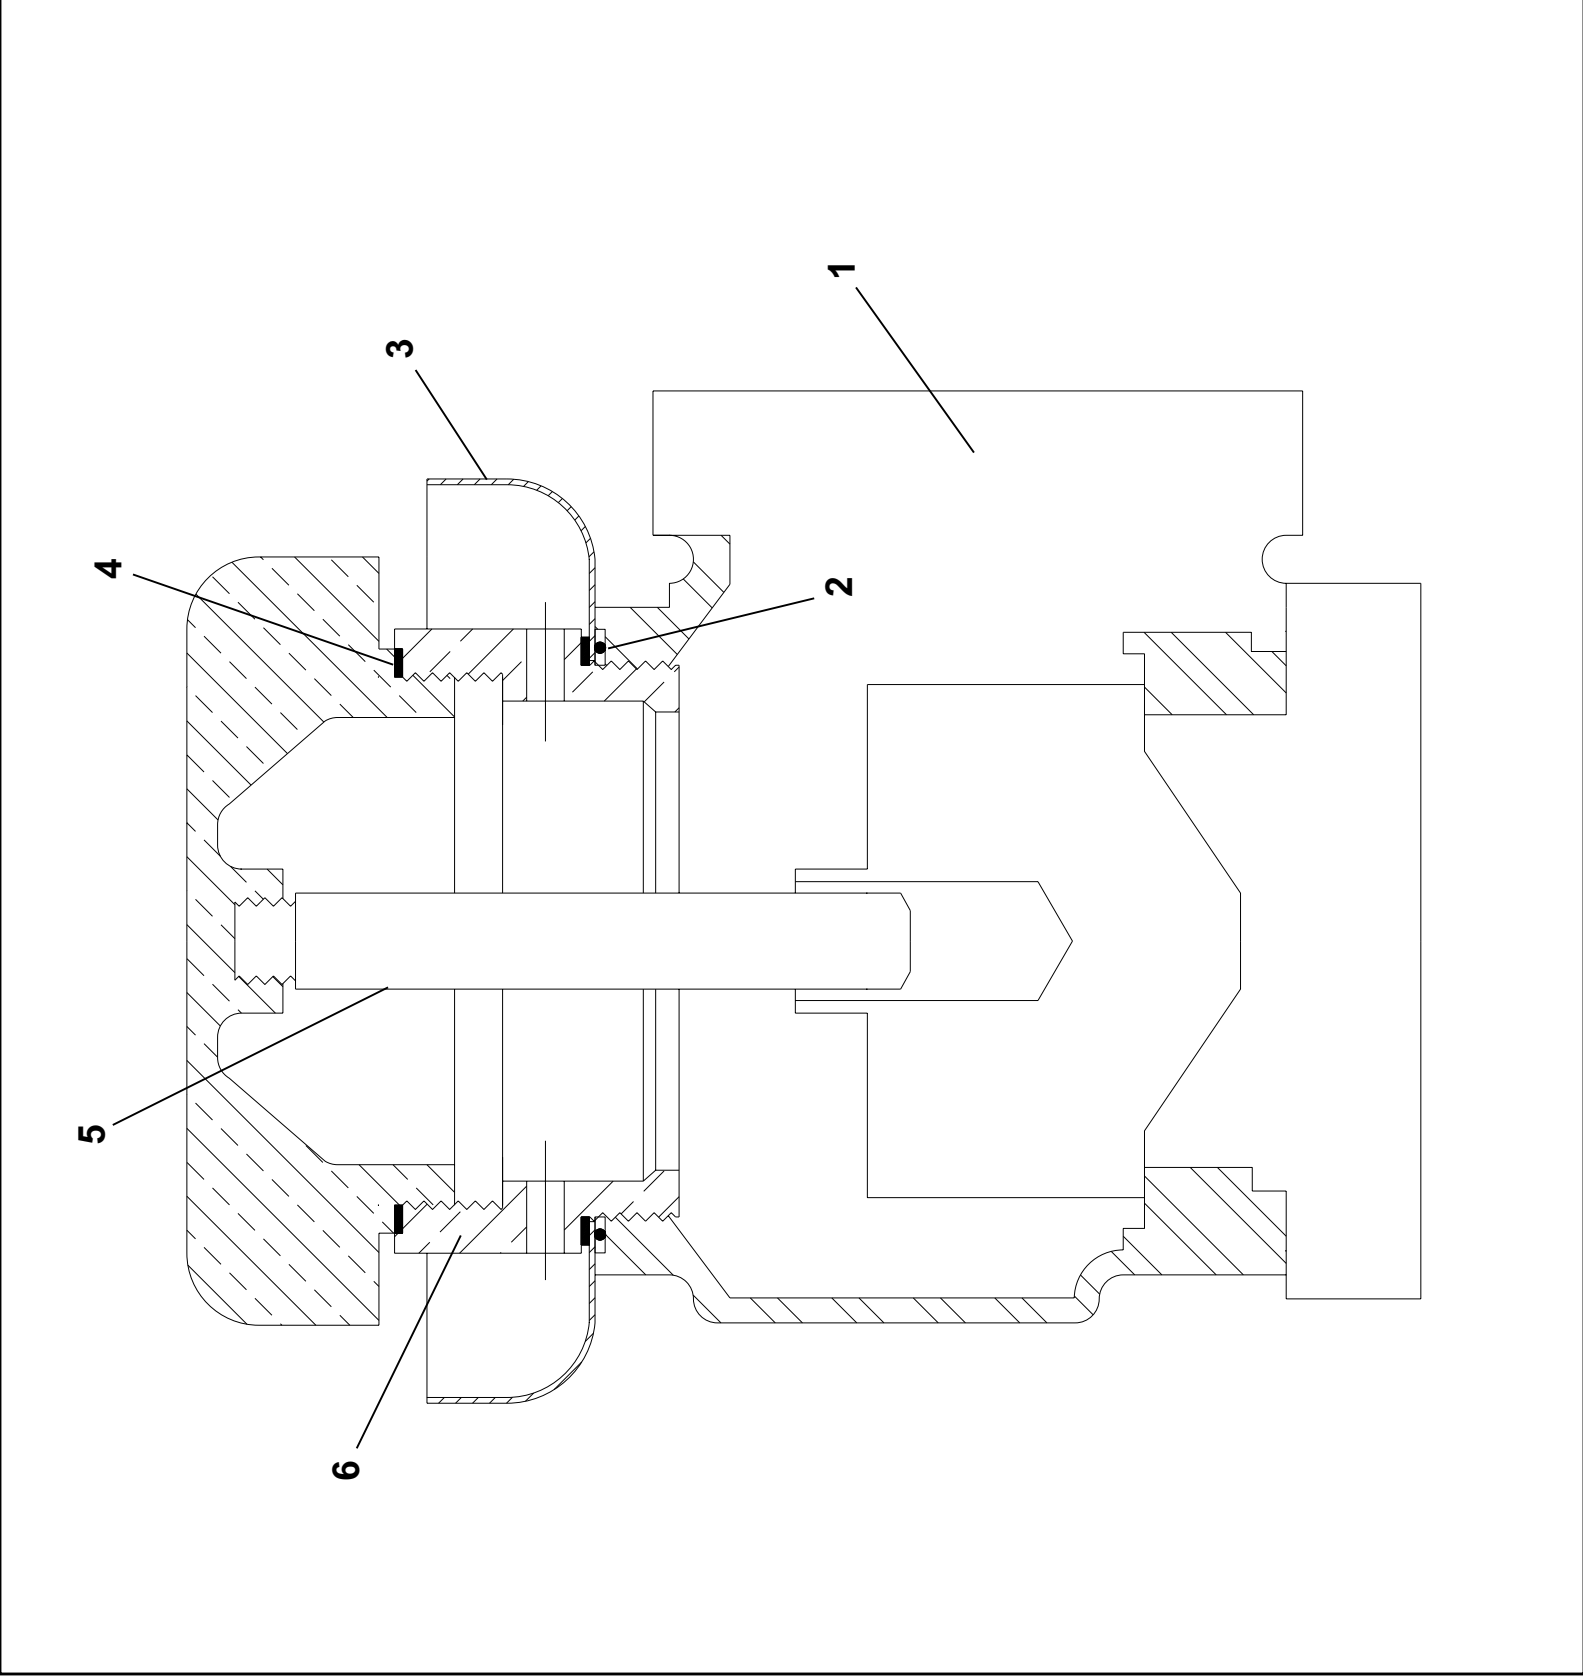

**Parts List—Siphon Breaker & Scupper**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
	A	SA 03 007	3"SIPHONBREAKER+SCUPPER ASSY	
			---ASSEMBLIES---	
			---COMPONENTS---	
all	1	96M034	3"VAC BREAKER WATTS#288A M2	
all	2	60C151	ORING 3+7/8ID1/8CS BUNA70#241	
all	3	03 01303	SCUPPER 3"SIPHON BREAKER	
all	4	03 01304	GASKET=RING 3"SIPHON BREAKER	
all	5	03 01305	STEM=GUIDE 3" SIPHON BREAKER	
all	6	03 01306	SPACER=BONNET 3"SIPHON BREAK	


**Water Inlets**  
**6044SP2/SP3, 6044SP2 SM, 6044SP3 SM**

BMP040079/2006305B  
(Sheet 1 of 3)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

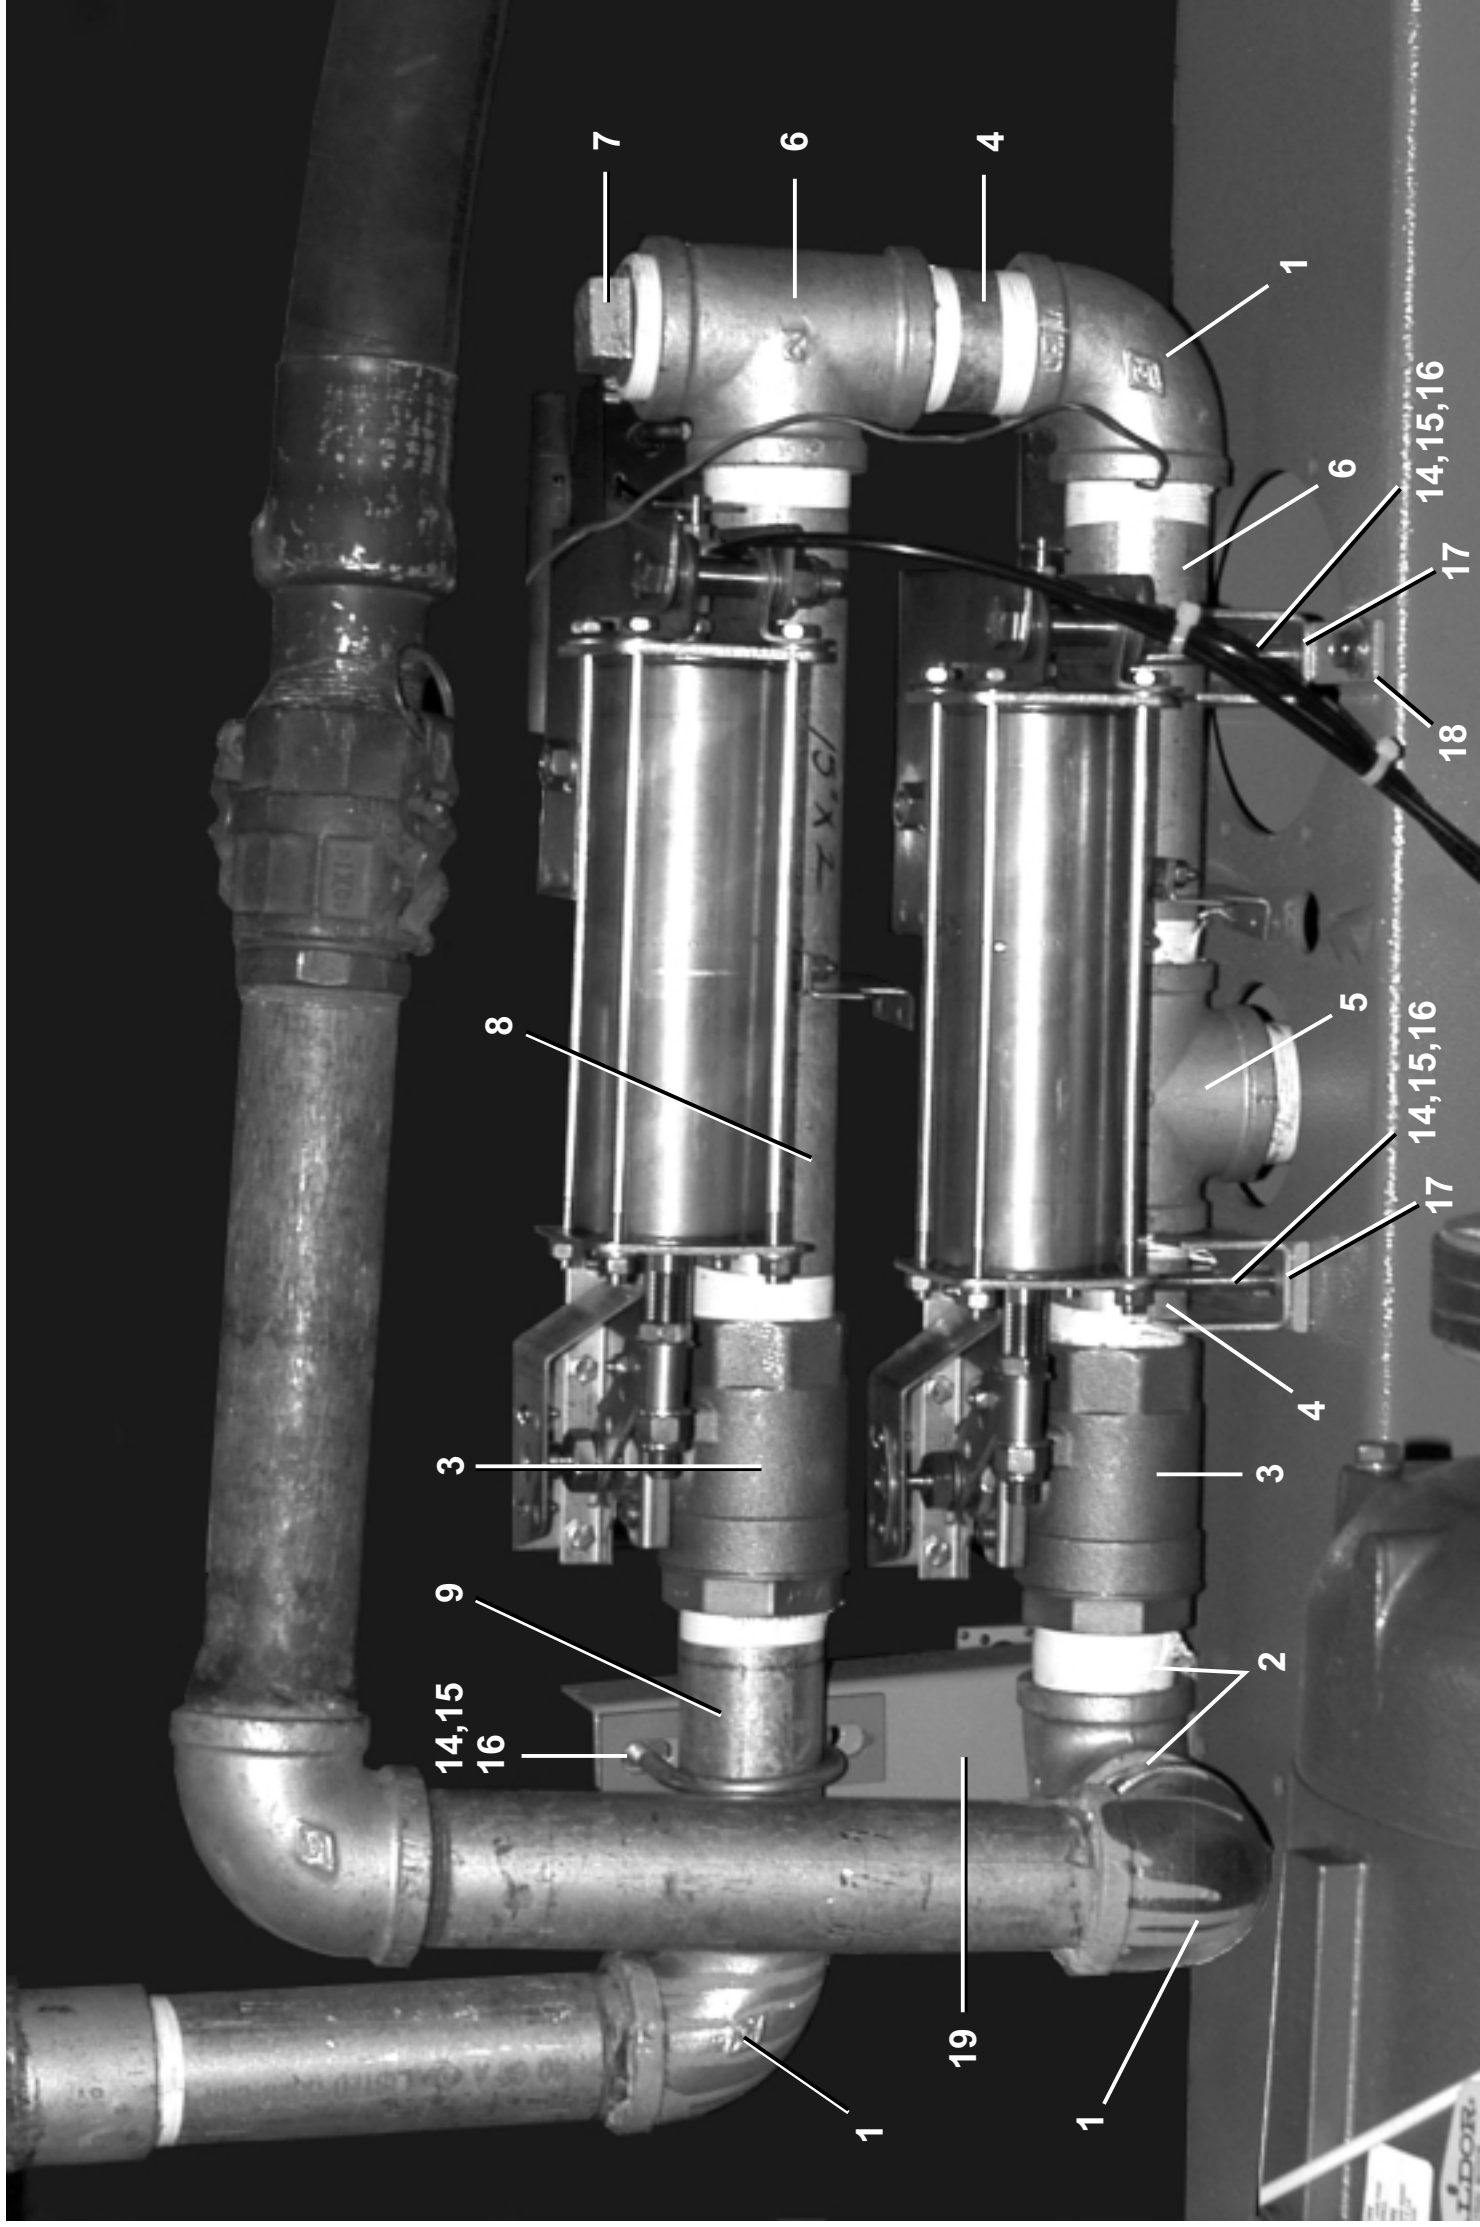

# Water Inlets



6044SP2/SP3, 6044SP2 SM, 6044SP3 SM

BMP040079/2006305B  
(Sheet 2 of 3)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

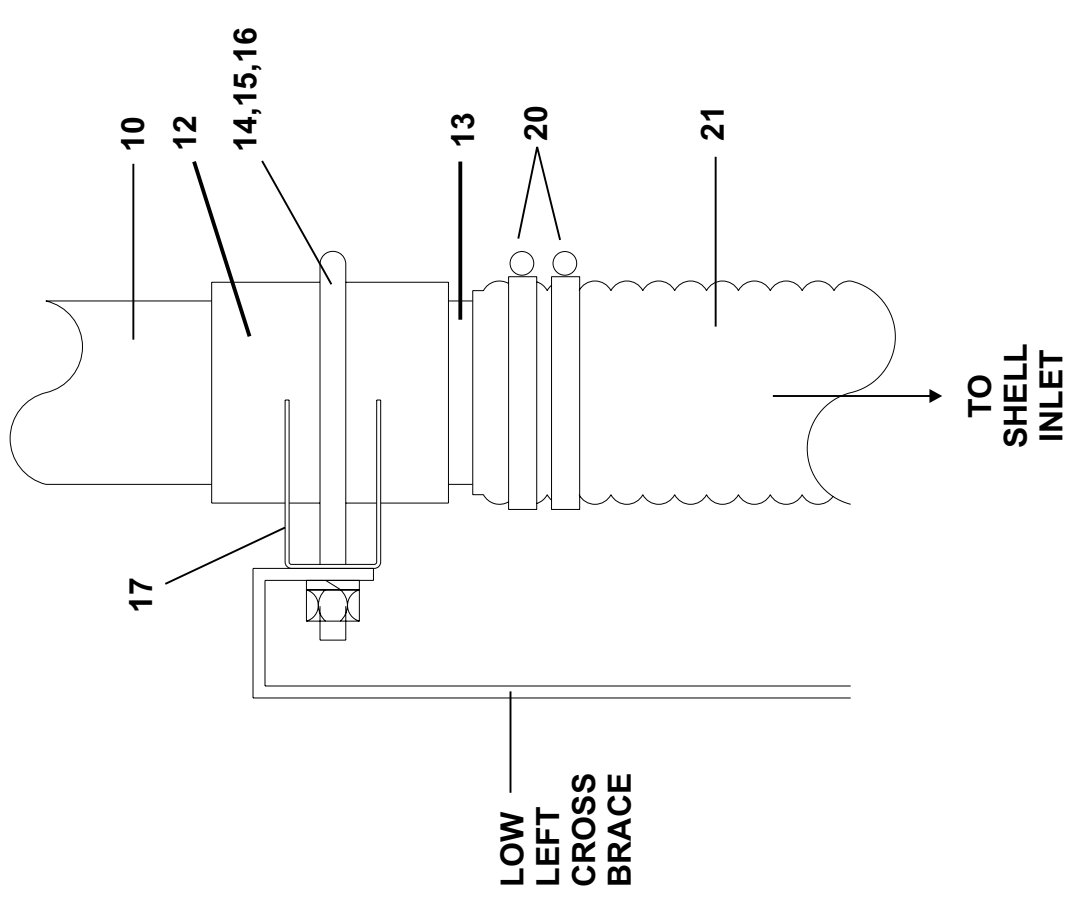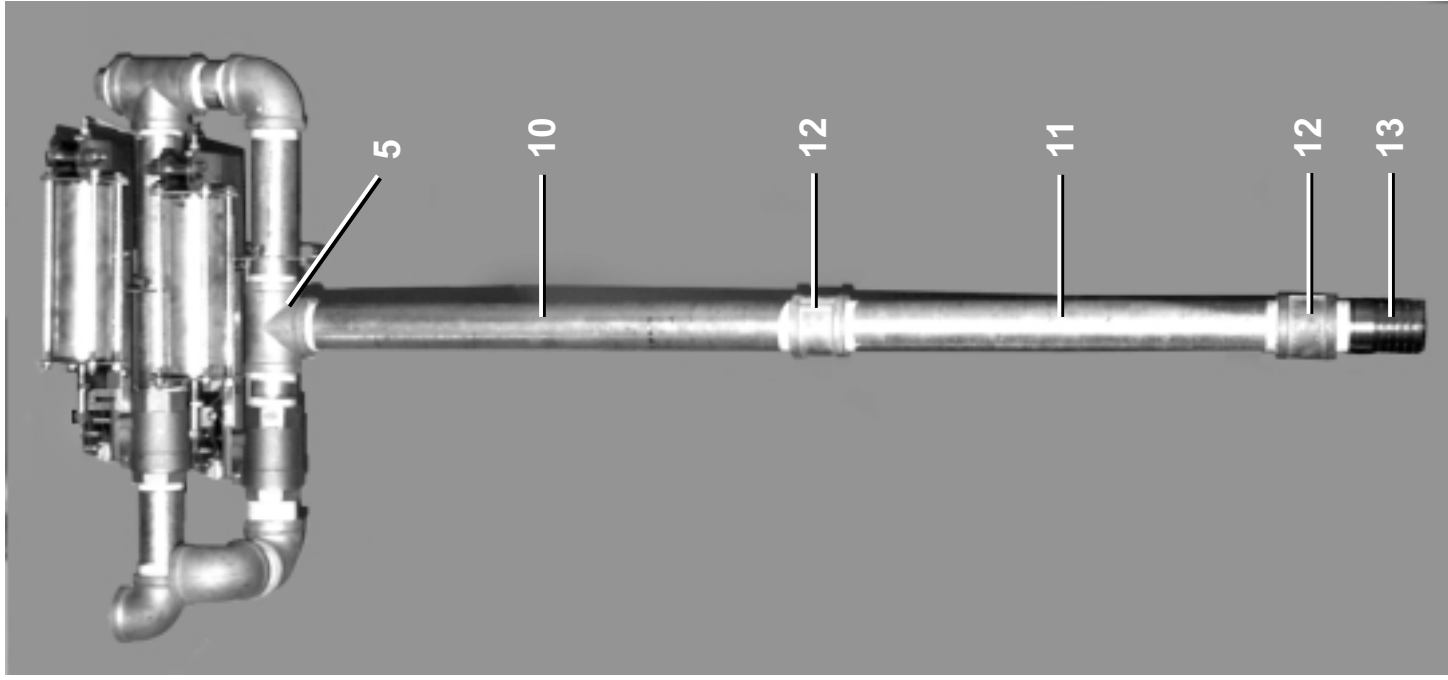

LOW  
LEFT  
CROSS  
BRACE



**Pellerin Milnor Corporation**  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**Parts List—Water Inlets 6044SP**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			-----ASSEMBLIES-----	
	A	GVW28001	80522D H2O INLT-S-MTG HDWE NO SB60SG	
	C	AVW28003	80522S *H2O INLT=COLD ONLY .60SG	
	D	AVW28002	83351S *H2O INLT PIP(W/O SB OPT)60SG	
	E	AVW28010	89031S *H2O INLT=+HOT VALVE 60SG	
	F	AVW28002M	85172S *H2O INLT PIP W/O SB 6056 MIC	
			-----COMPONENTS-----	
B,C	1	5SL2ANFA	NPT ELBOW 90DEG 2" GALMAL 150#	
B,C	2	5N2ACLSG42	NPT NIP 2XCLS TBE GALSTL SK40	
B,C	3	96D088BCSL	92177S 2.00WAT BVAL+ACT/BR/NC/ST/LH	
D	4	5N2A03AG42	NPT ELBOW 90DEG 2" GALMAL 150#	
E	5	5S2ANFA	NPT TEE 2" GALMAL 150#	
E	6	5N2A09AG42	NPT NIP 2X9 TBE GALSTL SK40	
F	7	51P060	PLUG PIPE SQ 2"GALCORED CI 125	
F	8	5N2A15AG42	NPT NIP 2X15 TBE GALSTL SK40	
F	9	5N2A06AG42	NPT NIP 2X6 TBE GALSTL SK40	
F	10	5N2A26AG42	NPT NIP 2X26 TBE GALSTL SK40	
F	11	5N2A21AG42	NPT NIP 2X21 TBE GALSTL SK40	
A	12	5SCC2ANF	NPT COUP 2" GALMAL 150#	
A	13	51E098B	KINGREDNIP2.5"IDX2"NPT#STC3025	
A	14	27A032N	UBOLT 2"PIPE 3/8-16 ZNC4.87"LG	
All	15	15G205	HXNUT 3/8-16UNC2B ZINC GR2	
All	16	15U255	LOCKWASHER MEDIUM 3/8 ZINCPL	
All	17	02 18995	77423B CLAMP=2"PIPE	
All	18	02 13186	73364A SUPPORT=INLET PIPE W/SIPBKR	
All	19	03 01650	91437D BRKT=2"WATS BALVAL 6044 S/G	
All	20	27A075	T-BOLT HOSECLAMP 2.75"-3.06"	
All	21	60E301A48A	HOSE= *2.5"2D PE X48"	

Used In	Item	Part Number	Description	Comments



# Universal Actuators & Mounting Hardware for Watts Ball Valves - New Pivot


BMP920005/96067V  
(Sheet 1 of 3)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

BMP920005/96067V (1 of 3)

Litho in U.S.A.

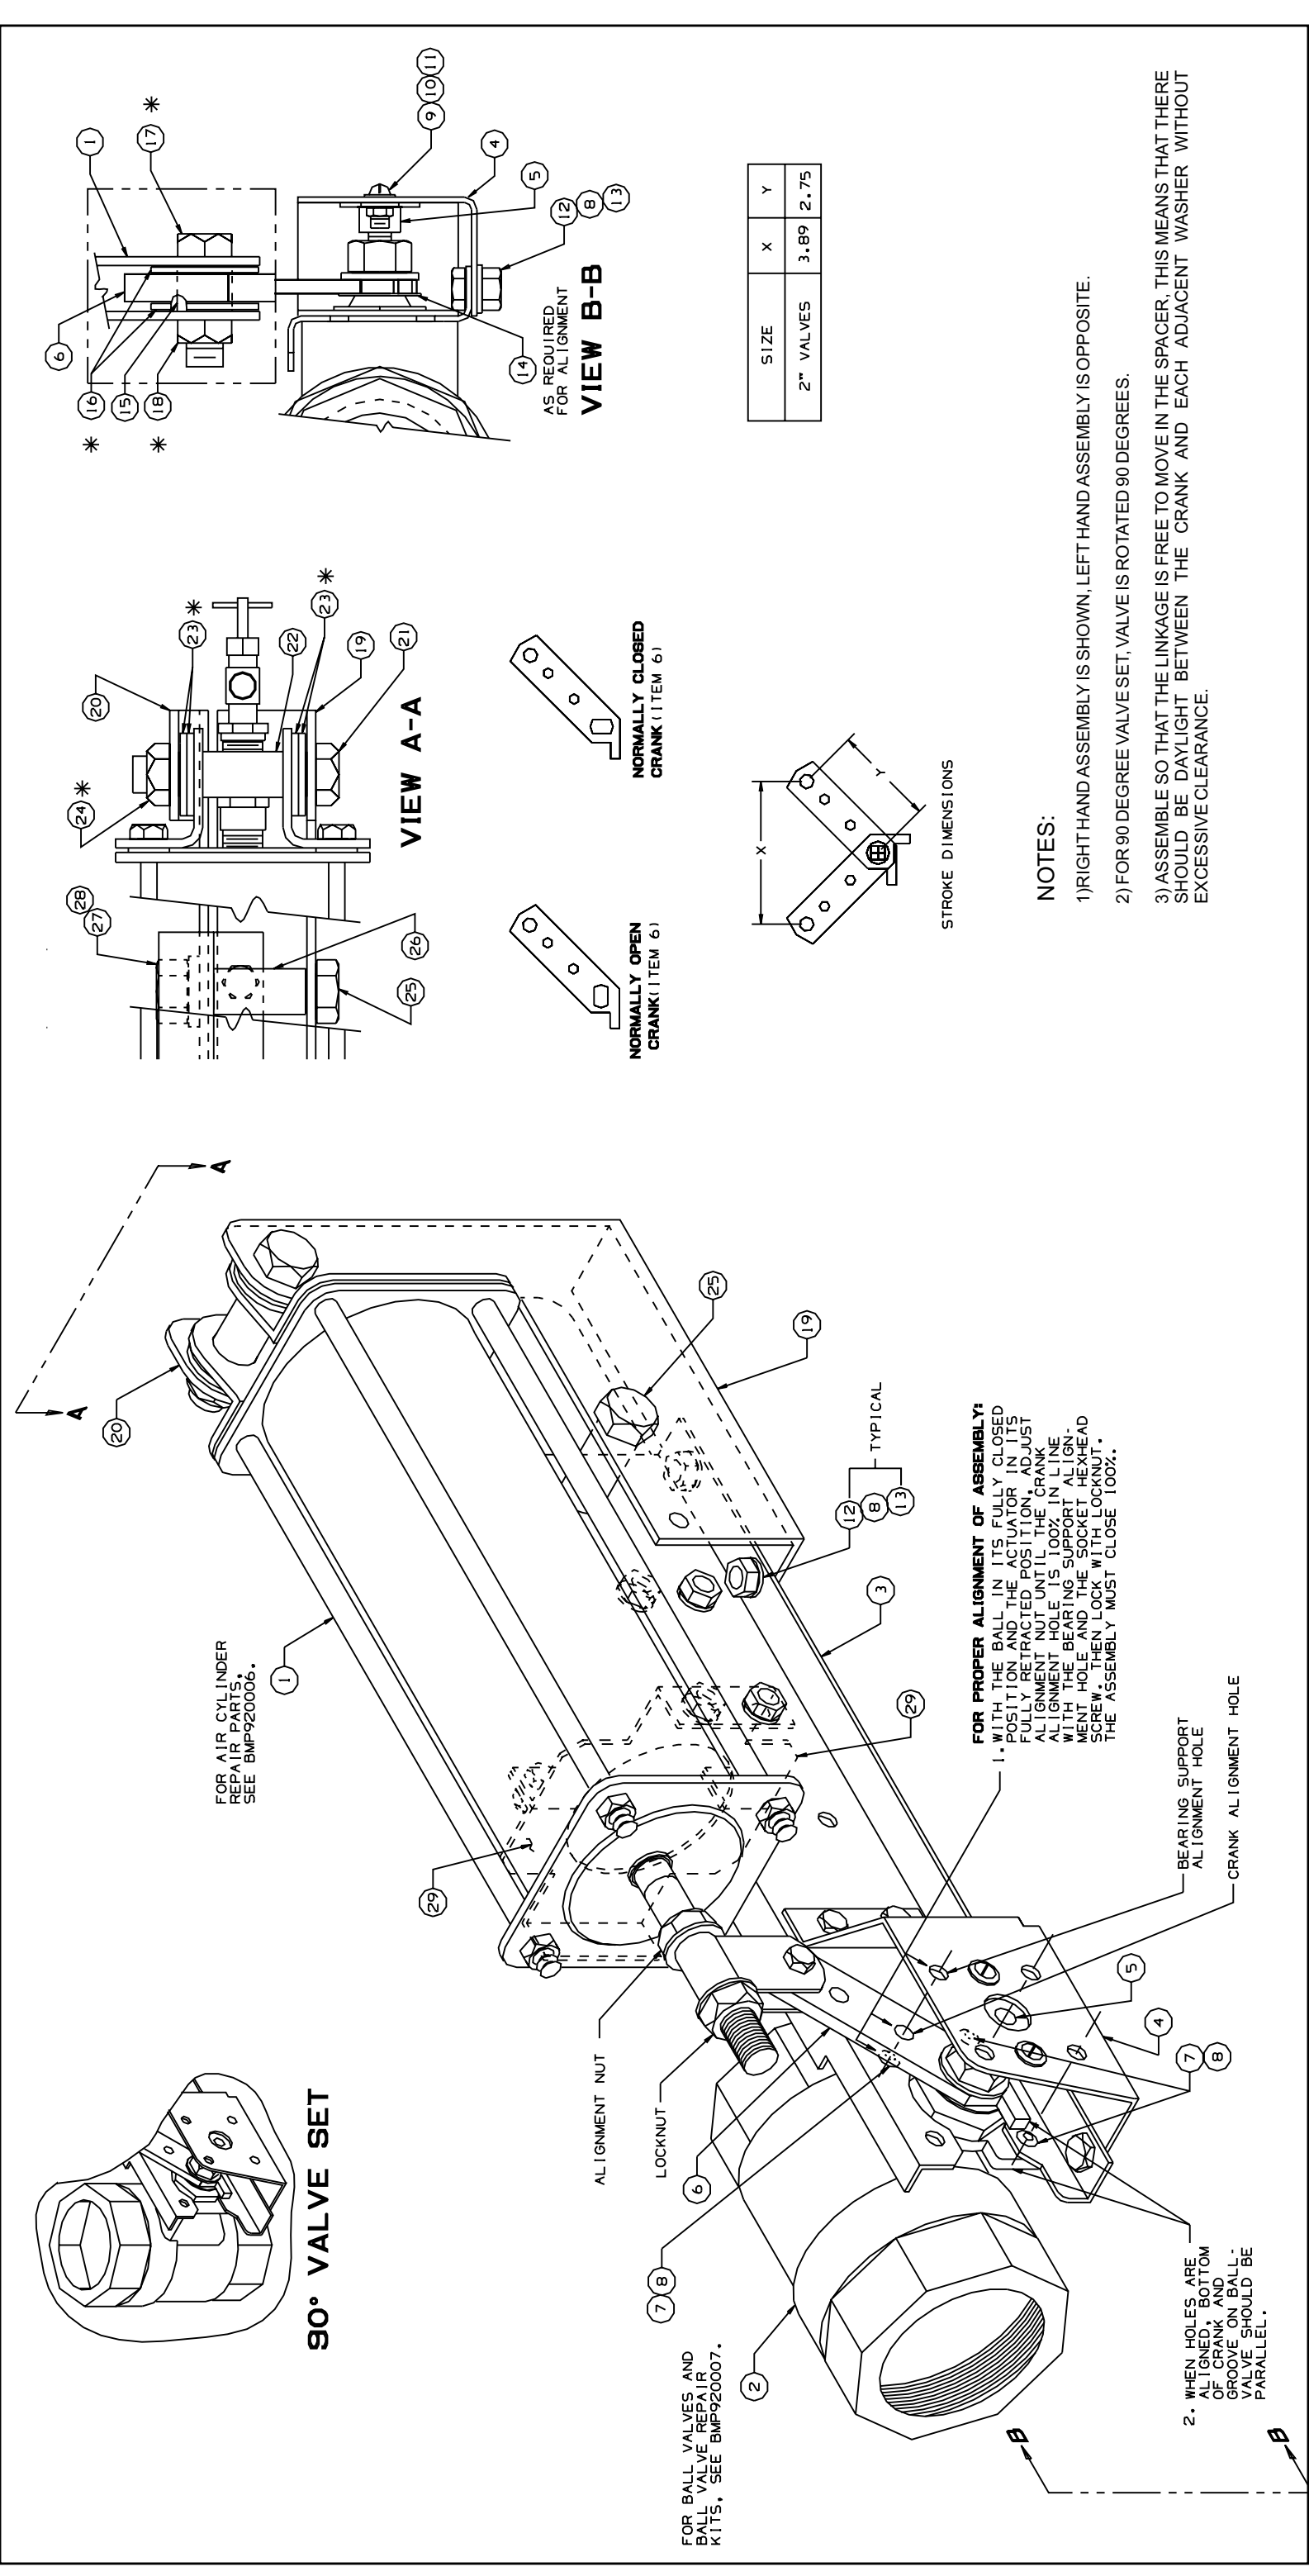



**Pellerin Milnor Corporation**  
P. O. Box 400, Kenner, LA 70063-0400

BMP920005/96067V (2 of 3)

BMP920005/96067V  
(Sheet 2 of 3)

Litho in U.S.A.

**Parts List—Actuators & Mounting Hardware for Watts Ball Valves**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In		Item	Part Number	Description	Comments
-----ASSEMBLIES-----					
AA	96D085BCSL	92000Z	1.00WAT	BVAL+ACT/BR/NC/ST/LH	
AB	96D085BCSR	93513S	1.00WAT	BVAL+ACT/BR/NC/ST/RH	
AC	96D085BOSL	93513S	1.00WAT	BVAL+ACT/BR/NO/ST/LH	
AD	96D085BOSR	93513S	1.00WAT	BVAL+ACT/BR/NO/ST/RH	
AE	96D085SOSR	92000Z	1.00WAT	BVAL+ACT/SS/NO/ST/RH	
AF	96D085SCSR	92000Z	1.00WAT	BVAL+ACT/SS/NC/ST/RH	
BA	96D086BCSL	93513S	1.25WAT	BVAL+ACT/BR/NC/ST/LH	
BB	96D086BCSR	93513S	1.25WAT	BVAL+ACT/BR/NC/ST/RH	
BC	96D086BOSL	93513S	1.25WAT	BVAL+ACT/BR/NO/ST/LH	
BD	96D086BOSR	93513S	1.25WAT	BVAL+ACT/BR/NO/ST/RH	
BE	96D086SCNR	92000Z	1.25WAT	BVAL+ACT/SS/NC/90/RH	
BF	96D086CSL	92000Z	1.25WAT	BVAL+ACT/SS/NC/ST/LH	
BG	96D086CSR	92000Z	1.25WAT	BVAL+ACT/SS/NC/ST/RH	
BH	96D086SOSL	92000Z	1.25WAT	BVAL+ACT/SS/NO/ST/LH	
BJ	96D086SOSR	92000Z	1.25WAT	BVAL+ACT/SS/NO/ST/RH	
CA	96D087BCSL	93513S	1.50WAT	BVAL+ACT/BR/NC/ST/LH	
CB	96D087BCSR	93513S	1.50WAT	BVAL+ACT/BR/NC/ST/RH	
CC	96D087BOSR	92000Z	1.50WAT	BVAL+ACT/BR/NO/ST/RH	
CD	96D087SCNR	92000Z	1.50WAT	BVAL+ACT/SS/NC/90/RH	
CE	96D087SCSR	92000Z	1.50WAT	BVAL+ACT/SS/NC/ST/RH	
CF	96D087SOSR	92000Z	1.50WAT	BVAL+ACT/SS/NO/ST/RH	
DA	96D088BCSR	92177S	2.00WAT	BVAL+ACT/BR/NC/ST/RH	
DB	96D088BCNR	92177S	2.00WAT	BVAL+ACT/BR/NC/90/RH	
DC	96D088BCSL	92177S	2.00WAT	BVAL+ACT/BR/NC/ST/LH	
DD	96D088BOSR	92177S	2.00WAT	BVAL+ACT/BR/NO/ST/RH	
DE	96D088SCNR	92177S	2.00WAT	BVAL+ACT/SS/NC/90/RH	
DF	96D088SCSR	92177S	2.00WAT	BVAL+ACT/SS/NC/ST/RH	
DG	96D088SOSR	92177S	2.00WAT	BVAL+ACT/SS/NO/ST/RH	
DH	96D088BCNL	92177S	2.00WAT	BVAL+ACT/BR/NC/90/LH	
DJ	96D088BOSL	92177S	2.00WAT	BVAL+ACT/BR/NO/ST/LH	
DK	96D088CSL	92177S	2.00WAT	BVAL+ACT/SS/NC/ST/LH	
DL	96D088SOSL	92177S	2.00WAT	BVAL+ACT/SS/NO/ST/LH	
-----COMPONENTS-----					
AA-AD, BA-BD, CA-CC	1	SA 10 056F	92000Z	AIRCYL=2.38ODX2.70STX20.5#CD	
AE-AF, BE-BJ, CD-CF	1	SA 10 056G	92000Z	*AIRCYL=2.38ODX2.70STX20.5#SS	
DA-DD, DH-DJ	1	SA 10 057C	95222D	AIRCYL=3.00DX3.89ST171/176CD	
DE-DG, DH-DJ, DK-DL	1	SA 10 057D	95222#	AIRCYL=3.00DX3.89ST171/176SS	
AA-AE AF	2	96D085WEXS	07Z	BALVAL 1" BRZ WATTS#B6400SSZ107	
BA-BD	2	96D085WSS	07Z	BALVAL 1" SS WATTS S8000-Z107	
BE-BJ	2	96D086WEXS	08Z	BAVAL 1+1/4BRZ WATS#B6400SSZ107	
CA-CC	2	96D086WSS	08Z	BAVAL 1+1/4"SS WATTS S8000-Z107	
	2	96D087WEXS	09Z	BAVAL 1+1/2BRZ WATS#B6400SSZ107	

Used In	Item	Part Number	Description	Comments
CD-CF	2	96D087WSS	08Z	BAVAL 1+1/2"SS WATTS S8000-Z107
DA-DD, DH-DJ	2	96D088WEXS	09Z	BALVAL 2" BRZ WATTS#B6400SSZ107
DE-DG, DK-DL	2	96D088WSS	09Z	BALVAL 2" SS WATTS S8000-Z107
AA,AC AB,AD,AE, AF	3	03 01634A 03 01634	94053# 94053C	ACTUATOR CHANNL SUPPORT-LEFT ACTUATOR CHANNL SUPPORT 1.0"
BA,BC,BF, BH,CA	3	07 20700L	88512#	ACTUATOR ZEE SUPPORT-LEFT
BB,BD,BE, BG,BJ,CB, CC,CE,CF	3	07 20700	88512D	ACTUATOR ZEE SUPPORT
CD	3	03 01633 03 01628	92651C 92126D	ACTUATOR SUPPORT BRKT 1.0" ACTUATOR ZEE SUP 3"AIRCYL
DA,DB, DD-DG	3	03 01628L	92126#	ACT ZEE SUP 3" AIRCYL-LEFT
AA,AC AB,AD-AF, CD	4	03 01632A 03 01632	90507# 90507C	ACTUATOR BEARING SUPPRT-LEFT ACTUATOR BEARING SUPPORT-1"
BA,BC,BF, BH,CA	4	07 20702L	88512#	ACTUATOR BEARING SUPPORT-LFT
BB,BD,BE, BG,BJ,CB, CC,CE,CF	4	07 20702A	88512C	ACTUATOR BEARING SUPPORT
DA,DB, DD-DG	4	03 01629	92023C	ACTUATOR BEARING SUPPORT 3
DC,DH-DL	4	03 01629L	92023#	ACT BEARING SUPPORT 3"-LEFT
AA-AF,CD BA-BJ, CA-CC,CF, DA-DL	5	54E001PABA 54E002PABA	89281B 89281B	ASSY=1/4"PRESSBEARING ASSY=5/16"PRESSBEARING
AA,AB,AF, CD	6	03 01631	91507B+VALVE	CRANK N.C.WATTS 1.0"
AC-AE BA,BB,BE, BF,BG,CA, CB,CE	6	03 01631A 07 20703A	88381B 91507B	VALVE CRANK N.O.WATTS-1.0" VALVE CRANK N.C.WATTS 1.5"
BC,BD,BH, BJ	6	07 20703B	88153B	VALVE CRANK N.O.WATTS 1.5"
DA,DC,DF, DK	6	03 01624B	92061B	CRANK=NC 2"BALVAL .626 STEM
DB,DD,DE, DG,DH,DJ, DL	6	03 01624C	92061B	CRANK=NO 2"BALVAL .626 STEM
all except CC,CD	7	15K031	BUTSOKCAPSCR	1/4-20X1/2 SS18-8
CC,CD	7	15N117	RDMACSCR	10-24UNC2X3/8SS18-8
all	8	15U181	LOCKWASHER	MEDIUM 1/4 SS18-8
all	9	15N130	RDMACHSCR	10-24UNC2A X 1/2 SS18-8
all	10	15U135	FLATWASH#10	.4370DX.203IDX.04TSS188



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**Parts List, cont.—Universal Actuators & Mounting Hardware for Watts Ball Valves**

Used In	Item	Part Number	Description	Comments
all	11	15G126	01Z HXLOCKNUT NYLON 10-24 UNC SS NM	
all	12	15N159	HEXCAPSCR 1/4-20UNC2AX7/16 18-8SS	
all	13	15G170	HEXNUT 1/4-20UNC2 SS18-8	
AA-AF, BE, CD, DA-DL	14	07 20703D	89354B WASHER=2.00"WATTS CRANK	
BA-BD, BF-BJ, CA-CC, CE, CF	14	07 20703C	89354B WASHER=1.25-1.50 WATTS CRANK	
all	15	02 15893	92683B SPACER=BALL VALVE CRANK STEM	
all	16	15U188	01Z FLTWASH 1/4 STD COMM SS18-8	
all	17	15N186	HXCAPSCR 1/4-20UNC2X3/4SS18-8	
all	18	15G164	01Z HX THIN LOCKNUT NYL1/4-20 SS	
BA, BB, BE, BJ, CE	19	03 01661A	92271B BRKT=RHT AIR CYL SUPT-S/S	
DA, DB, DD-DG	19	03 01625A	92271B 3" AIR-CYL SPT BRK R-SIDE RT	
DC, DH-DL	19	03 01625B	92271# 3" AIR-CYL SPT BRK R-SIDE LT	
BE, BG, BJ, CE-CF	20	03 01662A	92271B BRKT=LFT AIR CYL SUPT-S/S	
DA, DB, DD-DG	20	03 01625C	92271B 3" AIR-CYL SPT BRK L-SIDE RT	
DC, DH, DJ-DL	20	03 01625D	92271# RIGHT=3"AIR CYL SUPT BRKT	
all	21	15K190S	HXCAPSCR 1/2-13UNC2AX2.5 FLTHRD SS	
all	22	27B24S0K1P	SPACER ROLL.5ID1.75L.062T 304 SS	
all	23	15U318S	FLATWASH 1.12ODX.656IDX.09T 304 SS	
AB, DA-DL	24	15G234NS	HXLOCKNUT NYL 1/2-13UNC2 SS18-8	
all	25	15K180S	HXCAPSCR 1/2-13UNCAX2 18-8SS	
all	26	27B24SSK1F	SPACER ROLL.5ID1.25L.062T S/S	
all	27	15U310	LOKWASHER REGULAR 1/2 SS18-8	
all	28	15G231S	HXFINJAMNUT 1/2-13UNC2B SS18-8	
AA-AF	29	03 01633	92651C ACTUATOR SUPPORT BRKT 1.0"	
BA-BJ	29	07 20771	88407C ACTUATOR SUPPORT BRKT 1.25"	
CA-CF	29	07 20770	88243B ACTUATOR SUPPORT BKT 1+1/2"	
DA-DL	29	03 01626	89473B ACTUATOR SUPPORT BRKT 2"VAL	

# Watts Ball Valves and Repair Kits




Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

BMP920007/96067V (1 of 2)



Litho in U.S.A.

BMP920007/96067V  
(Sheet 1 of 2)

## BALL VALVES WITHOUT ACTUATOR PADS FOR MANUAL OPERATION

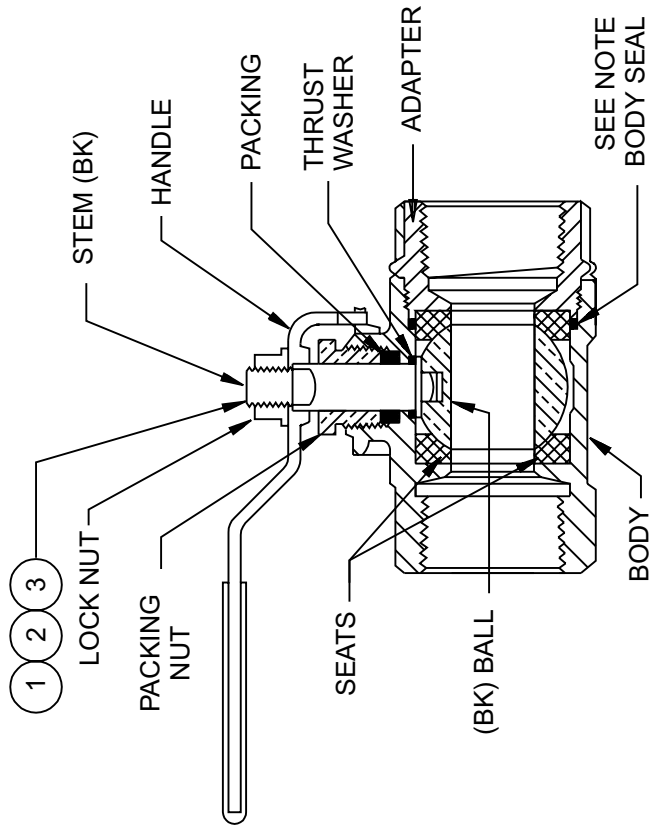


1/2" BRONZE OR 1/2", 3/4" STAINLESS  
NO REPAIR KITS

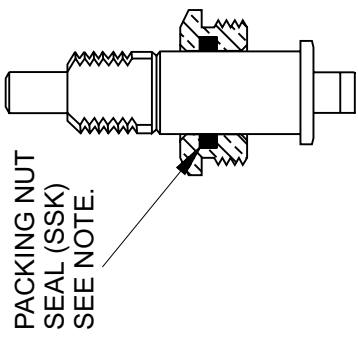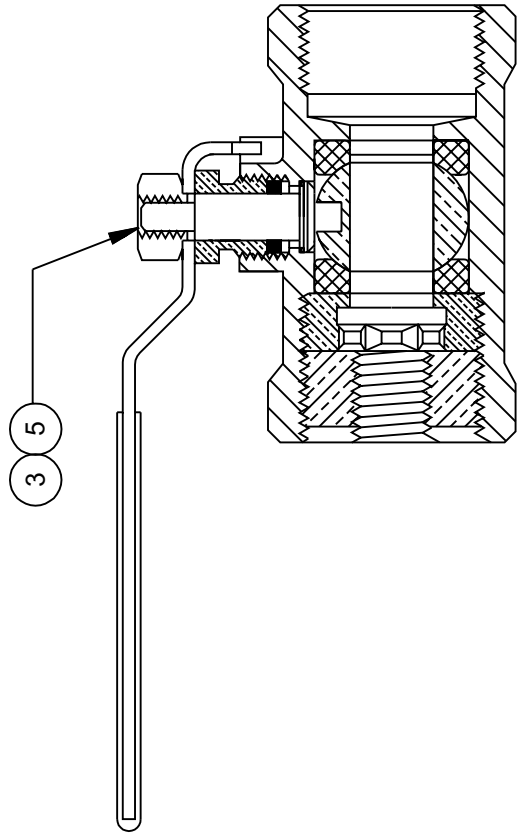

DETAIL  
OLD STYLE STEM

## AIR OPERATED BALL VALVES

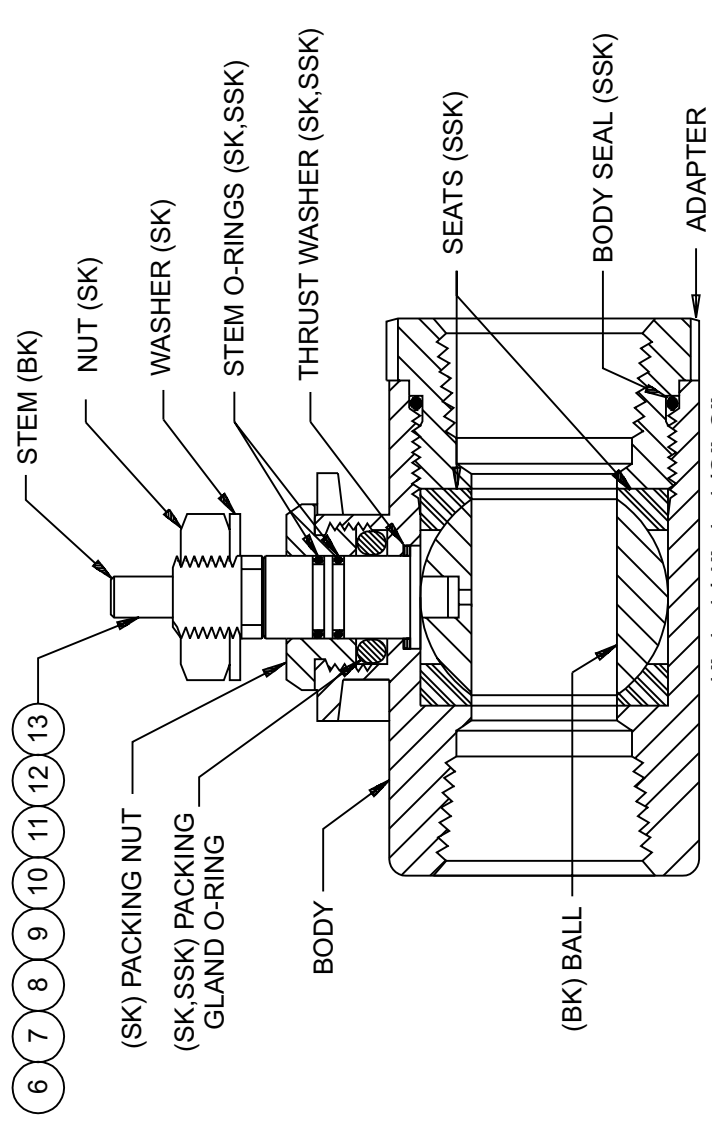

BRONZE & STAINLESS

(For Bracketry and Mounting Hardware, See BMP920005. For Air Cylinders that Operate Watts Ball Valves, See BMP920006.)

### HOW TO USE THIS DRAWING:

The ball valves are separated by size, material, and type of operation. Find the cross section which shows your ball valve (example 1-1/2" bronze air operated). See the parts list for the item number which represents your ball valve (1-1/2" bronze air operated would be item 10 on the parts list). For valves that offer repair kits the internal parts are labeled and marked as to which kit they are found in:

- (BK) part of Ball Kit
- (SK) part of Stem Kit
- (SSK) part of Seat/Seal Kit

For the part number of the Seat/Seal Kit for item 10 (1-1/2" bronze air operated valve) see the parts list and look for item 10SSK, likewise the Stem Kit will be 10SK.

### NOTE:

AIR OPERATED VALVES: (SSK) kits for air operated ball valves include all parts required to repair either our old style or new style stems. A packing nut seal is provided to repair our old style stems which had a seal in the packing nut (see Detail). Our new style stem uses a double o-ring design.



**Pellerin Milnor Corporation**  
P. O. Box 400, Kenner, LA 70063-0400

BMP920007/96067V (2 of 2)

Litho in U.S.A.

**BMP920007/96067V**  
(Sheet 2 of 2)

**Parts List—Watts Ball Valves and Repair Kits**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			ASSEMBLIES	
			none	
			COMPONENTS	
all	1	96D034	04Z BALLVALVE 1/2" WATTS #6400-SS	1/2"BRONZE-MANUAL, NO KITS
all	2	96D040WSS	01Z 1/2" BALLVALVE S/S WATTS#S-8000	1/2"STAINLESS-MANUAL
all	002BK	96V040BK	BALL KIT WATTS #BV4SSA6	
all	002SSK	96V040SSK	01Z REPKIT 1/2"VAL WATTS#3SSK-02-RK	
all	3	96D050A	01Z 3/4"BALLVALVE BRZ WATTS#B6100	3/4"BRONZE-MANUAL, NO KITS
all	4	96D055WSS	01Z 3/4"BALLVALVE S/S WATTS#S-8000	3/4"STAINLESS-MANUAL
all	004BK	96V055BK	BALL & STEM KIT WATTS #4BSK-SSRK	
all	004SSK	96V055SSK	01Z REPKIT 3/4"VAL WATTS#4SSK-02-RK	
all	5	96D084	01Z BALL VALVE 1" WATTS#B6100 BRZ	1" BRONZE-MANUAL , NO KITS
all	6	96D085WEXS	07Z BALVAL 1" BRZ WATTS#B6400SSZ107	1" BRONZE-AIR OPERATED
all	006BK	96V085BK	BALL KIT WATTS #1-BALL-RK-Z107	
all	006SK	96V085SK	02Z STEM KIT 1" WATTS#1-ST-RK-Z107	
all	006SSK	96V085SSK	02Z REPKIT 1"BALVAL#1SSK-02-KK-Z107	
all	7	96D085WSS	07Z BALVAL 1" SS WATTS S8000-Z107	1" STAINLESS-AIR OPERATED
all	007BK	96V085BK	BALL KIT WATTS #1-BALL-RK-Z107	
all	007SK	96V085SK	02Z STEM KIT 1" WATTS#1-ST-RK-Z107	
all	007SSK	96V085SSK	02Z REPKIT 1"BALVAL#1SSK-02-KK-Z107	
all	8	96D086WEXS	08Z BAVAL 1+1/4BRZ WATTS#B6400SSZ107	1-1/4"BRONZE-AIR OPERATED
all	008BK	96V086BK	BALL KIT WATTS #1.25-BALL-RK-Z107	
all	008SK	96V086A7SK	02Z STEMKIT 1.25-1.5-ST-RK-Z107	

**Parts List, cont.—Watts Ball Valves and Repair Kits**

Used In	Item	Part Number	Description	Comments
all	008SSK	96V086SSK	02Z REPKIT 1.25BALVALSSK-02-RK-Z107	
all	9	96D086WSS	08Z BAVAL 1+1/4"SS WATTS S8000-Z107	1-1/4"STAINLESS-AIR OPER.
all	009BK	96V086BK	BALL KIT WATTS #1.25-BALL-RK-Z107	
all	009SK	96V086A7SK	02Z STEMKIT 1.25-1.5-ST-RK-Z107	
all	009SSK	96V086SSK	02Z REPKIT 1.25BALVALSSK-02-RK-Z107	
all	10	96D087WEXS	09Z BAVAL 1+1/2BRZ WATTS#B6400SSZ107	1-1/2"BRONZE-AIR OPERATED
all	010BK	96V087BK	BALL KIT WATTS #1.5-BALL-RK-Z107	
all	010SK	96V086A7SK	02Z STEMKIT 1.25-1.5-ST-RK-Z107	
all	010SSK	96V087SSK	02Z REPAIR KIT 1.5" BALL VALVE	
all	11	96D087WSS	08Z BAVAL 1+1/2"SS WATTS S8000-Z107	1-1/2"STAINLESS-AIR OPER.
all	011BK	96V087BK	BALL KIT WATTS #1.5-BALL-RK-Z107	
all	011SK	96V086A7SK	02Z STEMKIT 1.25-1.5-ST-RK-Z107	
all	011SSK	96V087SSK	02Z REPAIR KIT 1.5" BALL VALVE	
all	12	96D088WEXS	09Z BALVAL 2" BRZ WATTS#B6400SSZ107	2"BRONZE-AIR OPERATED
all	012BK	96V088BK	BALL KIT WATTS #2-BALL-RK-Z28	
all	012SK	96V088SK	03Z STEM KIT 2" WATTS#2-ST-RK-Z107	
all	012SSK	96V088SSK	02Z REPKIT 2"VAL WAT2SSK-02-RK-Z107	
all	13	96D088WSS	09Z BALVAL 2" SS WATTS S8000-Z107	2"STAINLESS-AIR OPERATED
all	013BK	96V088BK	BALL KIT WATTS #2-BALL-RK-Z28	
all	013SK	96V088SK	03Z STEM KIT 2" WATTS#2-ST-RK-Z107	
all	013SSK	96V088SSK	02Z REPKIT 2"VAL WAT2SSK-02-RK-Z107	

# Pressure Regulators


BMP900031/96081V  
(Sheet 1 of 2)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400


BMP900031/96081V (1 of 2)

Litho in U.S.A.

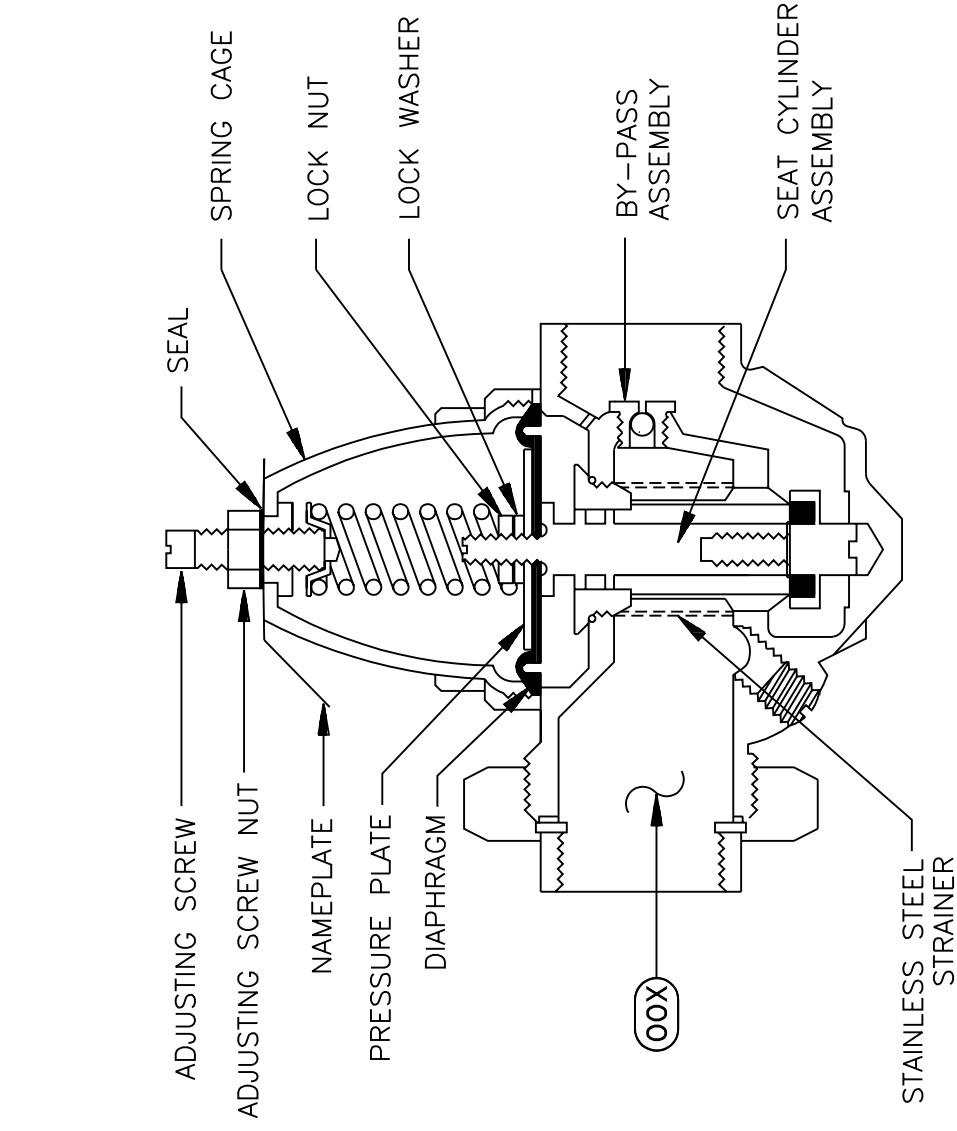

### TO CLEAN OR REPLACE PARTS:

1. Remove spring cage and all parts above diaphragm.
2. Loosen and remove diaphragm lock nut, lock washer, pressure plate, and diaphragm from valve stem.
3. Unscrew seat cylinder from body and remove entire assembly.
4. While disassembled open gate valve to flush out collected sediment.

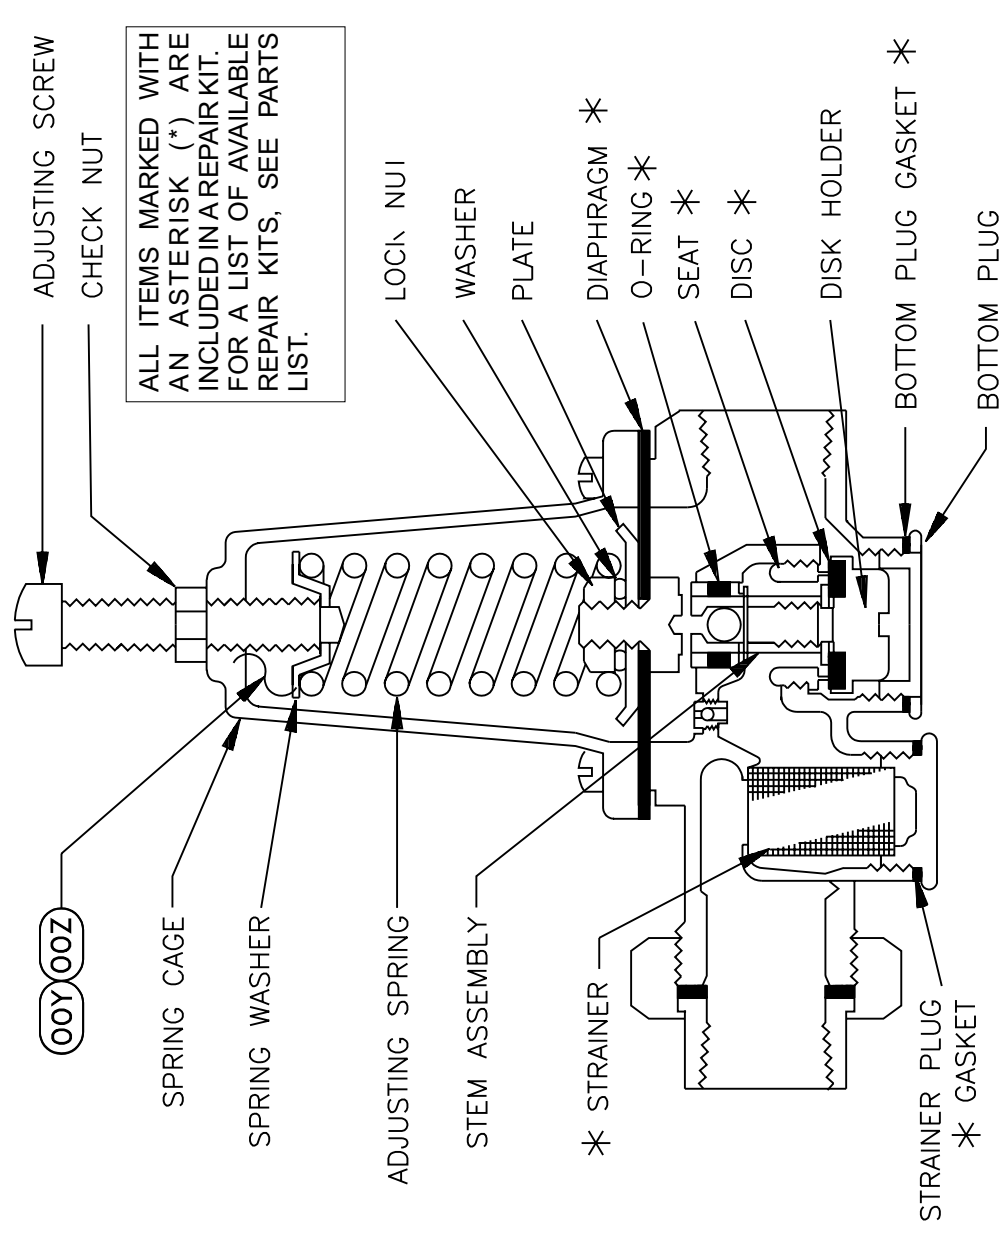

ALL ITEMS MARKED WITH AN ASTERISK (\*) ARE INCLUDED IN A REPAIR KIT. FOR A LIST OF AVAILABLE REPAIR KITS, SEE PARTS LIST.

### TO CLEAN OR REPLACE PARTS:

1. Remove bottom plug and gasket.
2. Loosen disc holder with screwdriver or socket wrench.
3. Inspect disc and clean or replace.
4. Seat can be removed, if necessary, with an allen wrench or socket wrench.
5. Unscrew and remove adjusting screw, check nut, and spring cage screws. Lift off spring cage, spring washer and adjusting spring.
6. Loosen and remove lock nut, washer, plate, and diaphragm.
7. Lift stem assembly upwards to remove from body.
8. To reassemble valve follow above instructions in reverse. Tighten or loosen adjusting screw for the required pressure of 28 P.S.I.



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**Parts List—Pressure Regulators**

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	X	96J030FF	01Z 1/2"PRESS REG SET 28# FEM X FEM	(NO REPAIR KIT)
	Y	96J030D	01Z 1/2" PRESREGULTR SET 28# FEM-UN	(FOR KIT, SEE BELOW)
	Z	96J031D	01Z 3/4" PRESREGULTR SET 28# FEM-UN	(FOR KIT, SEE BELOW)
-----COMPONENTS-----				
all	1	96V158B	REPAIRKIT #14510=1/2 PRESSREG EB86	(KIT/DISCONT.VLV1/2 EB72)
all	2	96V158C	REPAIRKIT #10341 FOR E24U (96J030C)	(KIT/DISCONT.VLV1/2 E24U)
Y	3	96V158D	REP.KIT #14649FOR 1/2"E72U& E86U	
all	4	96V159B	REPAIRKIT C/A#14511=3/4PRESREG EB72	(KIT/DISCONT.VLV3/4 EB72)
Z	5	96V159D	REP KIT #14648 FOR 3/4"E72U +E86U	


**8" & 10" Stainless Dump Valve**  
**42044WP2/CP2/SP2/SP3/NP2 52038WP1 60044WP2/WP3/SP2/SP3**  
**72044WP1/D5N 72058SP2**

BMP780095/2006363B  
 (Sheet 1 of 1)



Pellerin Milnor Corporation  
 P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

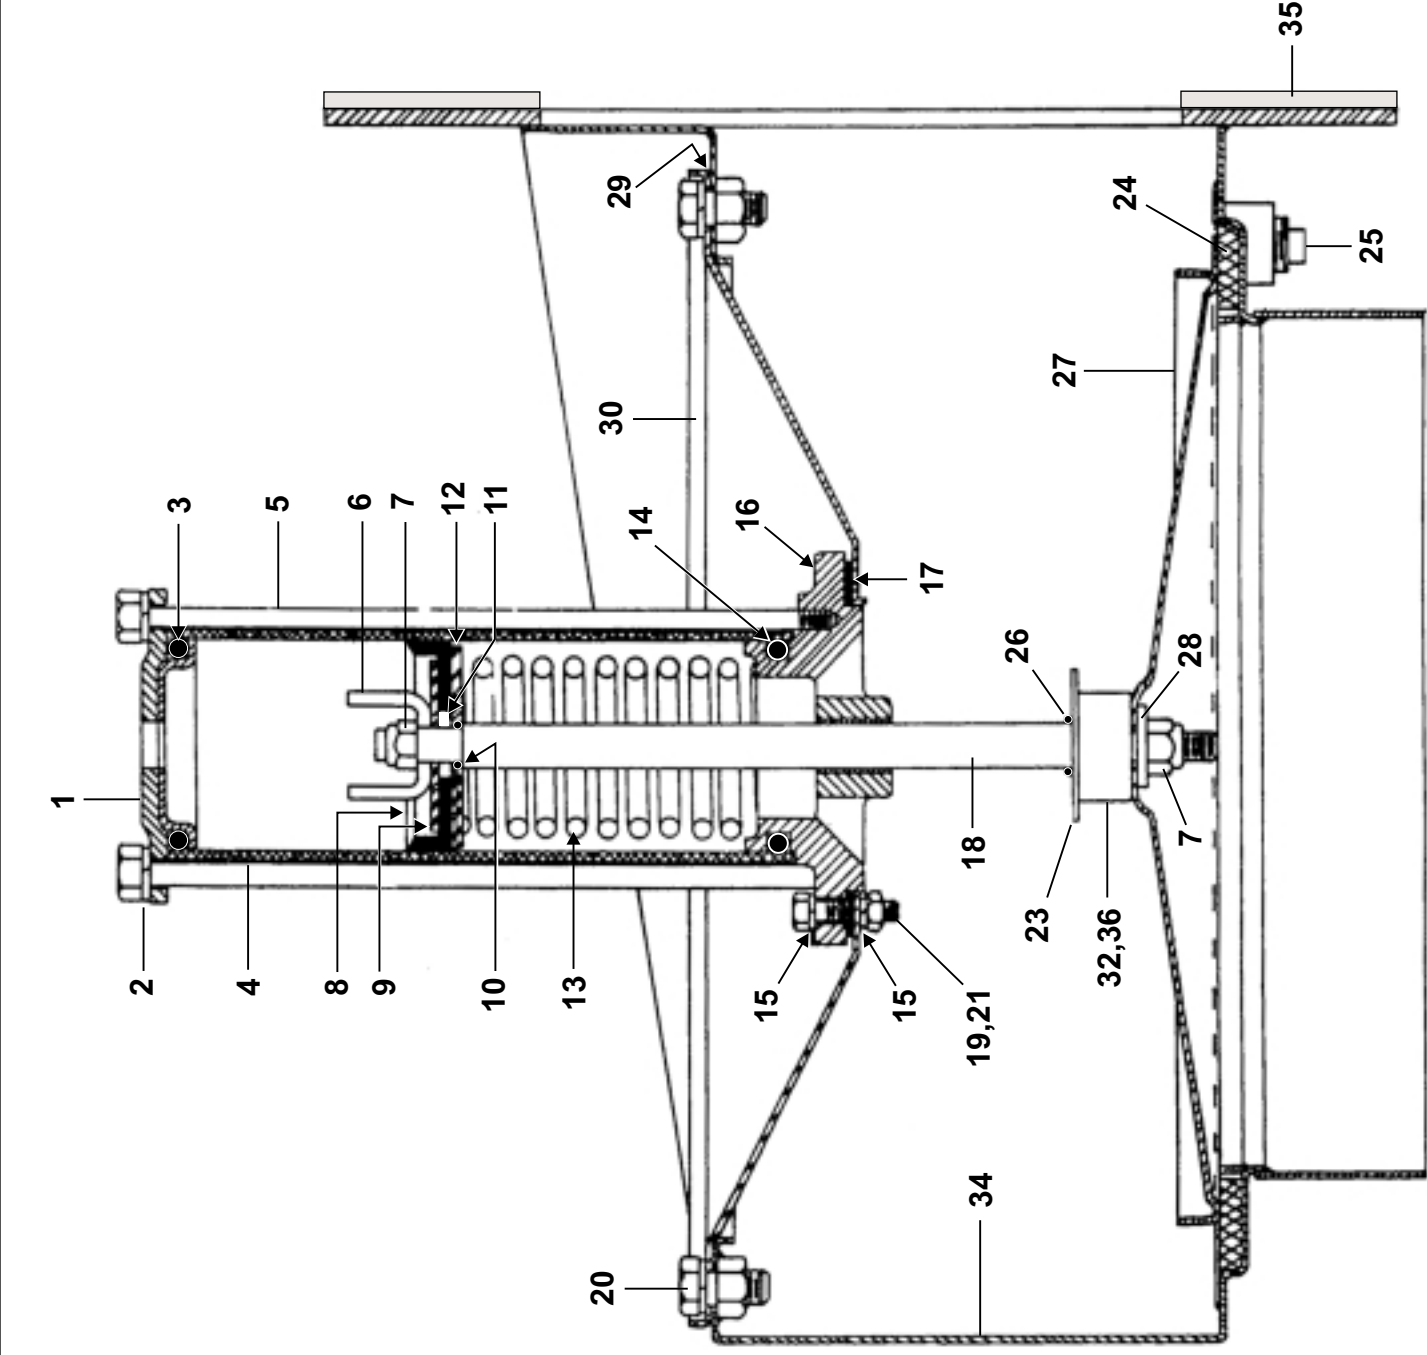

**Parts List—8" & 10" Stainless Dump Valve**

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
A		SA 28 124	*8" SGL DUMPVALVE 4244+52+60	42044WP2/CP2/SP2/SP3/NP2 52038WP1
B		SA 36 015	10" SGL DUMP VALVE 72WE+SG+WT	60044WP2/WP3/SP2/SP3
C		SA 28 158	* BONNET+AIRCYL=8"SS DUMPVALV	72044WP1/SP2, 72058D5N
D		SA 36 044	* BONNET+AIRCYL=10"SS DUMPVAL	8" DUMP VALVE 10" DUMP VALVE
			COMPONENTS	
CD	1	02 02101	CYLHEAD W/TAPPED HOLE	
CD	2	15U210	LOKWASHER MEDIUM 5/16 ZINCPL	
CD	3	60C132	ORING 2"IDX3/16CS BUNA70 #329	
CD	4	02 02068	AIRCYL-STAINLESS=DUMPVALVE	
CD	5	02 10585D	TIE BOLT=5/16-18X7.875 PLTD	
CD	6	03 01313	STOP=AIR CYL W/2+11/16STROKE	
CD	7	15G220	LTHX THIN LOKNUT 3/8-24 SSNTE	
CD	8	02 02194	PISTONCUP=DUMPVALVE 2+3/8"	
CD	9	02 02085	UP WASHER=2"OD=PISTON CUP	
CD	10	60C106	ORING 5/16ID 1/16CS BUNA70#011	
CD	11	02 02185	WASHER=PISTON CUP COMP LIMIT	
all	12	02 02105B	XXXX	
CD	13	03 06429	SPRING=2.11ODX6.5FL 64#"	
CD	14	60C132	ORING 2"IDX3/16CS BUNA70 #329	
CD	15	24G020N	ROLLED WASH.252ID NYLTITE 25W	
CD	16	X2 02743	BONNET=2"DUMP VALVE	
CD	17	02 18931F	GASKET=DUMPVALVE-1/60+72WEHU	
CD	18	02 16021I	DUMPVAL STEM-4"+8"316SS	
CD	19	15G168	SQ Nut 1/4-20UNC2 SS18-8	
all	20	15K086	HXCAPSCR 3/8-16NCX3/4 SS18-8	
CD	21	15K041S	HEXCAPSCR 1/4-20UNC2AX1 SS18-8	
CD	23	02 16021E	WASHER 3/8IDX1.250D DUMPVAL	
A	24	02 18068	9 SEAT-RESILIENT=8"DUMPVALVE	
B	24	03 06084	SEAT-RESILIENT=10"DUMPVALVE	
A	25	5SP0KGFSS	NPT PLUG 1/2 SOSOLID GALSTL	
CD	26	60C106	ORING 5/16ID 1/16CS BUNA70#011	
AC	27	02 18796	DISC-8" DUMP VALVE S/S	
BD	27	03 06083	DISC-10"DUMP VALVE S/S	
all	28	15U245	FLTWASH 3/8 STD COMM 18-8 SS	
A	29	02 18104	GASKET=8"DUMP VALVE BONNET	
B	29	03 06086G	GASKET=10" DUMP VALVE BONNET	
A	30	02 18931E	BONNET=8"DUMP VALVE	
B	30	03 06086F	BONNET=10"DUMP VALVE	
CD	32	02 16021C	BUMPER=DUMP VALVE BONNET	
CD	33	02 16021D	DUMP VALVE BUMPER RETAINER	
A	34	W2 18931	*BODY=8"DUMPVALV=4244.60.52	8" DUMP VALVE
B	34	W3 06086	*BODY=10"DUMP VALVE 72WE,SG,T	10" DUMP VALVE
A	35	02-18107	GASKET=8"FLANGED DUMP VALVE	8" DUMP VALVE
B	35	03 06085D	GASKET=10"FLANGEDUMP72D 8050	10"DUMP VALVE






**Steam Inlet & Sparger**  
**4244SP2, 4244SP2 SM, 6044SP2/SP3, 6044SP2 SM**

BMP040089/2006363B  
(Sheet 1 of 2)

**MILNOR**  
Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

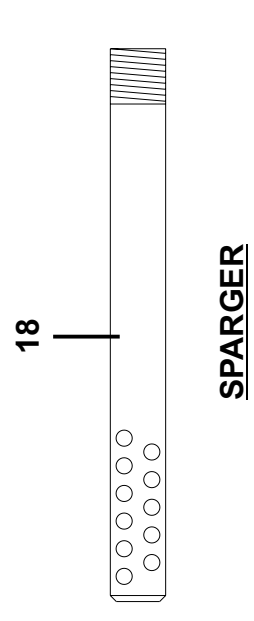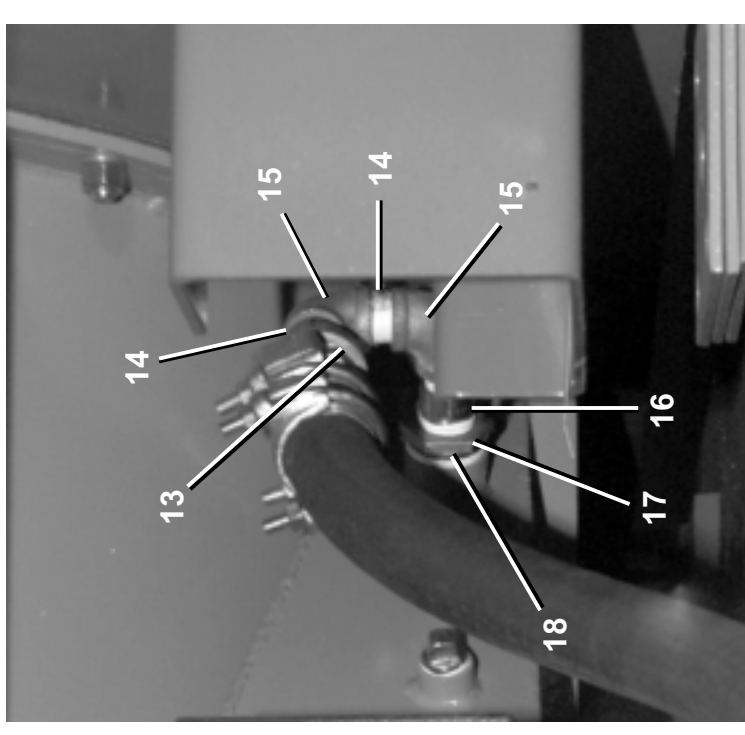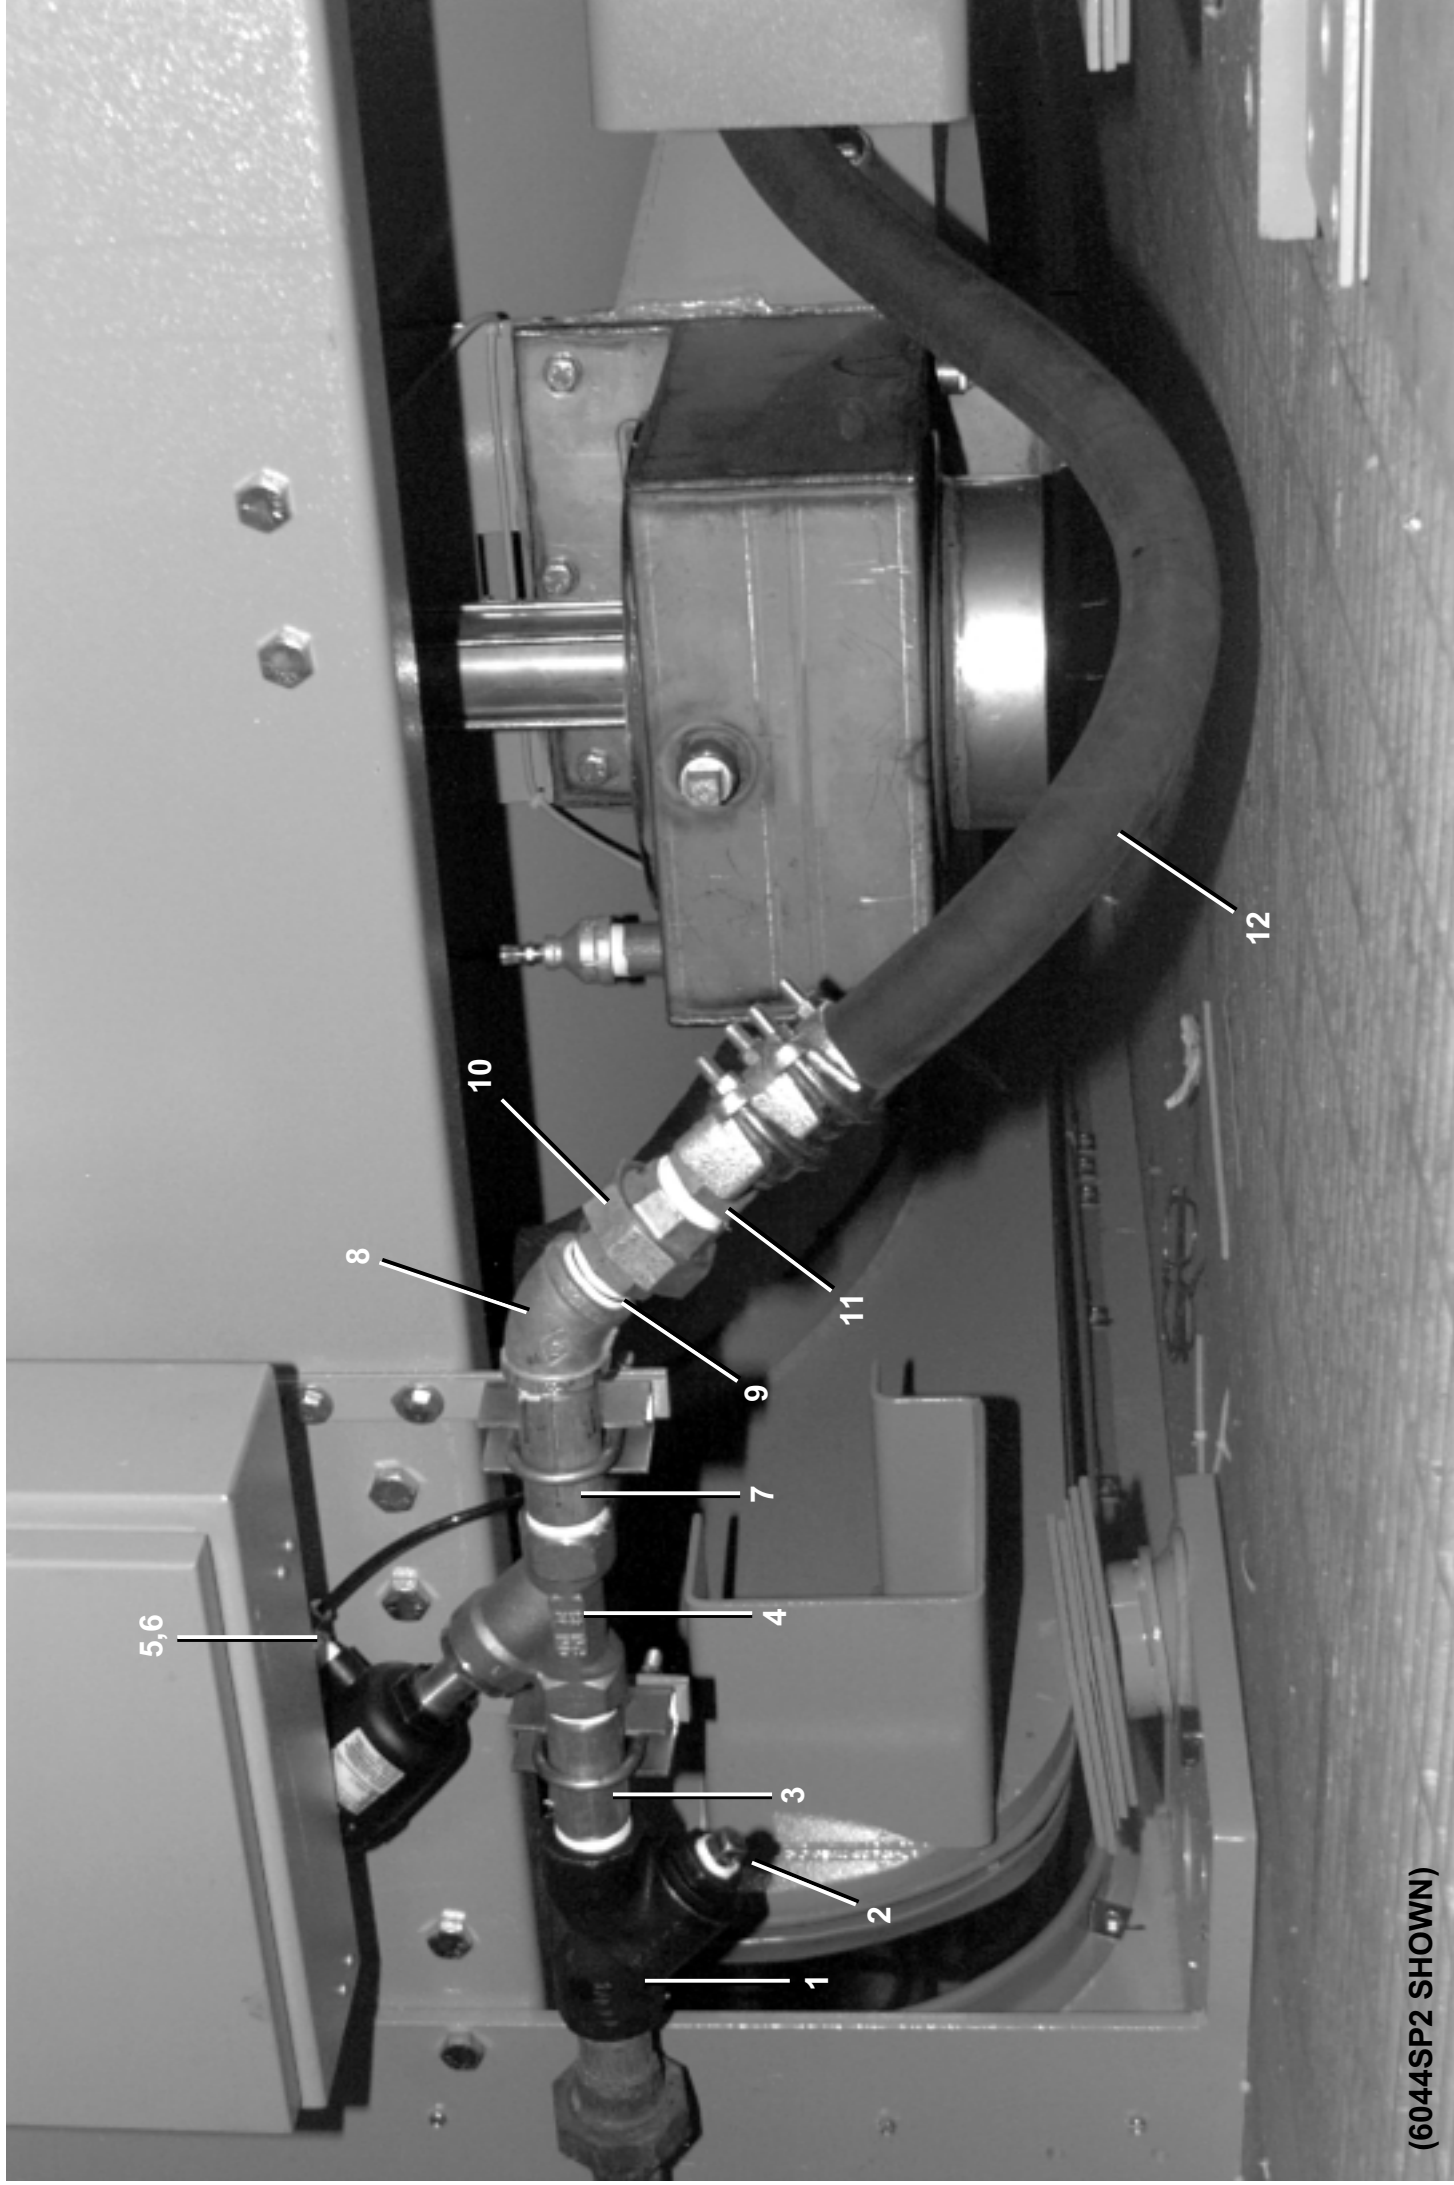

**SPARGER**

(6044SP2 SHOWN)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

### Parts List—Steam Inlet & Sparger

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	A	AVS03001	*1+1/4BURKERT +STRAINER	4244SP2,6044SP2/SP3
	B	AVS28002	\$1.25 BURKERT STEAM=60SG2+3	6044SP2/SP3
	C	GVS28002	INSTALL=1.25STEAM 6044SG2+3	6044SP2/SP3
	D	AVS04001	\$1.25 BURKERT STEAM=42+72SG23	4244SP2
	E	GVS15001	INSTALLATION=1+1/4STEAM 42SG	4244SP2
-----COMPONENTS-----				
A	1	51T060	Y-STRAINER 1+1/4" CAST IRON	
A	2	5SP0PHFSS	NPT PLUG 3/4 SQ SOLID STL/ZINC	
A	3	5N1E05AG42	NPT NIP 1.25X5 TBE GALSTL SK40	
A	4	96D0011E	1.25"NPTBRZ N/C STEAMVALANGBD	
A	5	96H018	ANGLE NEEDLE VLV 1/4"T X 1/8MP	
A	6	5SB0E0CBEO	NPTHEXBUSH 1/4X1/8 BRASS 125#	
B,D	7	5N1E05AG42	NPT NIP 1.25X5 TBE GALSTL SK40	
B	8	5SL1ENFK	NPT ELB 45DEG 1.25 GALMAL 150#	
D	8	5SL1EMFK	NPT ELB 45DEG 1.25 BLKMAL 150#	
B,D	9	5N1ECLSF42	NPT NIP 1.25XCLS TBE BLKSTLS40	
B,D	10	5SU1EMH	NPT UNION 1.25" BLKMAL 150#	
B,D	11	51E096C	MALESTEM 1.25"CADPL CAMP#IMS5	
C	12	60E096C35A	STEAMH*OSE=1.25"X35"+2ENDS=(NO	
E	12	60E096C22A	STEAMH*OSE=1.25"X22="+2ENDS=(NO	
C,E	13	5SR1E0PNF	NPT RED 1.25X3/4 GALMAL 150#	
C,E	14	5N0PCLSG42	NPT NIP 3/4XCLS TBE GALSTL S40	
C,E	15	5SL0PNFA	NPT ELB 90DEG 3/4 GALMAL 150#	
C,E	16	5N0PCLSG42	NPT NIP 3/4XCLS TBE GALSTL S40	
C,E	17	5SB1K1ADEO	NPTHEXBUSH 1.5X1 GALCI 125#	
C,E	18	W2 18801	*LMT=STEAM NOZZLE	

# Burket Steam Valve




Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

BMP800020/96066V (1 of 1)

Litho in U.S.A.

BMP800020/96066V  
(Sheet 1 of 1)

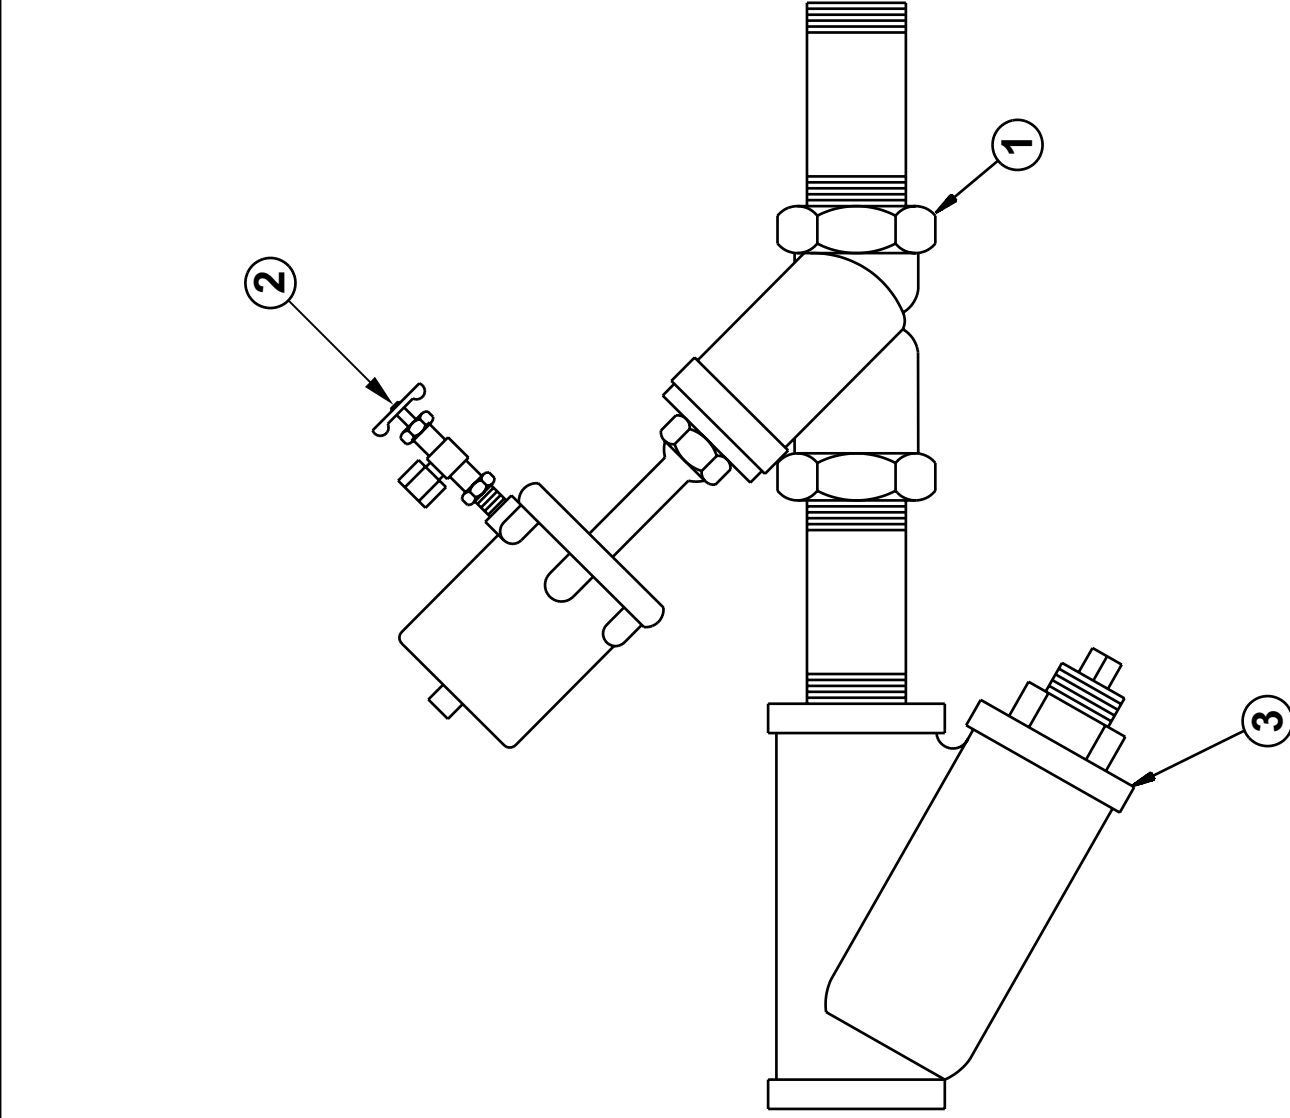

**Parts List—Burket Steam Valve**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			ASSEMBLIES	
	W	96D0009ER1	02Z REPAIRKIT 3/4" STEAM VALVE	KIT FOR 001A
	X	96D0011ER1	02Z REPAIR KIT 1.25" STEAM VALVE	KIT FOR 001B
	Y	96D0011ER2	ACTUATOR HOUSING FOR BURKET #251	KIT FOR 001B
	Z	96D0011ER3	REPAIR KIT MULLER 1.25 VALVE #554	KIT FOR 001B
			COMPONENTS	
all	1	96D0009E	03Z 3/4"NPT N/C STEAMVAL ANGLE BODY	3/4"
all	1	96D0011E	08Z 1/25"NPT N/C STEAMVAL ANGLEBODY	1-1/4"
all	2	96H018	NEEDLE VALVE	
all	3	51T030	01Z Y-STRAINER 3/4" CAST IRON	USED WITH 001A
all	3	51T060	01Z Y-STRAINER 1+1/4" CAST IRON	USED WITH 001B



**Section**

**9**

**Pneumatic Piping and  
Assemblies**



# Air Cylinders for 2" Watts Ball Valves

BMP920006/2000133V  
(Sheet 1 of 2)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

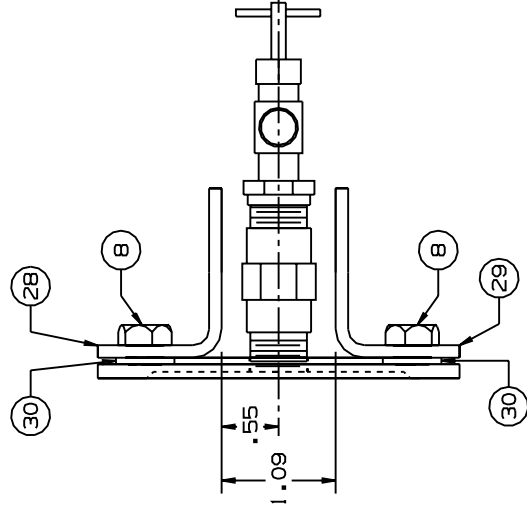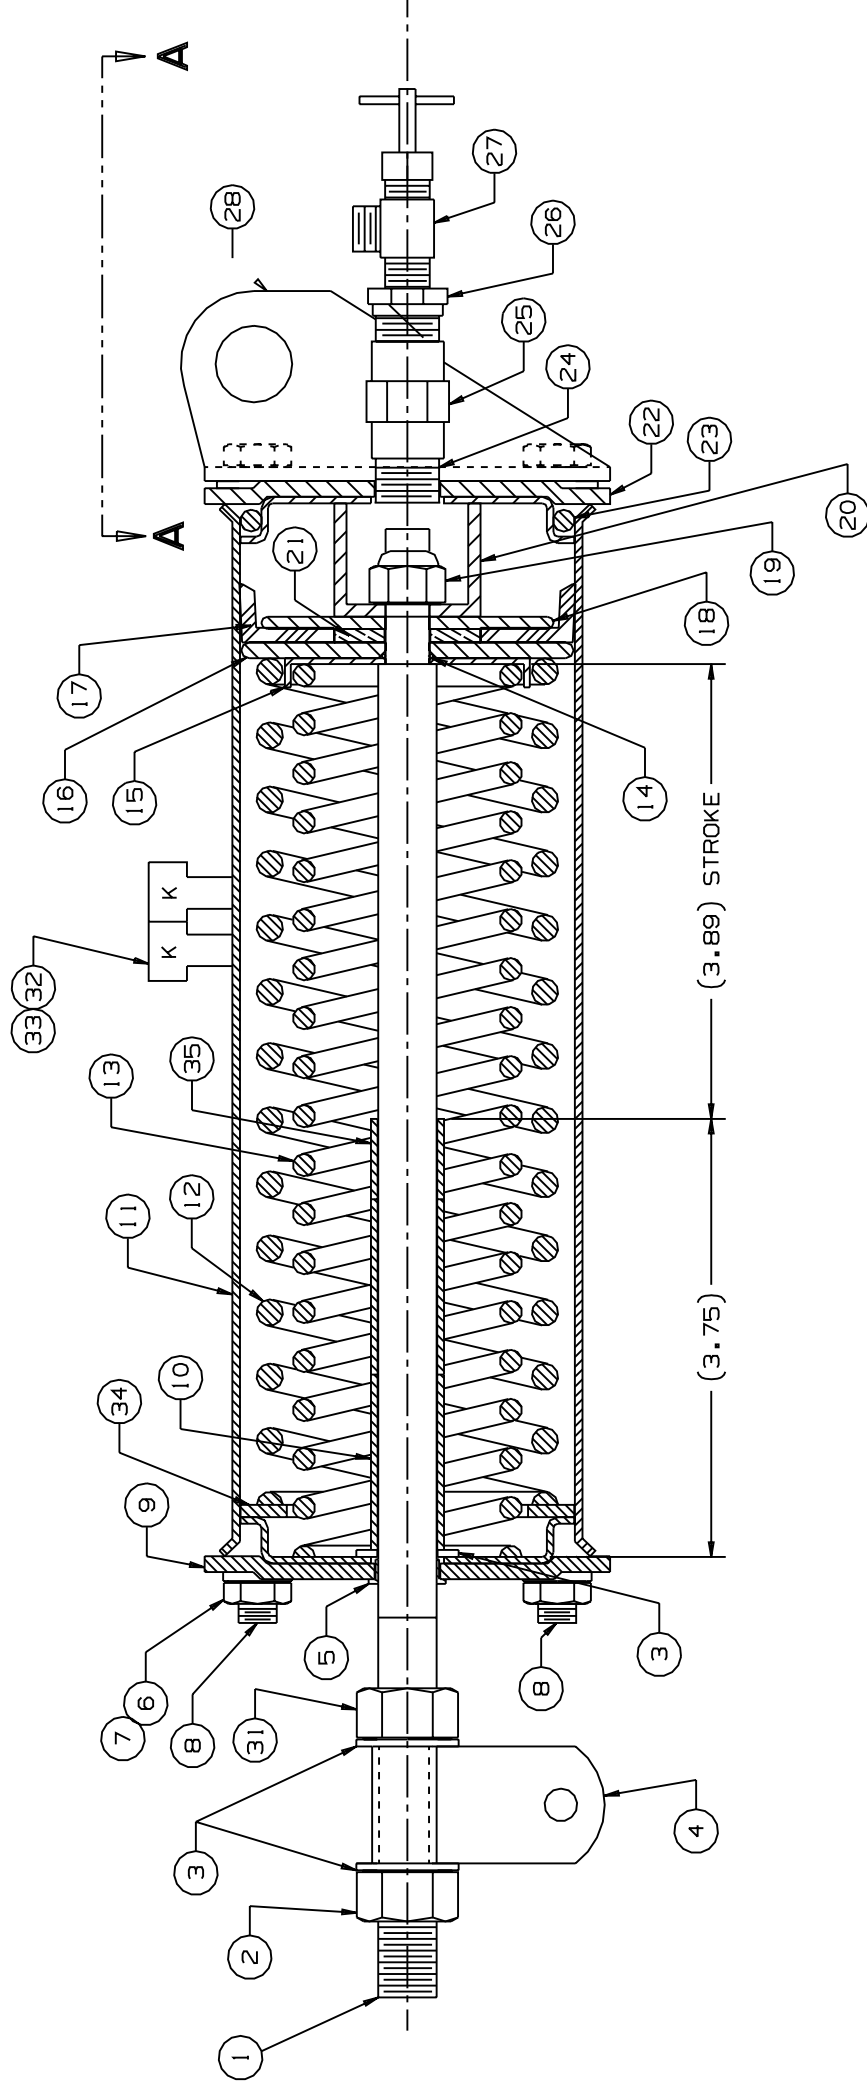

VIEW A-A

## NOTES:

1. LUBRICATE SPRINGS WITH A LAYER OF GREASE BUT NOT SO MUCH AS TO CAUSE EXCESS TO LEAK OUT.
2. DO NOT GREASE THE CUP, ITEM 17! DOING SO WOULD BLOCK THE AIR LINES.



**Pellerin Milnor Corporation**  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**Parts List—Air Cylinders for 2" Watts Ball Valves**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			ASSEMBLIES	
A		SA 10 057C	95222D AIRCYL=3.0ODX3.89ST171/176CD	
B		SA 10 057D	95222# AIRCYL=3.0ODX3.89ST171/176SS	STAINLESS
C		SA 10 056F	92000Z AIRCYL=2.38ODX2.70STX20.5#CD	
D		SA 10 056G	92000Z AIRCYL=2.38ODX2.70STX20.5#SS	STAINLESS
			COMPONENTS	
A,B	1	03 01615	94191B PISTON STEM 3"AIRCYL	
C,D	1	02 18650	96461B STEM=2 WAY AIRCYLINDER BRAKE	
all	2	15G234NS	HXLOCKNUT NYL 1/2-13UNC2 SS18-8	
all	3	15U243S	FLAWASHER 7/8ODX33/64IDX16GA 18-8SS	
all	4	03 01209A	92536B STEMCLIP H=1.313 BALVAL S/S	
all	5	54E220	NYLINER 8L2FF BUSHING 1/2X9/16X.140	
A	6	15G191	HXFINJAMNUT 5/16-24UNC2 ZINC GR2	
B,C,D	6	15G190	HEXFINJAMNUT 5/16-18NC2 SS18-8	
A	7	15U210	LOKWASHER MEDIUM 5/16 ZINCPL	
B,C	7	15U205	LOCKWASHER MEDIUM 5/16" 18-8SS	
D	7	15U200S	FLATWASHER US STD 5/16 SS18-8	
A	8	02 10585H	91142# TIE BOLT=5/16-18X10LNG PLTD	
B	8	02 10585G	91142# TIE BOLT=5/16-18X10LG (SS)	
C	8	02 10585E	91142# TIE BOLT=5/16-18X8.25LG PLTD	
D	8	02 10585A	91142# TIE ROD-5/16-18X8+1/4 (SS)	
A	9	03 01623	90351C CYLINDER HEAD 3"AIRCYLINDER	
BI	9	03 01623A	90351# CYLHEAD 3"AIRCYLINDER-S/S	
C	9	02 02546	87341C CYLHEAD=SLIDESTEM	
D	9	02 02546S	87341# CYLINDER HEAD=SLIDE STEM SS	
all	10	27B32024SS	SPACER ROLL .51IDX.6250DX1.5L STN S	
A,B	11	03 01621	94266BTUBE 2+7/8 AIR CYLINDER 9"	
C,D	11	02 02068	94266A AIRCYL-STAINLESS=DUMPVALVE	
A,B	12	03 01617C	92133B SPRING=FL11.5SR23.5#MD2.368	
C	12	02 15881	96471# SPRING=BRAKE2.10D11FL15.5#"	
D	12	02 15881A	85504Z SPRING,02 -15881+HEAVY PAINT	
A,B	13	03 01616C	92133B SPRING=FL11.35SR20.5MD1.811	
C	13	02 15880	96471B SPRING=BRAKE1.5OD10.3FL17#"	
D	13	02 15880A	85504Z SPRING,02-15880 +HEAVY PAINT	
all	14	60C106	ORING 5/16ID 1/16CS BN 70 DURO #011	
A,B	15	03 01620A	92133B 3"AIR CYL=SPRING RETAINER	
C,D	15	02 18651	73171A WASHER=2 WAY BRAKE CYL	

Used In		Item	Part Number	Description	Comments
A,B		16	X3 01619A	92066# MACH=3"AICYL BRASS PISCUP WSH	
C,D		16	02 02105B	92253B 2.38"AICYL BRASS PISCUP WASHR	
A,B		17	02 19302	93356B PISTON CUP 2+7/8ID CYLINDER	
C,D		17	02 02194	93217B PISTONCUP=DUMPVALVE 2+3/8"	
A,B		18	03 01618	91522B PISTON CUP WASHER 3"AIRCYL	
C,D		18	02 02085	94092B UP WASHER=2"OD=PISTON CUP	
all		19	15G220	02Z LTHX THIN LOKNUT 3/8-24 SSNTE	
A,B,D		20	03 01313S	85506B+STOP=AIRCYL W/2+11/16STR.SS	
C		20	03 01313	70219A STOP=AIR CYL W/2+11/16STROKE	
A,B		21	03 01630	87506B 3"AIRCYL PSTN CUP COMPLMTWSH	
C,D		21	02 02185	79237A WASHER=PISTON CUP COMP LIMIT	
A		22	03 01622	88531# CYL HEAD TAPHOLE 3"AIRCYL SS	
B		22	03 01622A	88531# CYLHEAD TAPHOLE-3"AIRCYL S/S	
C		22	02 02101	71334A CYLHEAD W/TAPPED HOLE	
D		22	02 02101S	88531B CYLINDER HEAD TAP HOLE (SS)	
A,BI		23	60C134	ORING 2.5 ID 3/16CS BN 70 DURO #333	
C,D		23	60C132	ORING 2"IDX3/16CS BUNA70 #32	
all		24	5N0ECLSBE2	NPT NIPPLE 1/4XCLS TBE BRASS 125#	
all		25	5SCC0EBE	NPT COUP 1/4 BRASS 125# #103	
all		26	5SB0E0CBEO	HEXPIPBUSH 1/4 X 1/8 BRASS 125#	
all		27	96H018	NEEDLE VALVE	
A,B		28	03 01627B	92023# LEFT=3"AIR CYL MNTG BRKT	
C		28	03 01660C93231B	BRKT=AIR CYL MONUT LEFT	
D		28	03 01660A	92271B BRKT=AIR CYL MNT LFT-S/S	
A,B		29	03 01627A	92023B RIGHT=3"AIR CYL MNTG BRKT	
C		29	03 01660D	BRKT=AIR CYL MOUNT RIGHT	
D		29	03 01660B	92271# BRKT=AIR CYL MNT RHT-S/S	
all		30	15U200	FLATWASHER(USS STD) 5/16"ZNC PLT	
all		31	15G231S	HXFINJAMNUT 1/2-13UNC2B SS18-8	
all		32	20L601K	ID TAG NATL #1614 ALUM EMB LET "K"	
all		33	27B2400K0N	SPACER ROLL.5ID .687L .062T STLZNC	
all		34	03 01620E	92136B.WASHER=2.86ODX2.06IDX.105THK	

# Brake Air Cylinder


BMP070011/2007155B  
(Sheet 1 of 2)




Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

## **▲ WARNING ▲**

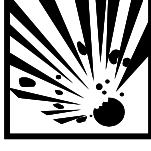

**EXPLOSION HAZARD** - Air cylinder can burst apart with great force.  
Circled items are under high spring tension.  
Follow maintenance instructions MSSM0130AE carefully.

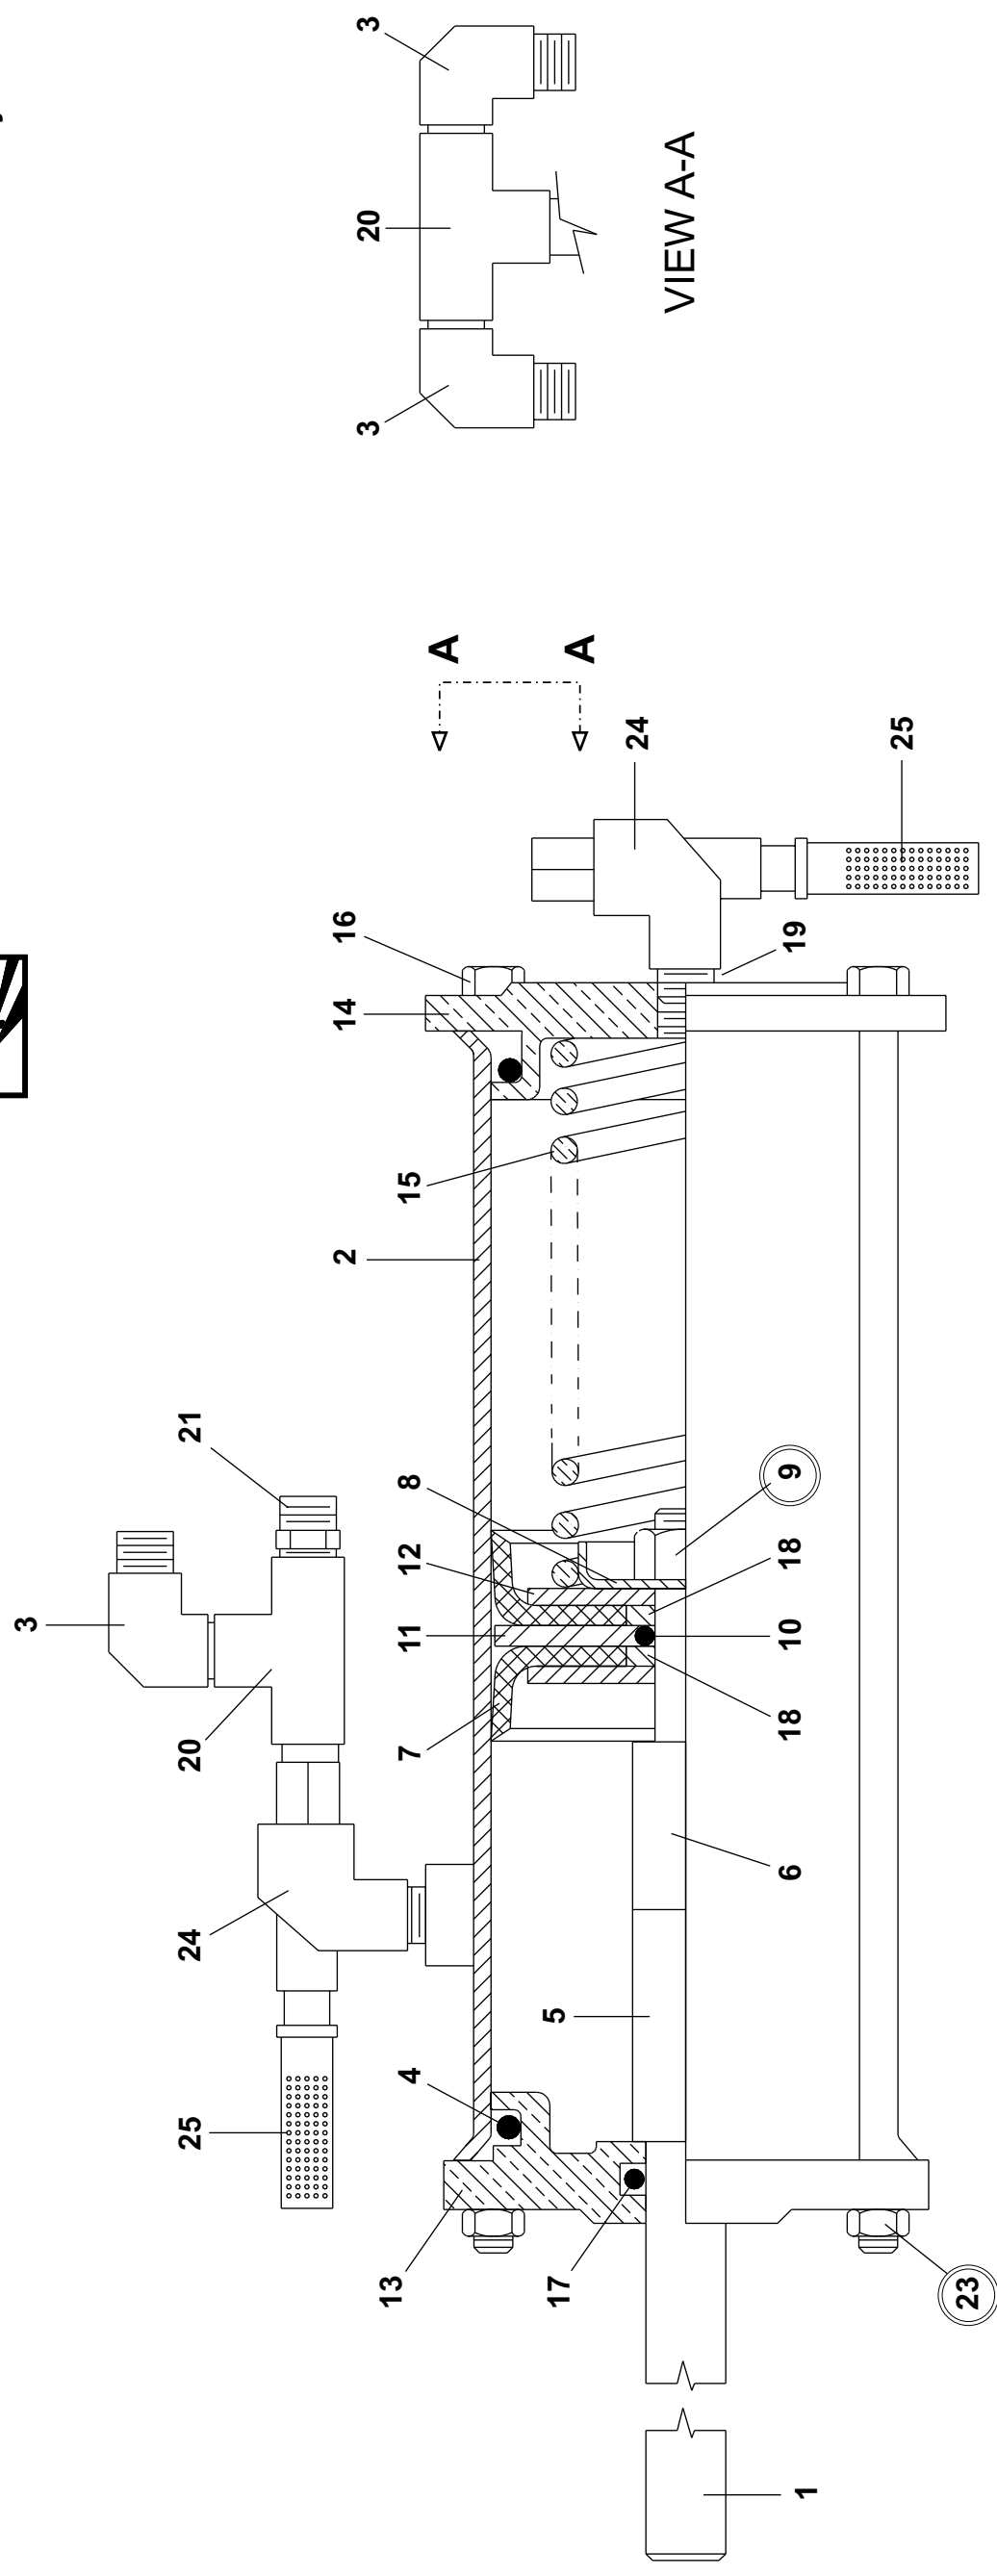





**Parts List—Brake Air Cylinder**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			-----ASSEMBLIES-----	
			-----ASSEMBLIES-----	
	A	AAC65002	AIRCYL BRAKE SINGLE MOTOR	
			-----COMPONENTS-----	
all	1	02 18650B	STEM=2WAY AIRCYL BRAKE 7.88L	
all	2	W2 18646	*CYLINDER-AIR=DOUBLEACT BRAKE	
all	3	53A031XB	BODY-EL90MALE.25X25 #269C-4-4B	
all	4	60C132	ORING 2"IDX3/16CS BUNA70 #329	
all	5	27B250	SPCRROLL.51D1.5L.062T STLZNC	
all	6	27B34010SS	SPACERROLL .51ID.625L.062T SS	
all	7	02 02194	PISTON CUP=DUMPVALVE 2+3/8"	
all	8	02 18651	WASHER=2 WAY BRAKE CYL	
all	9	15G220	NUTLOK THINX 3/8-24 SS/NYL	
all	10	60C106	ORING 5/16ID 1/16CSBUNA70#011	
all	11	02 02105B	2.38"ACYL BRASS PISTONCUP WSHR	
all	12	02 02085	UP WASHER=2"OD=PISTON CUP	
all	13	06 20702E	FLOW NOT ACTUATOR CYL HEAD	
all	14	02 02101	CYLHEAD W/TAPPED HOLE	
all	15	02 17024	SPRING-SS=DUMP 1.5OD4FL40#"	
all	16	W6 20702F	*FLOW NOT VLV=AIR-CYL ROD WLD	
all	17	60C110	ORING 1/2IDX3/32CS BUNA70 #112	
all	18	02 02185	WASHER=PISTON CUP COMP LIMIT	
all	19	5N0ECLSBE2	NPT NIP 1/4XCLS TBE BRASS 125#	
all	20	51V015	TEE 1/4 FGDBRASS 101T7-444	
all	21	53A008B	BODYMALECON.25X.25COMP#B68A-4B	
all	22	5SCC0EBE	NPT COUP 1/4 BRASS 125# W/HEX	
all	23	15G185	HXNUT 5/16-18UNC2B SAE ZINC GR	
all	24	96M055	DELTROL QUICK EXHAUST VLV.1/4"	
all	25	27A005	MUFFLER 3/8" BANTAM B38	

**Parts List, cont.—Brake Air Cylinder**

Used In	Item	Part Number	Description	Comments

# 3-Way Pilot Valves

BMP900032/91182V  
(Sheet 1 of 1)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

BMP900032/91182V (1 of 1)


Litho in U.S.A.

## (VALVES SHOWN DE-ENERGIZED)

### Parts List—3-Way Pilot Valves

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			ASSEMBLIES	
			none	
			COMPONENTS	
all	1	96R301A37	05Z 1/8" AIRPILOT 3W NC 120V/50/60	
all	1	96R301A24	06Z 1/8" AIRPILOT 3W NC 24V/50/60	
all	3	96R302A37	06Z 1/8" AIRPILOT 3W NO 120V/50/60	
all	3	96R302A24	07Z 1/8" AIRPILOT 3W NO 24V/50/60	

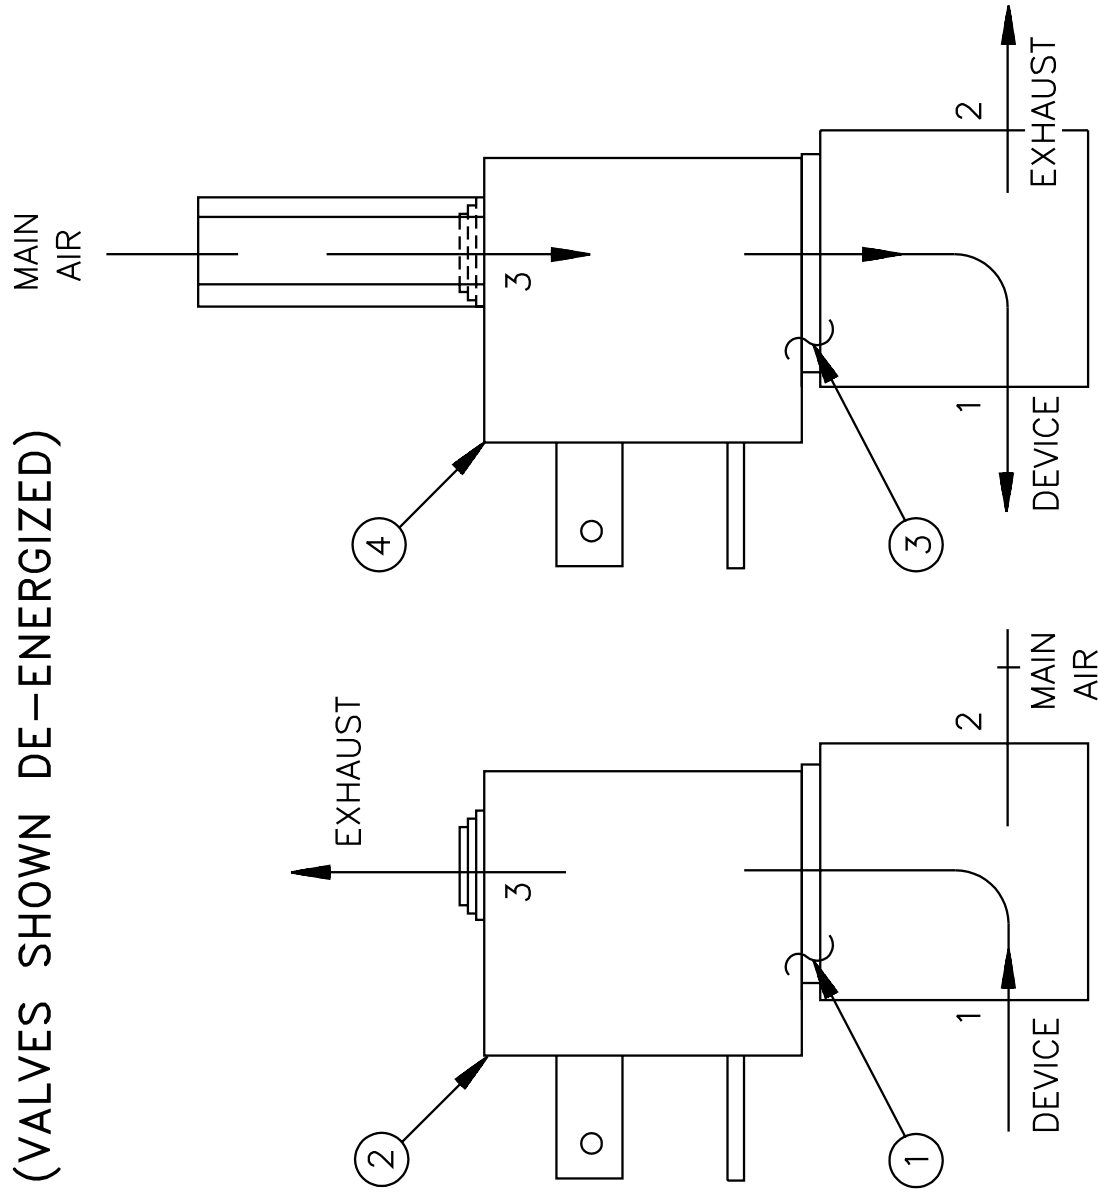

NORMALLY  
CLOSED

NORMALLY  
OPEN

FOR REPAIR OR REPLACEMENT PARTS FOR PILOT VALVES  
USED ON WASHER EXTRACTORS GENERALLY PRIOR TO  
JUNE 1, 1985, SEE BMP701359.

# Asco 3-way Solenoid Valves

## Applicable Models




Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

BMP701359/97086V (1 of 2)

Litho in U.S.A.

BMP701359/97086V  
(Sheet 1 of 2)

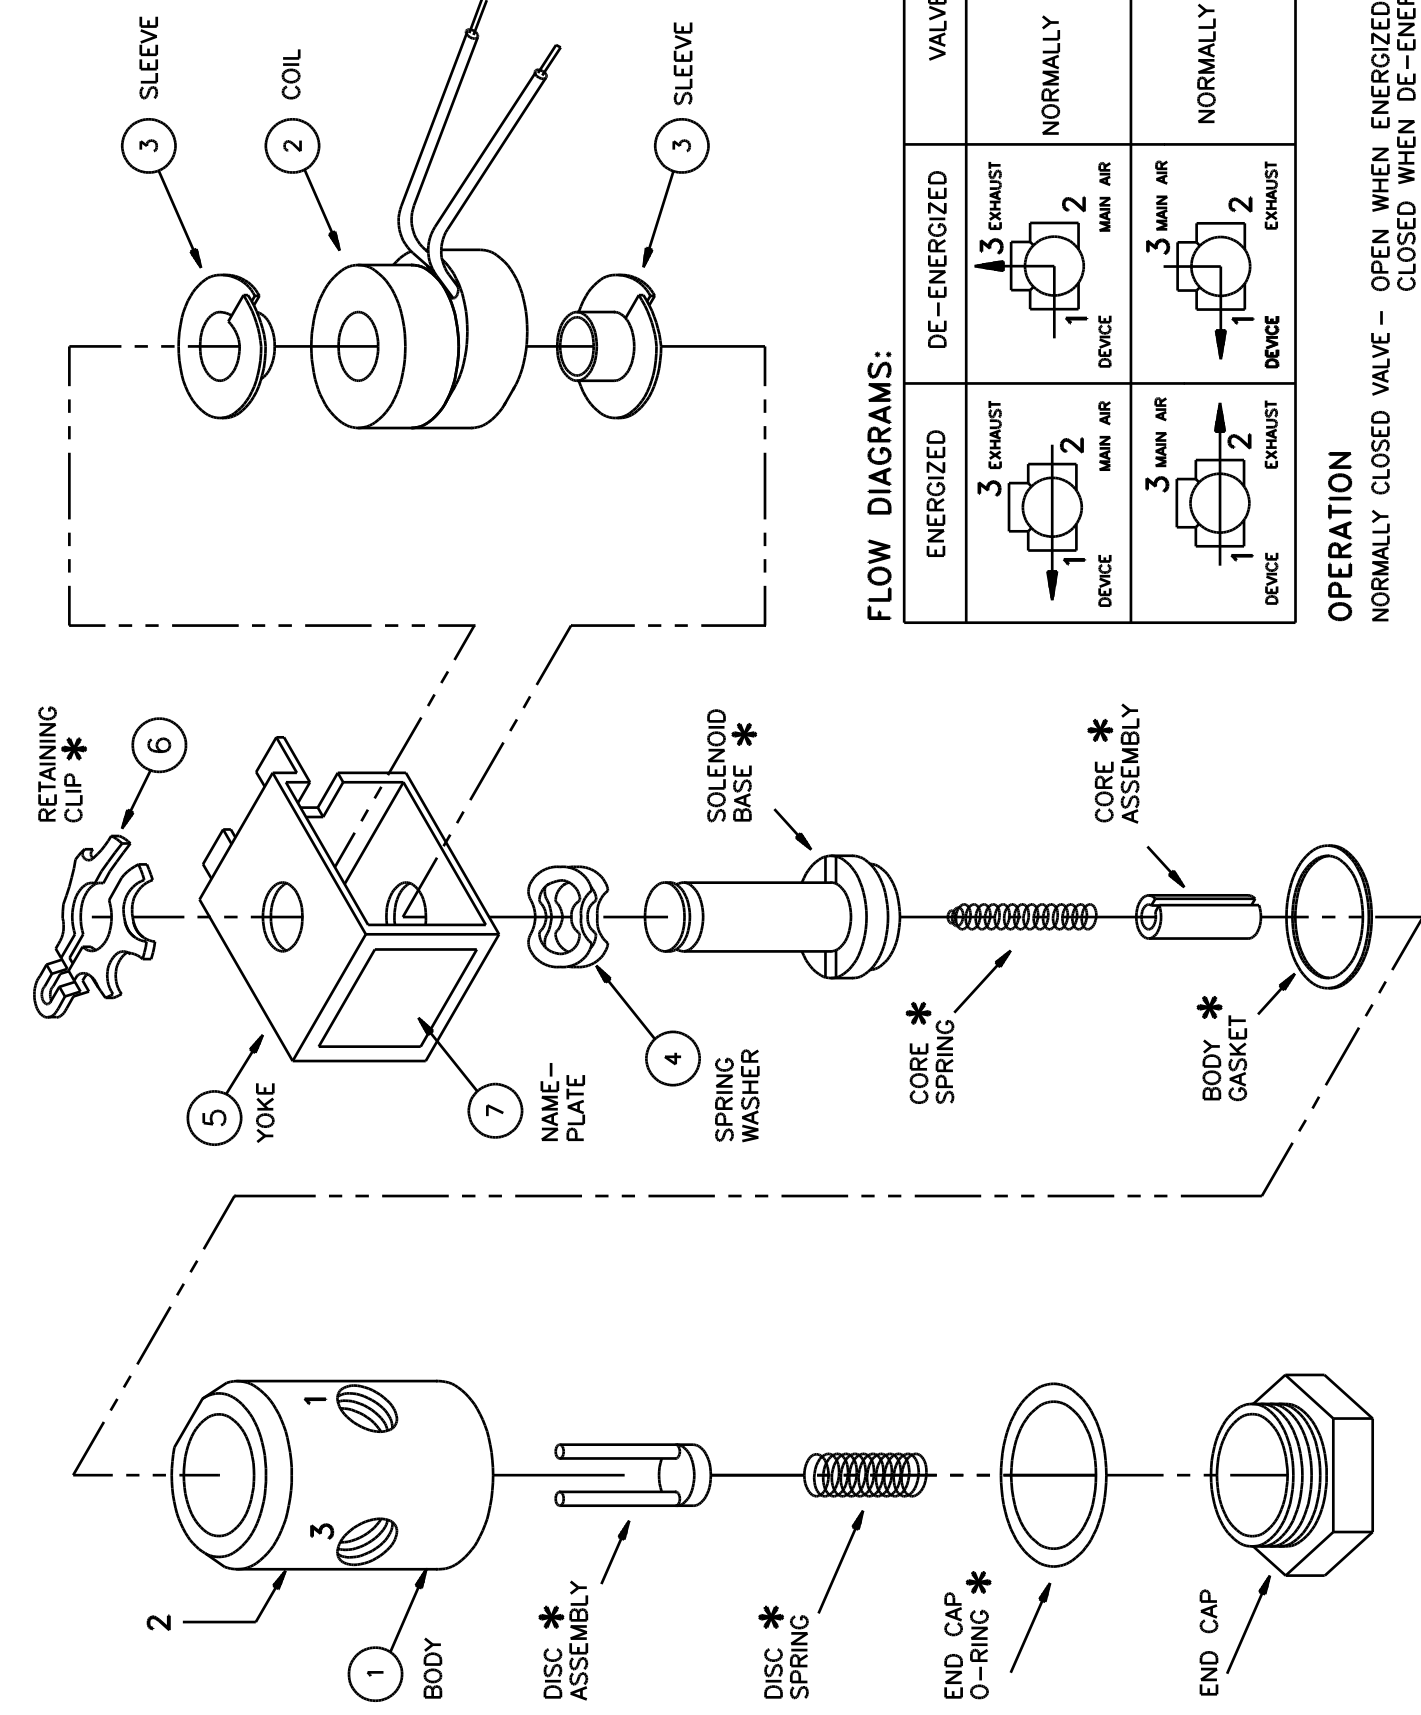

### FLOW DIAGRAMS:

ENERGIZED	DE-ENERGIZED	VALVE
		NORMALLY CLOSED
		NORMALLY OPEN

### OPERATION

NORMALLY CLOSED VALVE – OPEN WHEN ENERGIZED  
CLOSED WHEN DE-ENERGIZED

NORMALLY OPEN VALVE – CLOSED WHEN ENERGIZED  
OPEN WHEN DE-ENERGIZED

COMPONENTS LABELED (\*) ARE CONTAINED IN KIT "00Q", SEE PARTS LIST FOR OTHER AVAILABLE KITS.

## Identification and Description

Check nameplate for correct catalog number, pressure, voltage, and service.

## Safety Instructions

### ⚠ DANGER ⚠

**SHOCK HAZARD** - will cause death or severe injury.

☞ Lock OFF - and tag out power at wall disconnect before servicing. Power switches on machine and control box disable only control circuit power in electrical boxes.

### ⚠ WARNING ⚠

**EXPLOSION HAZARD**- may cause serious injury.

☞ Release pressure to valve before disassembly.

### ⚠ CAUTION ⚠

**BURN HAZARD** - Solenoid enclosures become too hot to touch when energized for a long period. This will not damage the solenoid, but may cause a painful burn.

☞ Allow solenoids to cool before servicing the valves.

**Cleaning** - Clean all solenoid valves periodically. If the voltage to coil is correct, sluggish valve operation usually indicates that cleaning is required.

## Maintenance

**READ ALL SAFETY STATEMENTS ABOVE BEFORE PROCEEDING ANY FURTHER!**

### Coil Replacement

1. Remove retaining clip. NOTE: When metal retaining clip disengages, it springs upwards.
2. Slip yoke containing coil and sleeves off solenoid base sub-assembly.
3. Replace coil.
4. Reassemble in reverse order.

### Valve Disassembly and Reassembly

1. Remove retaining clip.
2. Slip entire solenoid enclosure off the solenoid base sub-assembly.
3. Remove solenoid base sub-assembly, core assembly and core spring.
4. Remove diaphragm spring, diaphragm assembly and gasket.
5. Replace all worn or damaged parts
- 6.

## Troubleshooting

**Control Circuit:** Listen for a metallic click when energizing the solenoid. Absence of the click indicates loss of power to the solenoid. Check for loose connections, blown fuses, open or grounded coil circuit, and broken lead wires.

**Faulty Coil:** Check for open circuit in coil. Replace coil if necessary.

**Low Voltage:** Voltage across coil leads must be at least 85% of nameplate rating for proper operation.

**Incorrect pressure:** Pressure to valve must be within range specified on nameplate.

**Excessive leakage:** Disassemble valve and clean all parts. Replace all worn parts for best results.



**Pellerin Milnor Corporation**  
P. O. Box 400, Kenner, LA 70063-0400

BMP701359/97086V (2 of 2)

Litho in U.S.A.

BMP701359/97086V  
(Sheet 2 of 2)

**Parts List—Asco 3-way Solenoid Valves**  
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.


				<b>Parts List, cont.—Asco 3-way Solenoid Valves</b>			
Used In	Item	Part Number	Description	Used In	Item	Part Number	Description
			-----ASSEMBLIES-----				
	A	96TAC3AA24	04Z 1/8" N/C 3WAY 24V50/60C VALVE				COMPLETE VALVE ASSEMBLY
	B	96TAC3AA37	04Z 1/8" N/C 3WAY 120V50/60C VALVE				COMPLETE VALVE ASSEMBLY
	C	96TAC3AA71	04Z 1/8" N/C 3WAY 240V50/60C VALVE				COMPLETE VALVE ASSEMBLY
	G	96TBC3BA24	04Z 1/4" N/C 3WAY 24V50/60C VALVE				COMPLETE VALVE ASSEMBLY
	J	96R300AAM	78183L*NC VALVEBODY+HARDWARE				VALVE BODY+HARDWARE 00A,00B,00C
	Q	96V304A	PARTKIT 8320 1/8" ASCO#K260767				VALVE REPAIR KIT ALL SEE PARTS WITH (*) FRONT
	R	96V236B	PARTKIT 8320 1/4 ASCO#K302142P				00G
			-----COMPONENTS-----				
J	1	96V300	1/8" VALVEBODY ASCO #UX8320B13				00K
all	1	96R300AB	73111F 1/8"BODY-3WAY.06D NORM OPEN				00D
A,	2	96T1002A24	SOLENOID 24V ASCO#260283-005				00E
B,	2	96T1003A37	COIL 120V50/60C ASCO#162-919-1				00F
C,	2	96T1003A71	COIL 120V50/60C ASCO#162-919-2				00P
all	2	96T1003A24	COIL 24V50/60C ASCO *162-919-3				
all valves	3	96V300GB	SLEEVE ASCO#101400-1				
+ kits J-							
all	4	15UJ275	SPRINGWASHER 7/16" GAR#3W-325 ZINC				
all valves except G	4	96V1002WSH	STARWASHER MXX ASCO#238589-1				
all valves except G	5	96V300GA	YOKE ASCO#78-345-1				
all valves except G	6	96V300F	METAL CLIP ASCO #92-059-1				
G	6	96V1002CLP	METAL CLIP MXX ASCO#176-993-1				
G	7	96V1002PLT	NAMEPLTE,BLK MXX ASCO#258775-1				00K
all	8	96V300L	SPRING-DISC N/O ASCO#90-083				

# Staphairtrol Assembly 6044SP2,SP3 7244SP2,SP3

BMP701307/2004492V  
(Sheet 1 of 1)

**MILNOR**  
Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

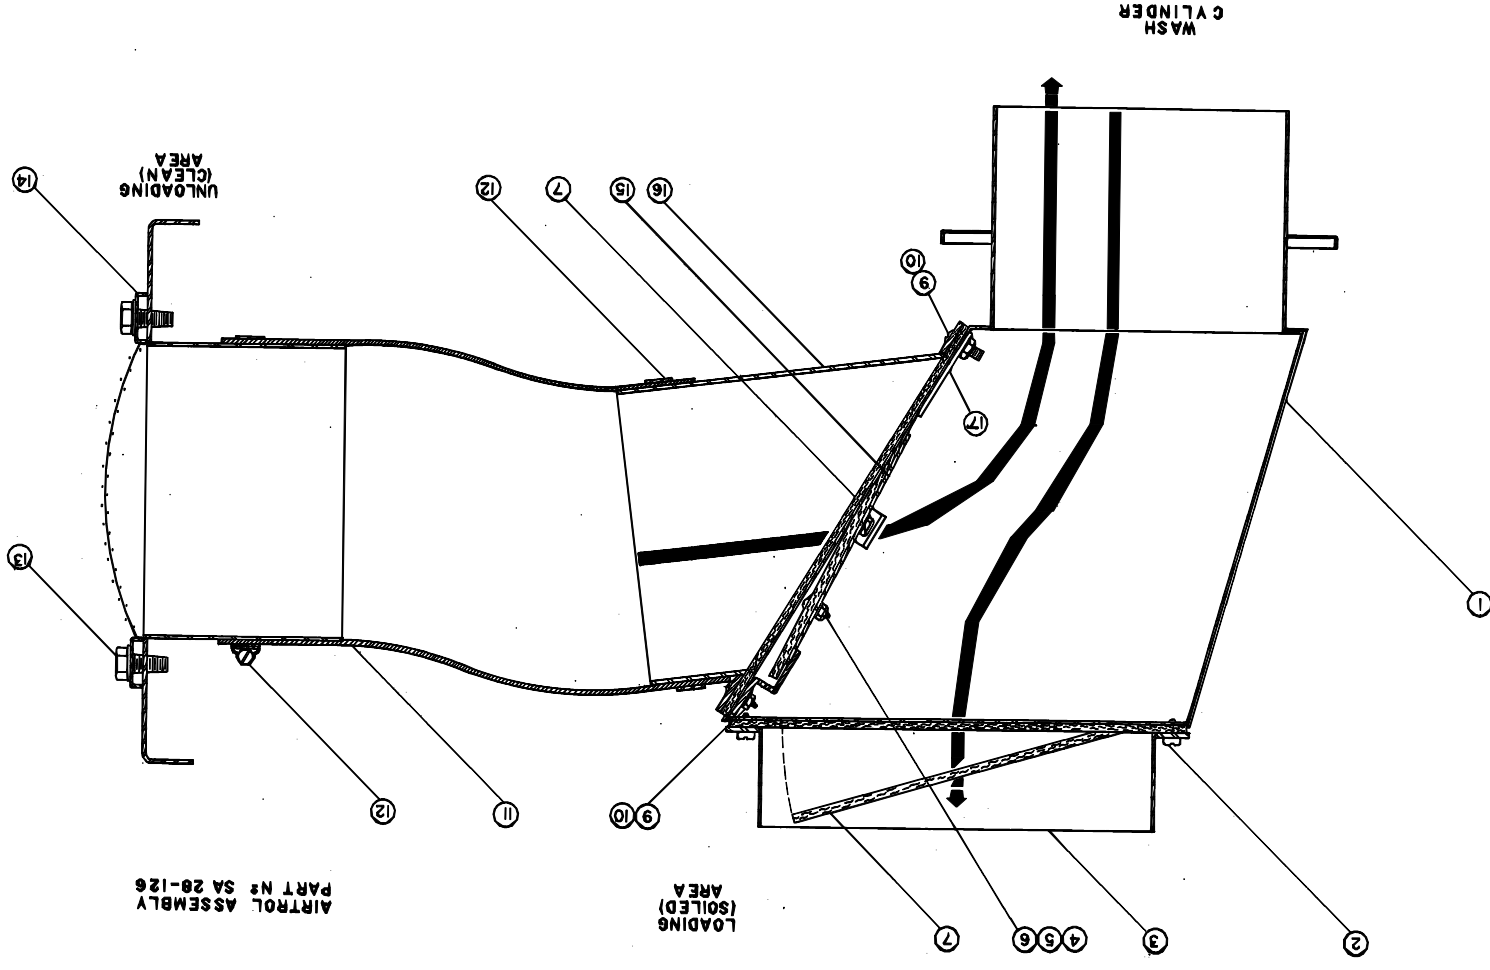

## Parts List—Staphairtrol Assembly

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
		SA 28 126	ASSEMBLIES * STAPHAIRTROL 6" #60+72SGU	6044SP2,SP3
			COMPONENTS	
All	1	W2 18975	* WLMT,AIRTROL BODY =60+72SGU	
All	2	15P010	PHILPAN TRDCUTS CRTYP10-24X1/2S	
all	3	W2 18973	* WLMT,AIRTROL EXHAUST =60+72	
all	4	15N050	RDMACSCR 6-32UNCX1/2 SS18-8	
all	5	15G071	MACHSCRLOK NUT 6-32 NM SER ZINC	
all	6	15U131L	FLATWASH #10L (US STD) BRASS	
all	7	02 15714	76190A AIR TROL FLAPPER	
all	9	15N141	RDMACSCR 10-24NCX3/4 SLOTTED S	
all	10	15G130	HEXMACHSCR NUT 10-24UNC2 SS18-8	
A	11	60E320A18A	HOSE *6"ID FLEXAUST PE X 18"	
B	11	60E320A30A	HOSE *6"ID FLEXAUST PE X 30"	
all	12	27A083	HOSECLAMP 5+1/8-7"CADSCR#HS104	
all	13	15P200	TRDCUT-F HXWASHD 3/8-16X3/4NIK	
all	14	W2 18496	97297# * WLMT,AIRTROL INSCREEN=60+72	
all	15	02 18930	76644B PLATE-AIRTROL FLAPPER	
all	16	W2 18974	93352B * WLMT,AIRTROL INTAKE=60+72SG	
all	17	02 175025	72024A PLATE-BACKUP=AIRTROL FLAPPER	






# Quick Exhaust Valves

BMP701406/2002382V  
(Sheet 1 of 2)



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

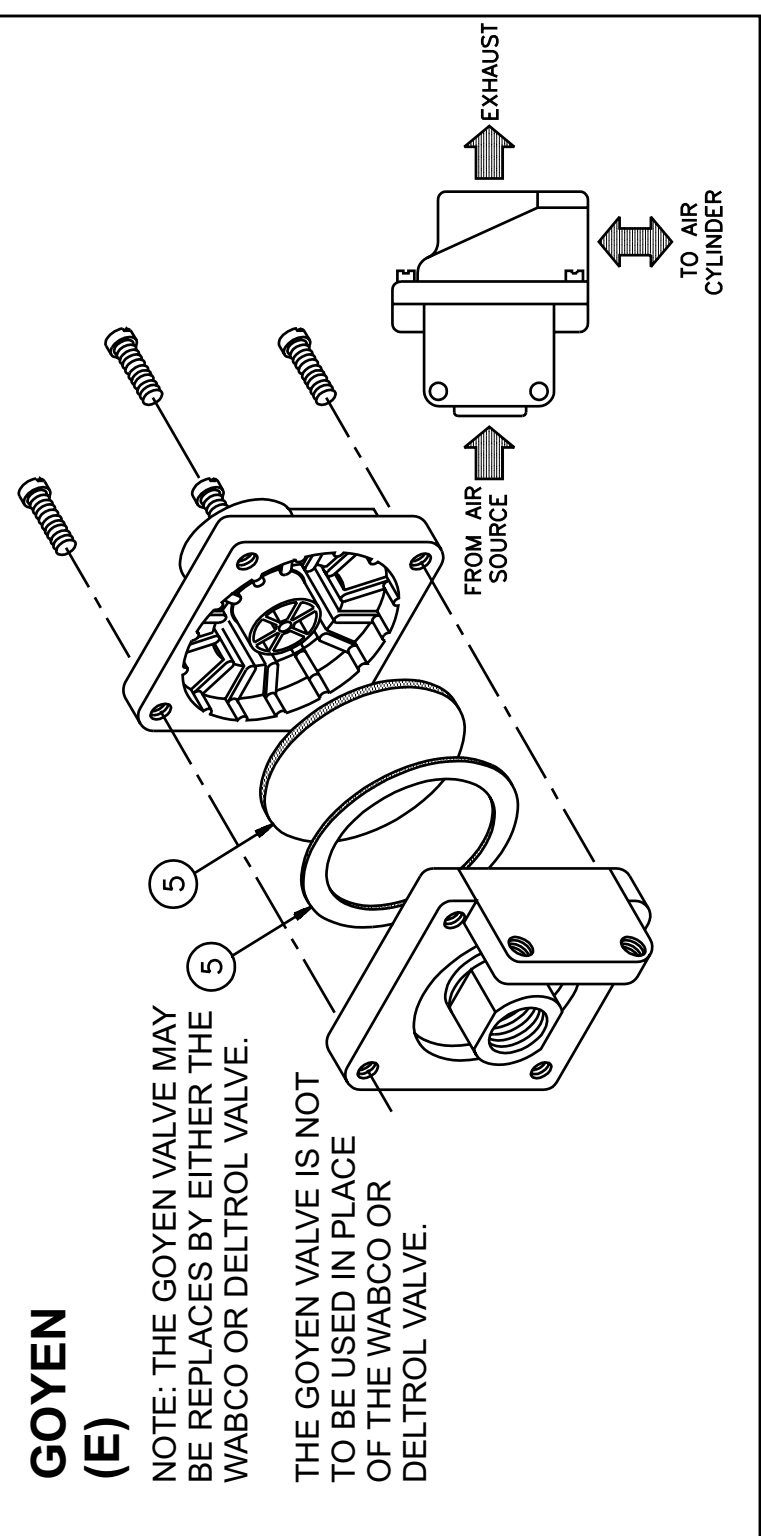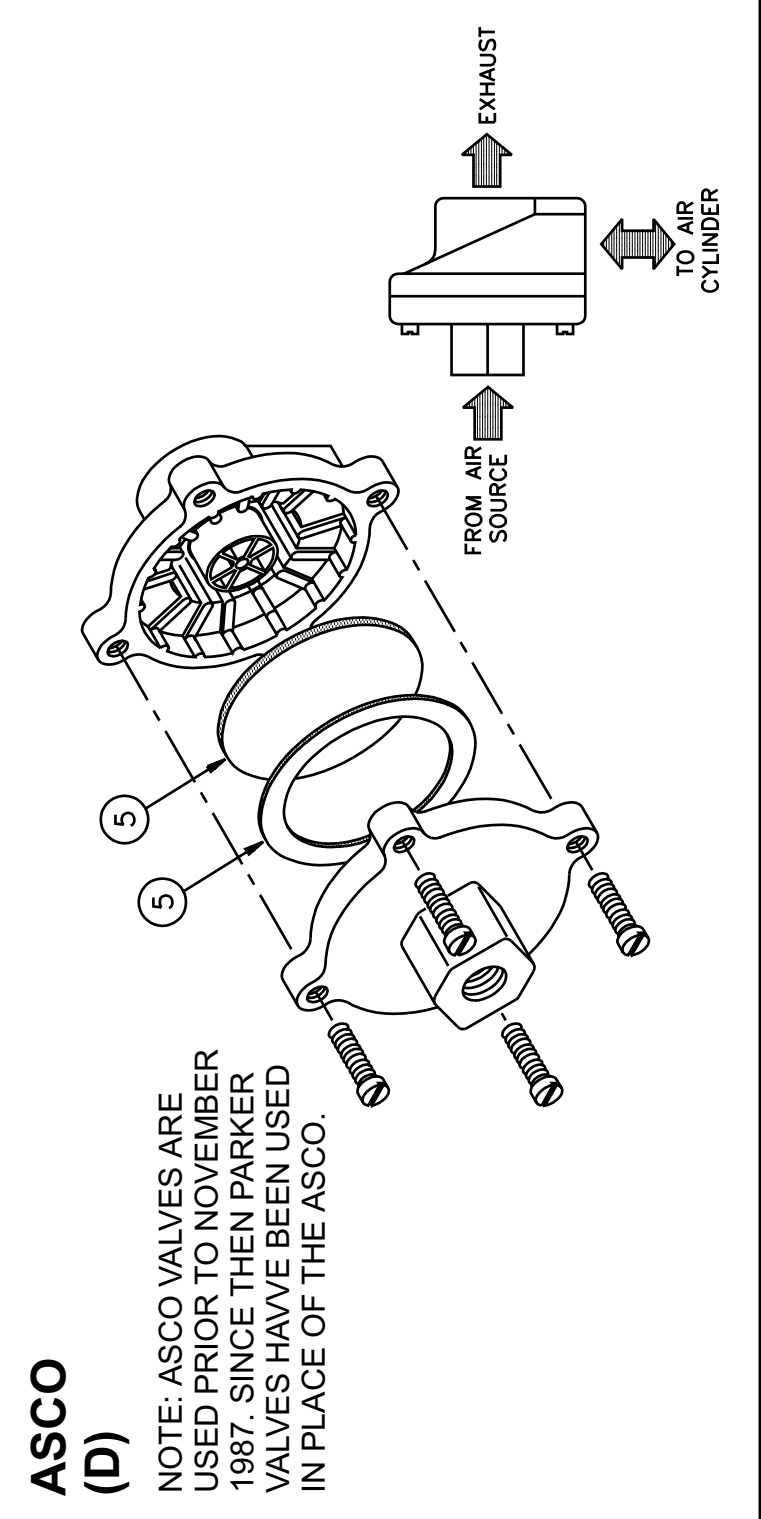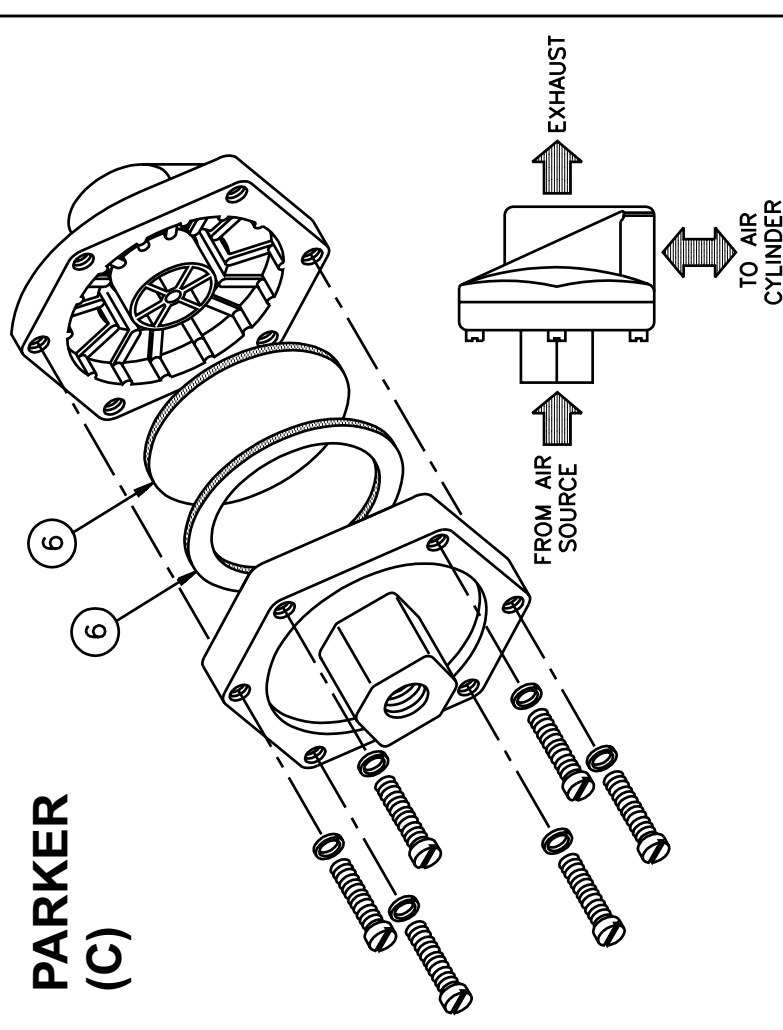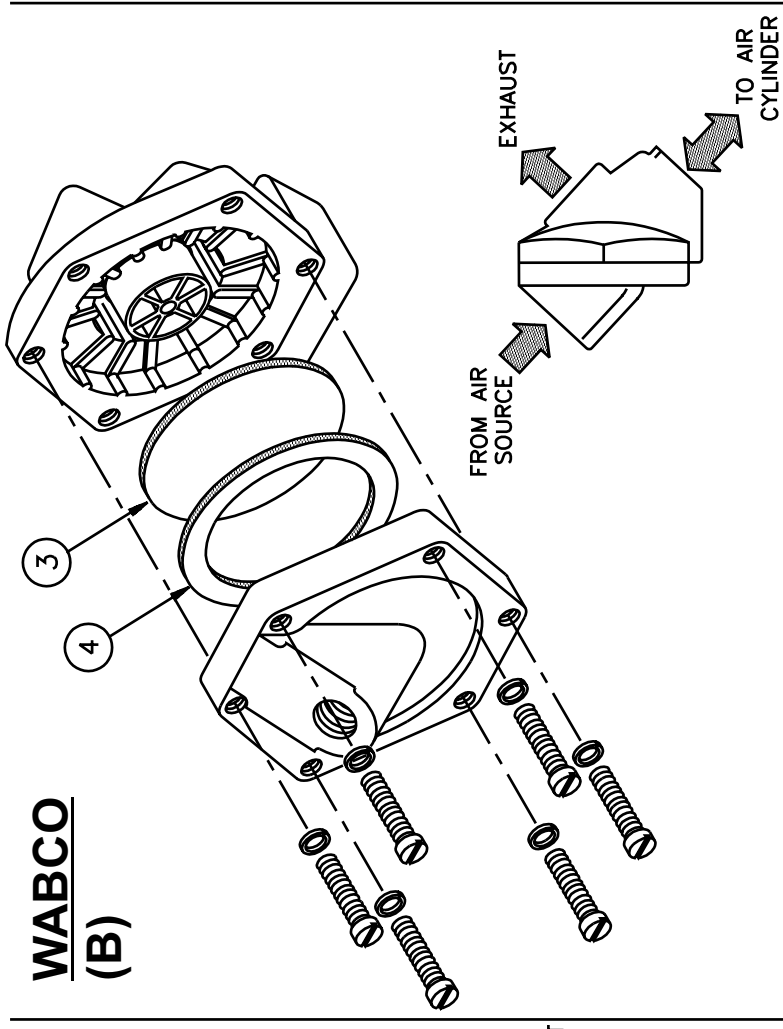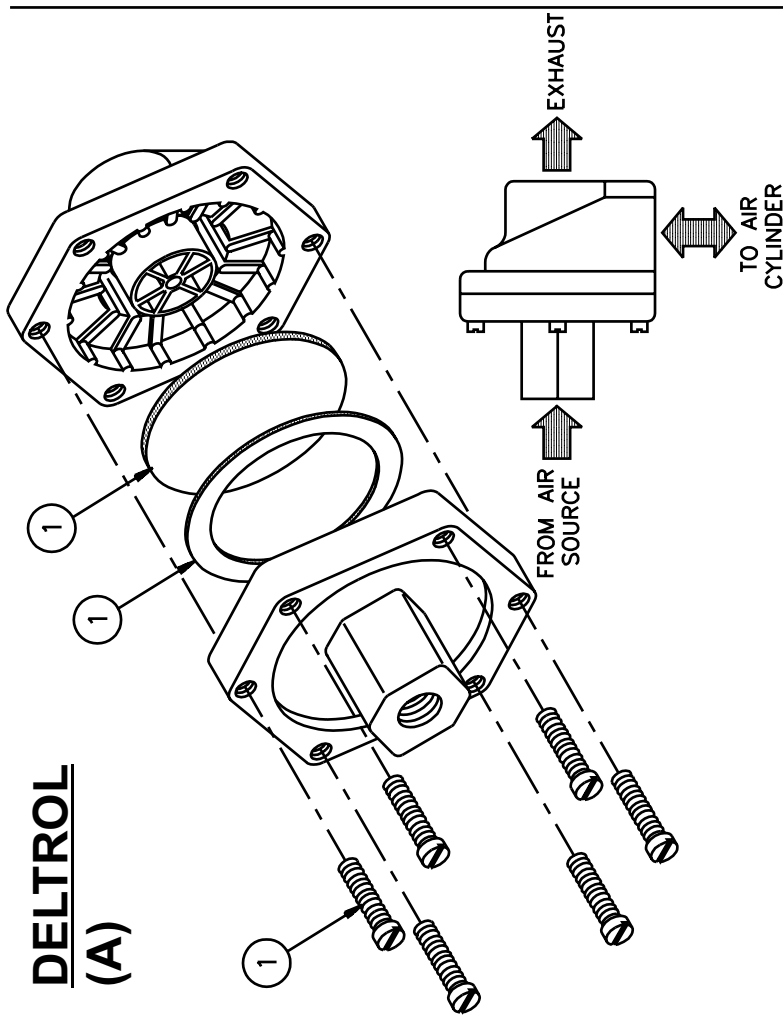



Pellerin Milnor Corporation  
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**Parts List—Quick Exhaust Valves**

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	A	MESSAGE B2	REPAIR KITS ONLY <>	DELTROL
	B	96M051	USE KZK5B00100	WABCO
	C	96M054	QWIKEXHAUSTVLV 3/4"URETHANE	PARKER
	D	MESSAGE B1	PARTS NO LONGER SOLD	ASCO
	E	MESSAGE B2	REPAIR KITS ONLY <>	GOYEN
	F	96M055	QUICK EXHAUST VALVE 1/4"	DELTROL
-----COMPONENTS-----				
all	1	96M053A	KIT,QWIKRELVLV EV20A#10091-18	DELTROL VALVE ONLY
all	3	96M051B	DIAPHRAM,QWIKREL WAB#PS112-12	WABCO VALVE ONLY
all	4	96M051A	GASKET,WABCO QUICK EXHAUST VLV	WABCO VALVE ONLY
all	5A	96M052A	REPKIT,QES#M1319 (FOR 96M052)	GOYEN VALVE ONLY
all	5B	96M055A	REPAIR KIT FOR 96M055# 10128-99	DELTROL VALVE ONLY
all	6	96M054K	REPKIT 3/4"QWIKEXHAUSTVLV	PARKER VALVE ONLY